
REGENCY
















RGS
FURNITURE

KWB124XX-03
Regency Key West Small 2 Shelf Bookcase

RGS-KWB124XX-03
RGS Key West Small 2 Shelf Bookcase

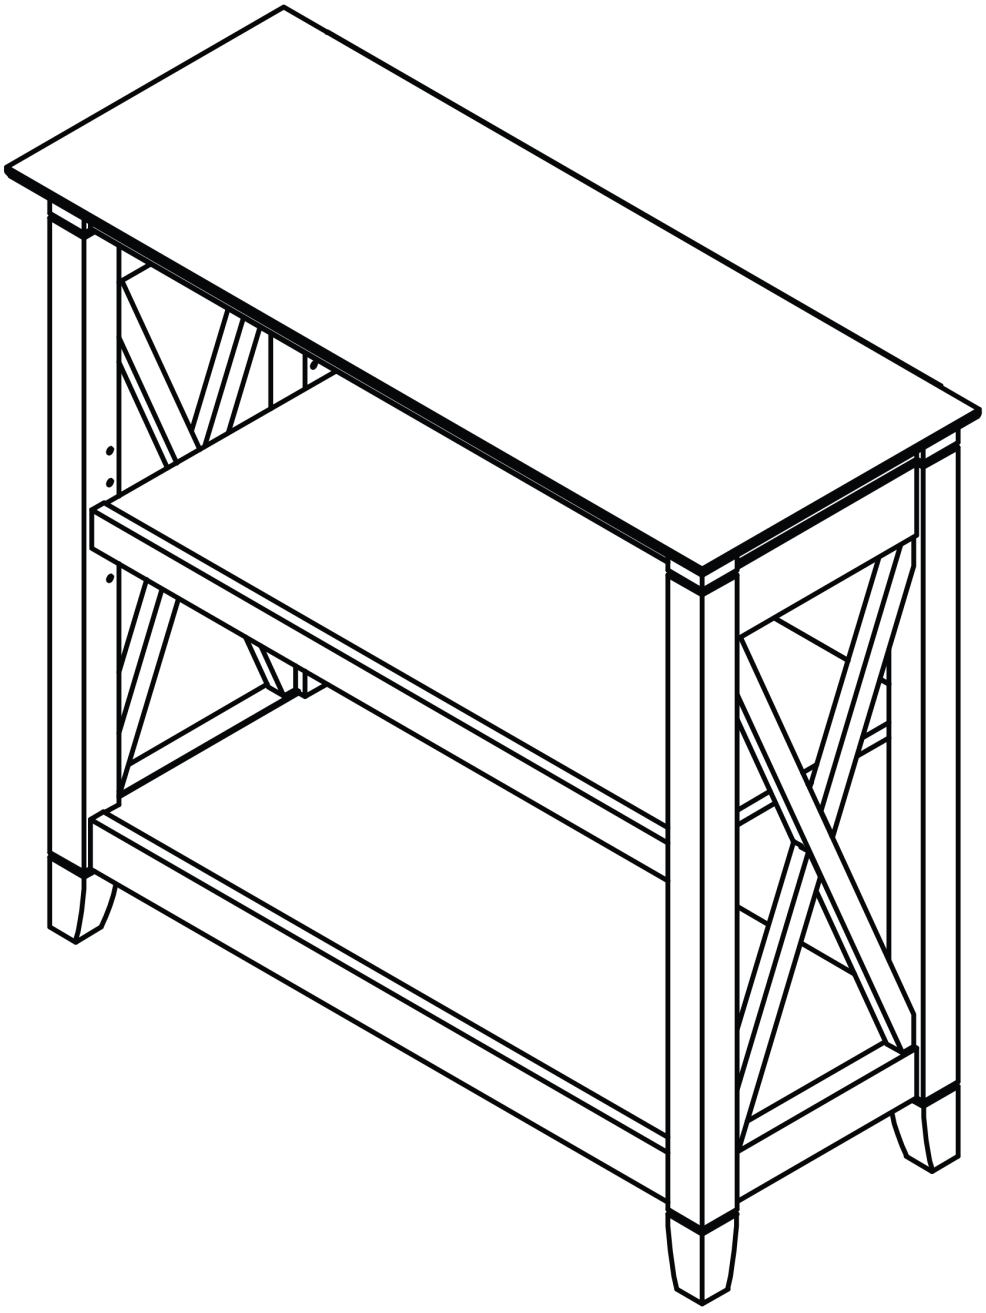


Power Drill Required
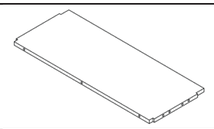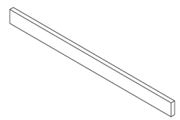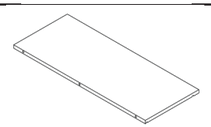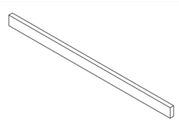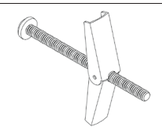
#	Part	Qty	Image	#	Part	Qty	Image
A	Top Panel	1		L	Quick Connect Cam Pin	6	
B	Side Panels	2		M	#10 Screws 1-1/4"	3	
C	Bottom Panel	1		N	#3 Nails 3/4"	24	
D	Bottom Stringer	1		O	Shelf Pins	4	
E	Back Panel	1		P	Cover Cap	8	
F	Back Support	1		Tip Over Restraint Hardware			
G	Shelf	1		Q	#10 Screws 2"	1	
H	Shelf Stringer	1		R	#8 Screws 1 1/2"	1	
I	Cam Locks	14		S	Connecting Plate	2	
J	Cam Pins	8		T	Toggle Bolt	1	
K	Wood Dowels	8		U	Nylon Cable Tie	1	


ASSEMBLY INSTRUCTIONS:

KWB124XX-03
Key West 2 Shelf Bookcase


Step 1: Insert 3 Quick Connect Cam Pins (L) in Bottom Stringer (D) and 4 Wood Dowels (K) in the Bottom Panel (C). Insert 3 Cam Locks (I) in the Bottom Panel (C)

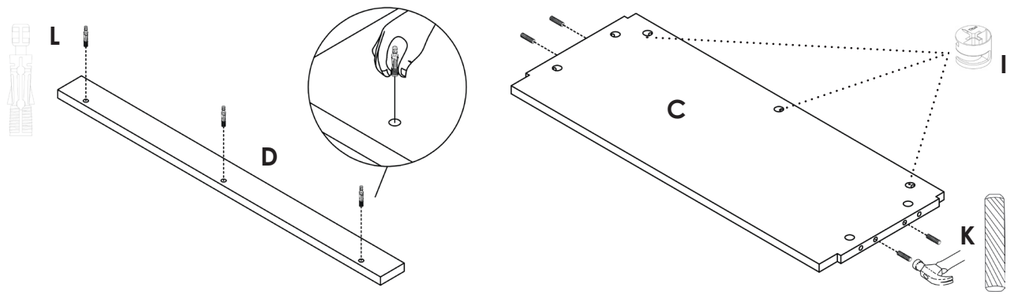


Insert 4 Cam Locks (I), 4 Cam Pins (J), and 2 Wood Dowels (K) into both Side Panels (B)

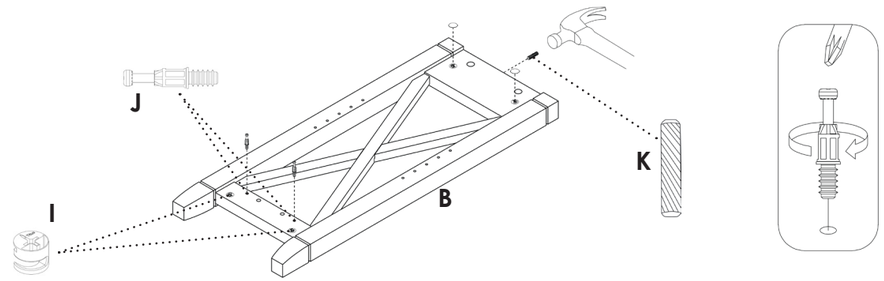

Insert 4 Cam Pins (J) and 2 Wood Dowels (K) into the Top Panels (A) and the Back Support (F)

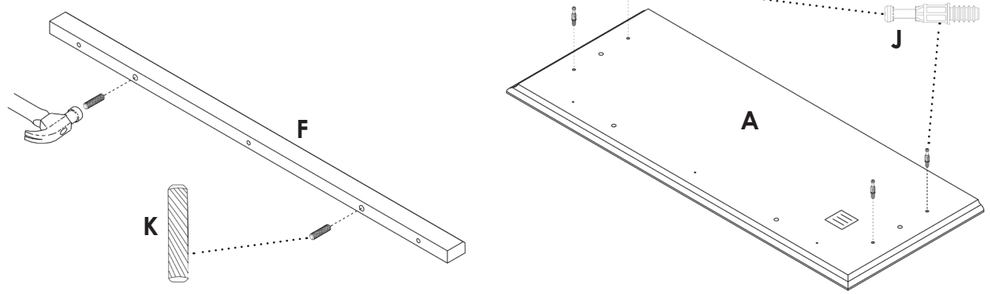


Insert 3 Quick Connect Cam Pins (L) into the Shelf Stringer (H)

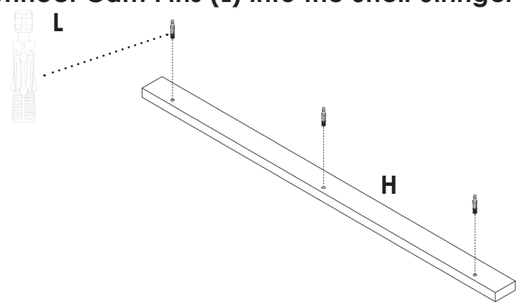


Note: Cam Locks may already be in place, if so secure pieces by twisting Cam Lock to tighten. If not, put Cam Lock in place.


Step 2: Connect the two Bottom pieces (C & D) together and secure by tightening the Cam Locks (I)

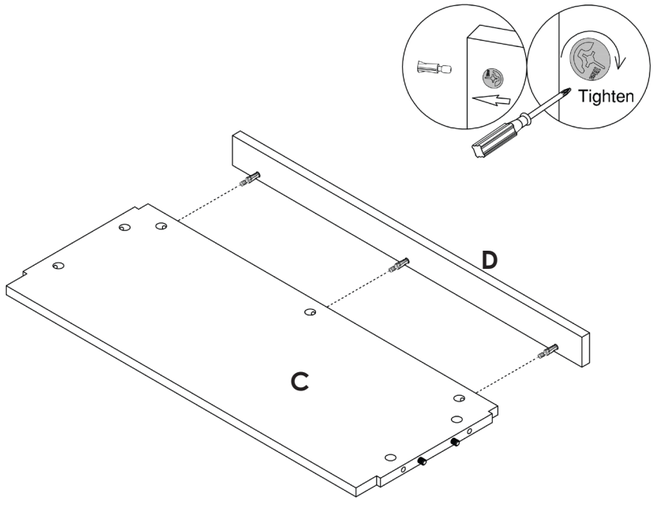

Step 3: Connect Sides (B) to the Bottom pieces (C & D), secure in place by tightening Cam Locks (I) under the Bottom Panel (C).

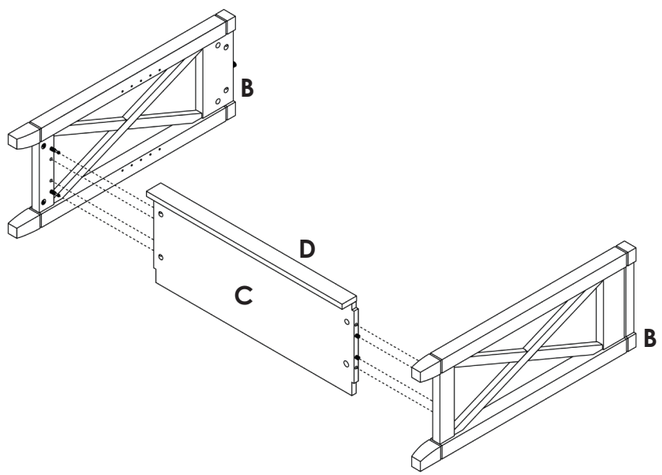


Step 4: Secure Top Panel (A) and Back Support (F) together by drilling three 1-1/4" Screws (M) through the Back Support

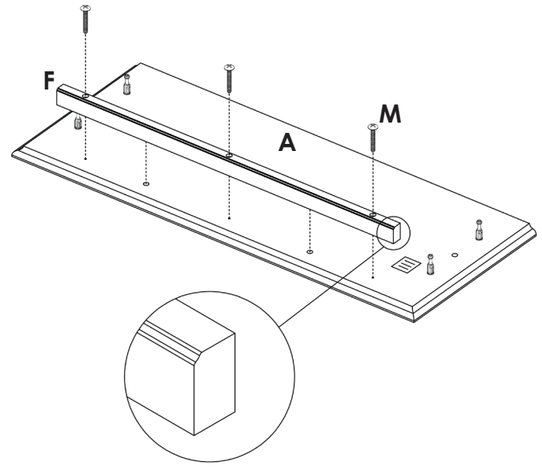


Ensure the textured edge faces outward, leaving the flat side to face the remaining part of the Top


Step 5: Attach Top Panel (A) and Back Support (F) to assembled Side (B) and Bottom (C & D) Pieces.

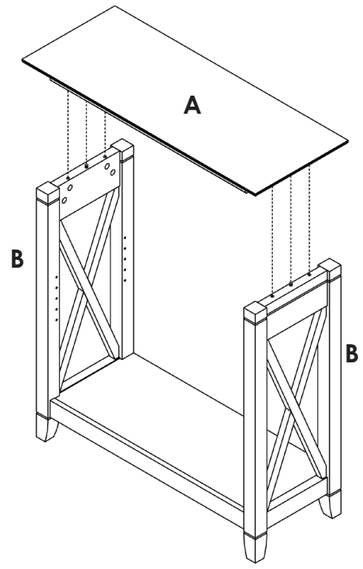

Step 6: Cover any visible Cam Locks with Cover Caps (P)

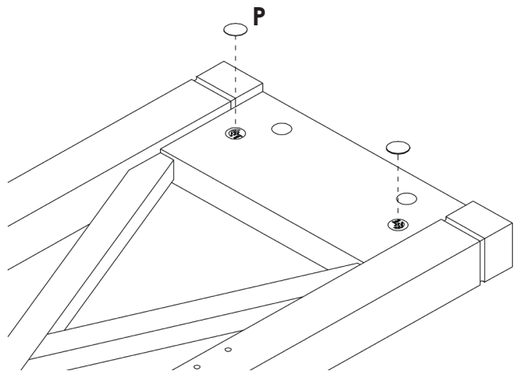


Step 7: Attach Back Panel (E) with the 3/4" Nails (N) along the edge of the whole piece.

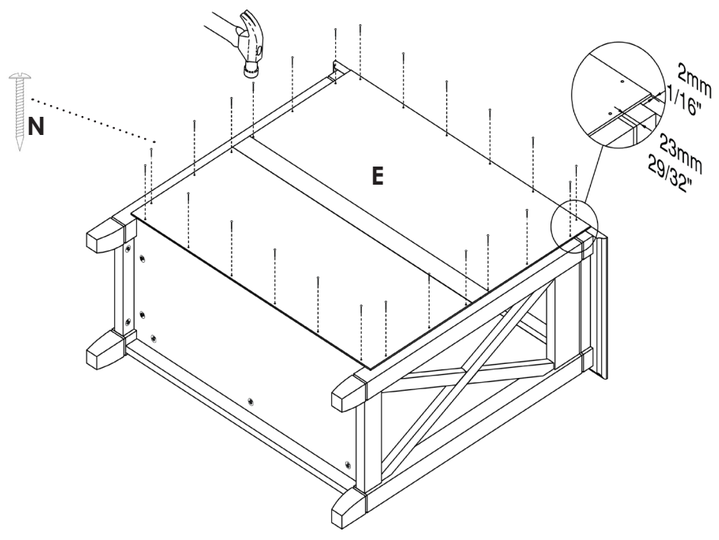


ASSEMBLY INSTRUCTIONS:
KWB124XX-03
Key West 2 Shelf Bookcase

Step 8: Connect the Shelf Stringer (H) to the Shelf (G)

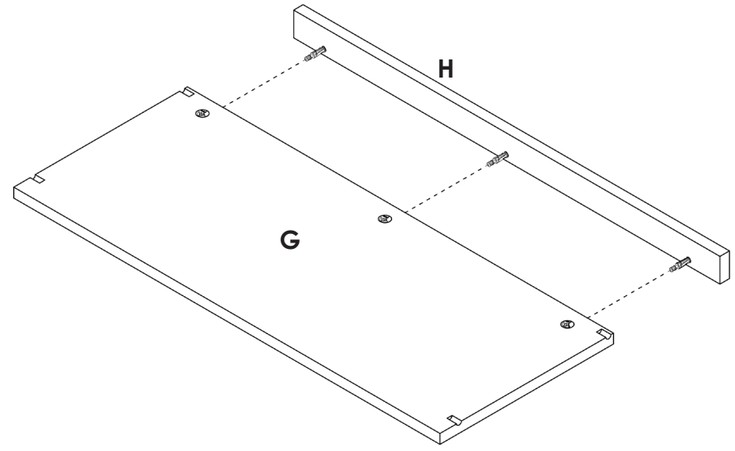


Step 9: Insert Shelf Pins (O) at desired shelf height then place the assembled Shelf pieces (G & H) on the Pins.

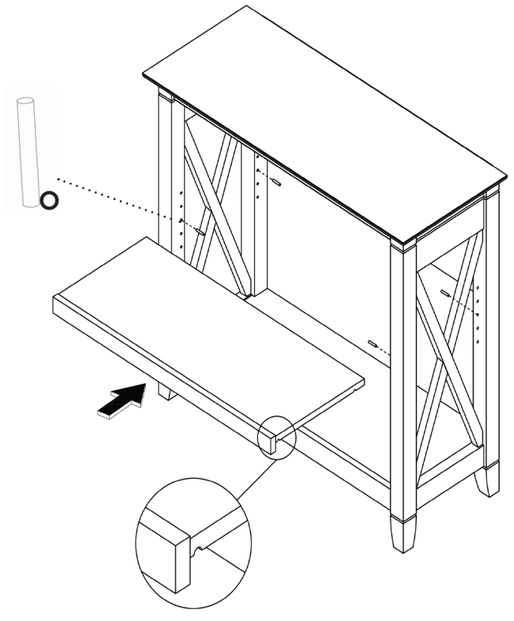


REGENCY RGS FURNITURE **Missing Parts? Assembly Questions?**
Call us at 1-866-816-9822 or email help@regencyof.com for immediate assistance.

Wall Attachment Instructions


1. Place unit in desired location.
2. Locate wall stud nearest unit center
3. On wall, mark center of stud location 1” below top of unit.
4. If a wall stud cnanot be located, mark hollow wall at unit center.
5. On back of unit, mark corresponding location 3/8” below top of unit.

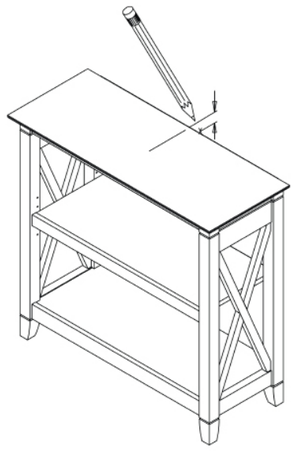

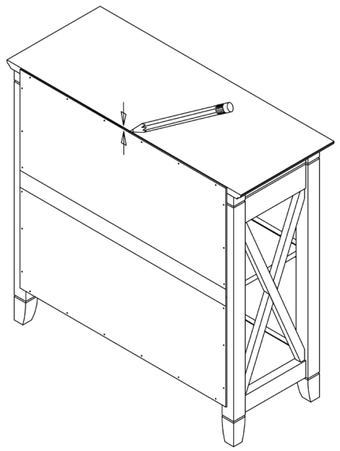


Wall Stud Attachment

Drill 1/8” hole 2” deep at mark on wall.

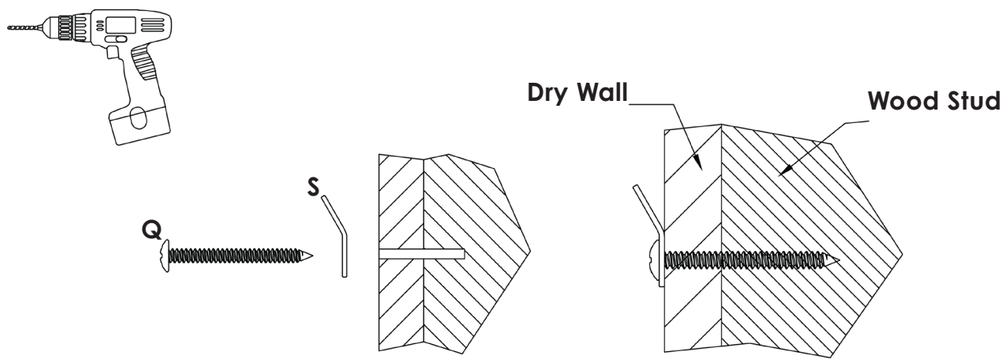


Hollow Wall Attachment

Drill 1/2” hole 1” deep at mark on wall.

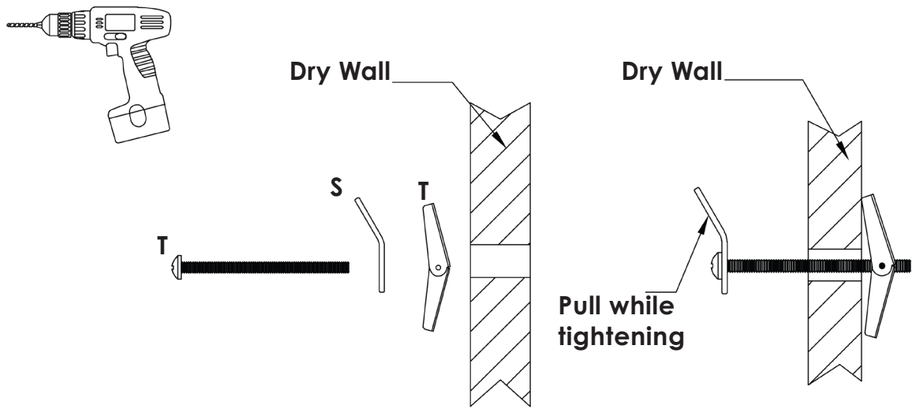

Drill 1/8” hole 1-1/4” deep at mark on unit.

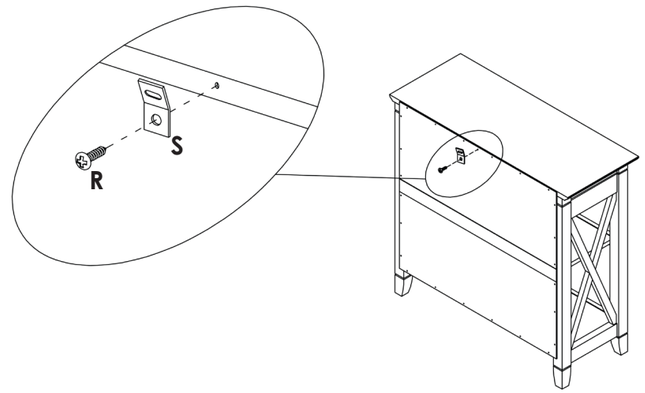

Use Cable Tie (U) to lock unit to wall.

