
## BOHO CHIC MIRROR ASSEMBLY INSTRUCTIONS





## PARTS PACKING CONFIGURATIONS

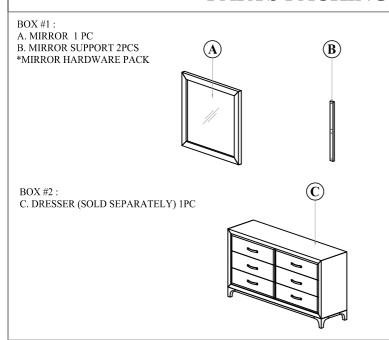

## HARDWARE PACKED IN BOX #1

1	ALLEN BOLT (M6X50)	()	8 PCS
2	SPRING WASHER (M6)		8 PCS
3	FLAT WASHER (M6)	0	8 PCS
4	ALLEN KEY		1 PC

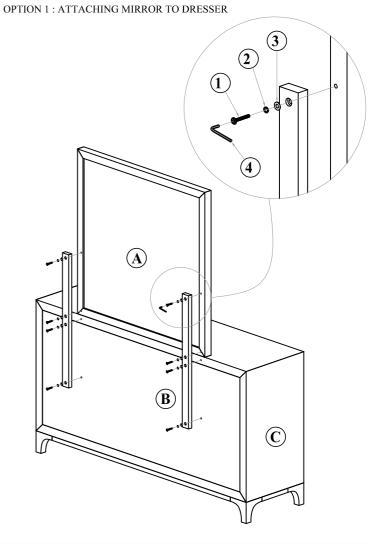

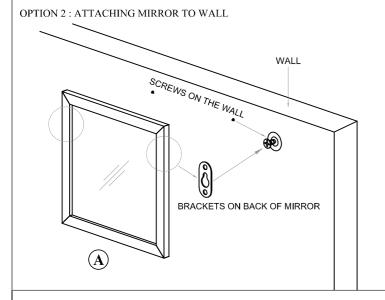



TOOL REQUIRED: PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

