

ASSEMBLY INSTRUCTION
MADE IN VIETNAM


D560-21-05

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Before you start assembly: Please read all instructions carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.


CAUTION: For your safety, this product requires two people to lift.

Assembled Dimensions

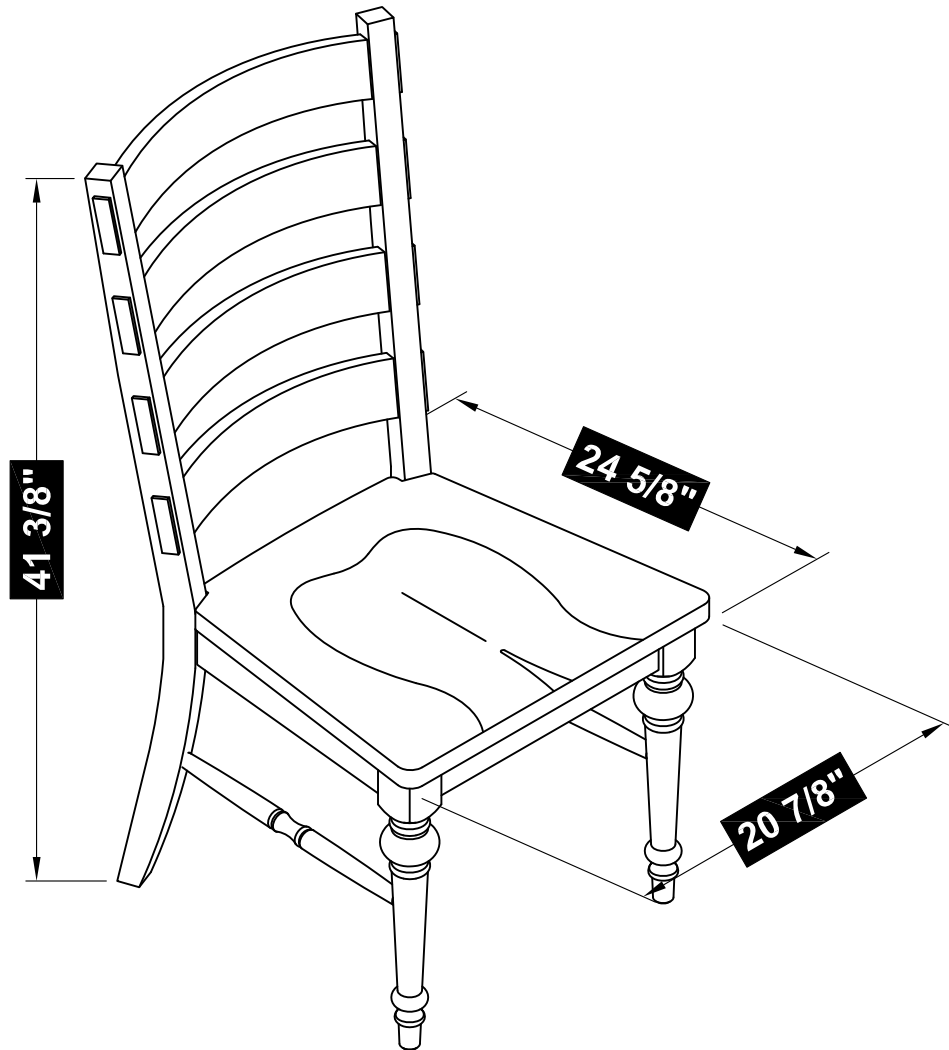


20 MINUTES


APPROXIMATE ASSEMBLE TIME

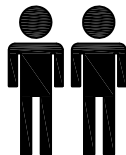

2 PERSON

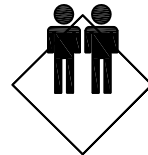

REQUIRED ASSEMBLY SPACE

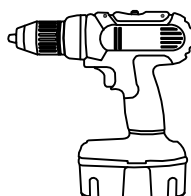






RECOMMENDED ASSEMBLY TOOLS

**NOT
PROVIDED**

ITEM NO.:D560-21-05









PART LIST

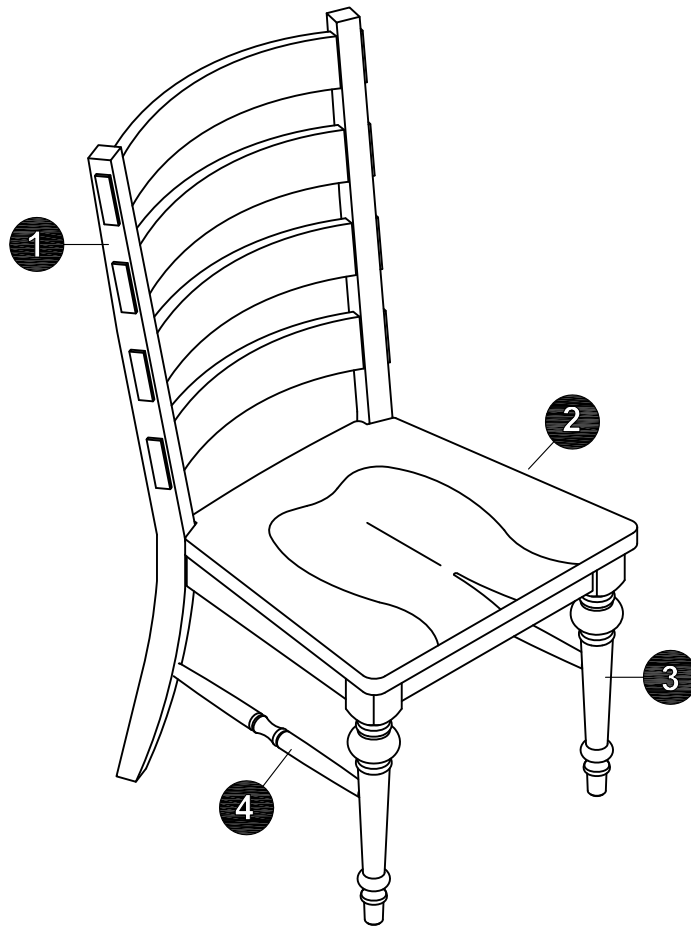

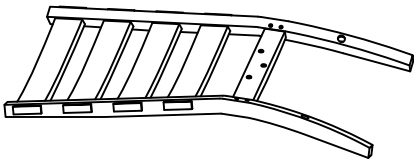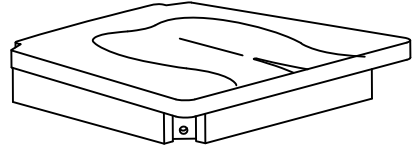
NO.		PART LIST	Q.TY
(1)		Chair Back	1
(2)		Seat Frame with Wooden	1
(3)		Front Leg Left - Right	2
(4)		Side Stretcher	2

ITEM NO.:D560-21-05


HARWARE LIST

<p>A</p>  <p>4x 5/16"x 64mm SHORT BOLT</p>	<p>B</p>  <p>9x 5/16"x 12x 1.5mm SPRING WASHER</p>	<p>C</p>  <p>9x 5/16"x 19x 1.5mm FLAT WASHER</p>	<p>D</p>  <p>1x M4x 57mm "L" ALLEN KEY</p>
<p>E</p>  <p>1x 5/16"x 38mm SHORT BOLT</p>	<p>F</p>  <p>4x 5/16"x 85mm LONG BOLT</p>	<p>G</p>  <p>4x Ø8x 38mm SCREW</p>	<p>H</p>  <p>1x M4x 80mm "STRAIGHT" ALLEN KEY</p>


STEP 1

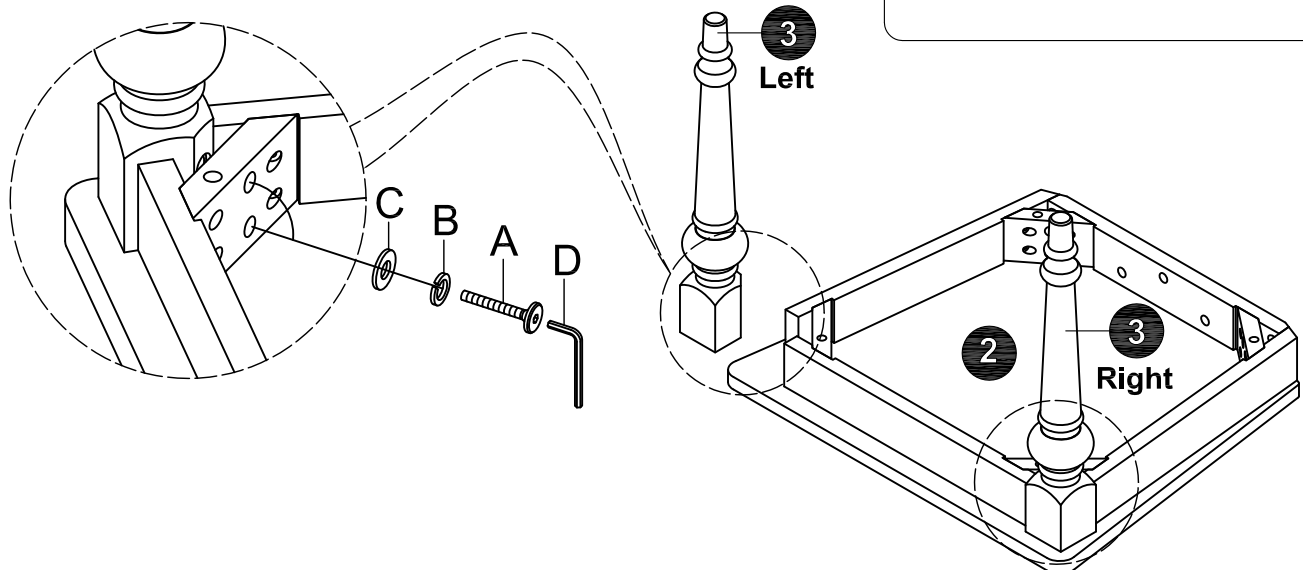

STEP 2

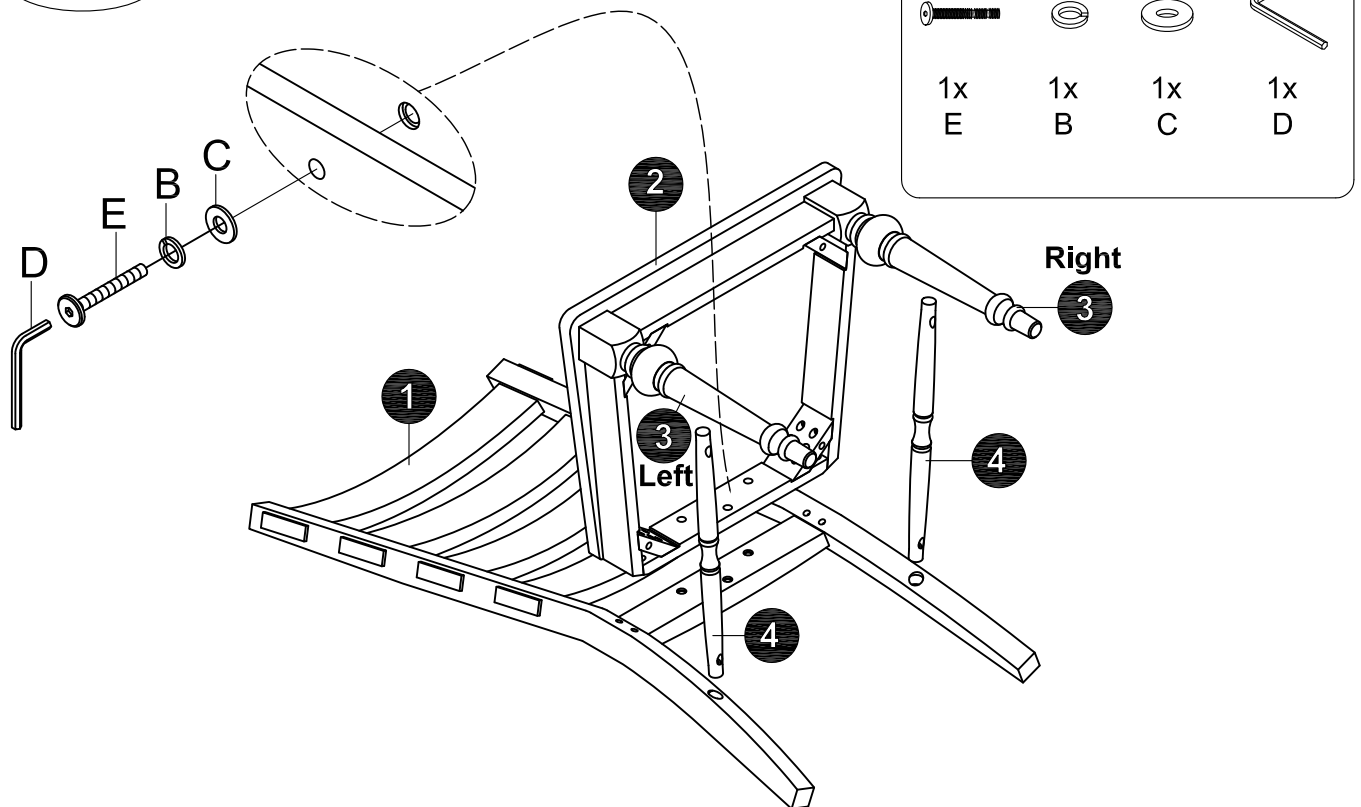


STEP 3

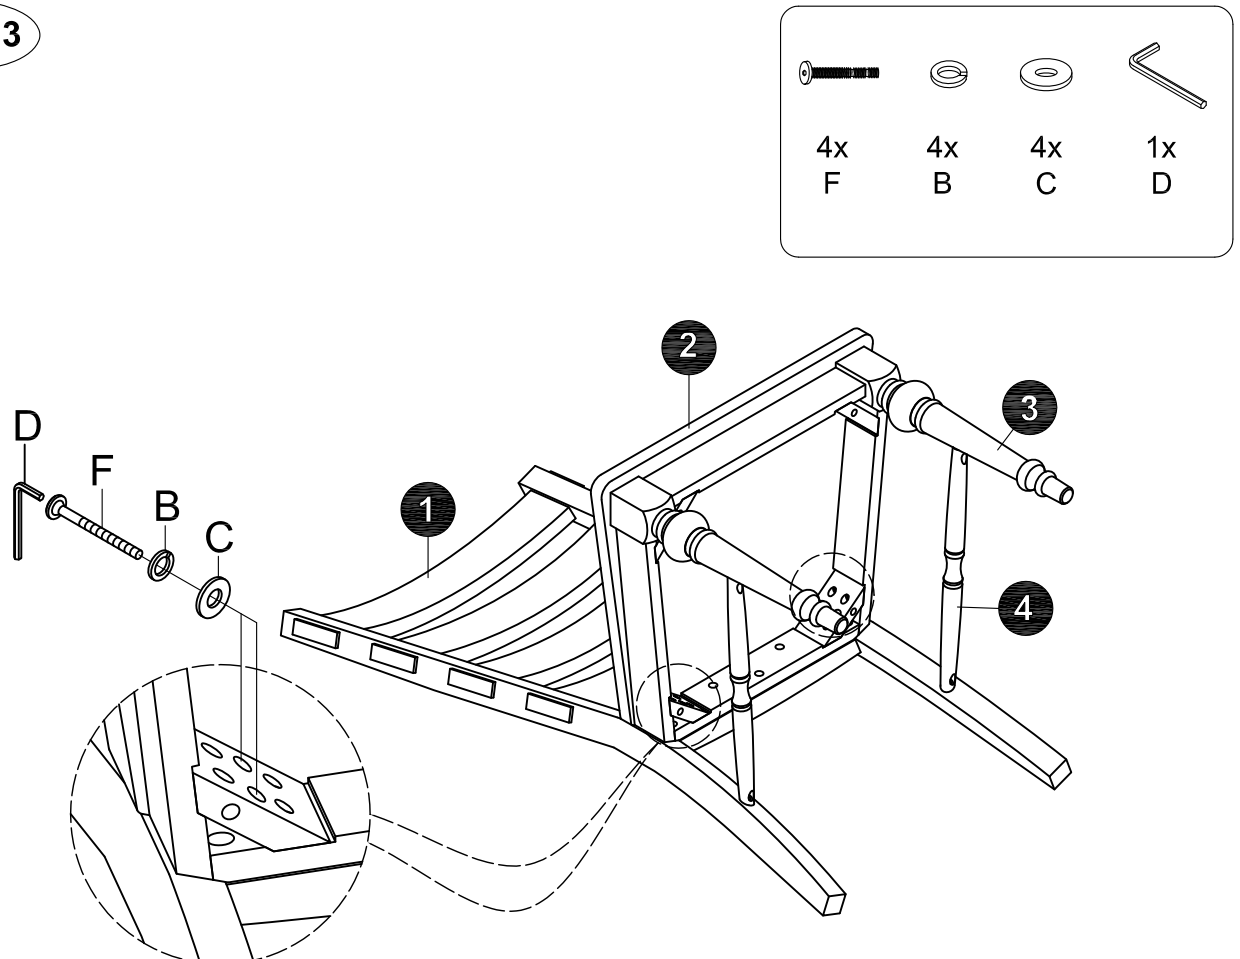

STEP 4



4x
G

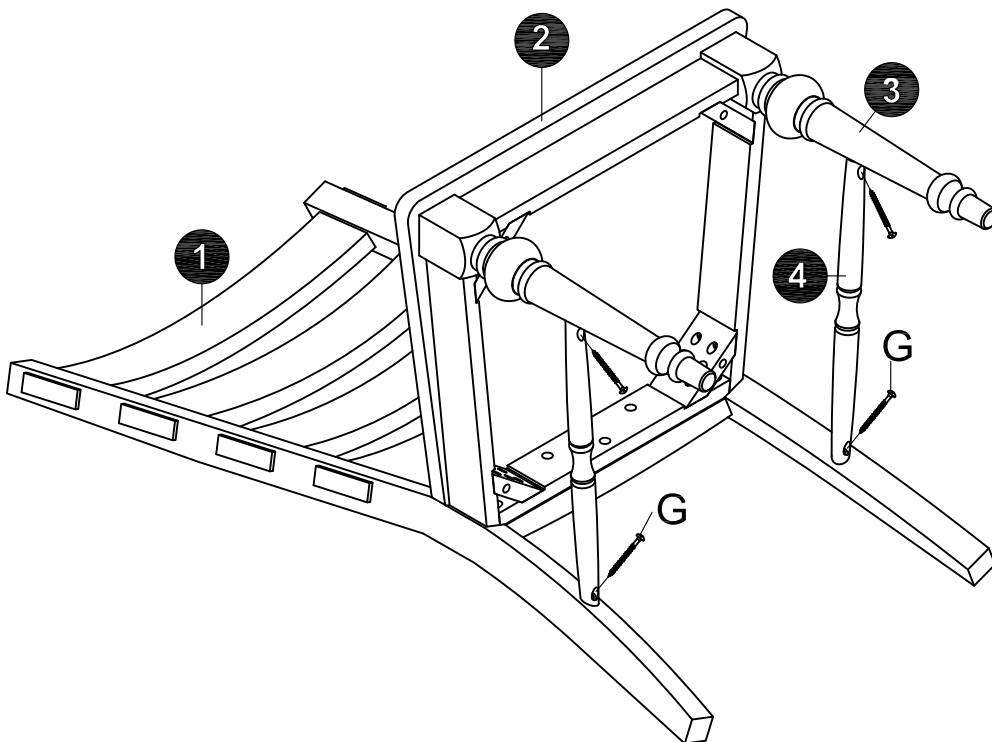

STEP 5

