

# ASSEMBLY INSTRUCTION

## 13907 ALISE HEADBOARD QUEEN

Read instructions carefully. See furniture and hardware part list on the right for guidance.






Have all parts ready before assembly. Place all wooden furniture parts on a clean and flat soft surface to prevent scratching.

Before you start, here are some words of caution:


1. Do not FULLY – TIGHTEN nuts and bolts until all nuts and bolts are partially tightened.
  2. Do not FULLY – TIGHTEN nuts and bolts to avoid causing damage to the threading.
- Keep all hardware parts out of reach of children

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

FURNITURE PART LIST		
ITEM	DESCRIPTION	QTY
A	HEADBOARD	1
B	SUPPORT BOARD	1

HARDWARE PART LIST		
ITEM	DESCRIPTION	QTY
1	M8 FLAT WASHER 	8 PCS
2	JCBB BOLT M8 x 40mm 	8 PCS
3	M8 FLAT WASHER 	2 PCS
4	JCBB BOLT M8 x 60mm 	2 PCS
5	M5 ALLEN KEY (BALL SHAPE) 	1 PC


### STEP 1

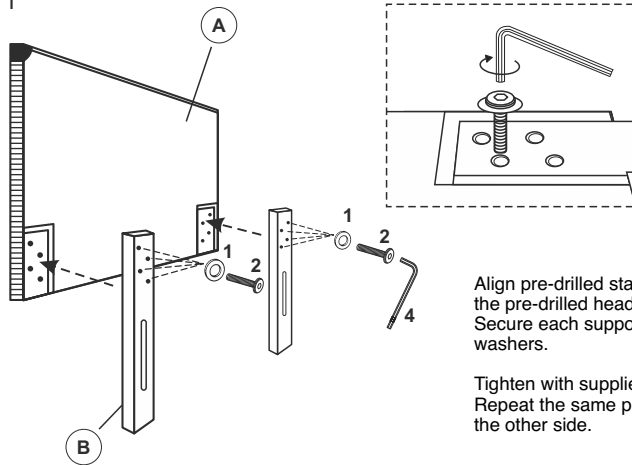

Align pre-drilled stand upper holes over the pre-drilled headboard holes  
Secure each support stand by using 4x JCBB bolts and 4x washers.


Tighten with supplied Allen key.  
Repeat the same procedure for the other side.

### STEP 2

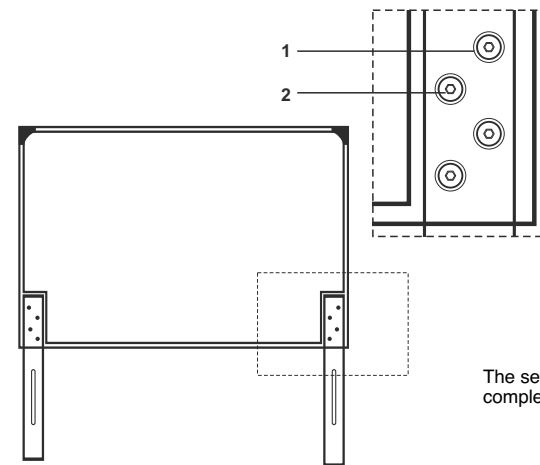


The set up of upper holes with stand upper holes is complete by securing all 8 bolts and 8 washers.

### STEP 3

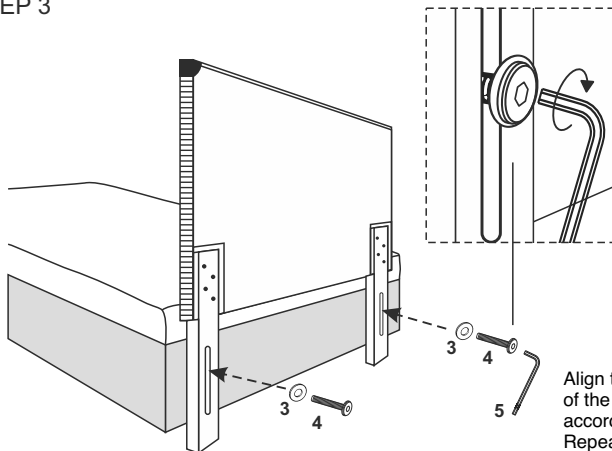

Align the pre-drilled lower holes of the support over the pre-drilled holes on the bed according to your desired headboard height.  
Repeat the same procedure for the other side.

### STEP 4

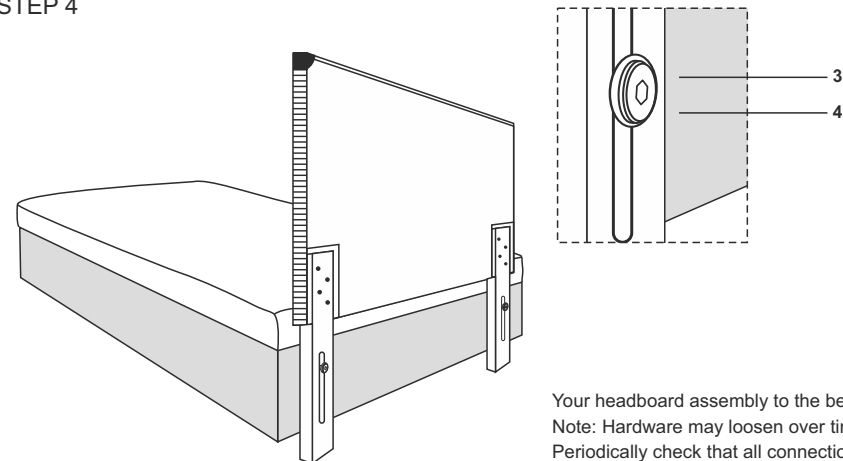

Your headboard assembly to the bed is complete.  
Note: Hardware may loosen over time.  
Periodically check that all connections are tight.