

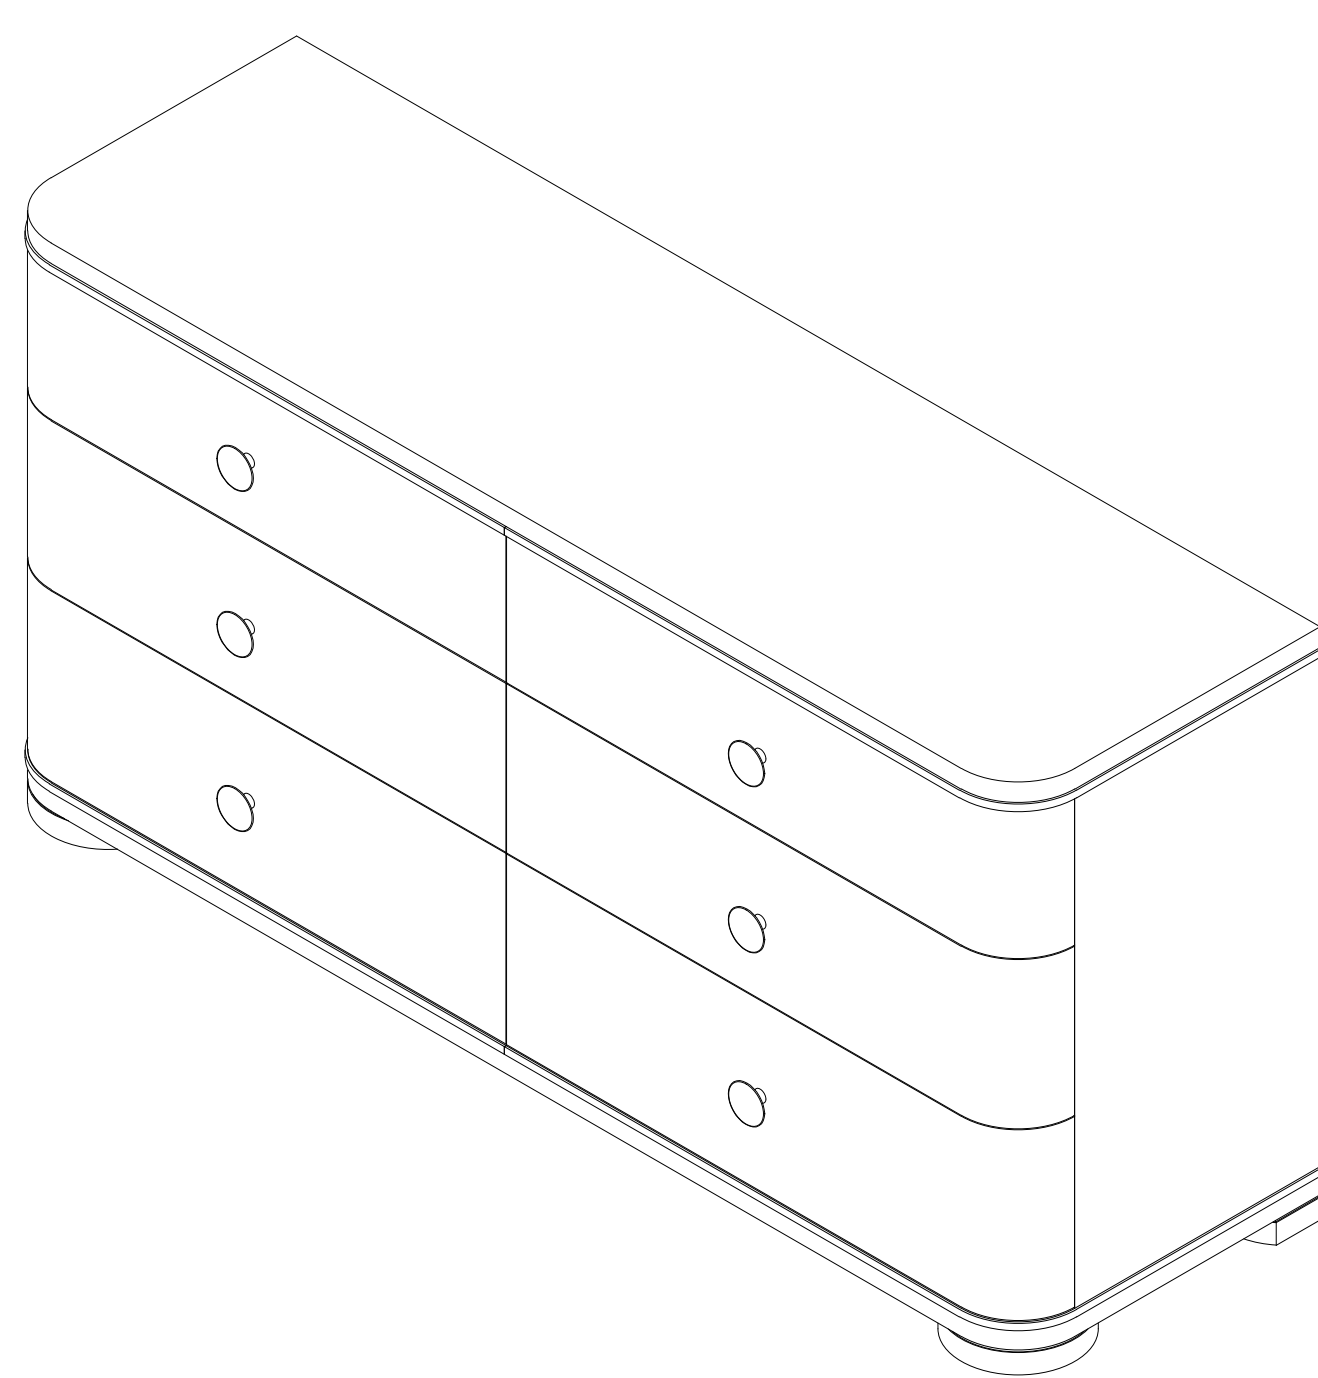


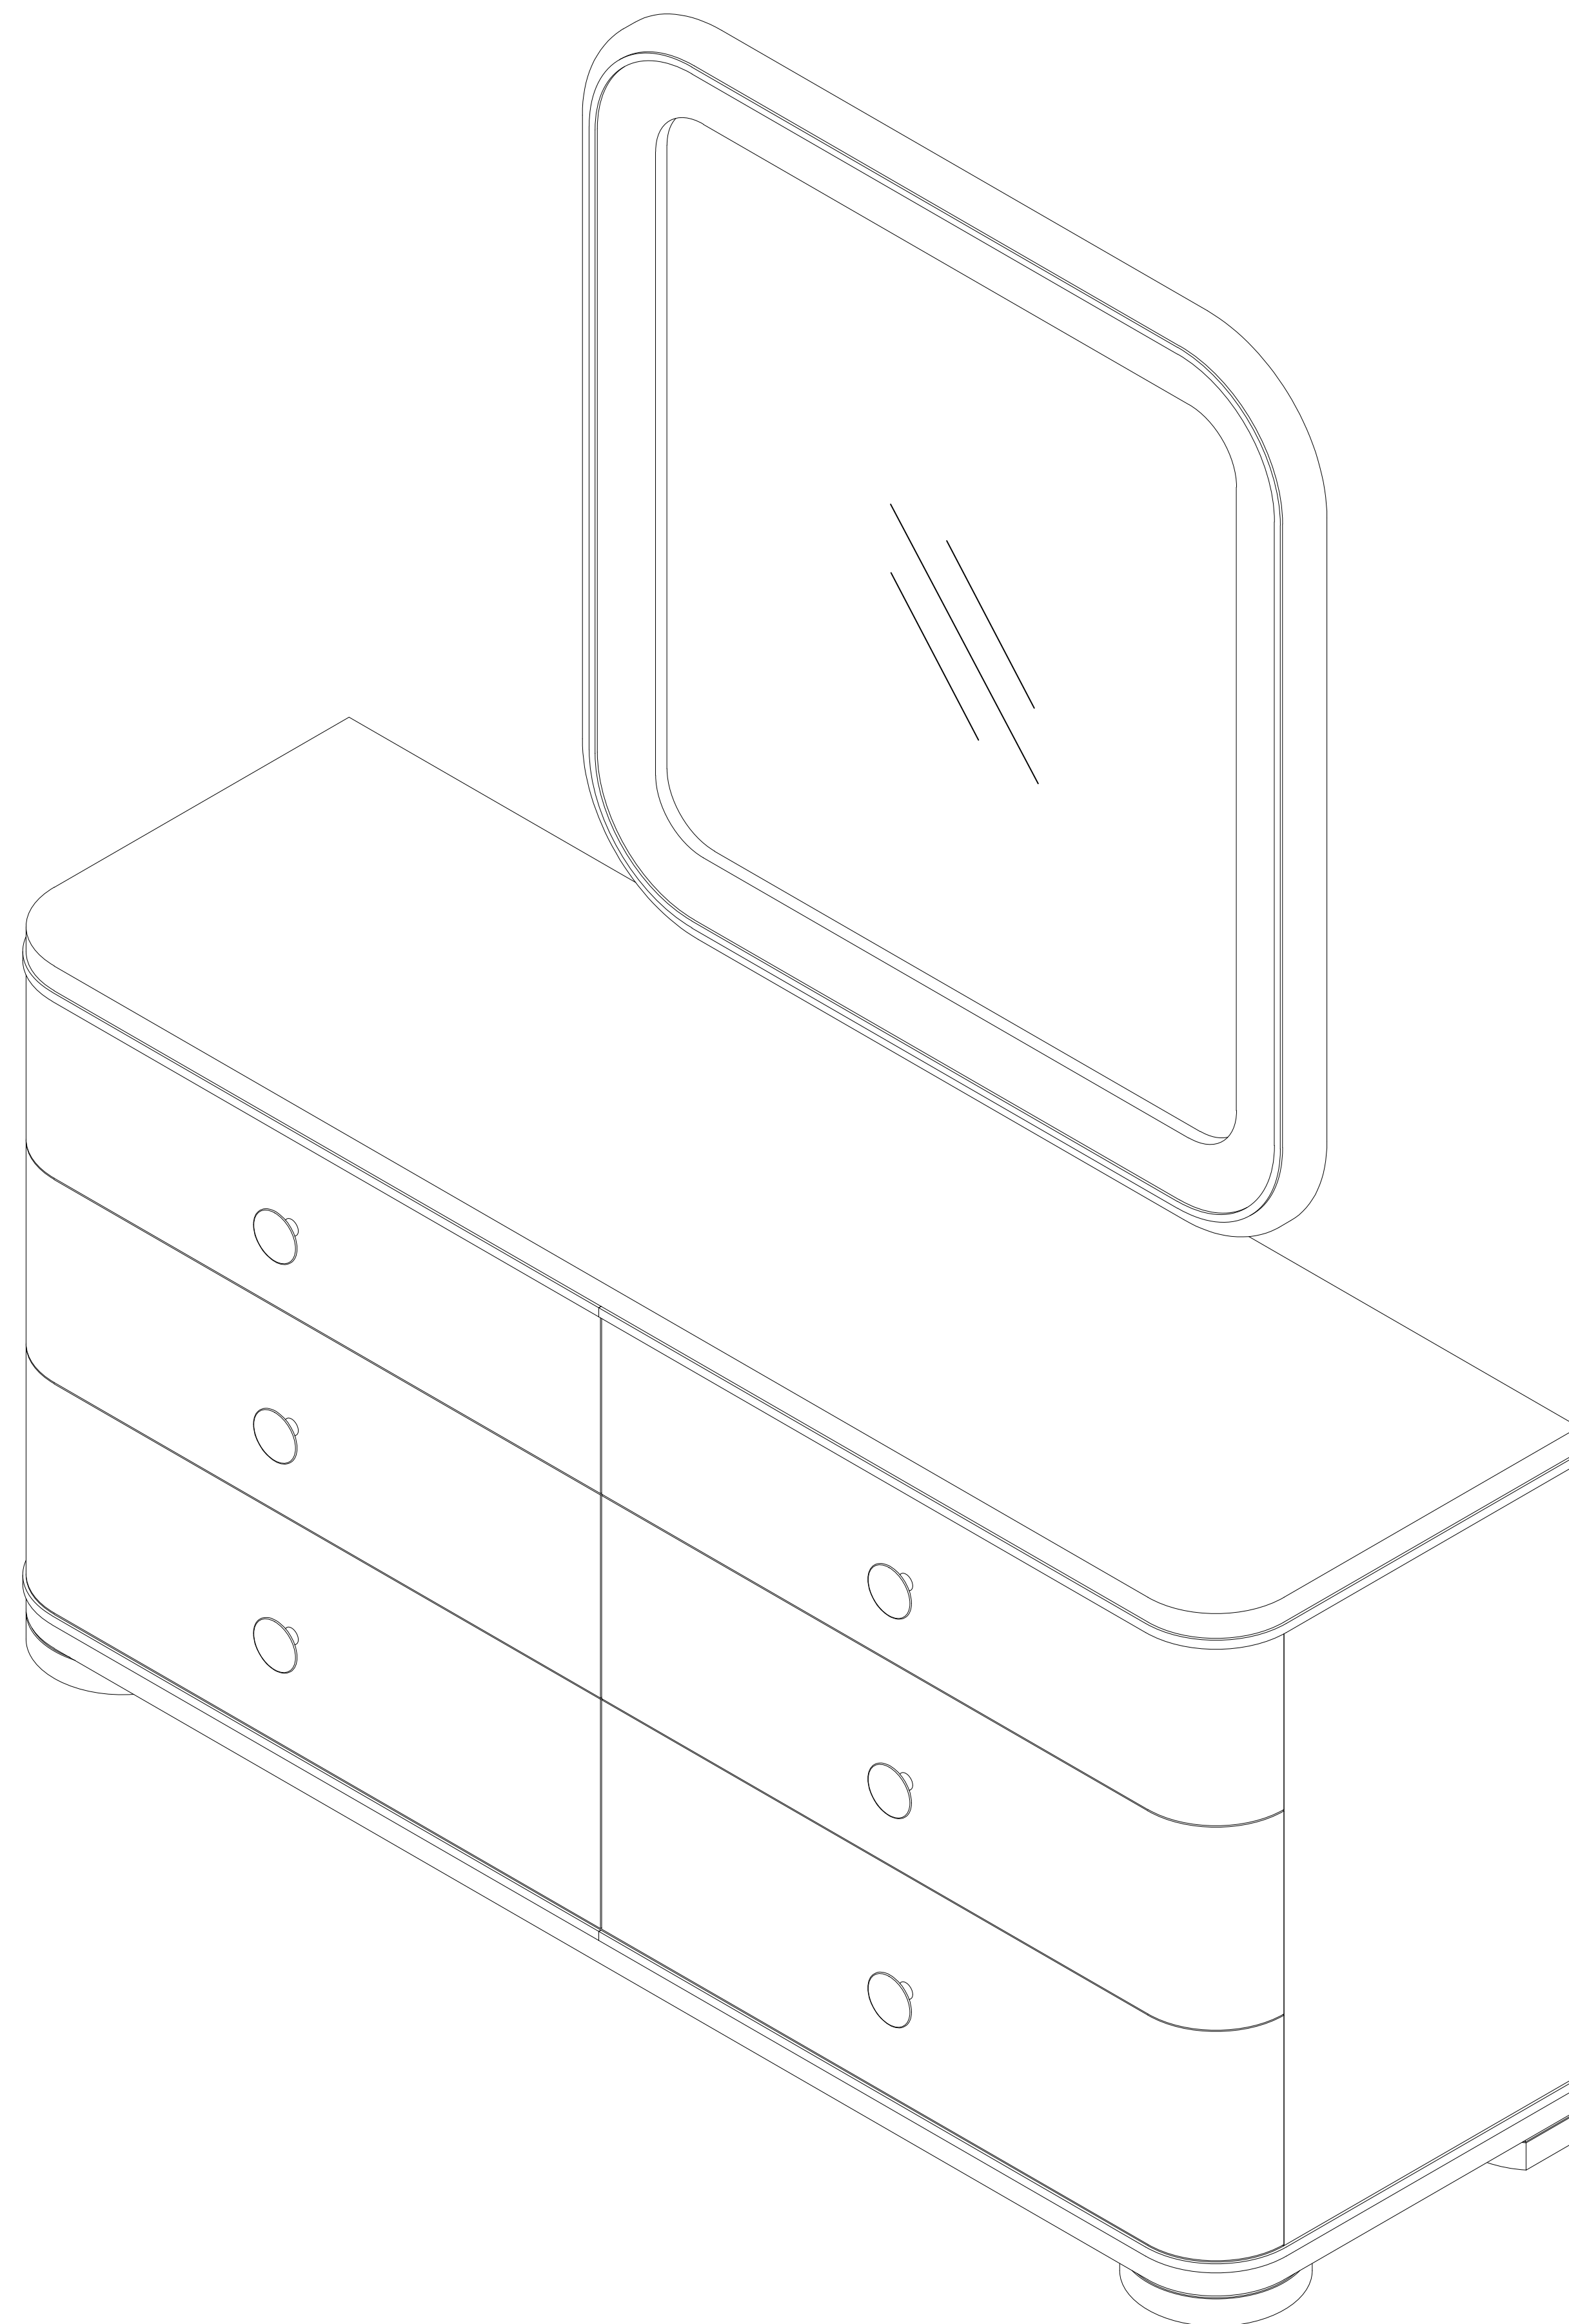


(A)

x1 Dresser
x1 Commode
x1 Tocador

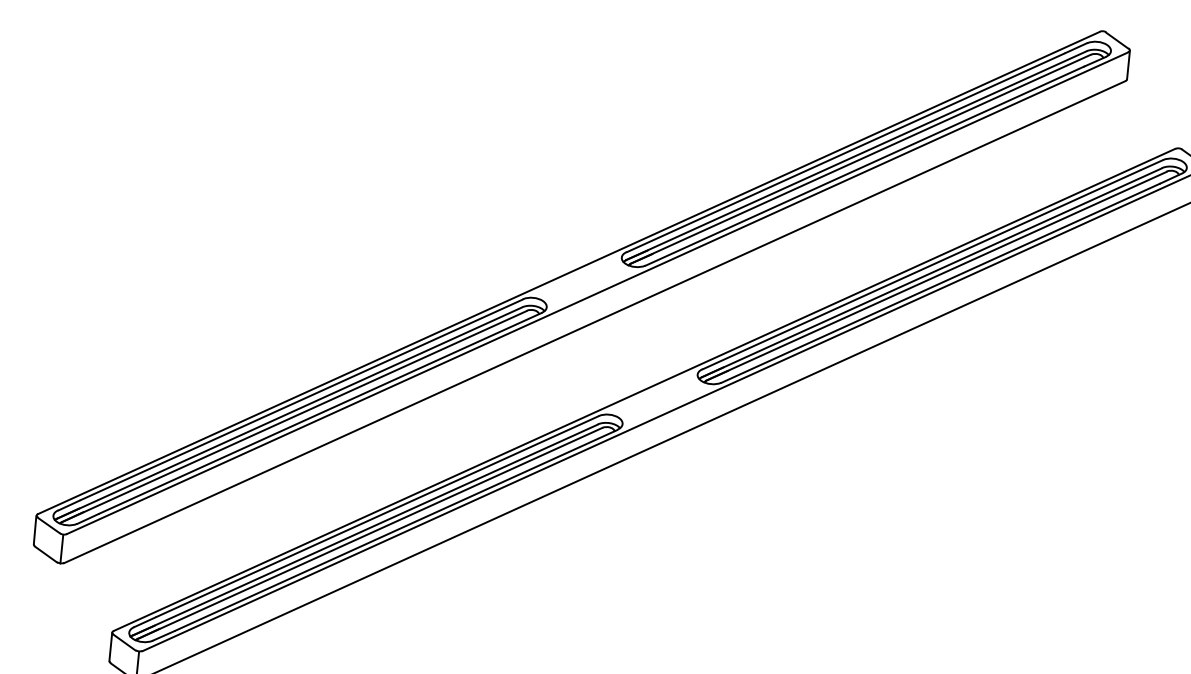


(B)

x2 Mirror Support *
x2 Supporte de miroir
x2 Soporte del espejo

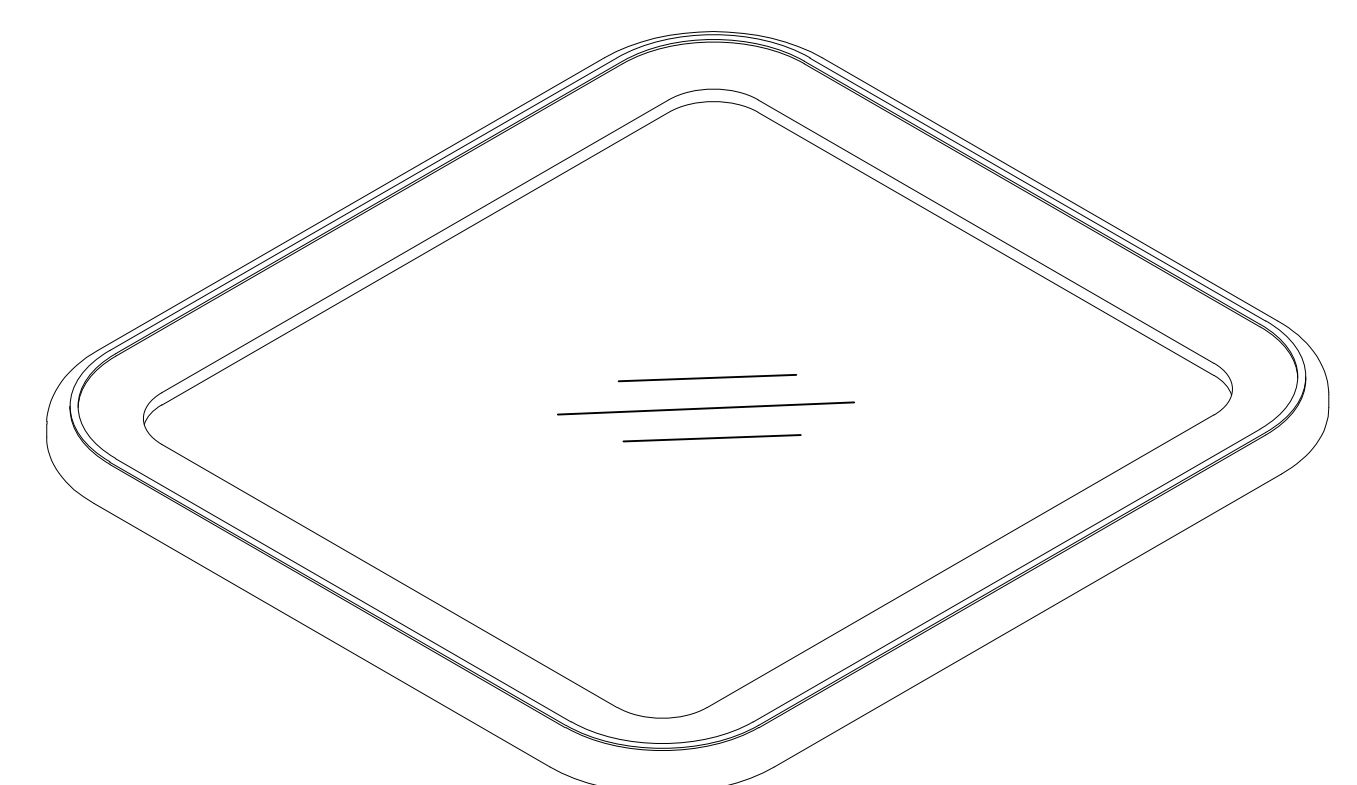


(C)

x1 Mirror
x1 Miroir
x1 Espejo

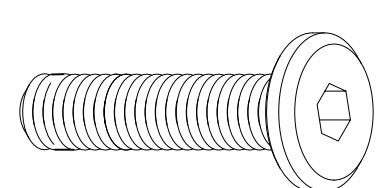


(D)

x8 Allen bolt Ø1/4"xL38mm *
x8 Vis à tête creuse hexagonale Ø1/4"x38mm
x8 Perno Allen Ø1/4"x38mm

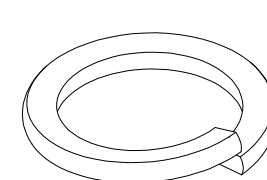


(E)

x8 Lock washer Ø1/4" *
x8 Rondelle de blocage Ø1/4"
x8 Arandela de Seguridad Ø1/4"

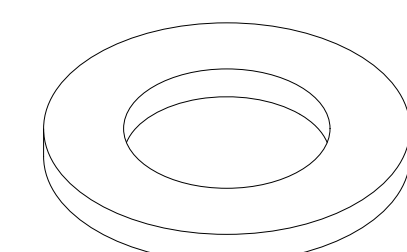

(F)

x8 Flat Washer Ø1/4" *
x8 Rondelle plate Ø1/4" *
x8 Arandela plana Ø1/4"

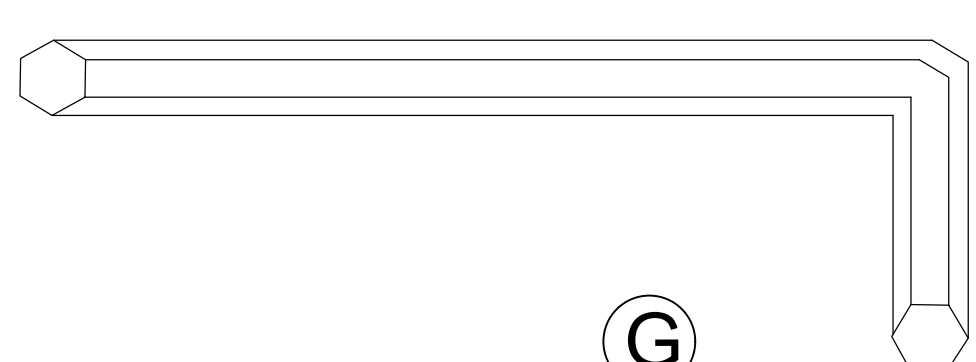


(G)


x1 Allen Key 4mm *
x1 Clé hexagonale 4mm
x1 Llave Allen 4mm

* Replaceable part



**STEP 1
ÉTAPE 1
PASO 1**

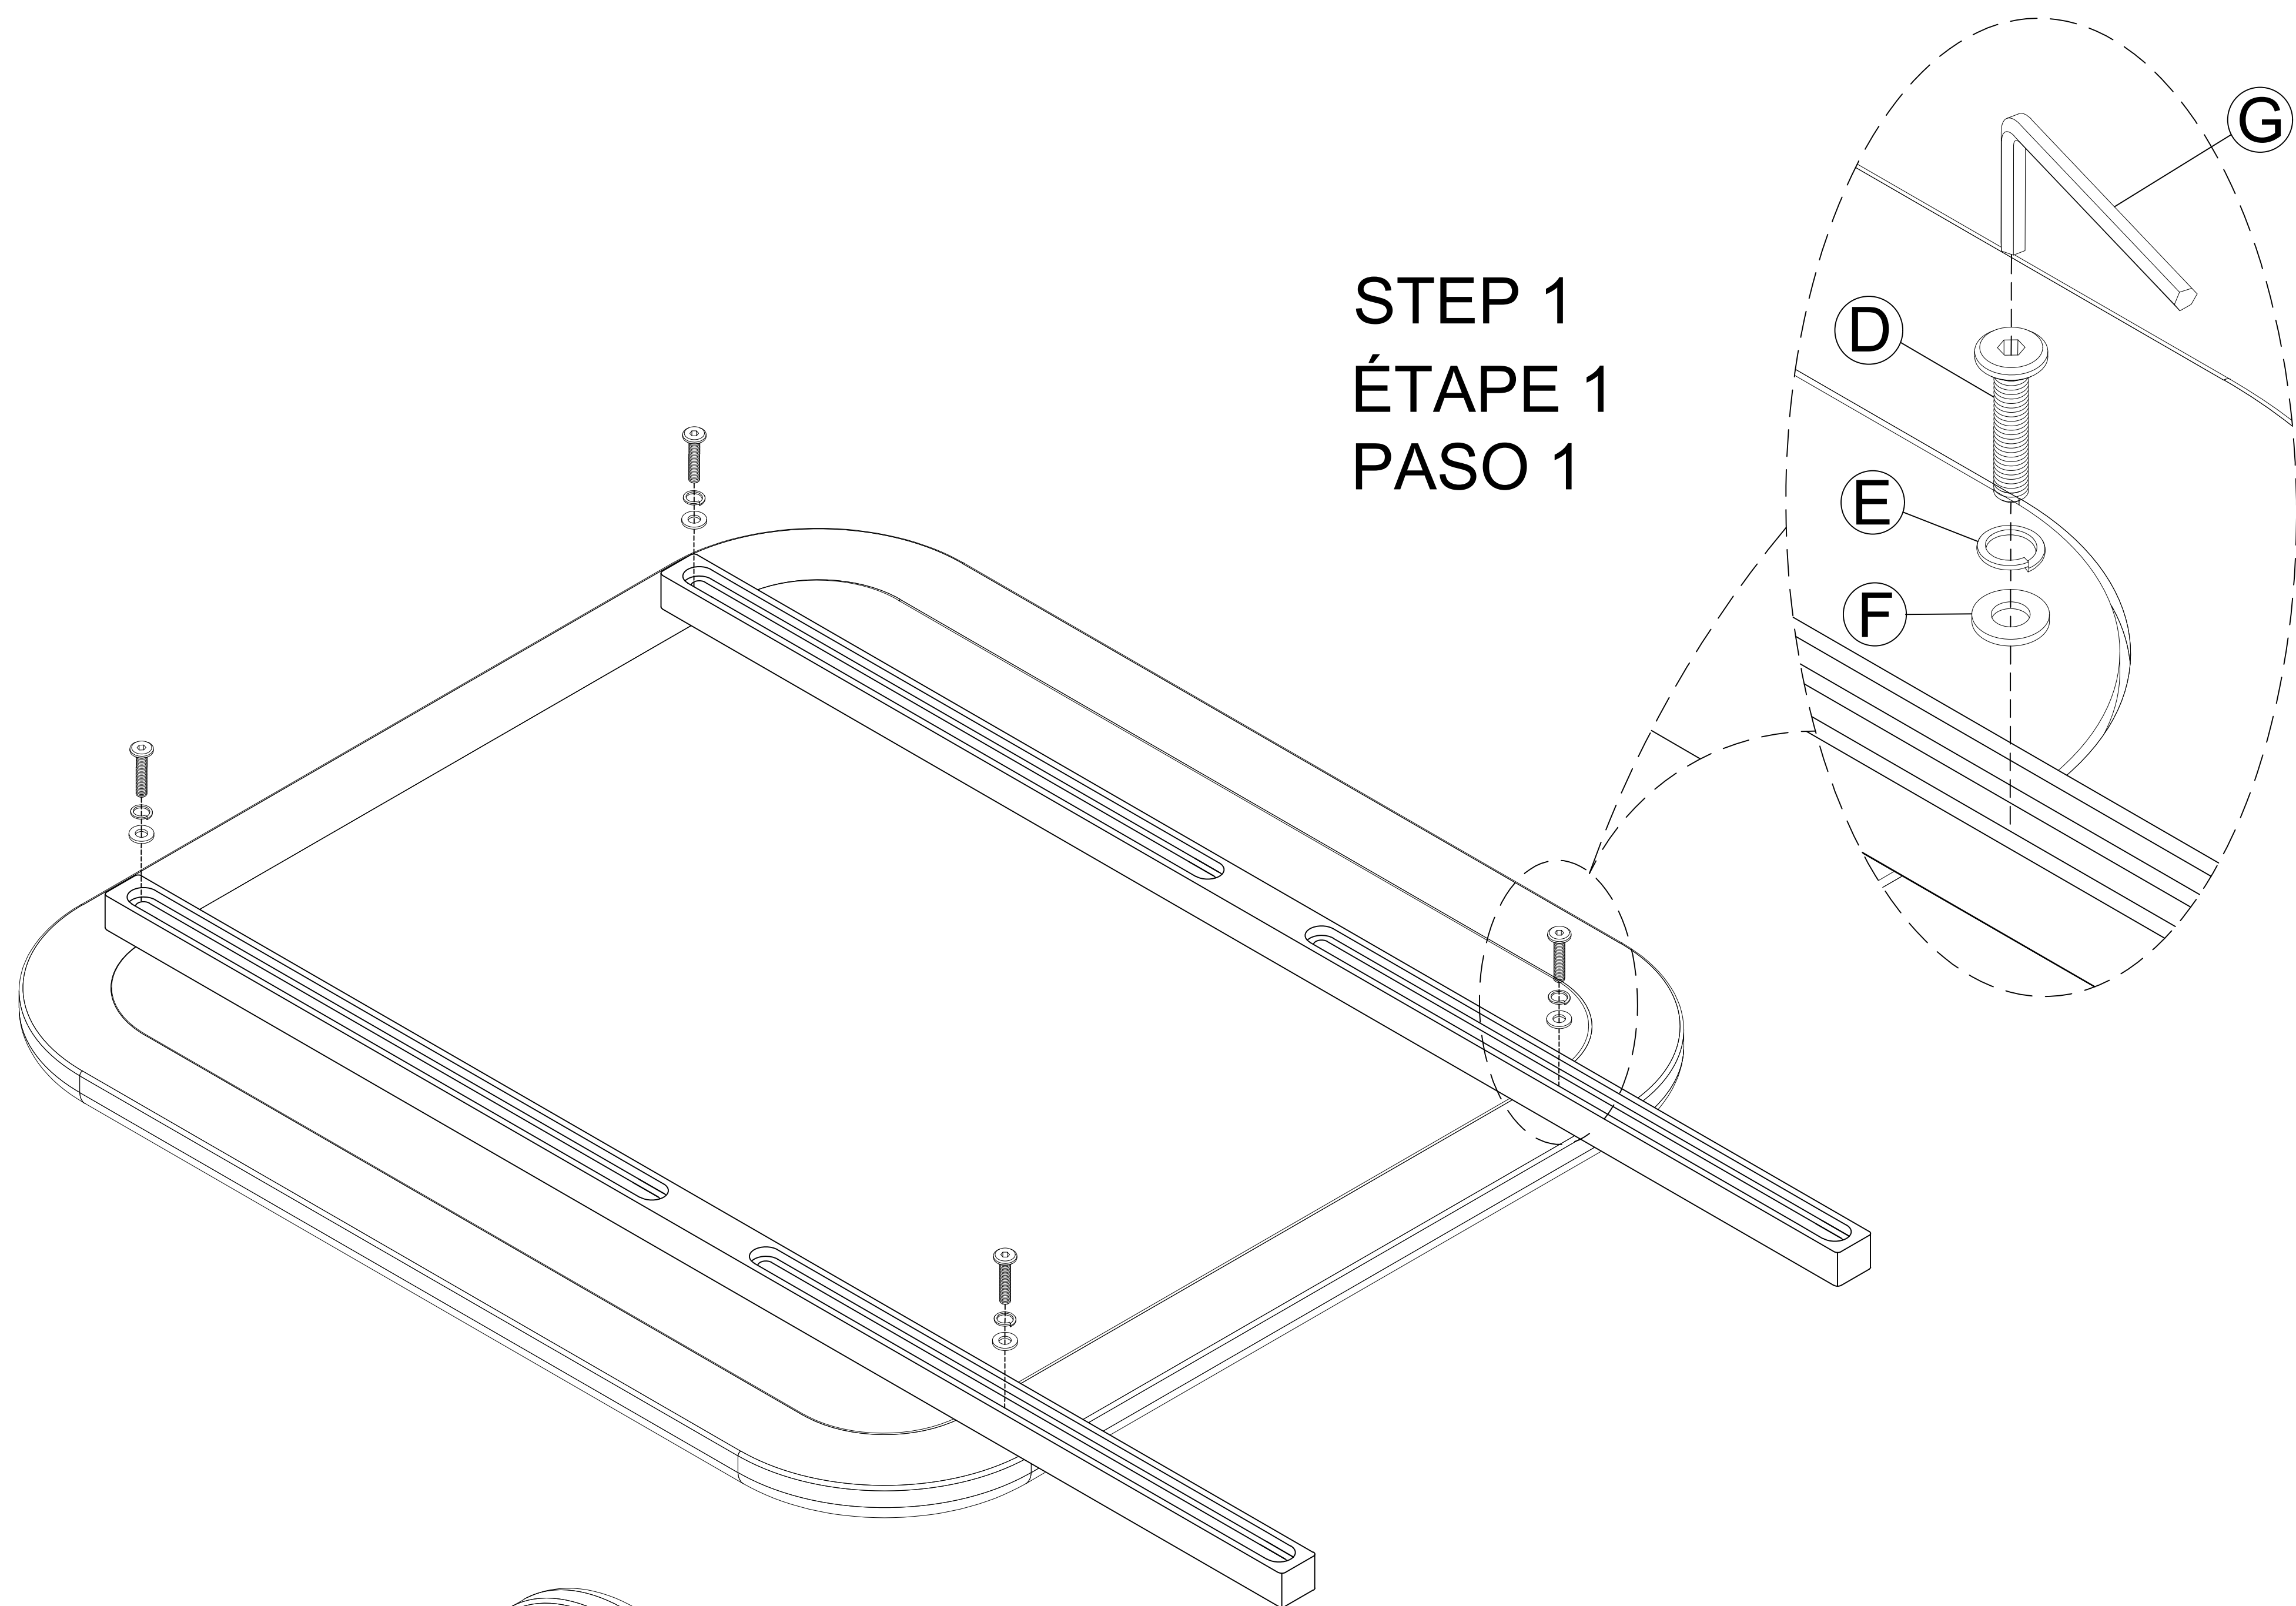


**STEP 2
ÉTAPE 2
PASO 2**

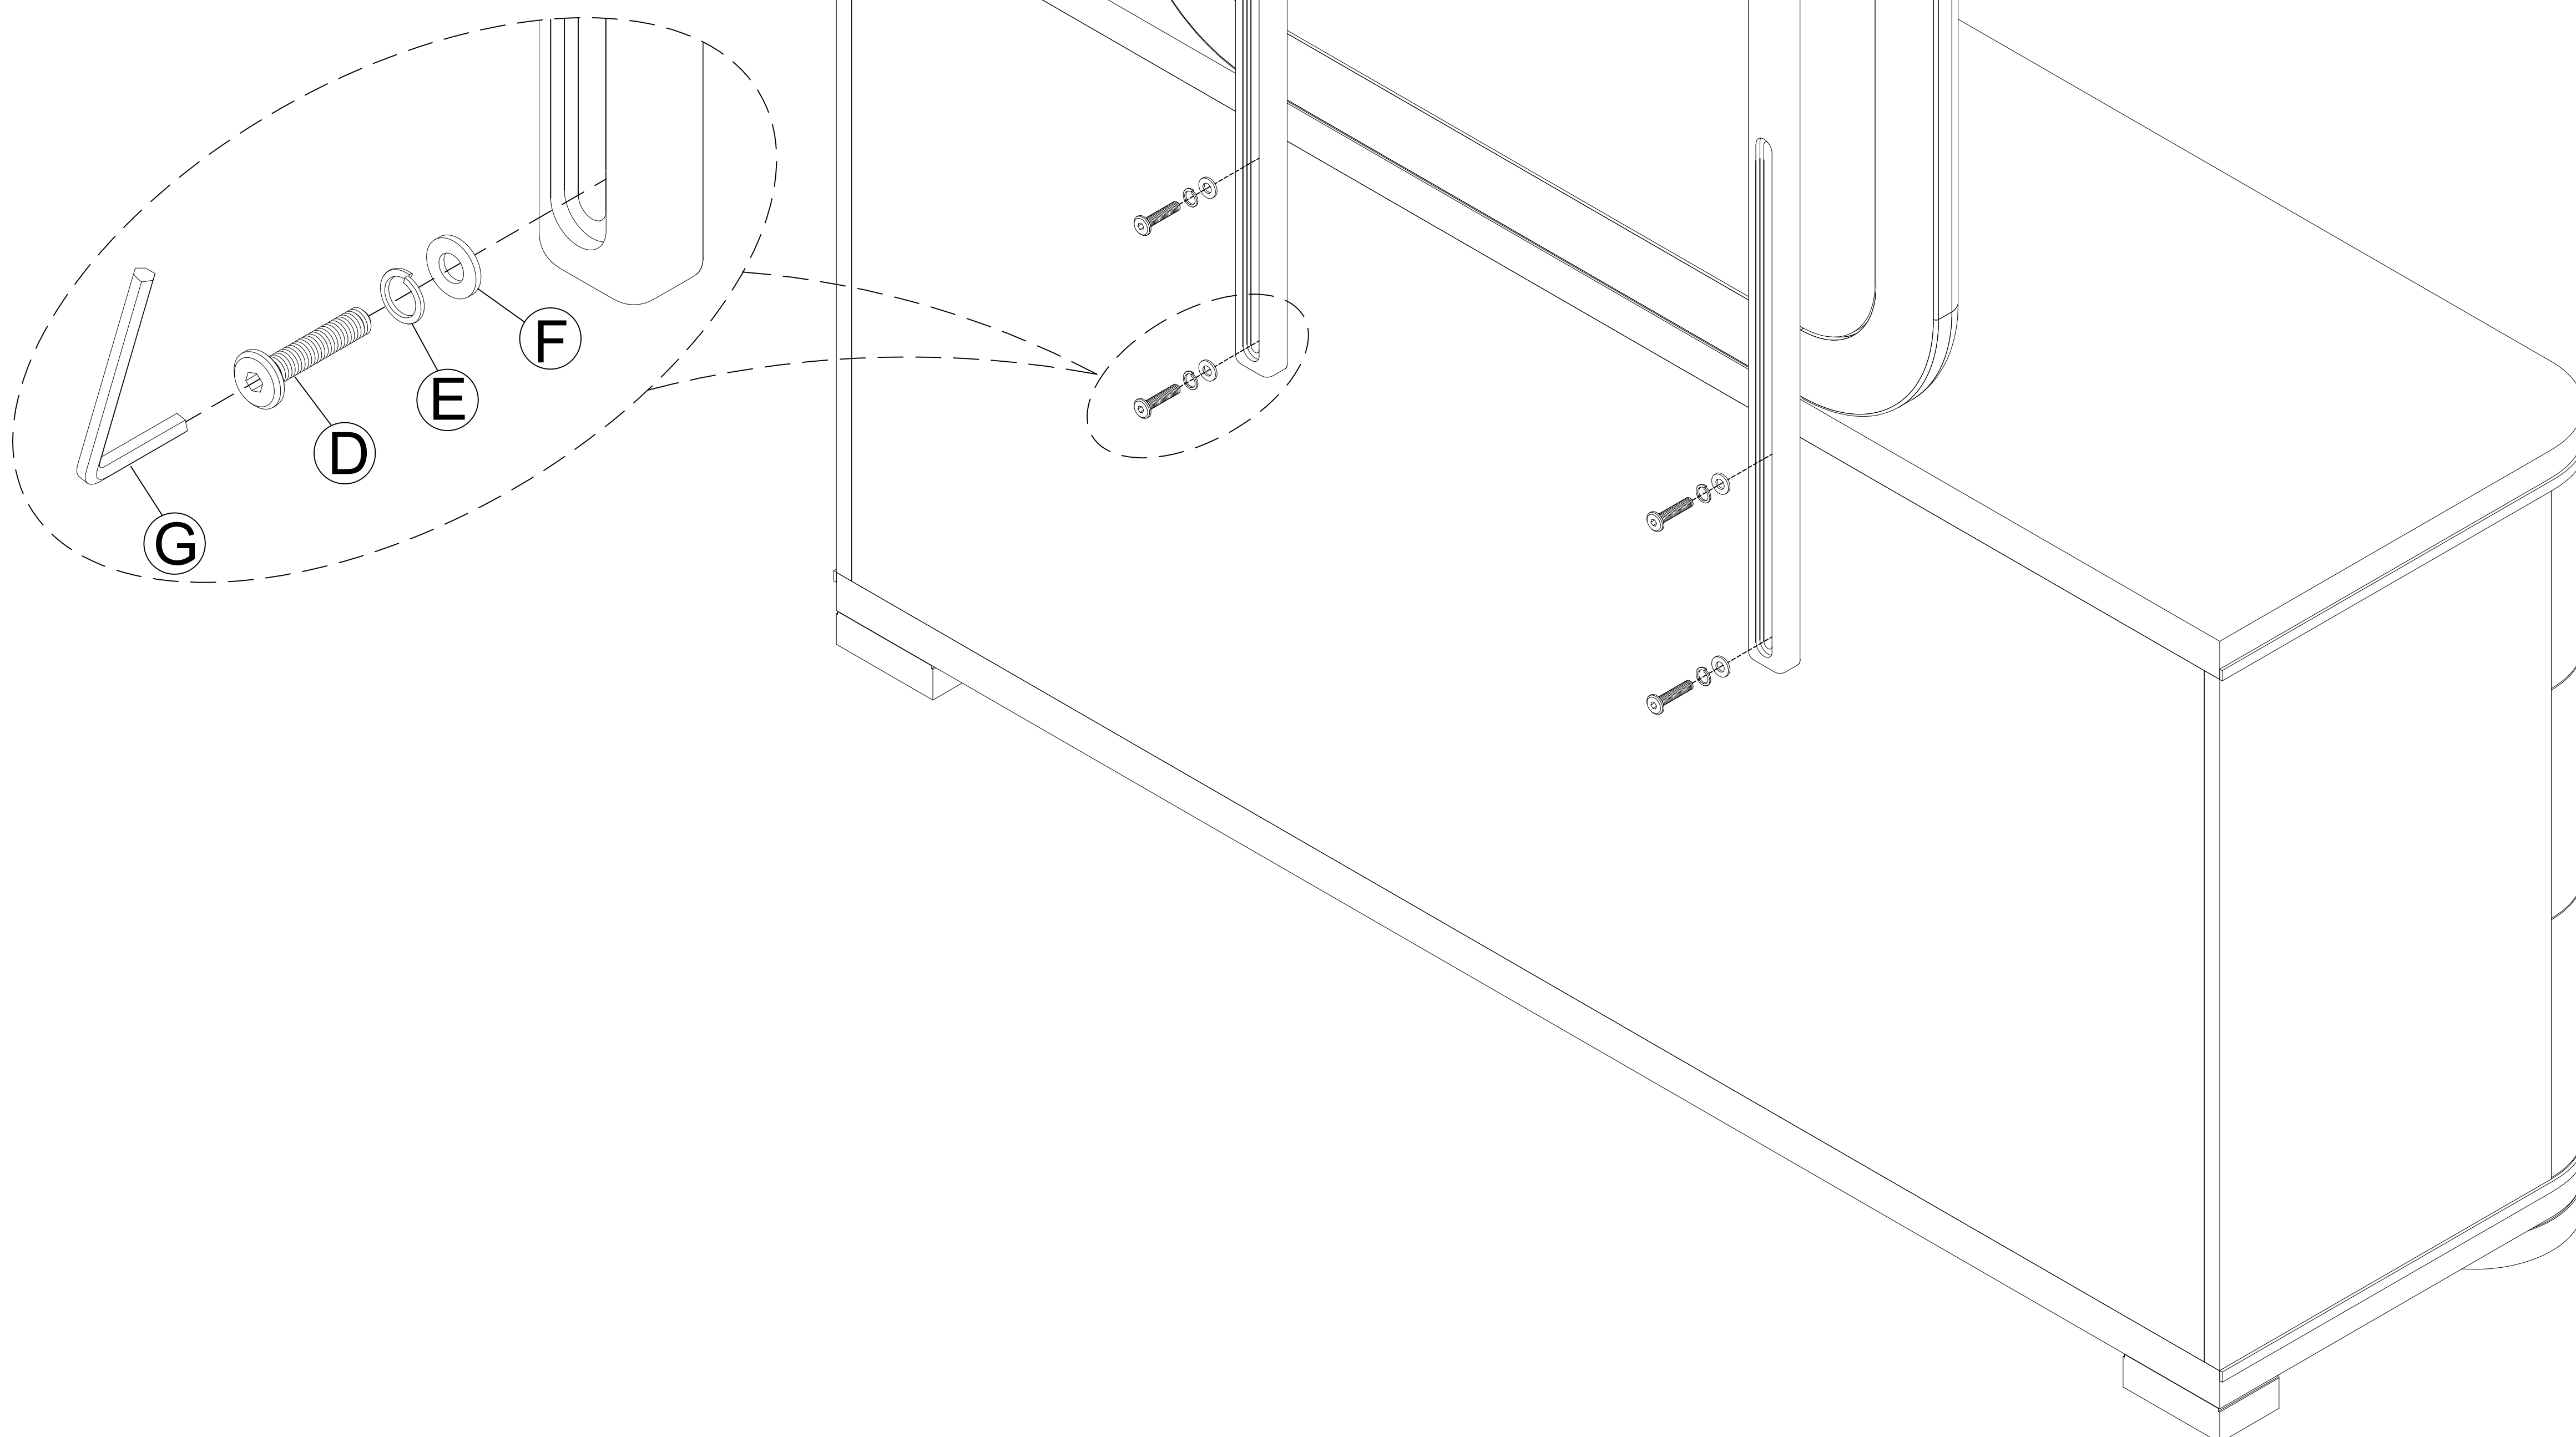

***** Replaceable part

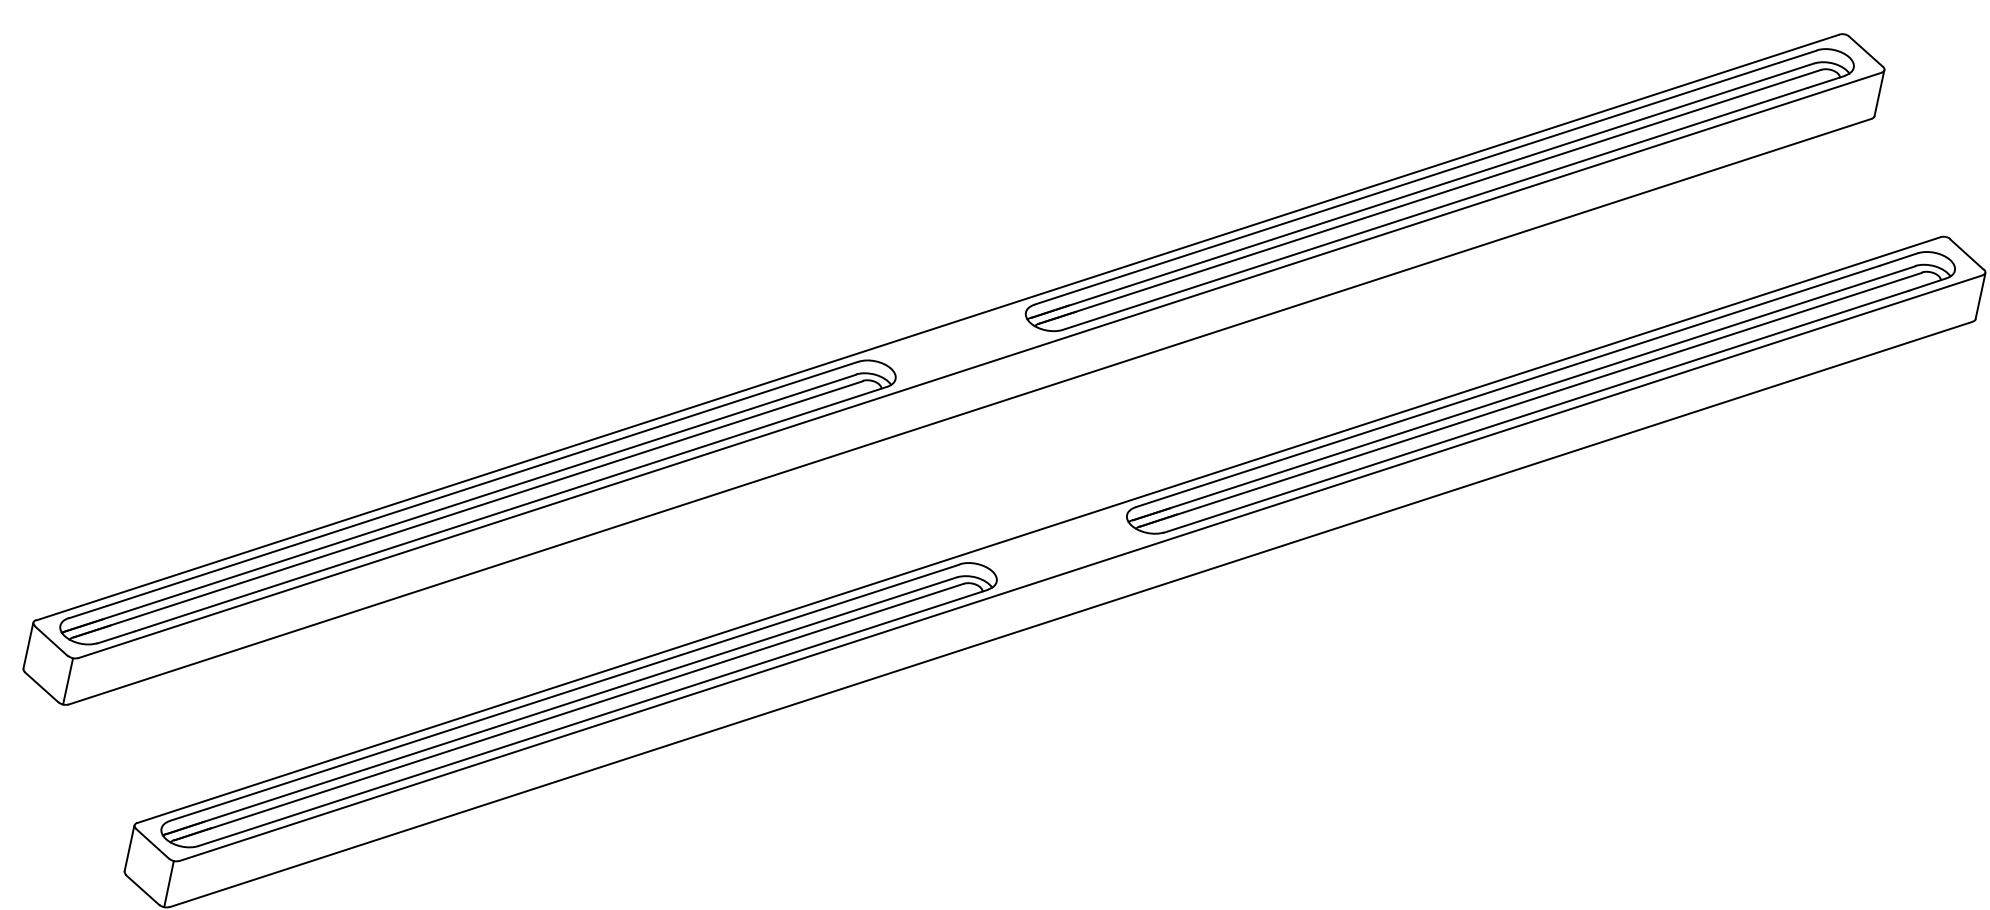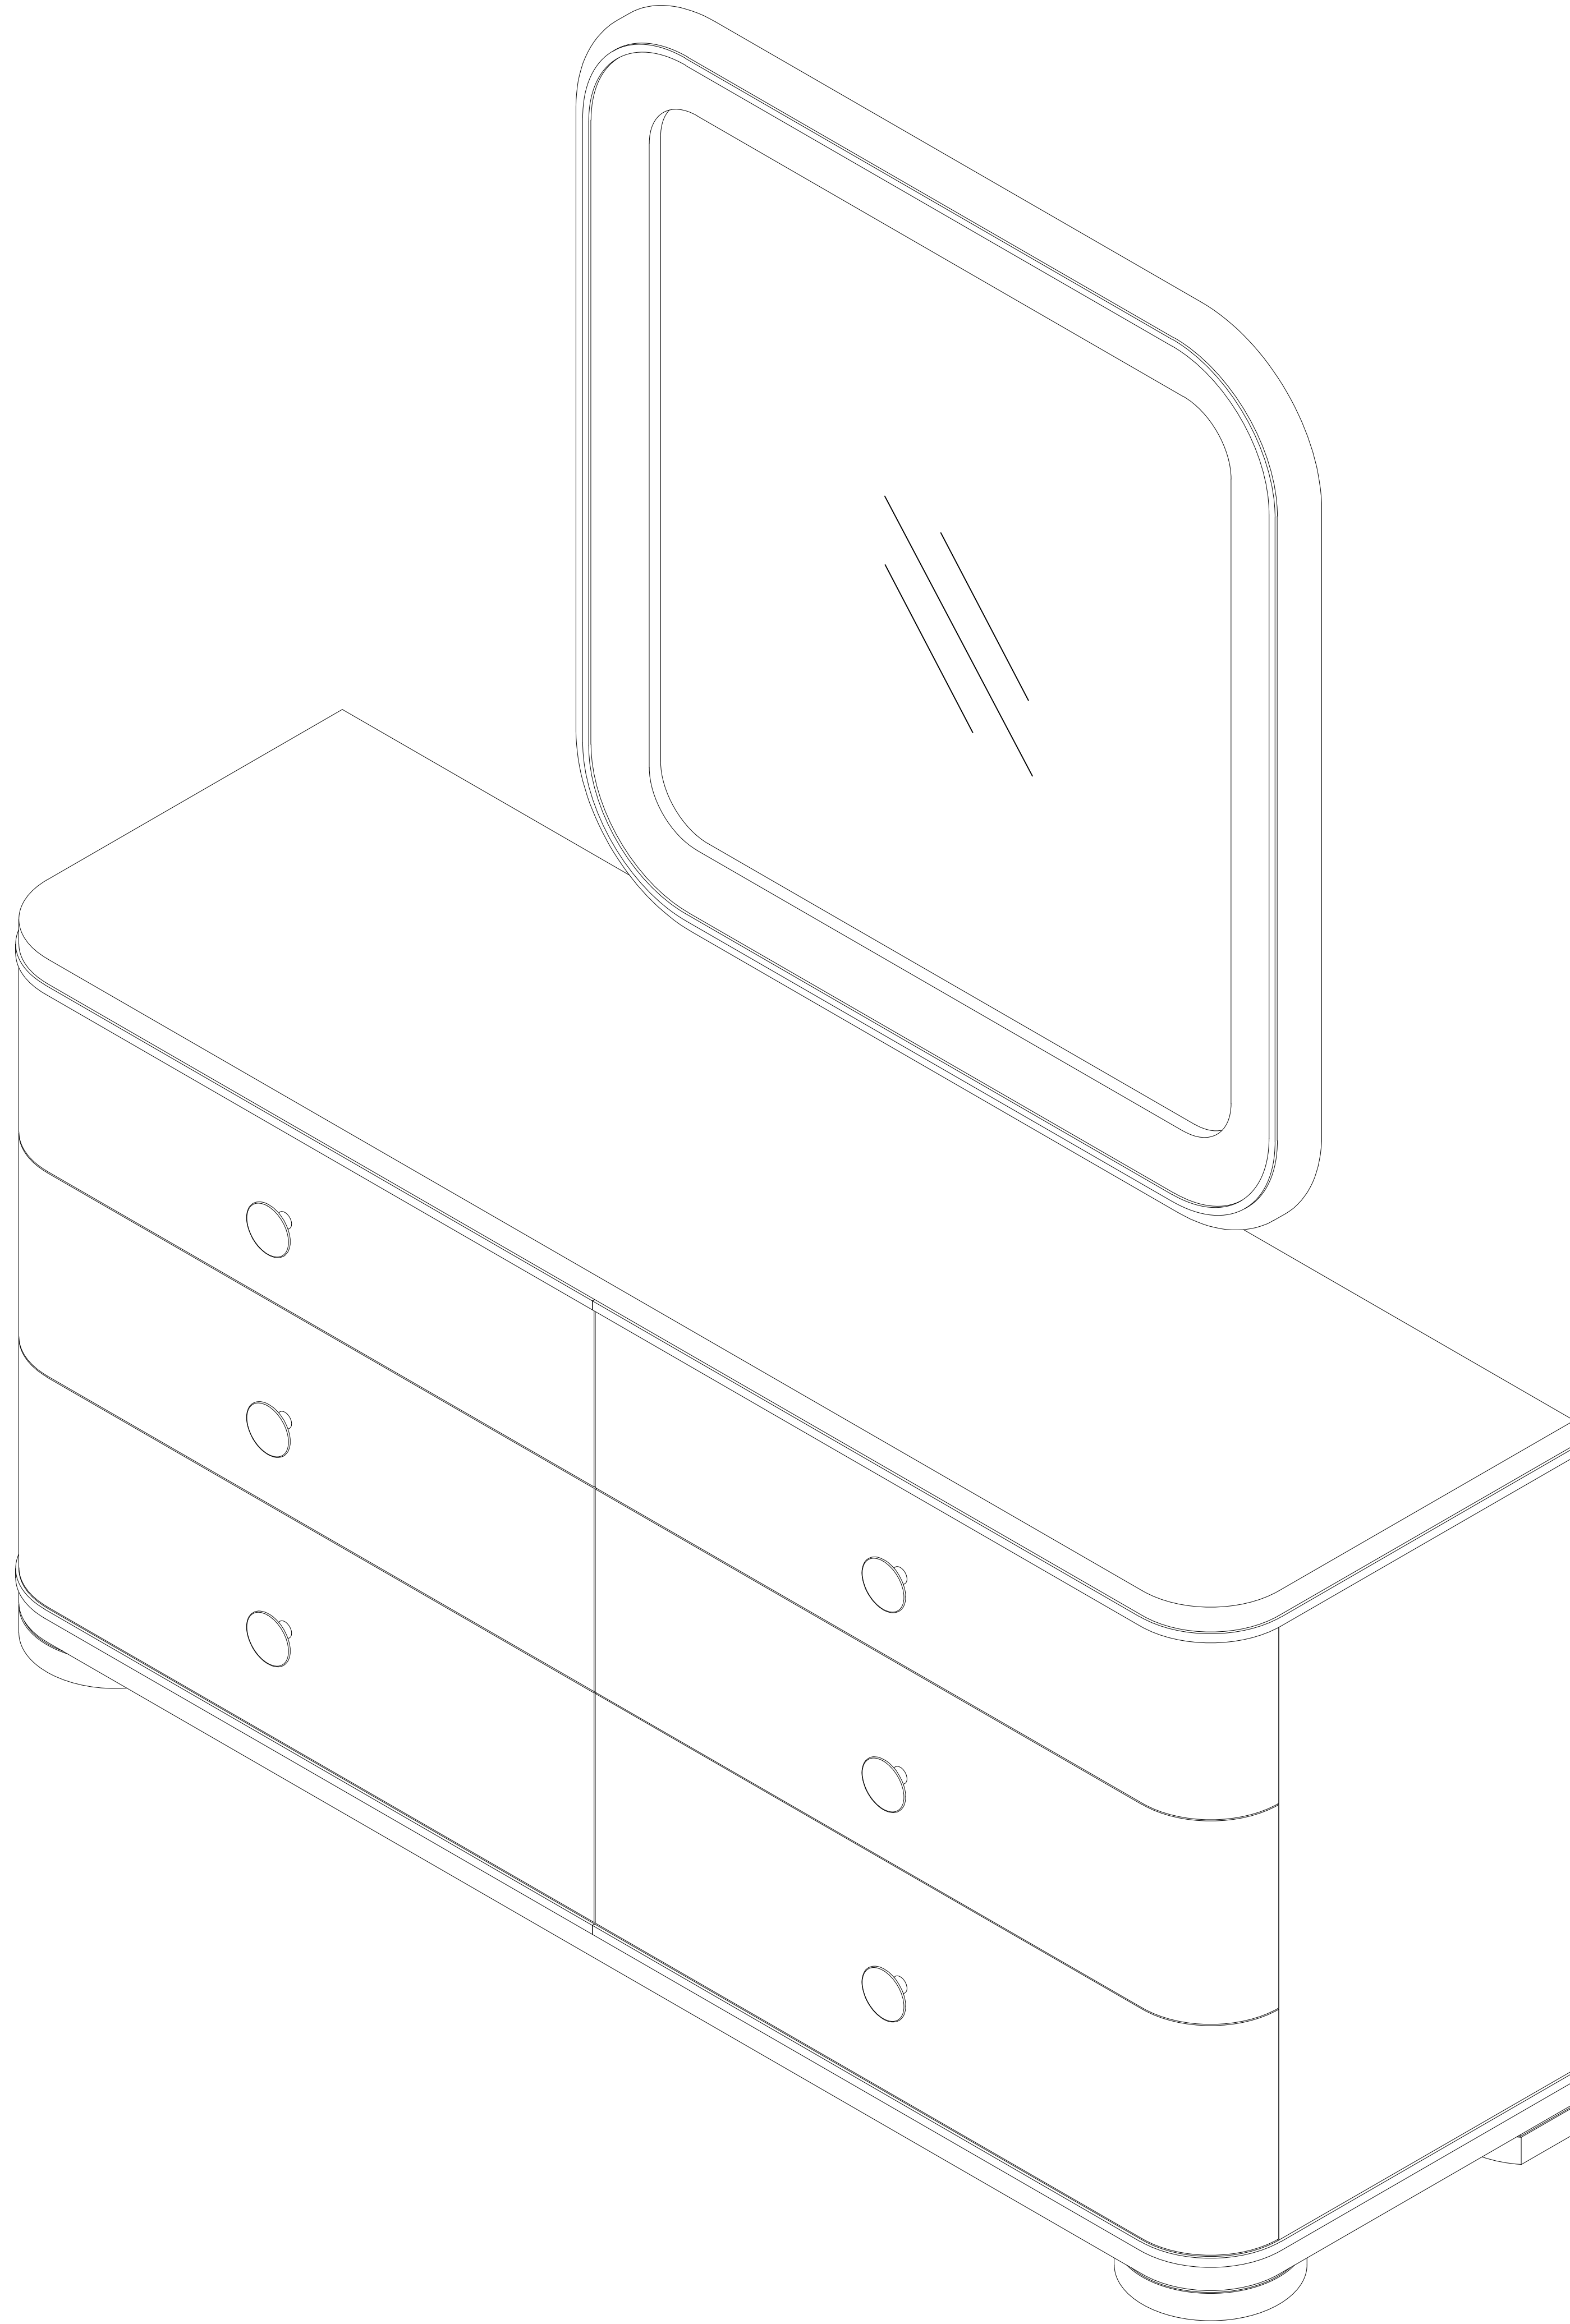

x2 RP392DJ110-SUPP- Mirror Support
- Supporte de miroir
- Soporte del espejo

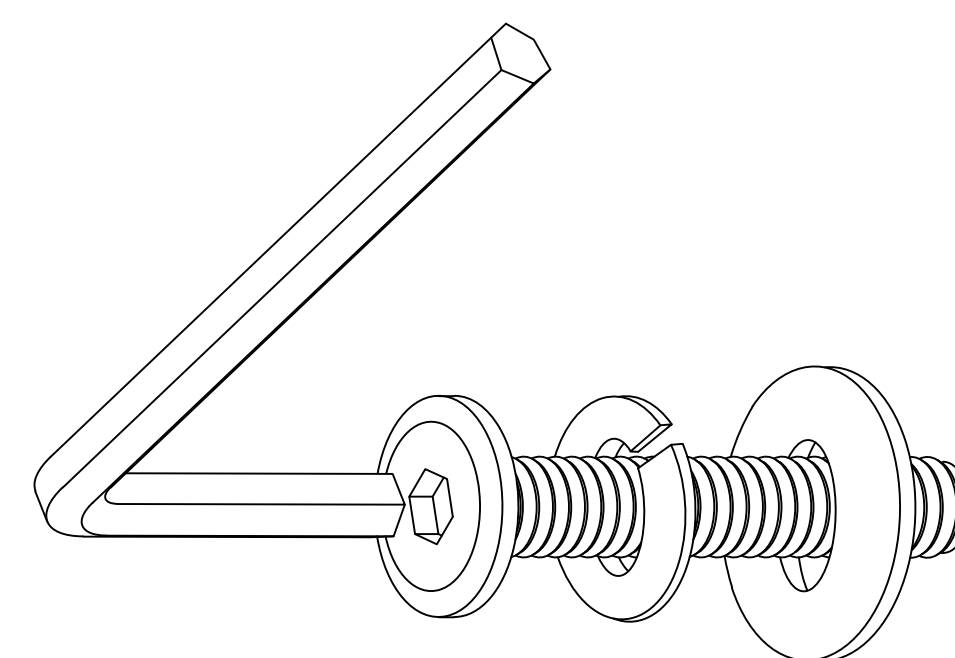

x1 RP392DJ110-HWKIT- Hardware kit list
- Liste des pièces de quincaillerie
- Lista del kit de materiales

***** Replaceable part