


ASSEMBLY INSTRUCTION

ITEM#:151370

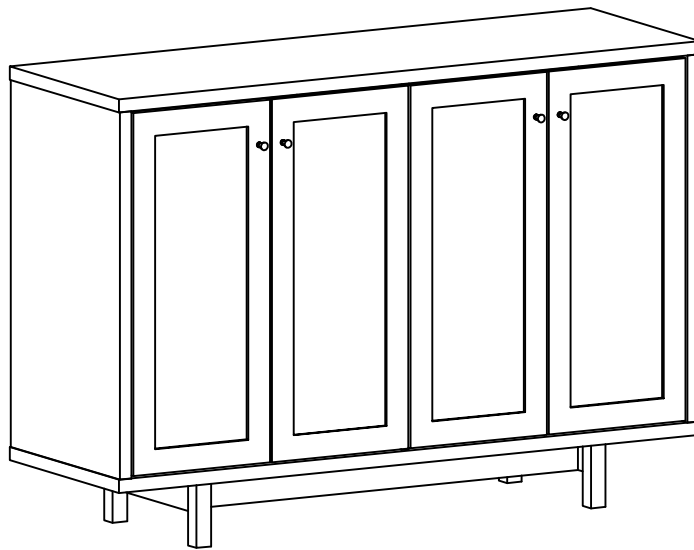

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 151370

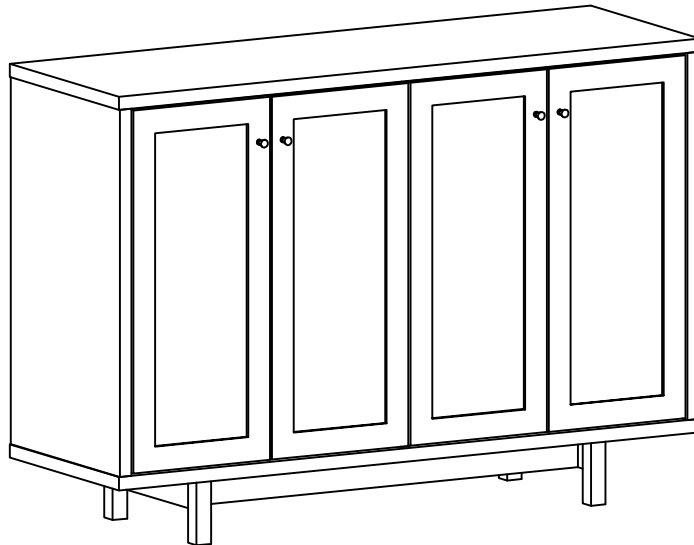

PARTS IDENTIFICATION

ITEM#:151370

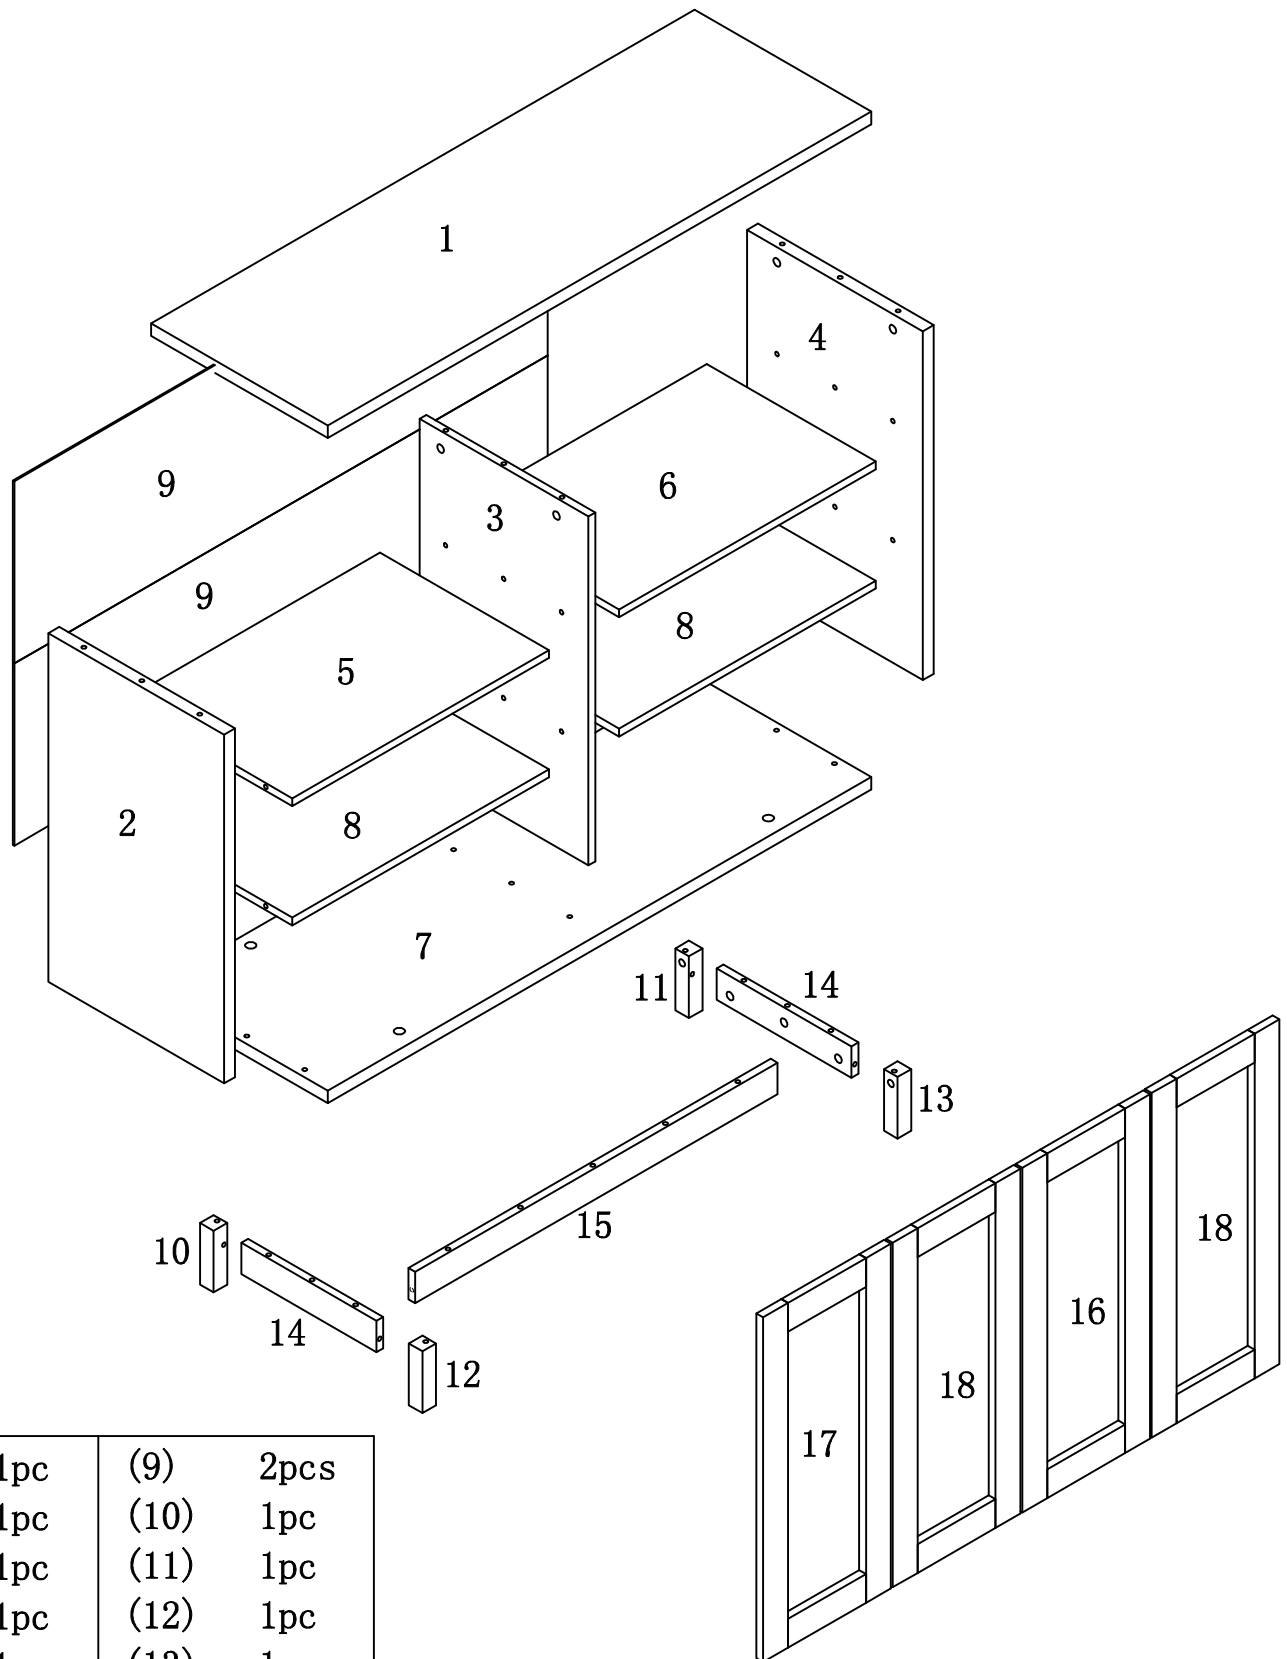





















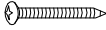





(1)	1pc	(9)	2pcs
(2)	1pc	(10)	1pc
(3)	1pc	(11)	1pc
(4)	1pc	(12)	1pc
(5)	1pc	(13)	1pc
(6)	1pc	(14)	2pcs
(7)	1pc	(15)	1pc
(8)	2pcs	(16)	1pc

(17)	1pc
(18)	2pcs



HARDWARE IDENTIFICATION

ITEM#:151370

A		L29	23pcs
B		Ø15	23pcs
C		Ø8x25	20pcs
D		Ø4x40	2pcs
E		Ø4x16	34pcs
F		Ø3x16	4pcs
G		Ø7x48	4pcs
H		Ø6x30	4pcs
I		Ø8x16x2	8pcs
J			4pcs
K		M4x22	4pcs
L		Ø5x15	8pcs
M			2pcs
N		Ø16	4pcs
O			34pcs
P		Ø20	8pcs
Q		Ø22	4pcs
R		80X25X119	1pc
S		301B	4pcs
T		301C	4pcs
U		197×5×1	1pc
V		Ø4X25	1pc
W		Ø5X40	1pc
X		Ø8X40	1pc
Y		12×12×1	2pcs
Z		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTION

ITEM#:151370

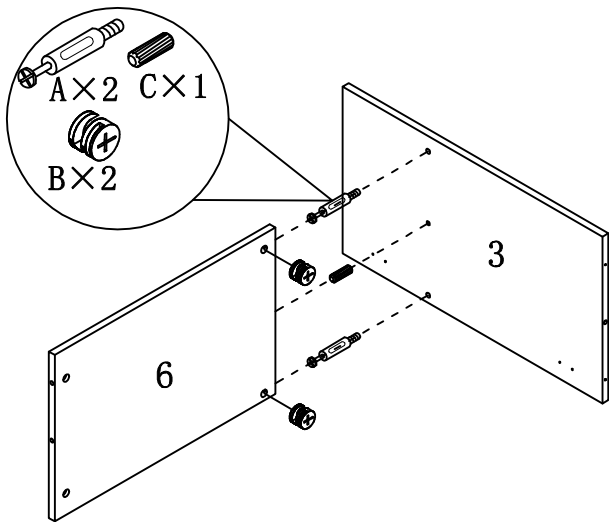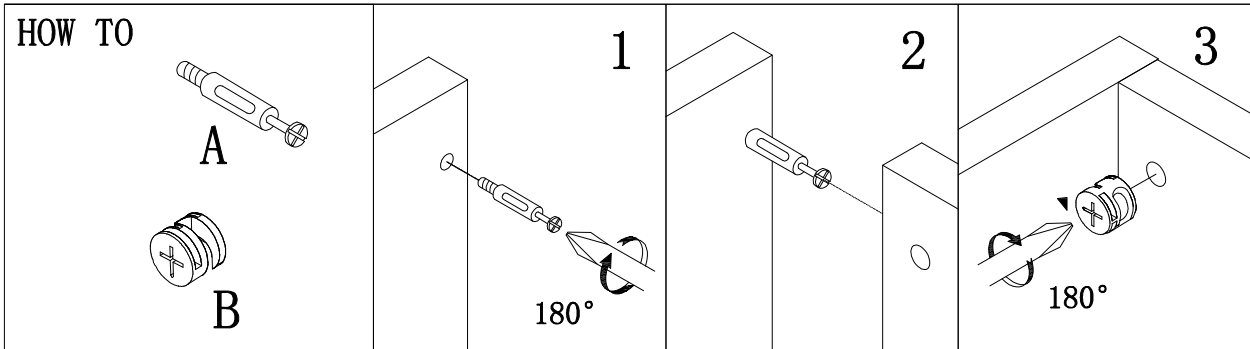


STEP 1

STEP 2

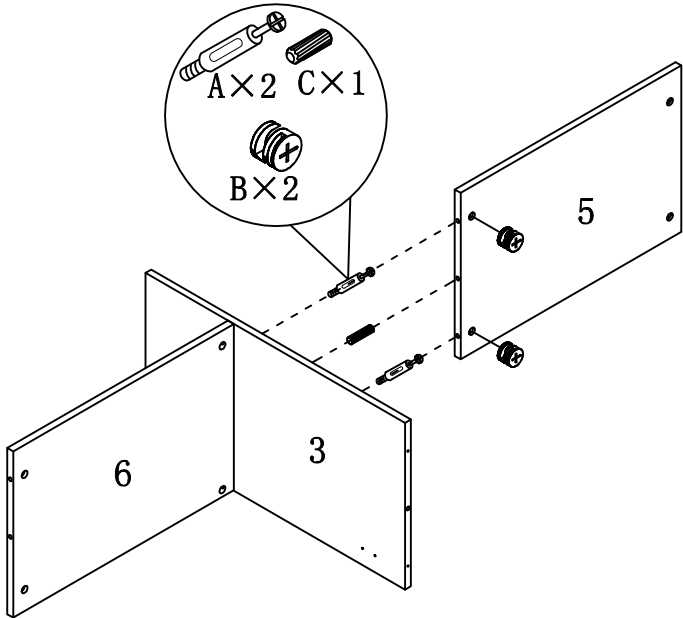


ASSEMBLY INSTRUCTION

ITEM#:151370

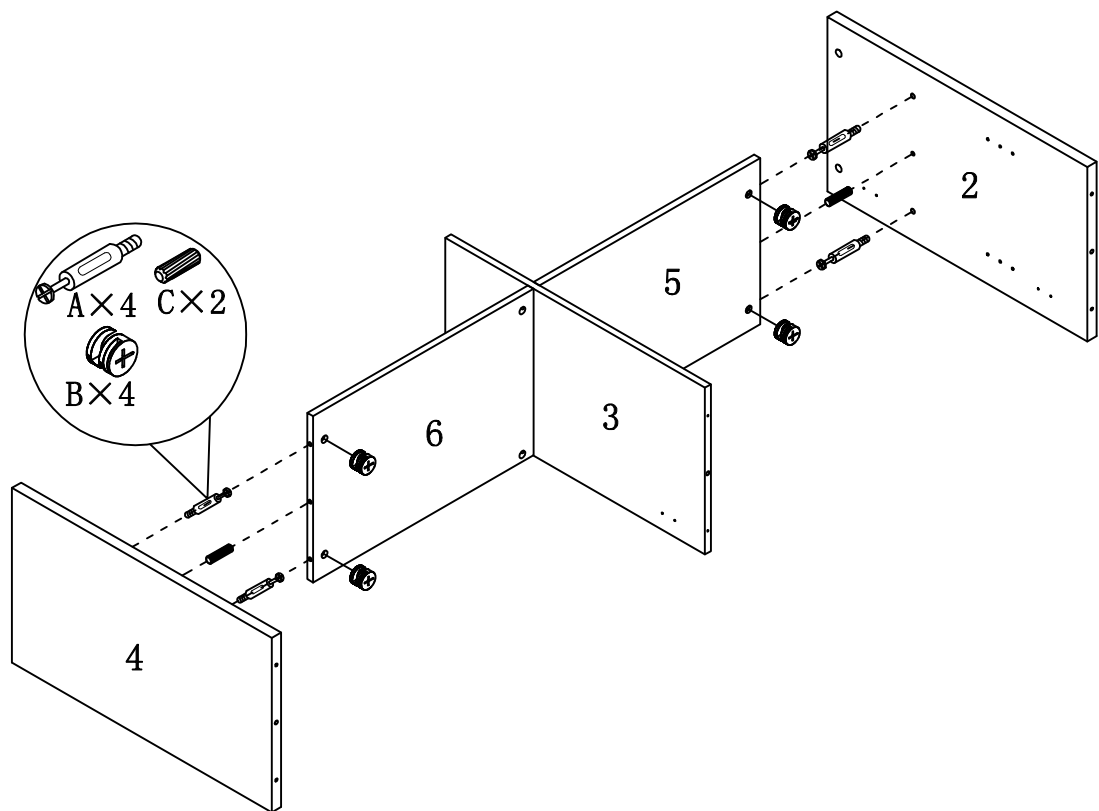


STEP 3

STEP 4

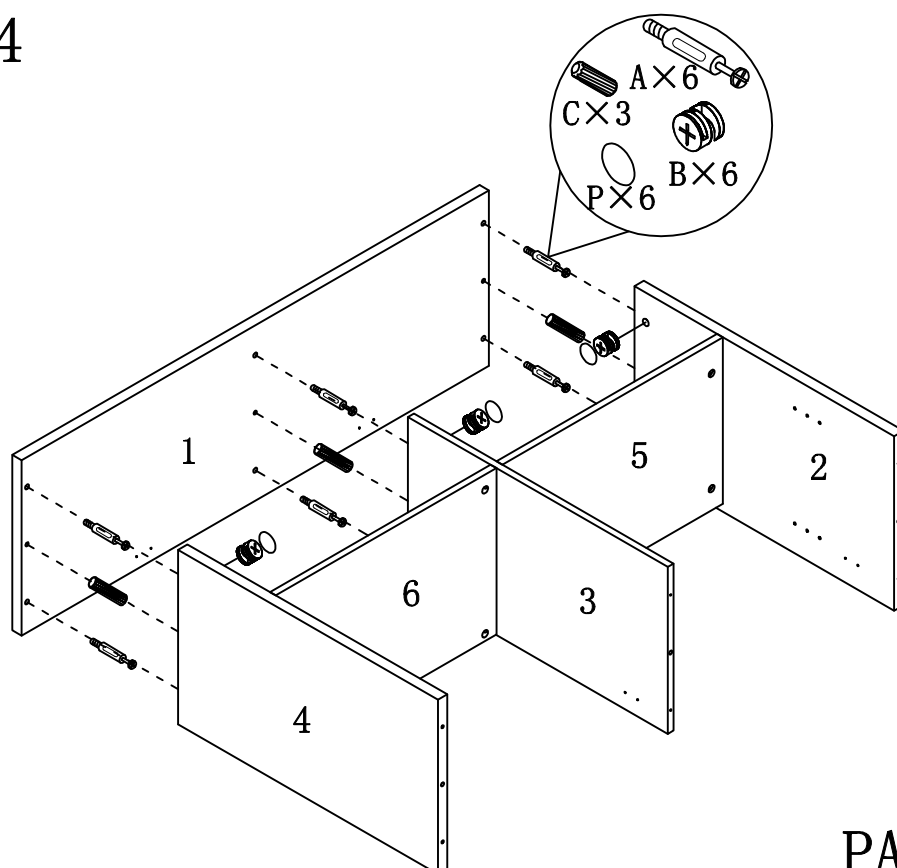


ASSEMBLY INSTRUCTION

ITEM#:151370

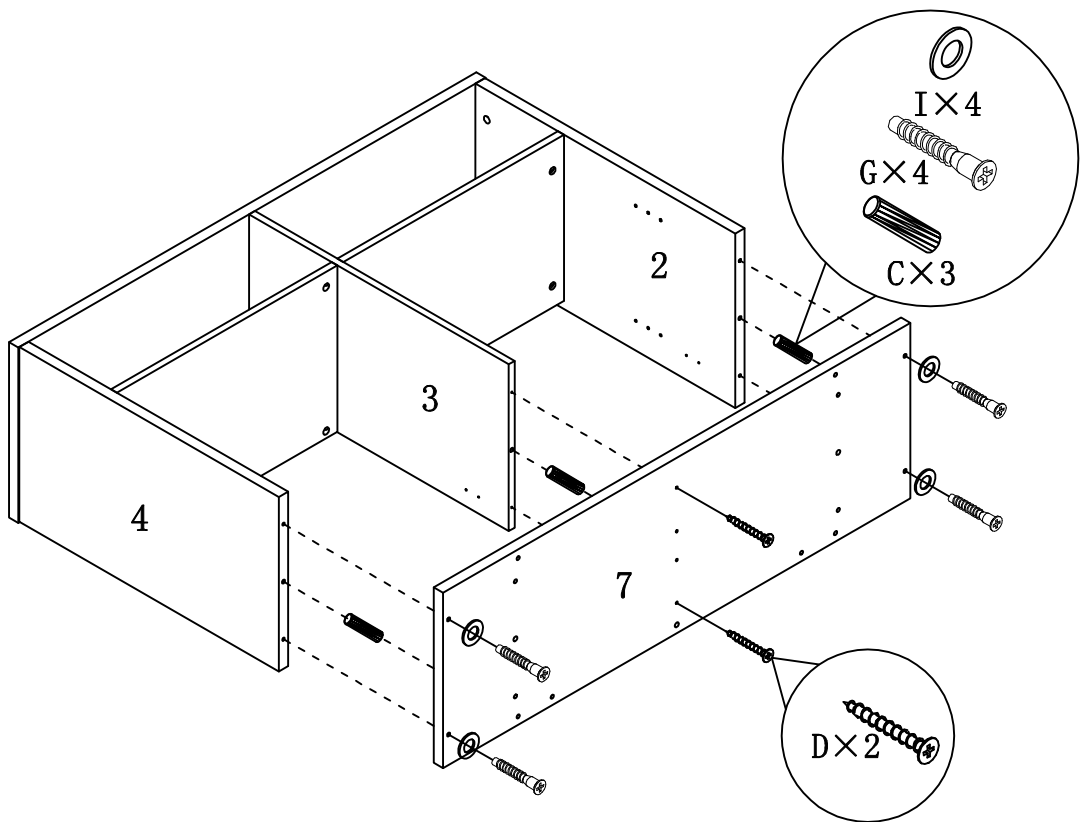


STEP 5

STEP 6

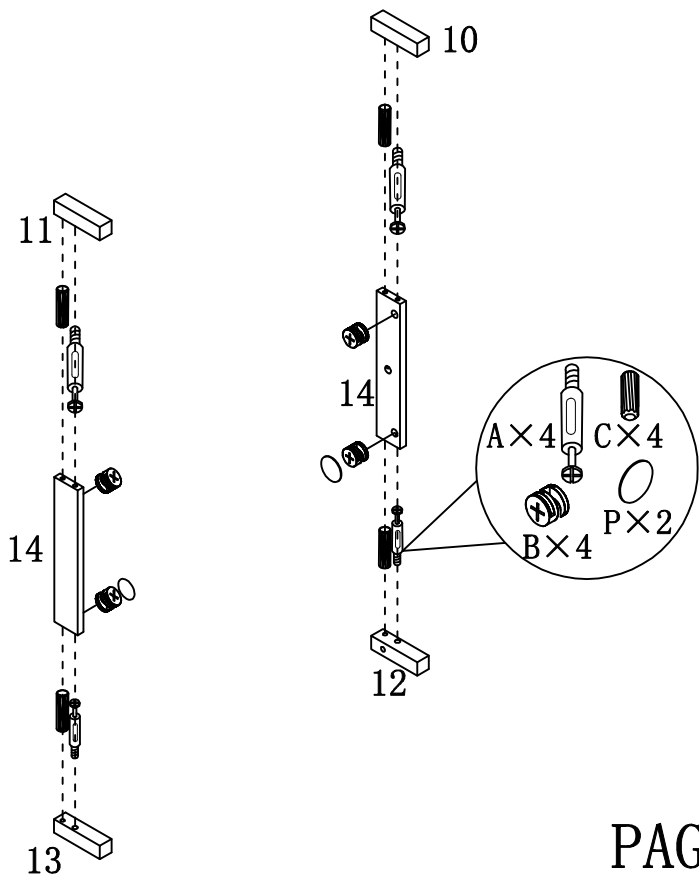


ASSEMBLY INSTRUCTION

ITEM#:151370

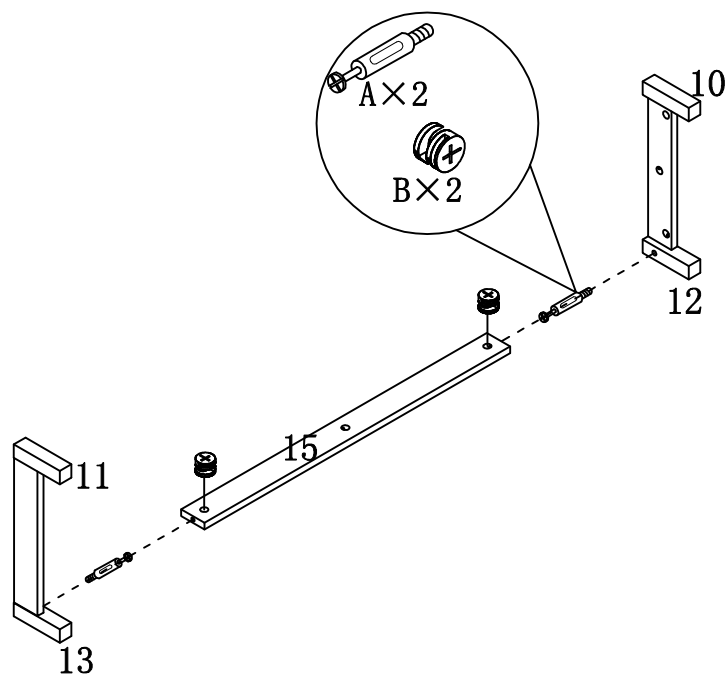


STEP 7

STEP 8

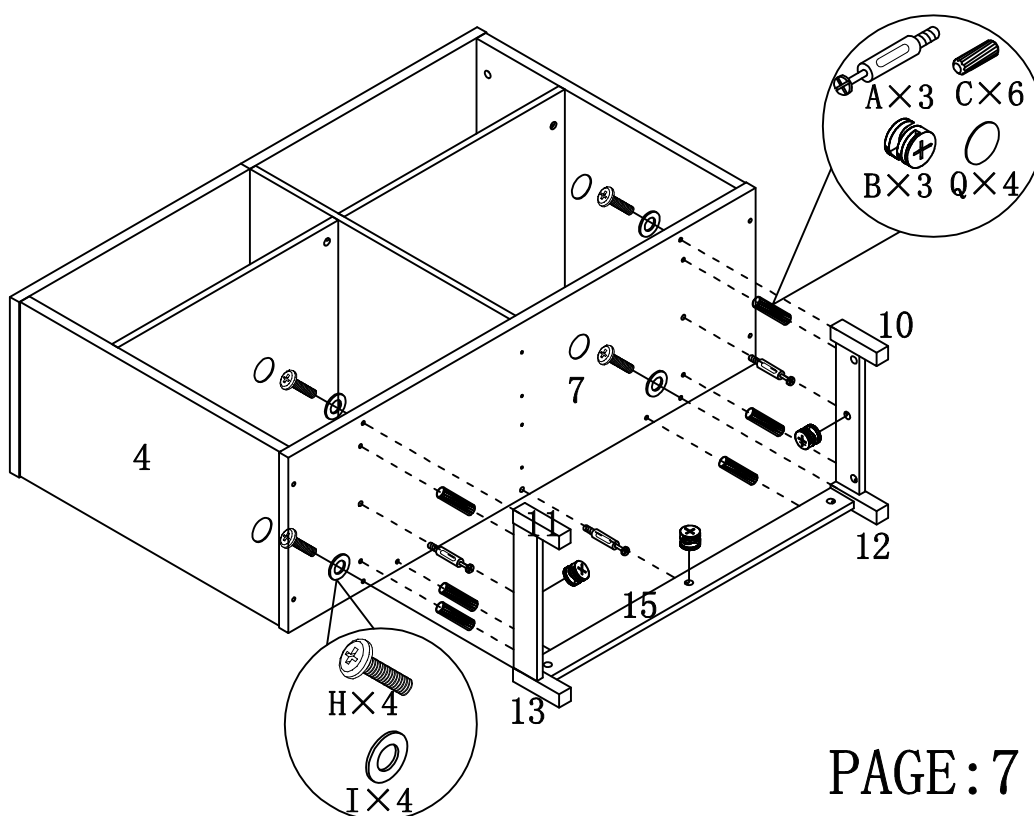


ASSEMBLY INSTRUCTION

ITEM#:151370

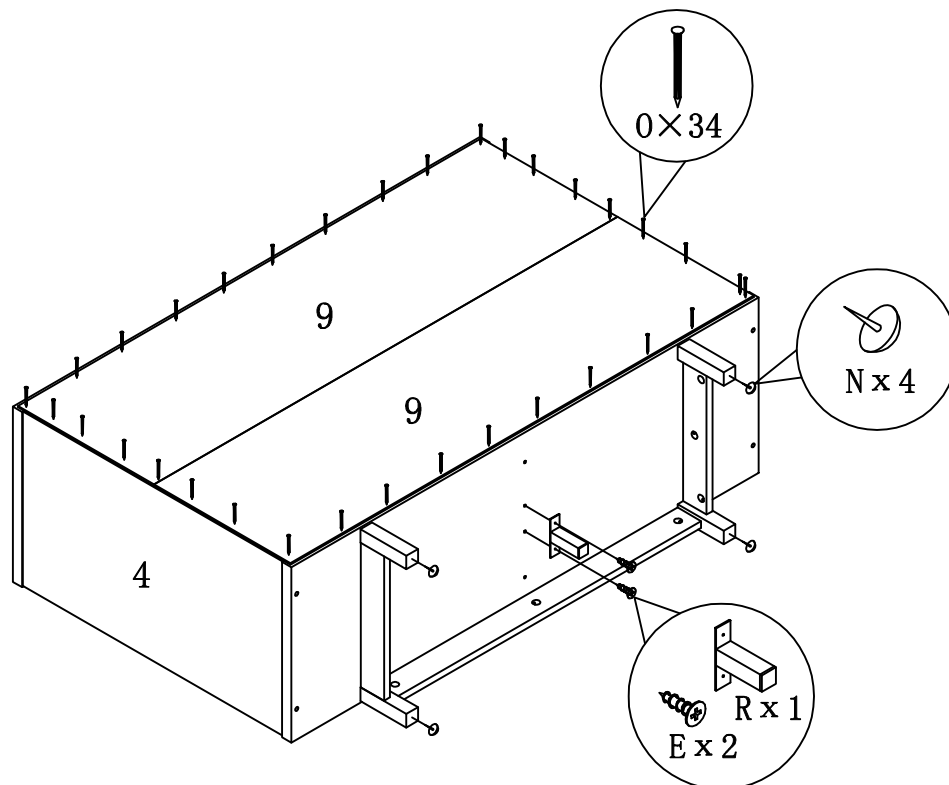

STEP 9


STEP 10

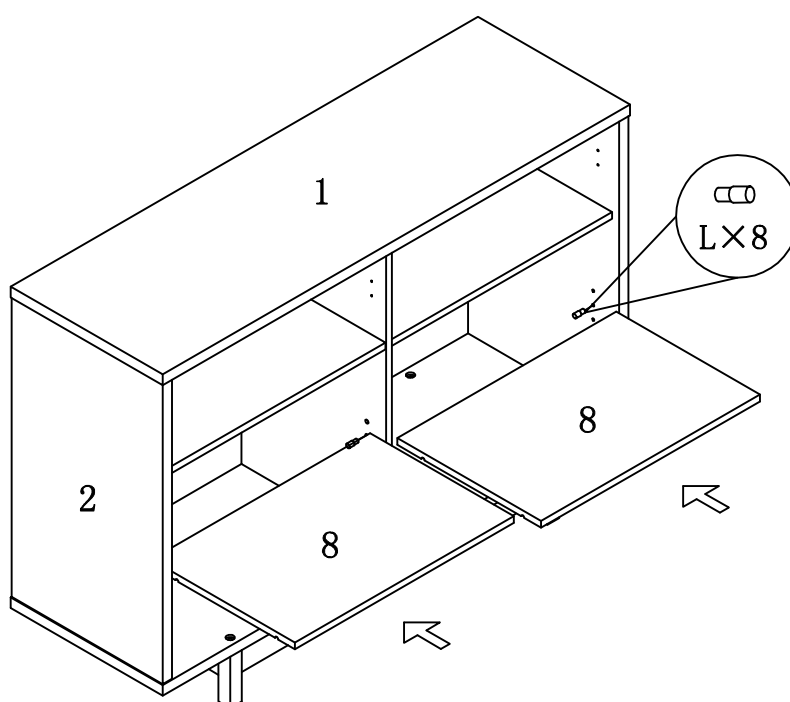


ASSEMBLY INSTRUCTION

ITEM#:151370



To adjust the door in or out, loosen this screw and push the door further in or push further out then retighten screws.

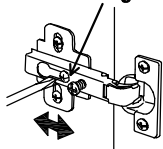

To adjust the door vertically, loosen the top and bottom screws, push the door up or down as necessary, then retighten screws.

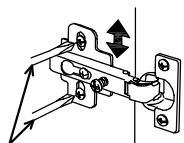


To adjust the door left/right, turn this screw clockwise to move this corner of the door toward the frame, or counterclockwise to move door away from the frame.

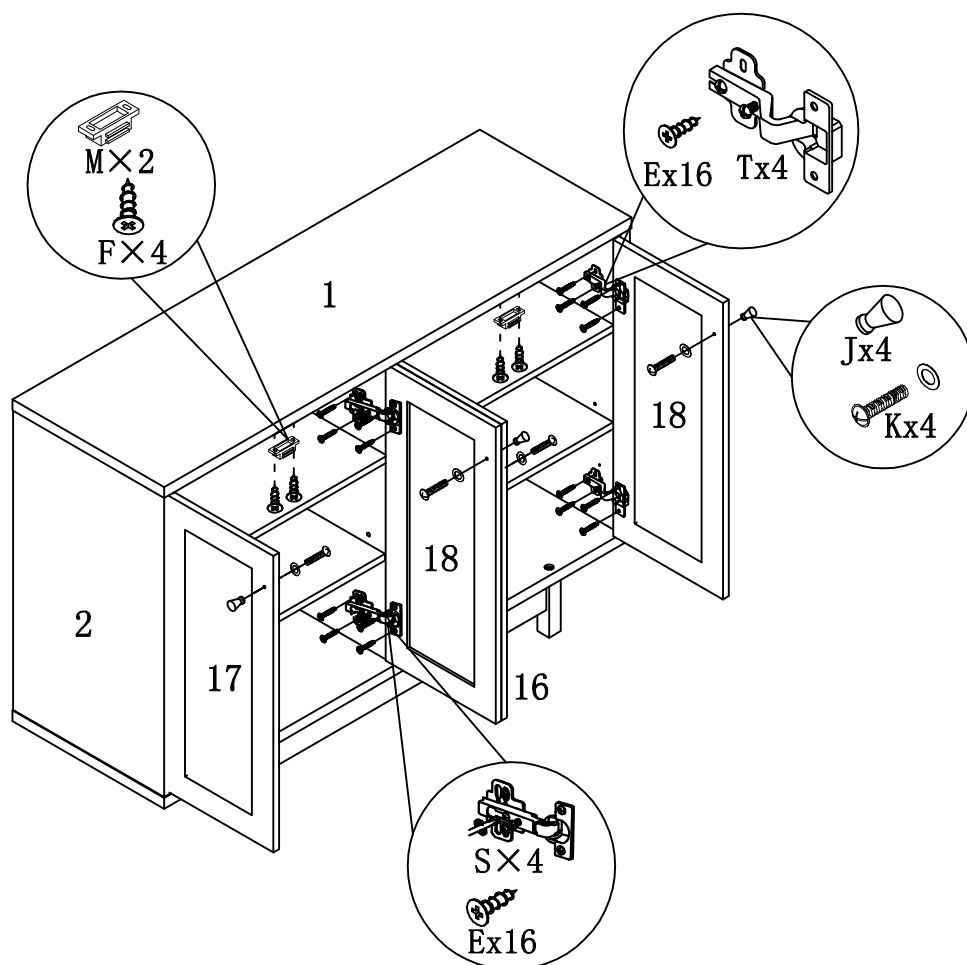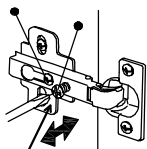


STEP 11

STEP 12

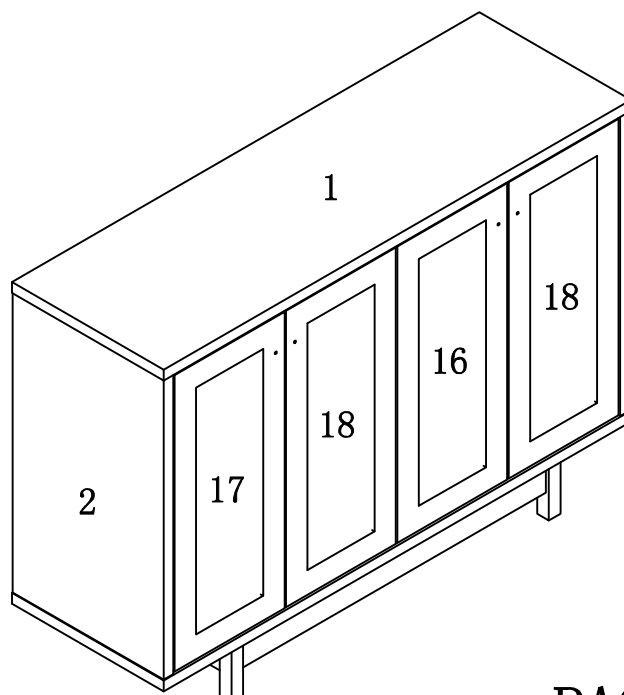


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC




FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

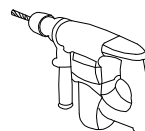


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

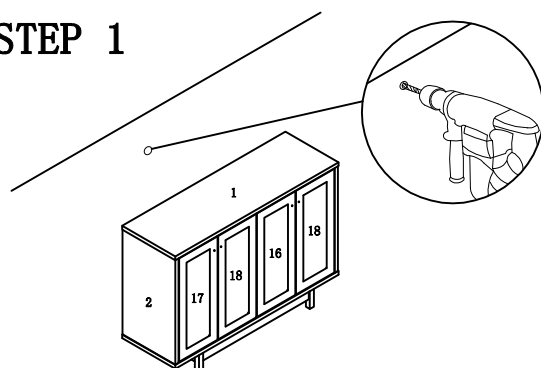


- 1.Find spot on wall 1" below top of item.
- 2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

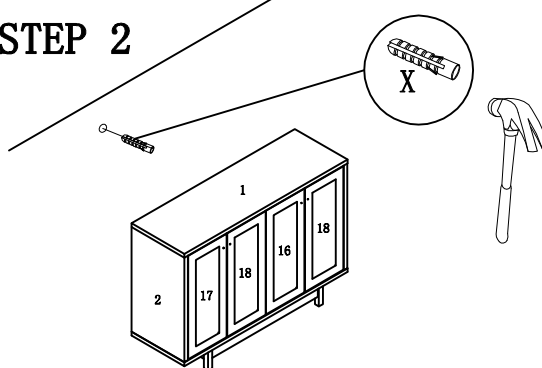


- 1.Use a light hammer to tap anchor into hole.
- 2.Anchor should fit snugly. If hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

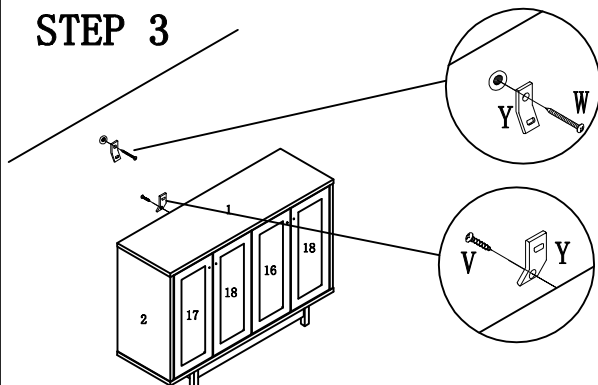

- 1.Insert drywall screw into metal bracket and into drywall anchor.
- 2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

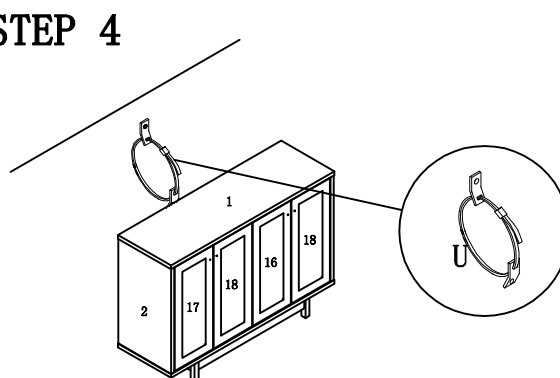

- 1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
 - 2.pull lightly til strap stops.
- Assembly is complete.