
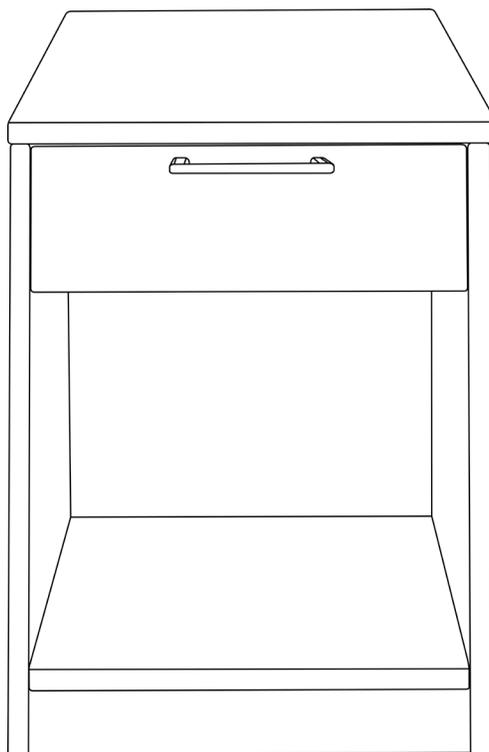


ReGENCY

RGS
FURNITURE

LPFS2121XX
Regency Legacy Printer Stand







CT-PFS2121XX
RGS Cornerstone Printer Stand

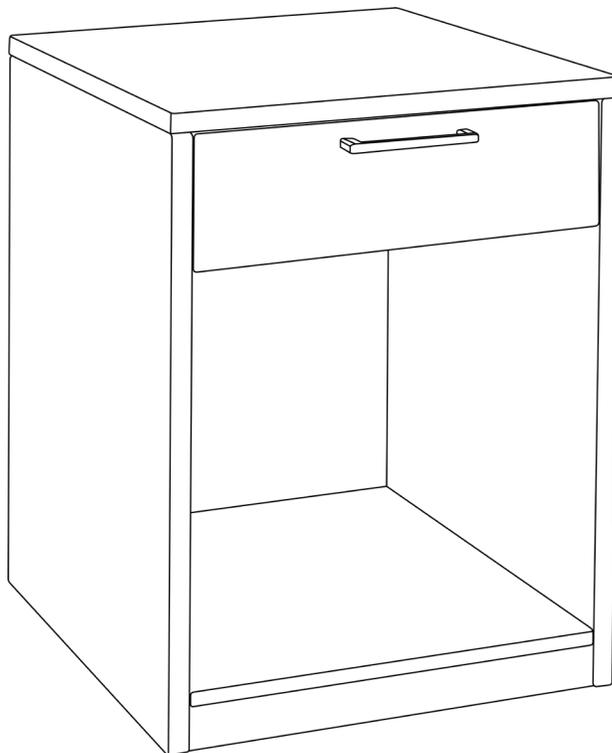


ReGENCY RGS
FURNITURE

Missing Parts? Assembly Questions?


Call us at 1-866-816-9822 or email help@regencyof.com for immediate assistance.
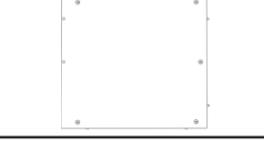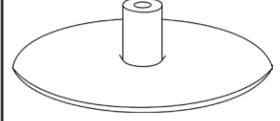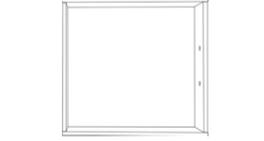
#	Part	Qty	Image	#	Part	Qty	Image
A	Top	1		I	Cam Pins	8	
B	Sides	2		J	Cam Locks	8	
C	Back Panel	1		K	Small Wood Screws	4	
D	Base	1		L	Large Wood Screws	4	
E	Stringer	1		M	Cam Covers		
F	Drawer Front	1		N	Drawer Bolts	4	
G	Suspension Slide	2		O	Drawer Handles	1	
H	Drawer Box	1					


Step 1: Attach Stringer (E) to Base (D) by inserting dowels into coordinating holes.

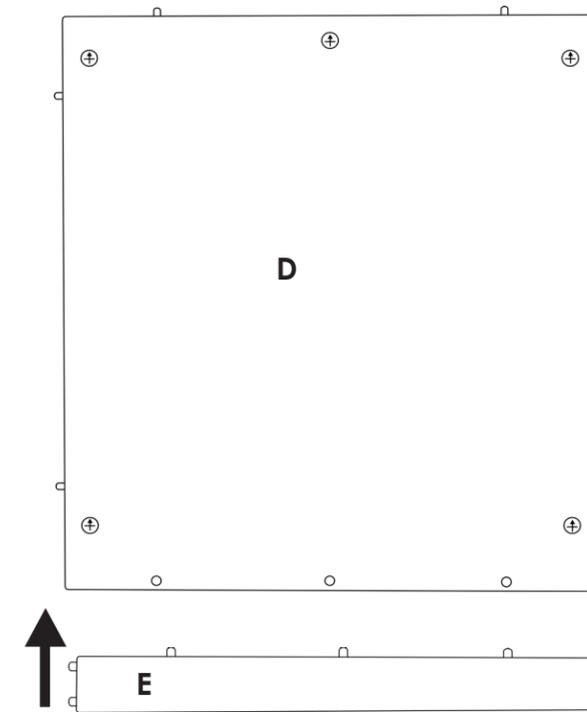


Step 2: Insert 1 Cam Pin (I) into Back Panel (C).

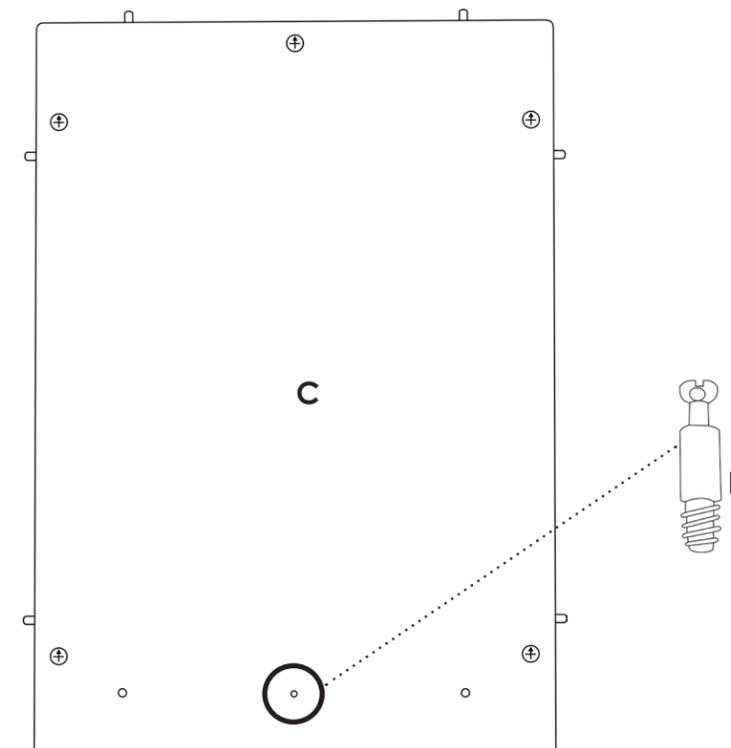


Step 3: Attach Base (D) to Back Panel (C) by inserting dowels into coordinating holes and Cam Pin (I) into Cam Lock (J). Turn the Cam Locks to secure in place.

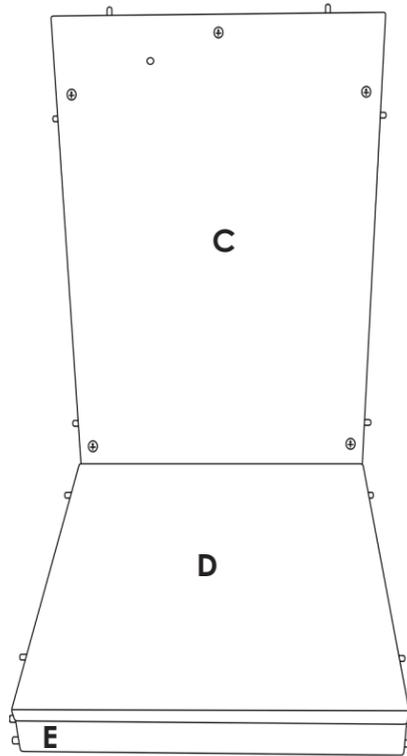

Step 4: Insert 4 Cam Pins (I) into each Side (B).

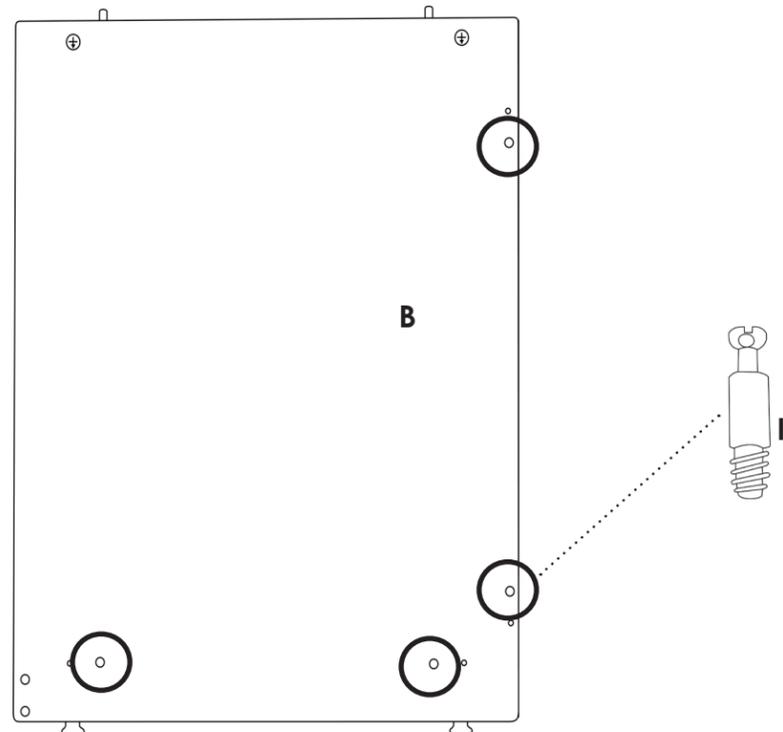


Step 5: Attach 1 Suspension Slide (G) to each Side using 2 Small Screws (K) each.

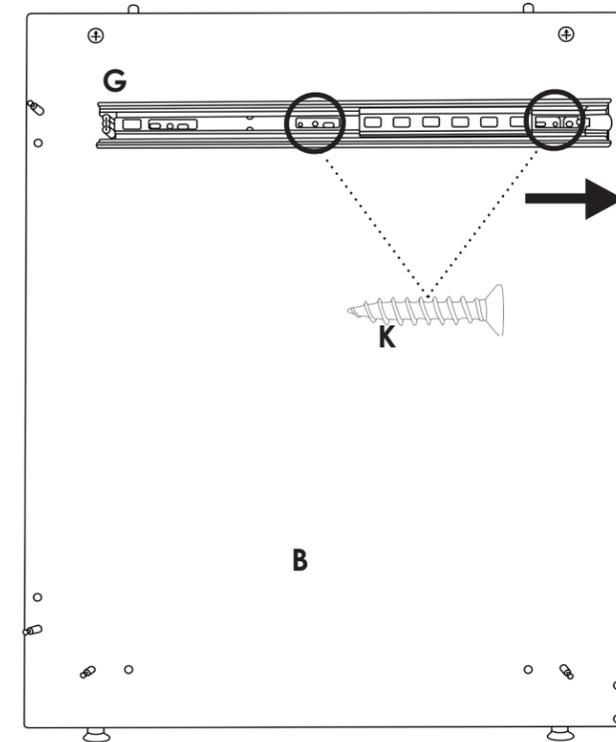


Note: Black piece faces the front of the storage cabinet


Step 6: Attach both Sides (B) to Base (D) and Back Panel (C). Secure by tightening Cam Locks.

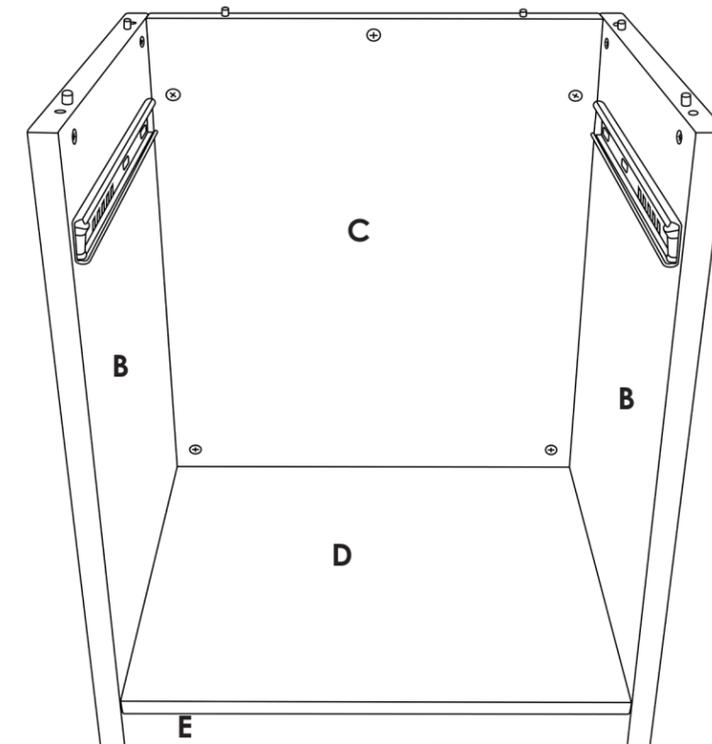


Step 7: Insert 5 Cam Pins (I) into Top (A).

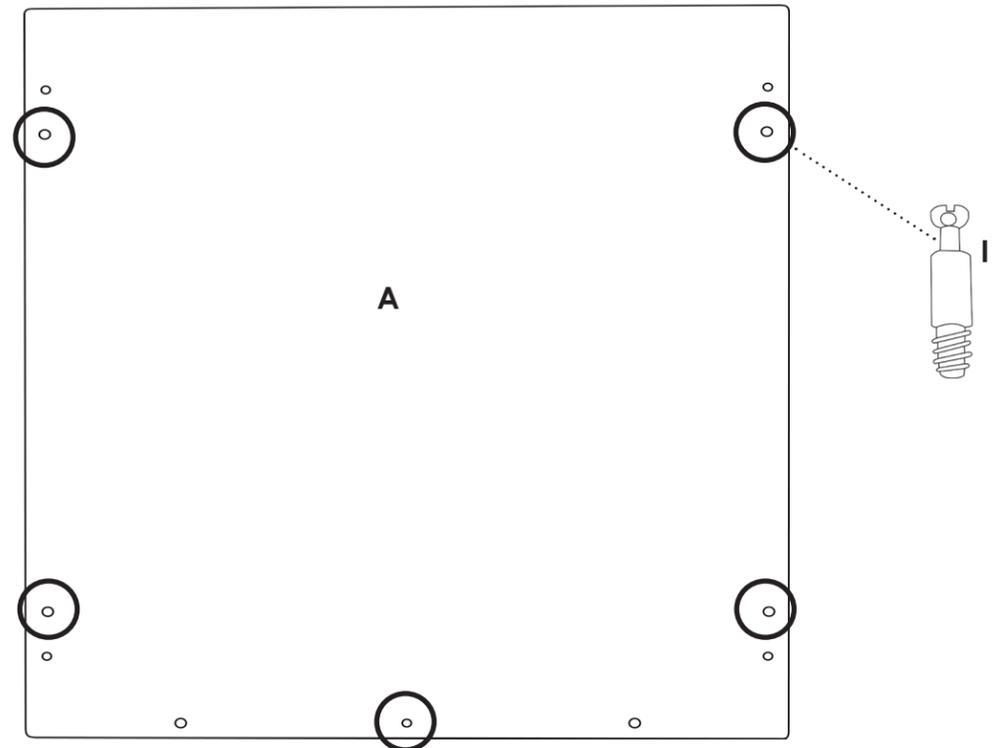

Step 8: Attach Top to both Sides and Back Panel.

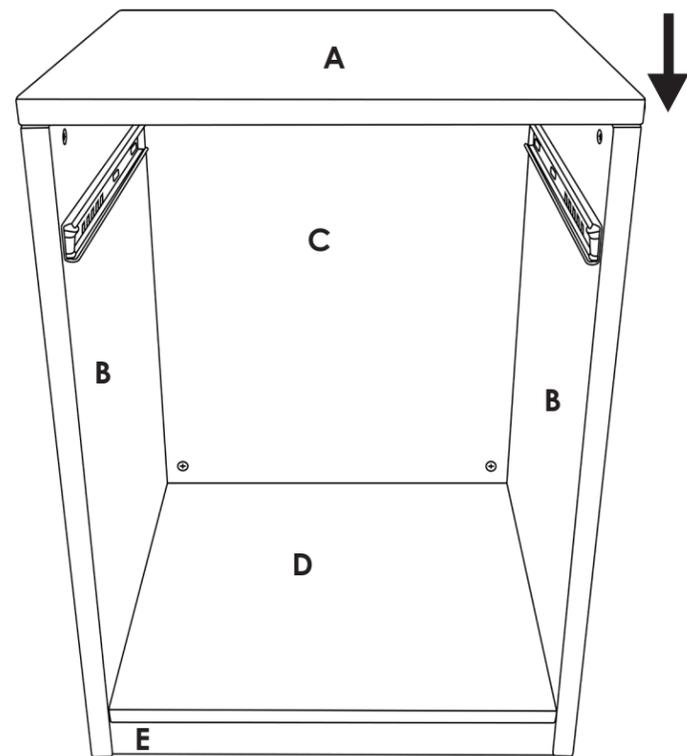

Step 9: Attach Drawer Handle (O) to Drawer Front (F) with 2 Drawer Bolts (N).

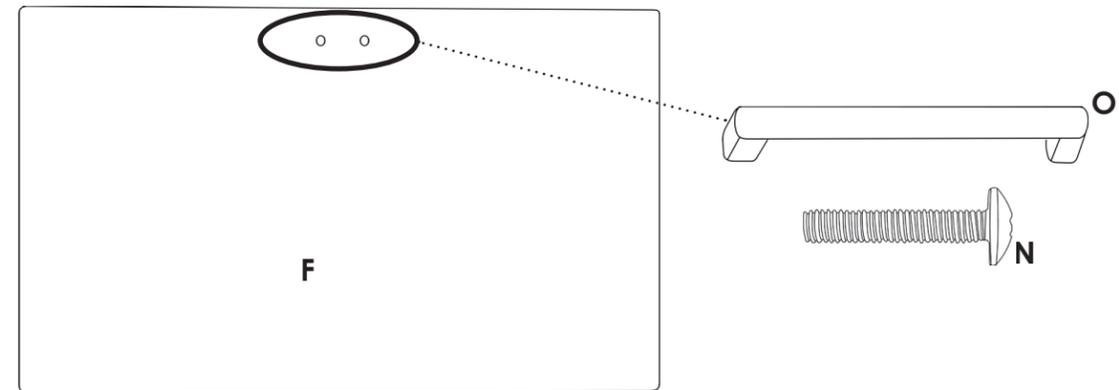

Step 10: Attach Drawer Front (F) to Drawer Box (H) using 4 Large Screws (L). Insert Drawer into Suspension Slides (G).

