

# ASSEMBLY INSTRUCTIONS

**Model :** Lexi-Grey-VT W/LED

Lexi-Grey-Vanity TG

Lexi-Grey-Vanity Side W/Speaker

Lexi-Grey-VS

Lexi-Grey-MR W/LED

**Description :** Vanity Top With LED

Vanity Top Glass

Vanity Side (Pedestal x2pcs, Speaker)

Vanity Stool

Mirror With LED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

## PART LIST : VANITY CENTER DESK BOX

No	Description	Diagram	Quantity
A	Vanity Center		1 pc

## PART LIST : VANITY TEMPERED TOP GLASS

No	Description	Diagram	Quantity
B	Tempered Glass Top		1 pc

## PART LIST : VANITY DRAWER BOX

No	Description	Diagram	Quantity
C	Vanity 3 Drawer Left		1 pc
D	Vanity 3 Drawer Right		1 pc
E	Bottom Back Panel		1 pc

## PART LIST : VANITY STOOL STORAGE

No	Description	Diagram	Quantity
F	Stool		1 pc

## PART LIST : VANITY MIRROR BOX

No	Description	Diagram	Quantity
G	Mirror		1 pc
H	Mirror Support		2 pcs

## HARDWARE LIST


### PACKED IN VANITY CENTER DESK

No	Description	Diagram	Size	Quantity
1	JCBC Screw		M6 x 30mm	2 pcs
2	Spring Washer		1/4"	2 pcs
3	Flat Washer		1/4"IDx19mmOD	2 pcs
4	Wood Dowel		8 x 20mm	2 pcs
5	Pan Head Chipboard Screw		M4 x 25mm	11 pcs
6	Allen Key		M4 x 65mm	1 pc
7	Adaptor Speaker			1 pc
8	Adaptor Led			1 pcs
9	Door Bubble Transparent		D7mmx1.5mm	6 pcs

## HARDWARE LIST

### PACKED INSIDE MIRROR

No	Description	Diagram	Size	Quantity
10	Flat Head Chipboard Screw		M4 x 32mm	8 pcs
11	Adaptor mirror			1 pc

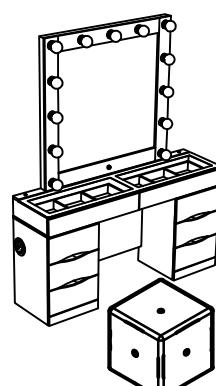


**COMPLETE VANITY ASSEMBLY**

1 OF 6


NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

**STEP 1 :** Remove all protection at Vanity 3 Drawer (C & D).

THE HARDWARE IS LOCATED IN THE  
PACKING ITEM.

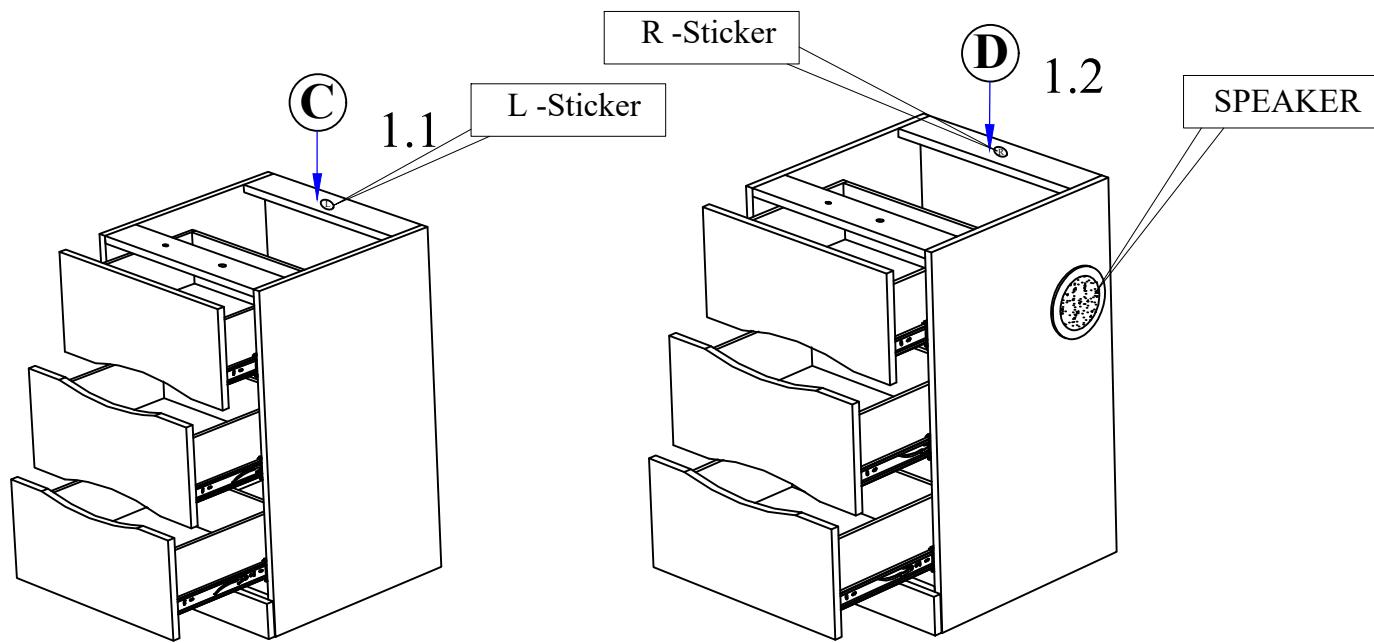


**STEP 2 :** Attach Bottom Back panel(E) between vanity 3 drawer (C & D) and secure with flat head chipboard screw(5) ,  
Then tighten with screw driver(not included ) as shown.

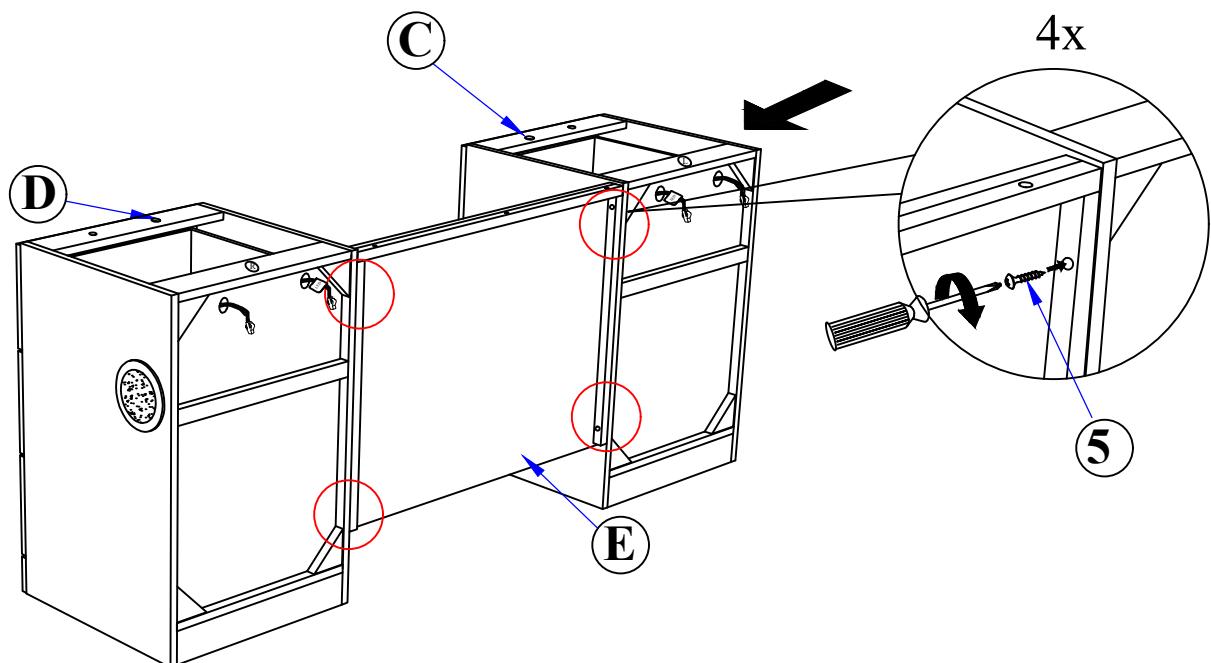


**STEP 3 :** Insert Wood Dowel(4) at Vanity 3 Drawer (C & D) and Attach Vanity Center(A) as shown.


**REMARK :** Location Hardware

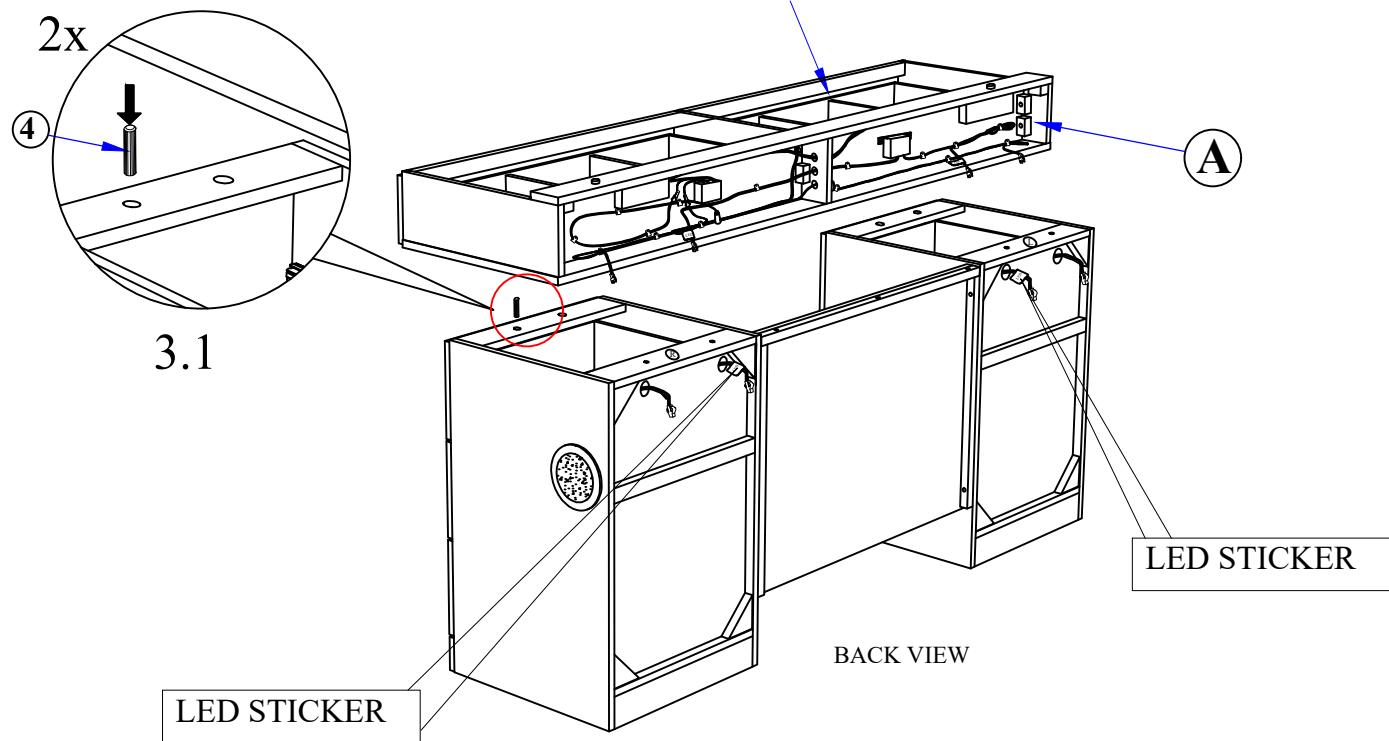

**STEP 4 :** Attach Bottom Back panel(E) between vanity 3 drawer (C & D) and secure with flat head chipboard screw(5) ,Then tighten with screw driver(not included ) as shown.

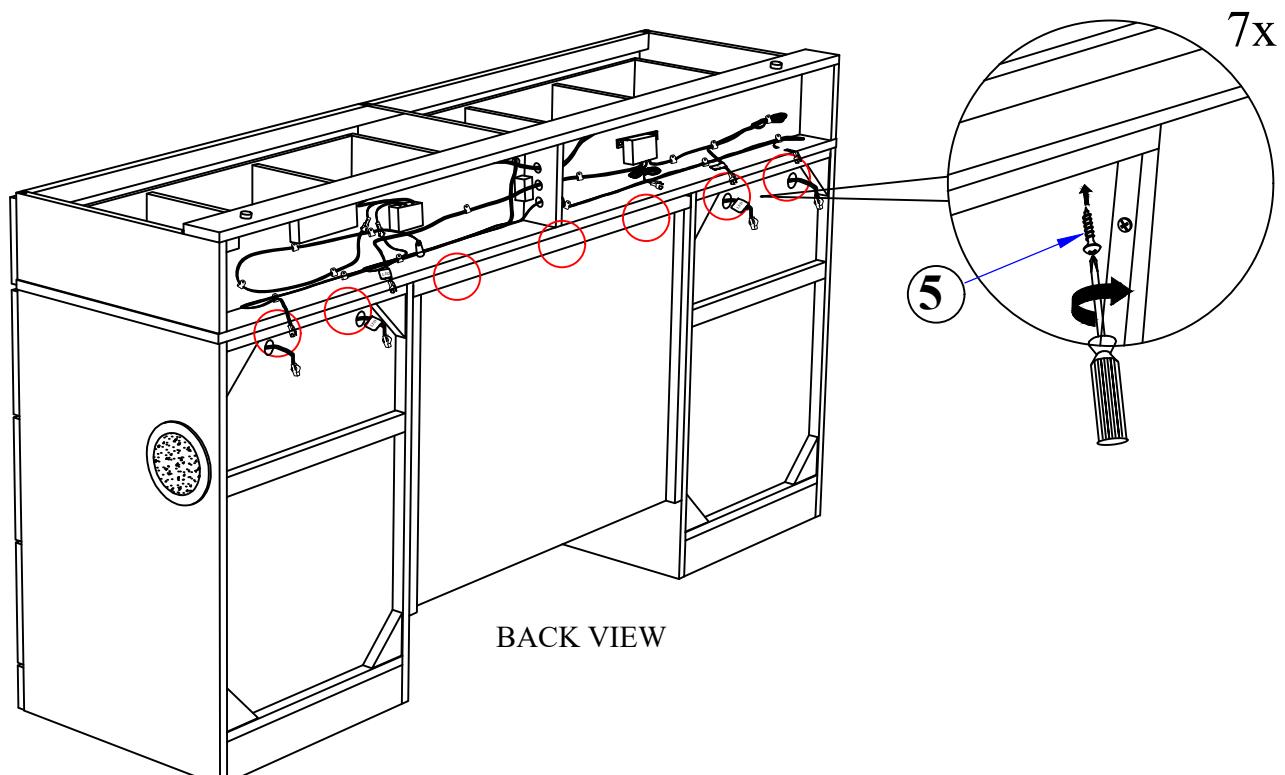


**STEP 5 :** Assemble Vanity Center(A) to Ventity 3 drawer (C & D)accordingly secure with JCBC (1), Spring washer(2),Flat washer(3). then Tighten with Allen Key (6) as shown.

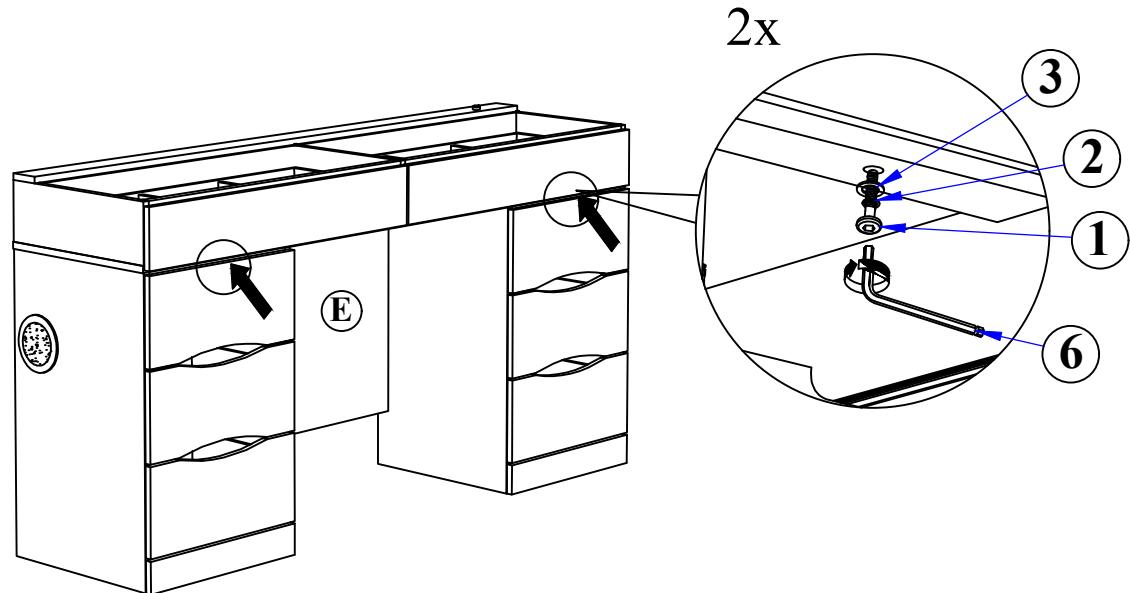


**STEP 6 :** Paste Door Bubble Sticker(9) on top of Vanity center (A) as shown.  
Put the Top Glass (B) gently on the Door Bubble (9)and align top  
glass(B) parallel as shown.


**WARNING! :** Need two Peoples to place the top glass.

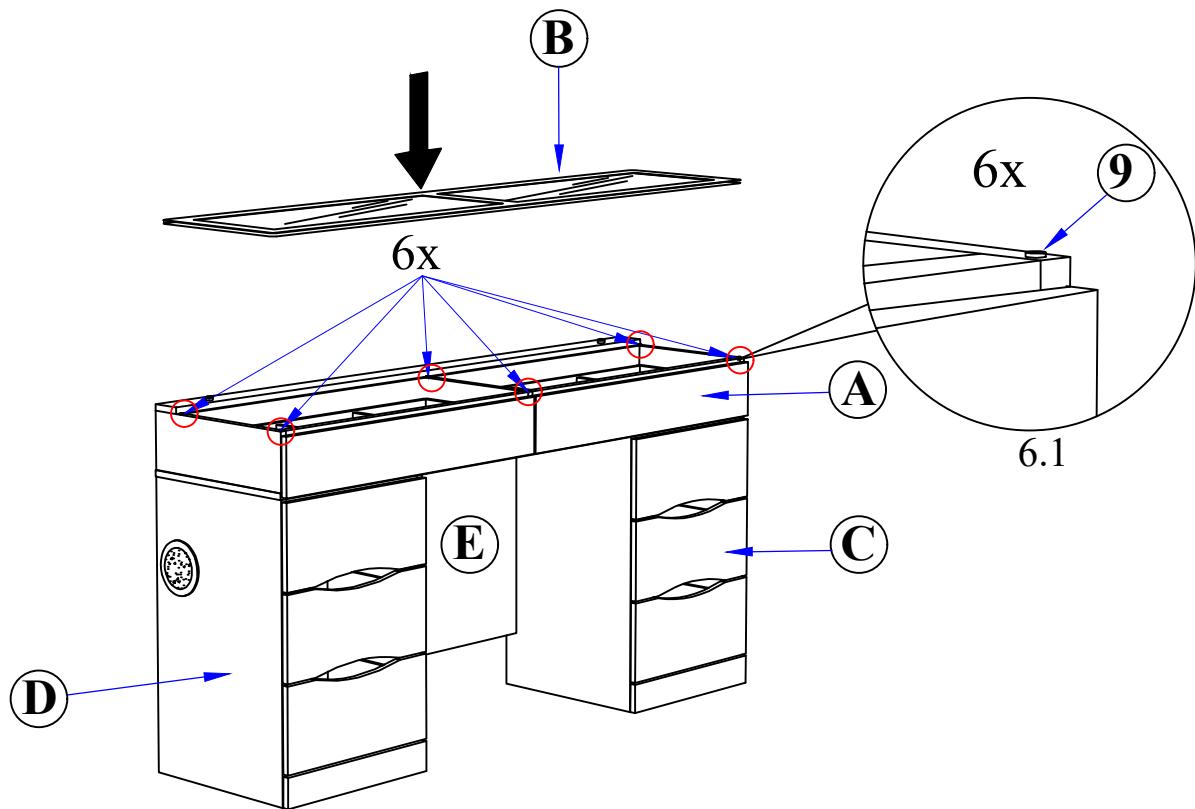


**STEP 7 :** Attach Mirror Support (H) to Mirror (G) as shown and tighten with CSK Screw (10).

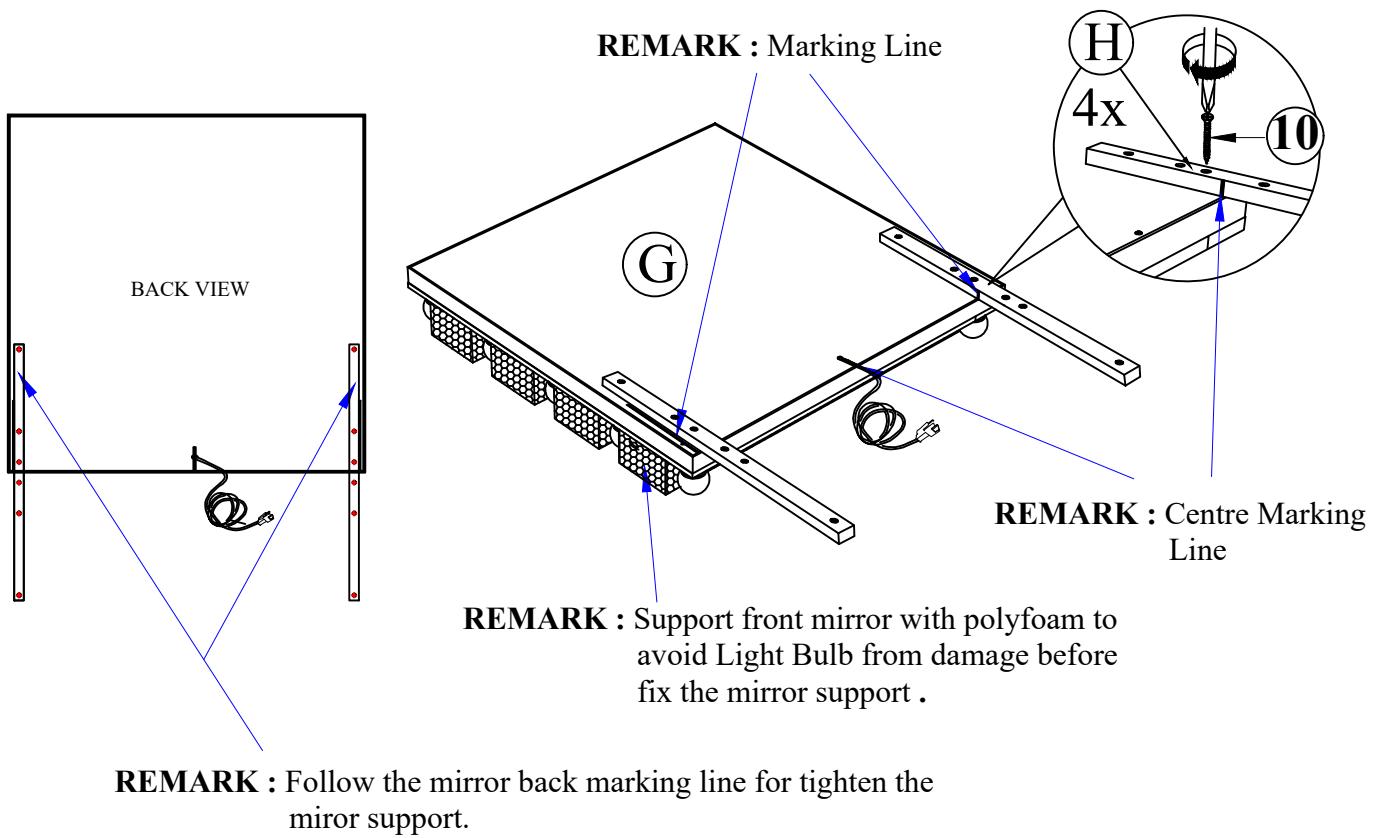

**STEP 8 :** Tighten the CSK Screw (10) as shown.

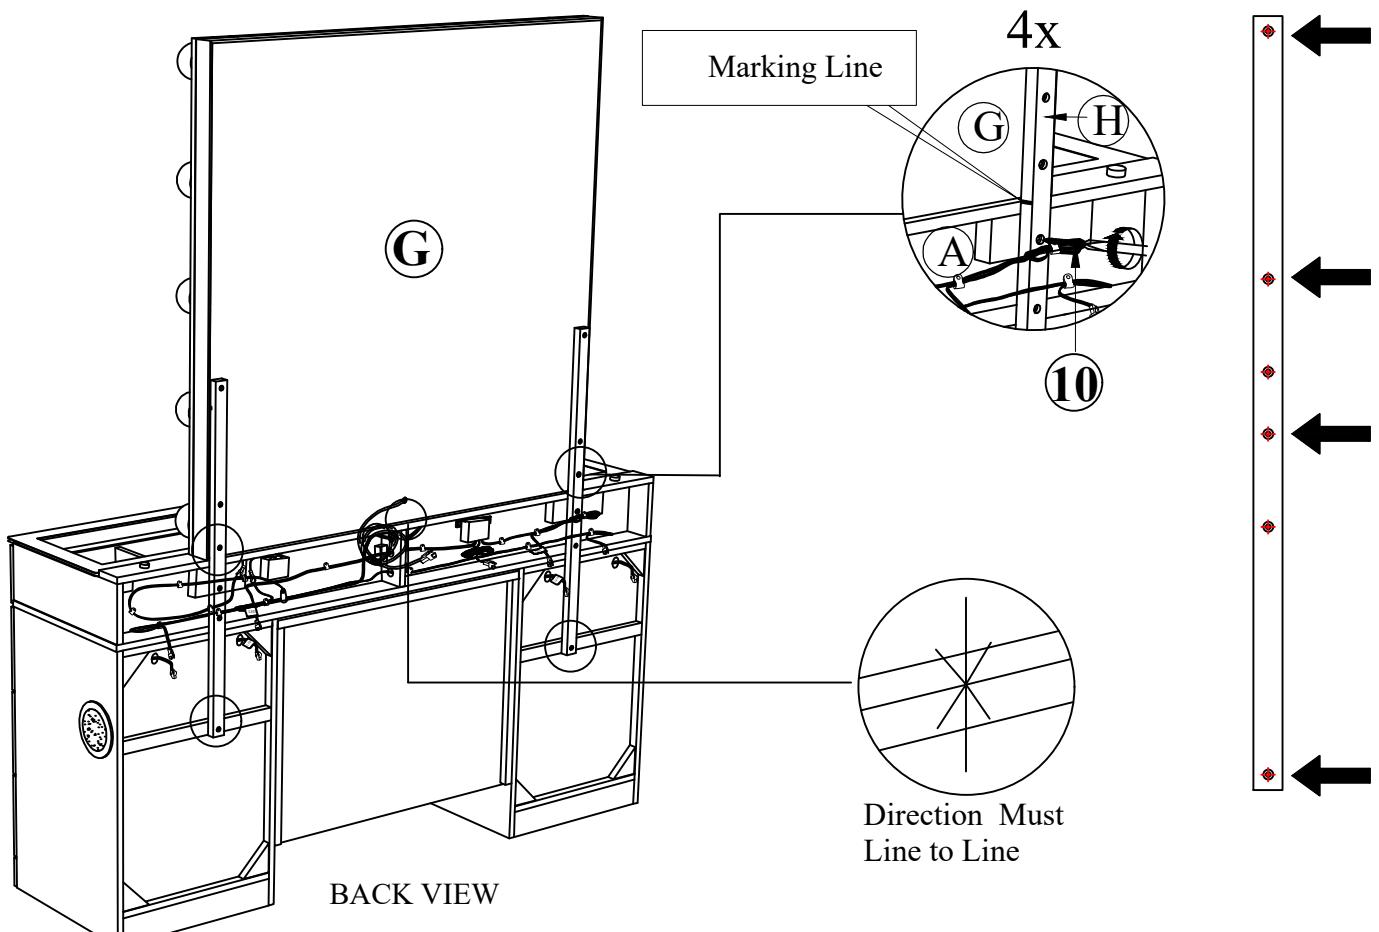

## STEP 9 :

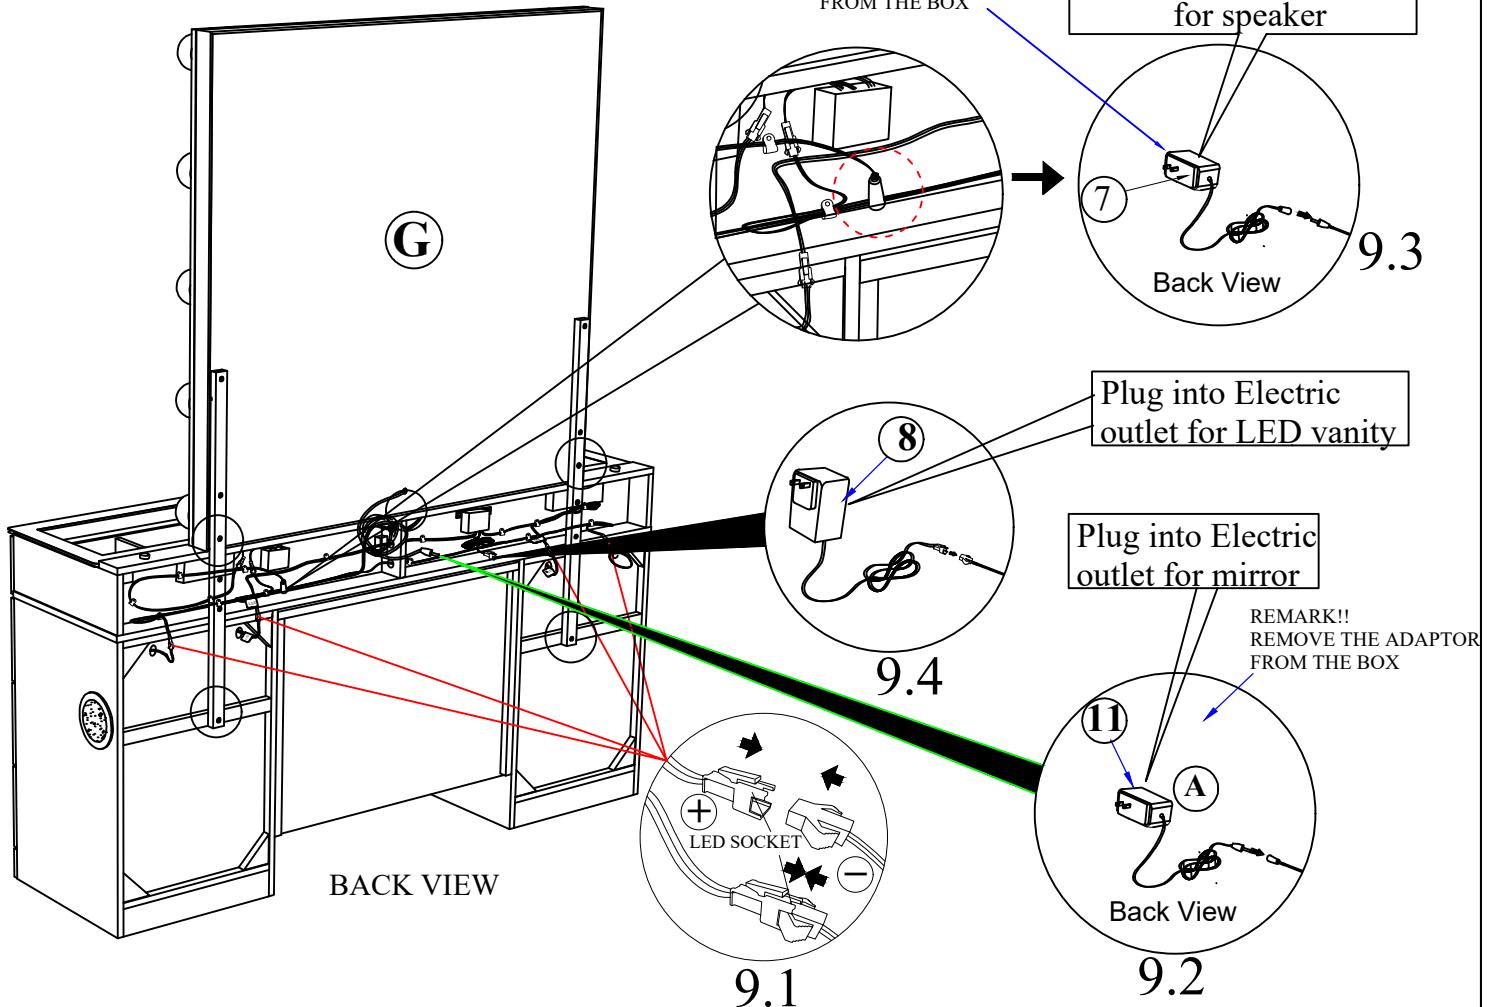

## STEP 10 :

