
ASSEMBLY INSTRUCTION

10×12FT Patio Gazebo (B12-AL)

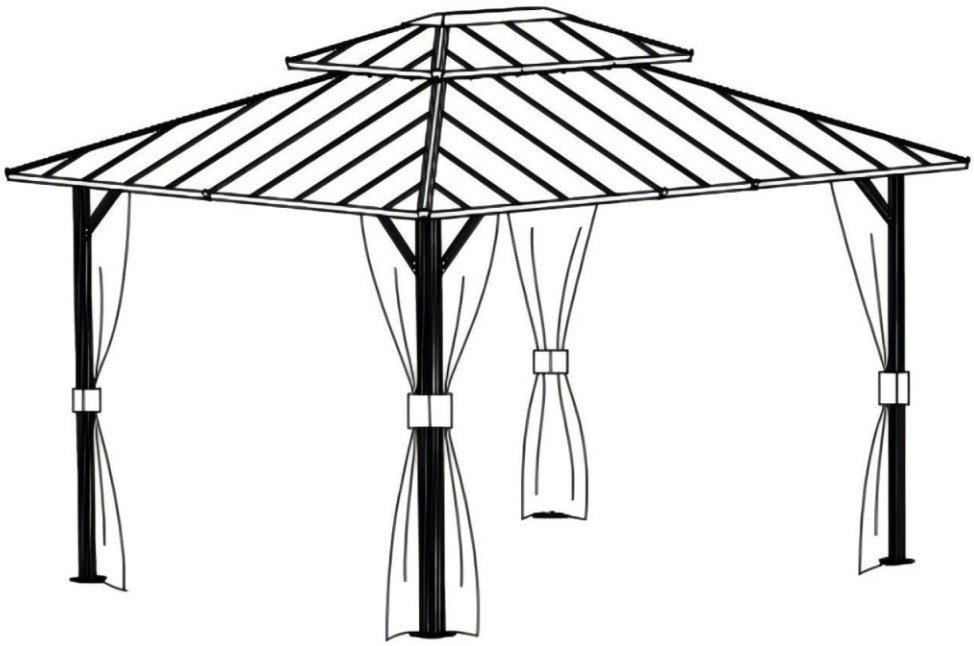

[Scan for Installation Video]

- The product comes in three packages.
- Please install after receiving all packages.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Assemble this product on a flat, level ground. Uneven ground may make assembly difficult;


-Assembly is easier with three or more people;

-After assembly, check that all screws are fully tightened to prevent parts from loosening or coming apart.



⚠Use bolts to secure the frame to the ground to against the strong wind.




BOX1

Label	Part Image	Qty	Spare
A		4	
J1		2	
J2		2	
J3		4	
J4		4	
J5		2	




Label	Part Image	Qty	Spare
K1		4	
K2		4	
E1		4	
E2		4	
F4		4	


BOX2

Label	Part Image	Qty	Spare
B1		2	
B2		2	
B3		2	
B4		2	
C1		4	
C2		4	
F1		4	
F2		8	
F3		6	
F5		4	
G1		4	
G2		6	
G3		6	
G4		4	
G5		4	

Label	Part Image	Qty	Spare
G6		2	
G7		4	
K3		6	
K4		4	
L1		1	
L2		1	
M		4	
N1		8	
N2		2	
Q1		2	
Q2		2	
S		4	
R1		1	
R2		1	





BOX2


Label	Part Image	Description	Qty	Spare
H1		M6X15	264	13
H2		M6X25	14	1
H3		M6X40	10	1
H4		25-M6X15	16	
H5		M6	296	15
H6		RUBBER	2	
H7			72	5
H8		25X12	16	2

Label	Part Image	Description	Qty	Spare
H9			2	
H10		M5X15	8	1
H11			34	3
HQ1		4X140	12	
HQ2		M8X70	12	
HW1		4MM-100	2	
HW2		10-14	1	

BOX3


Label	Part Image	Qty	Spare
P1		4	
P2		4	
P3		4	
P4		4	
		2	


Label	Part Image	Qty	Spare
P5		4	
P6		4	
P7		6	
P8		2	

A		4		H1		M6X15	12
S		4		H5		M6	12

Step 1：


4X

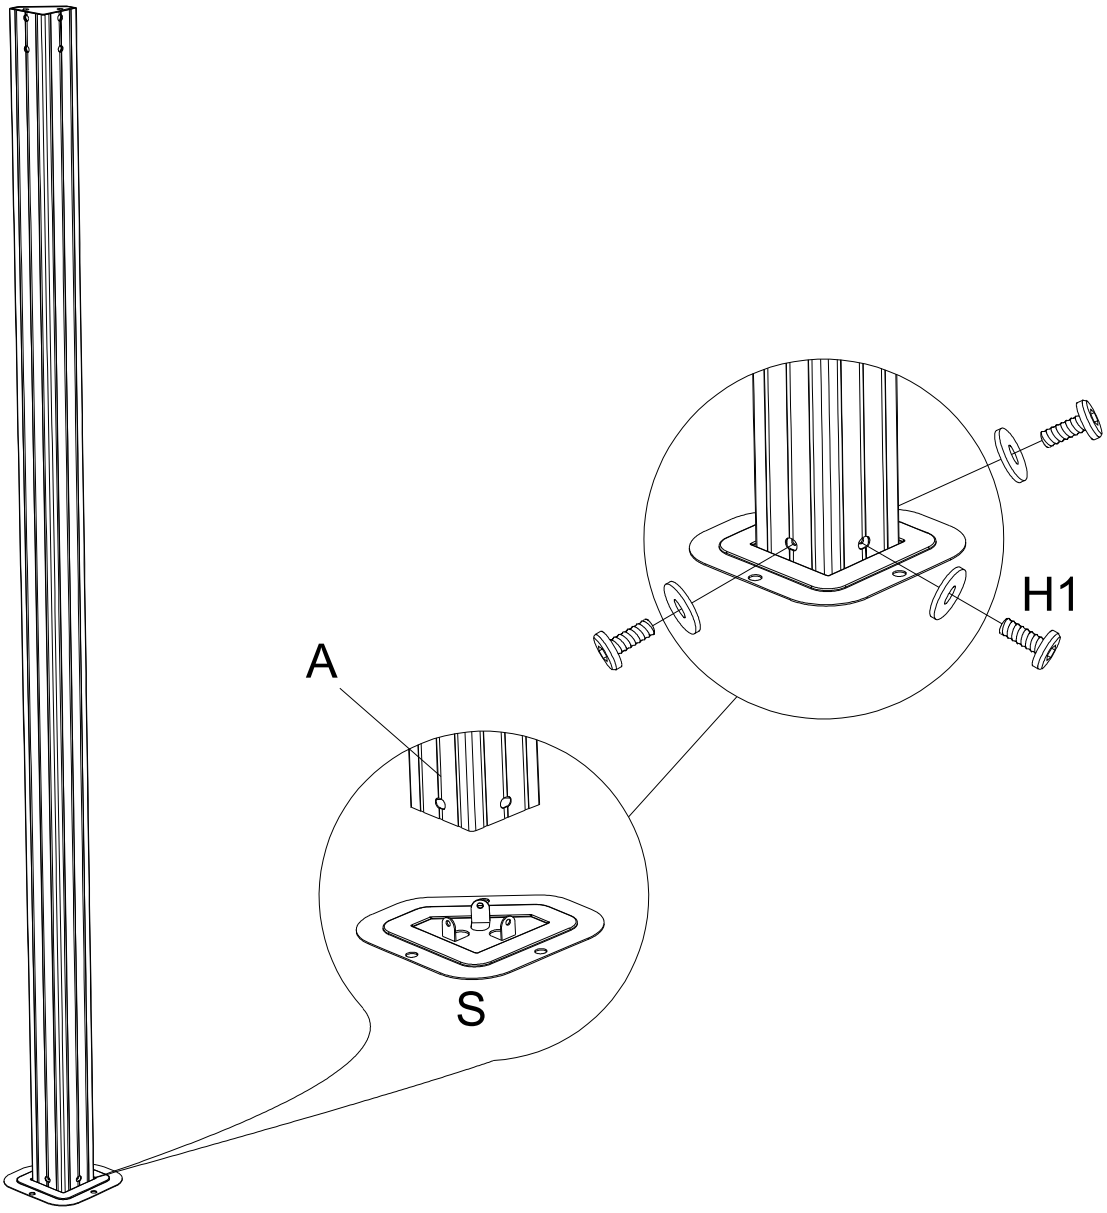



B1		2
B2		2
F5		2
F4		2

H1		M6X15	12
H5		M6	12


Step 2：

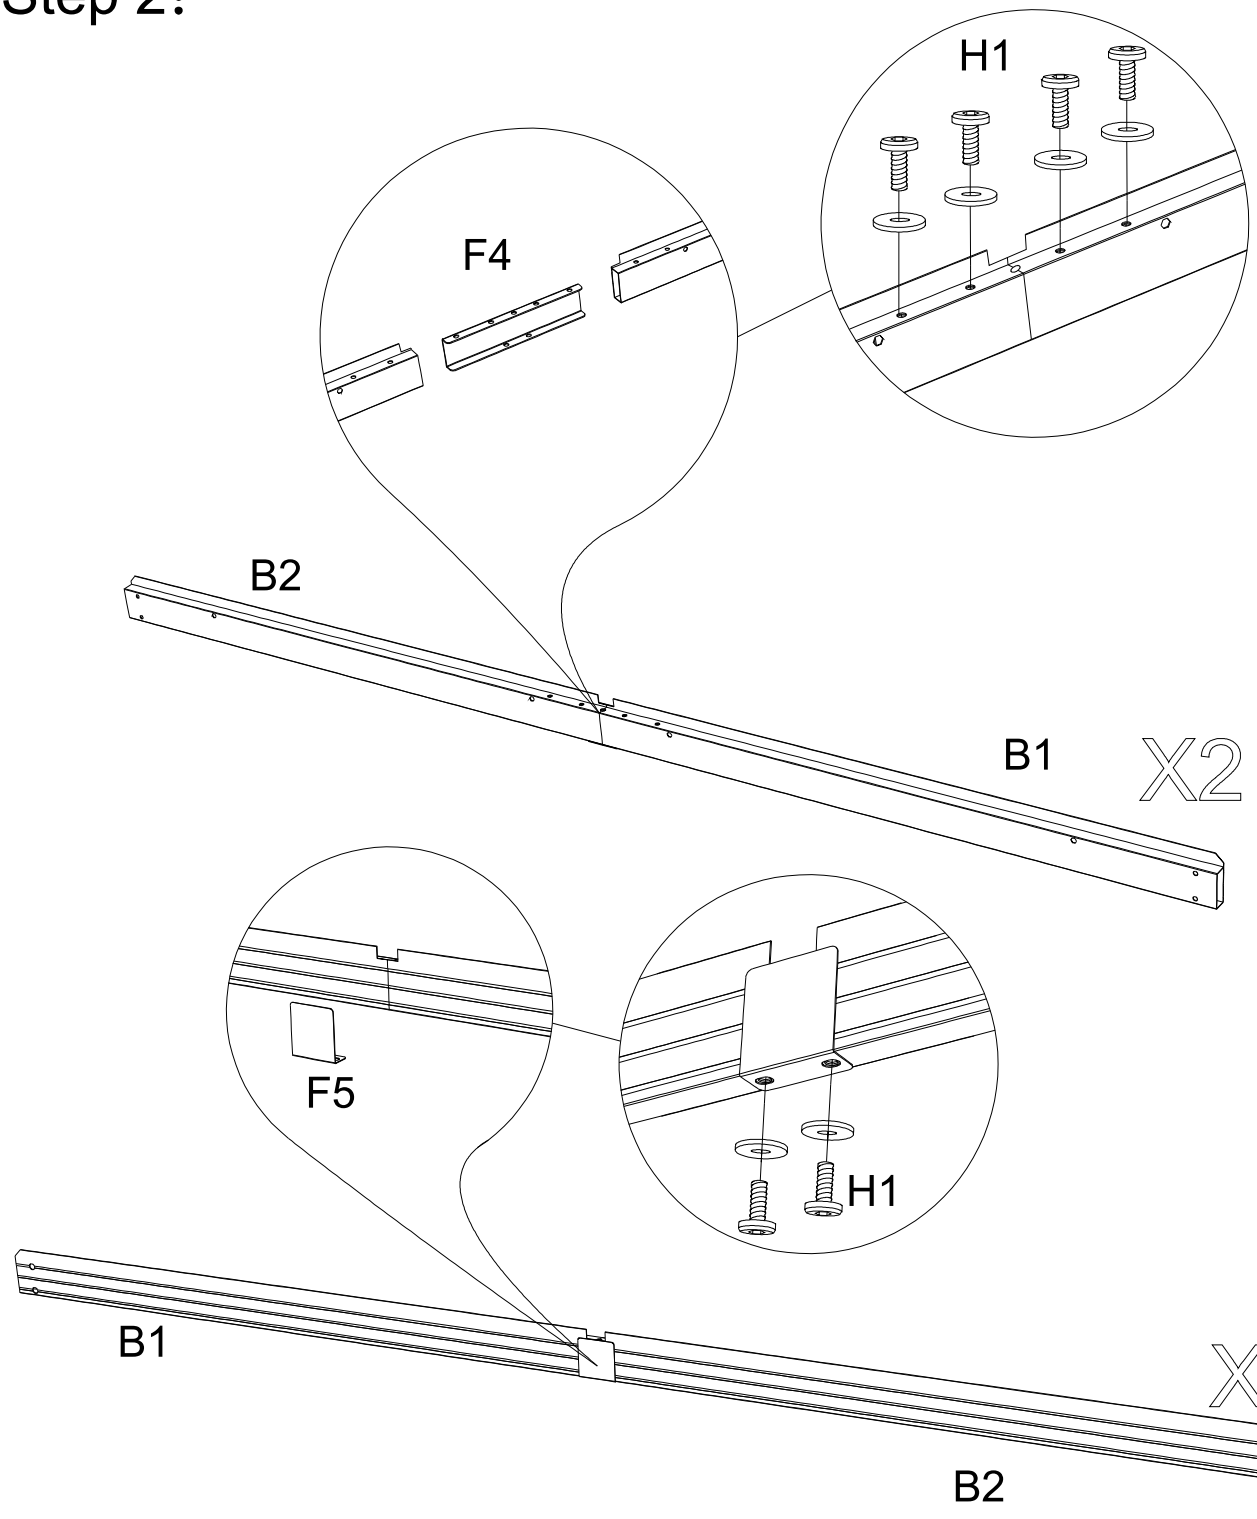

B3		2
B4		2
F5		2

F4			2
H1		M6X15	12
H5		M6	12

Step 3：

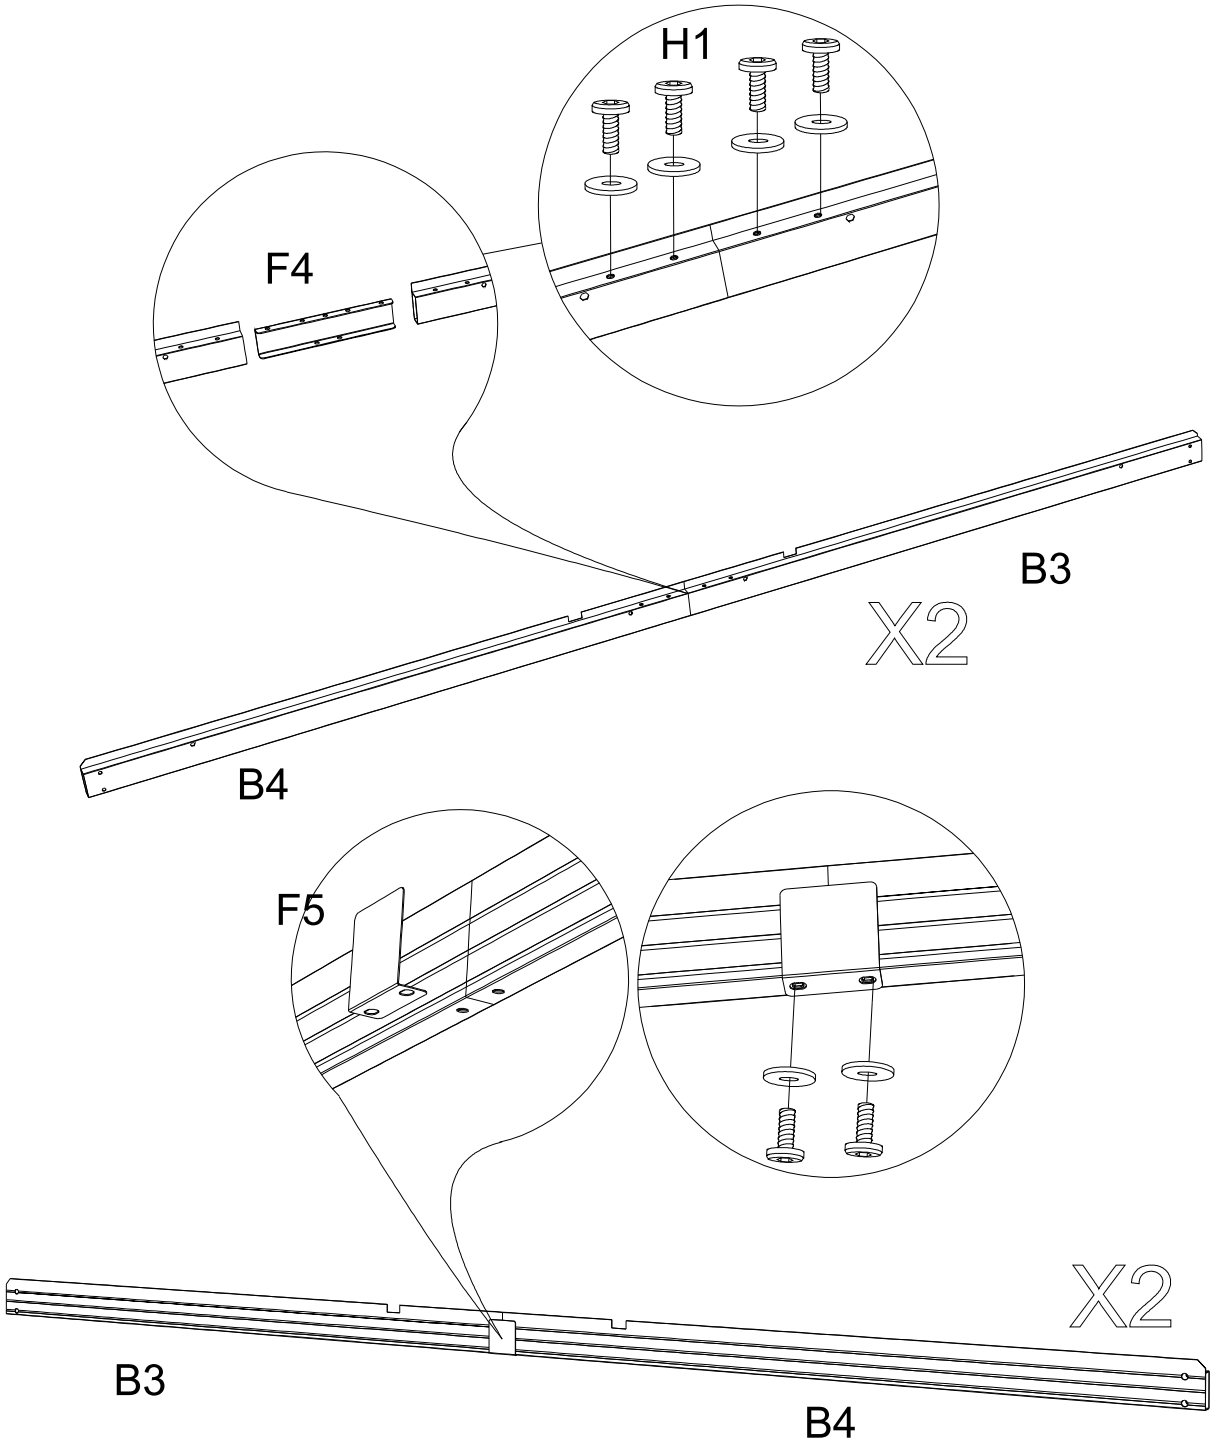


G2		6


H1		M6X15	6
H5		M6	6


Step 4：

E1		4
E2		4

H7		72
H8		16


Step 5：

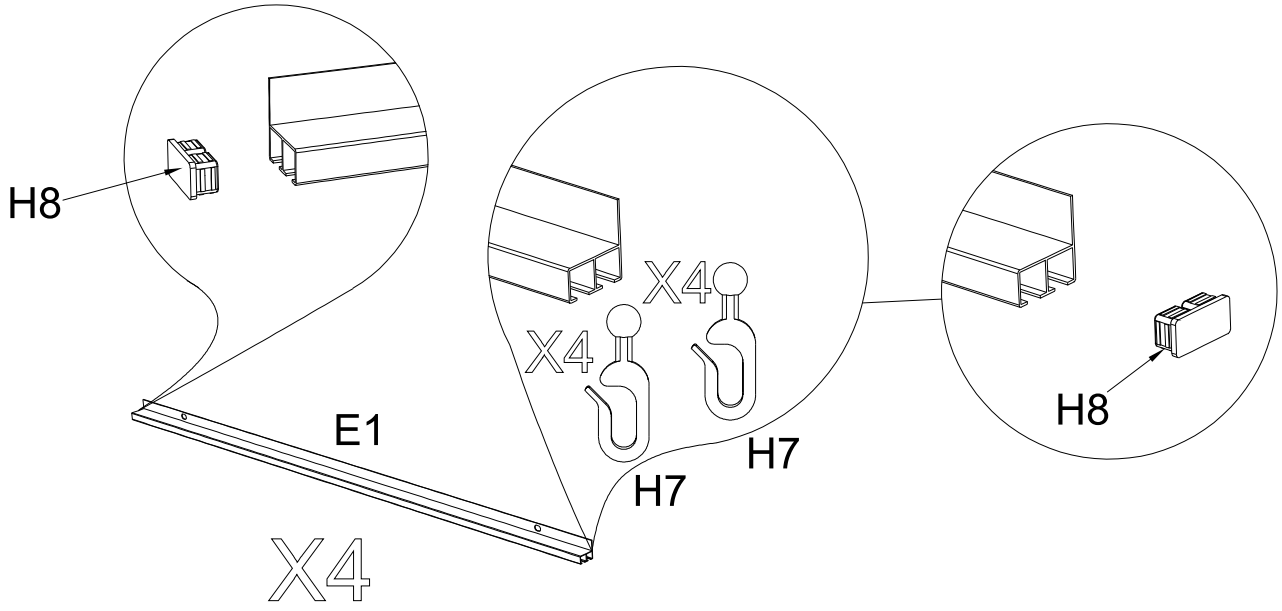


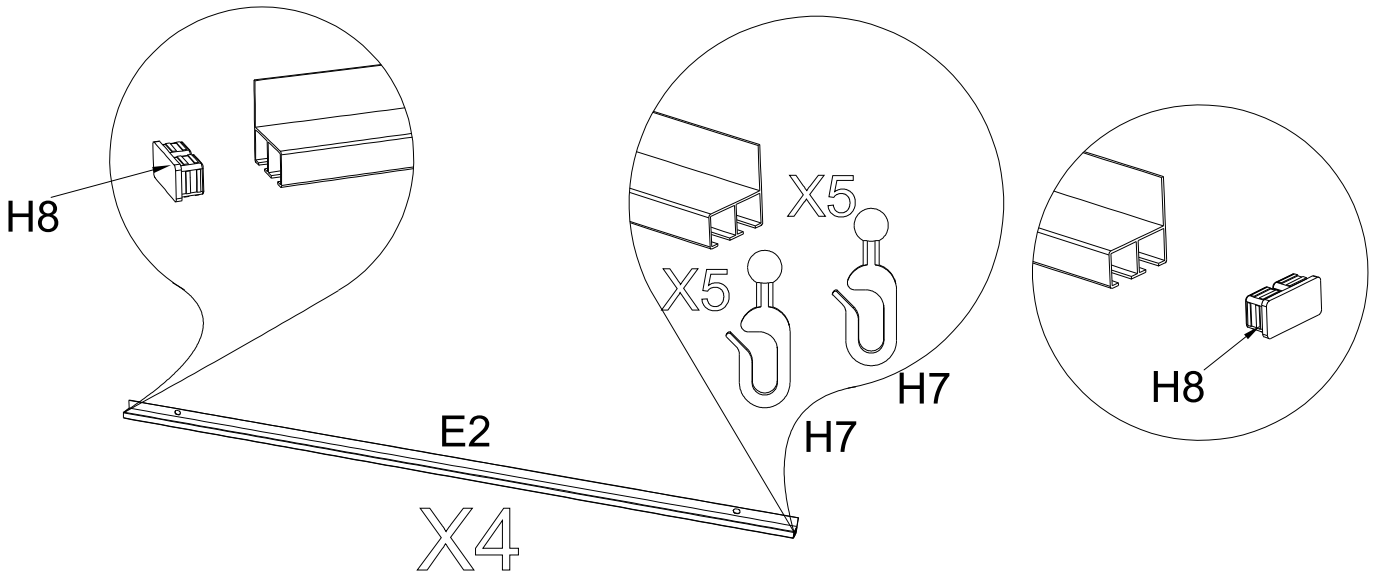


H1		M6X15	16
H5		M6	16


Step 6：

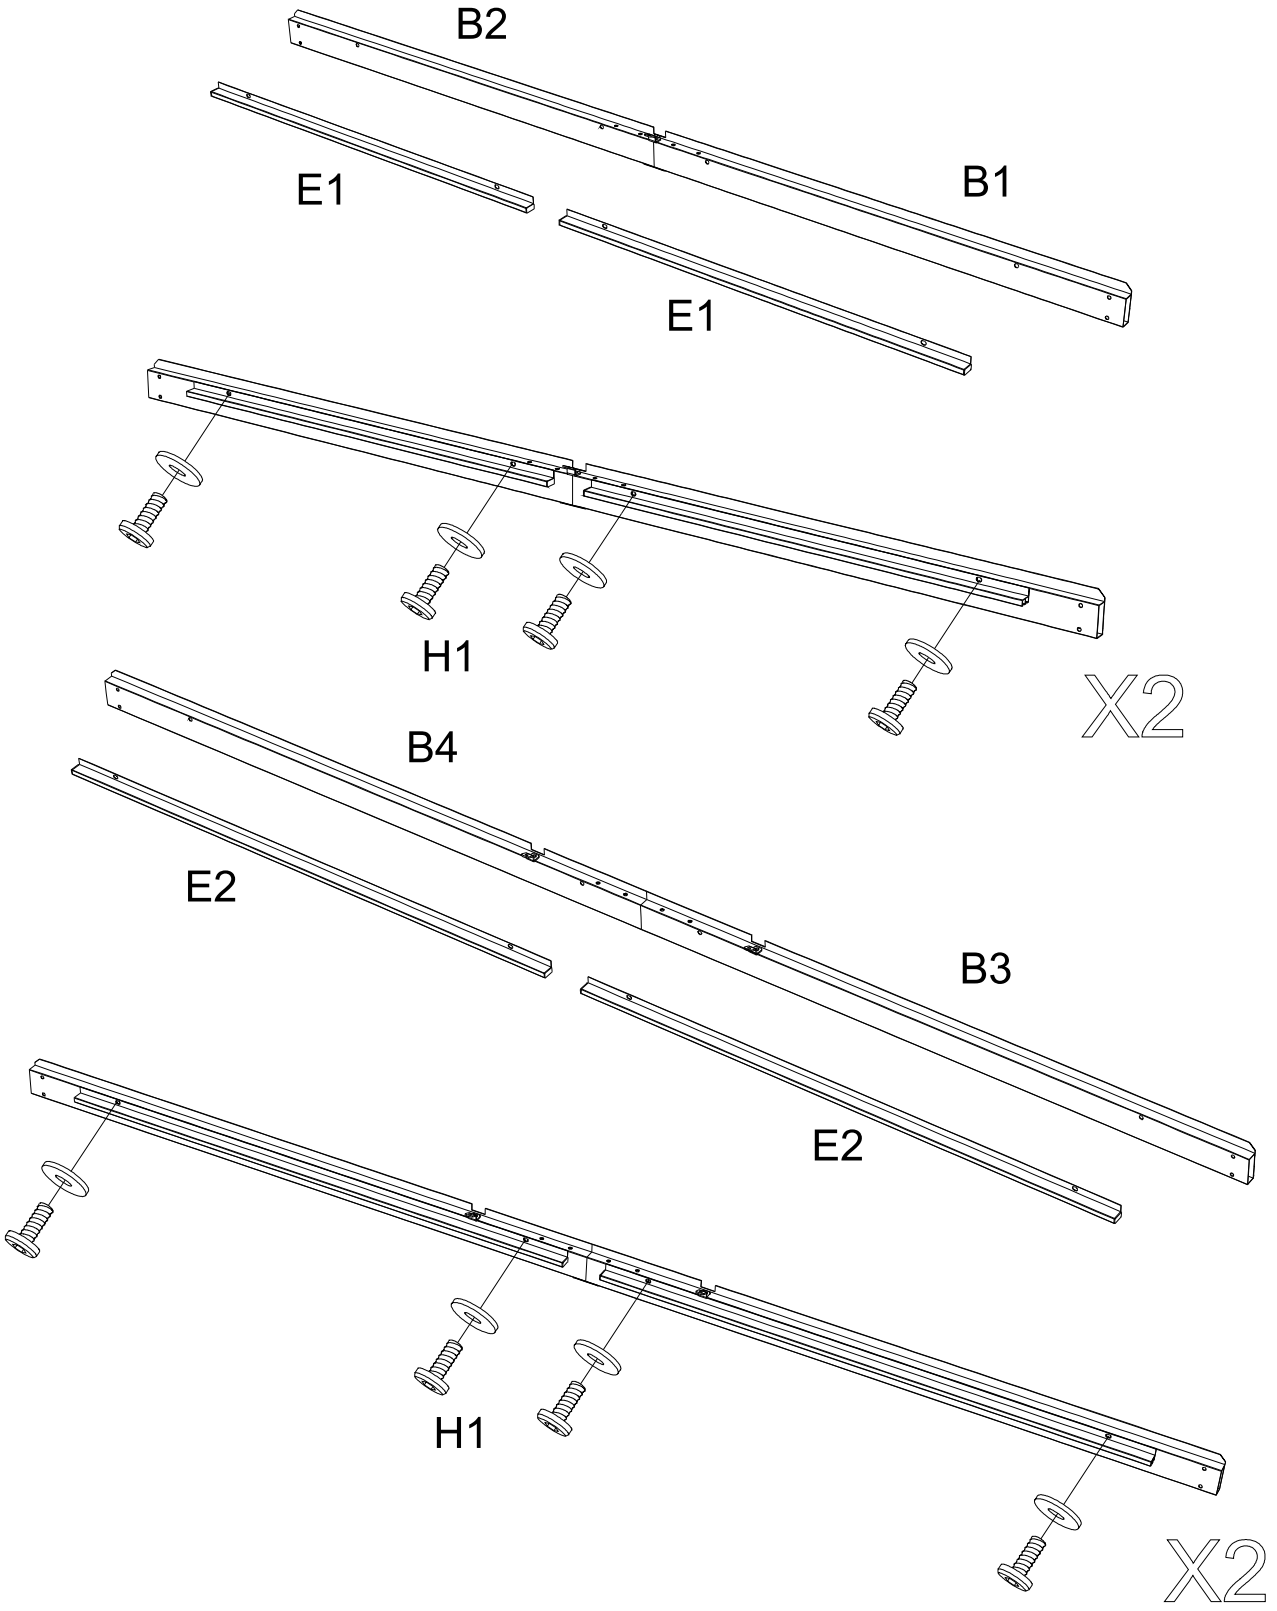


H4		25-M6X15	8

Step 7：

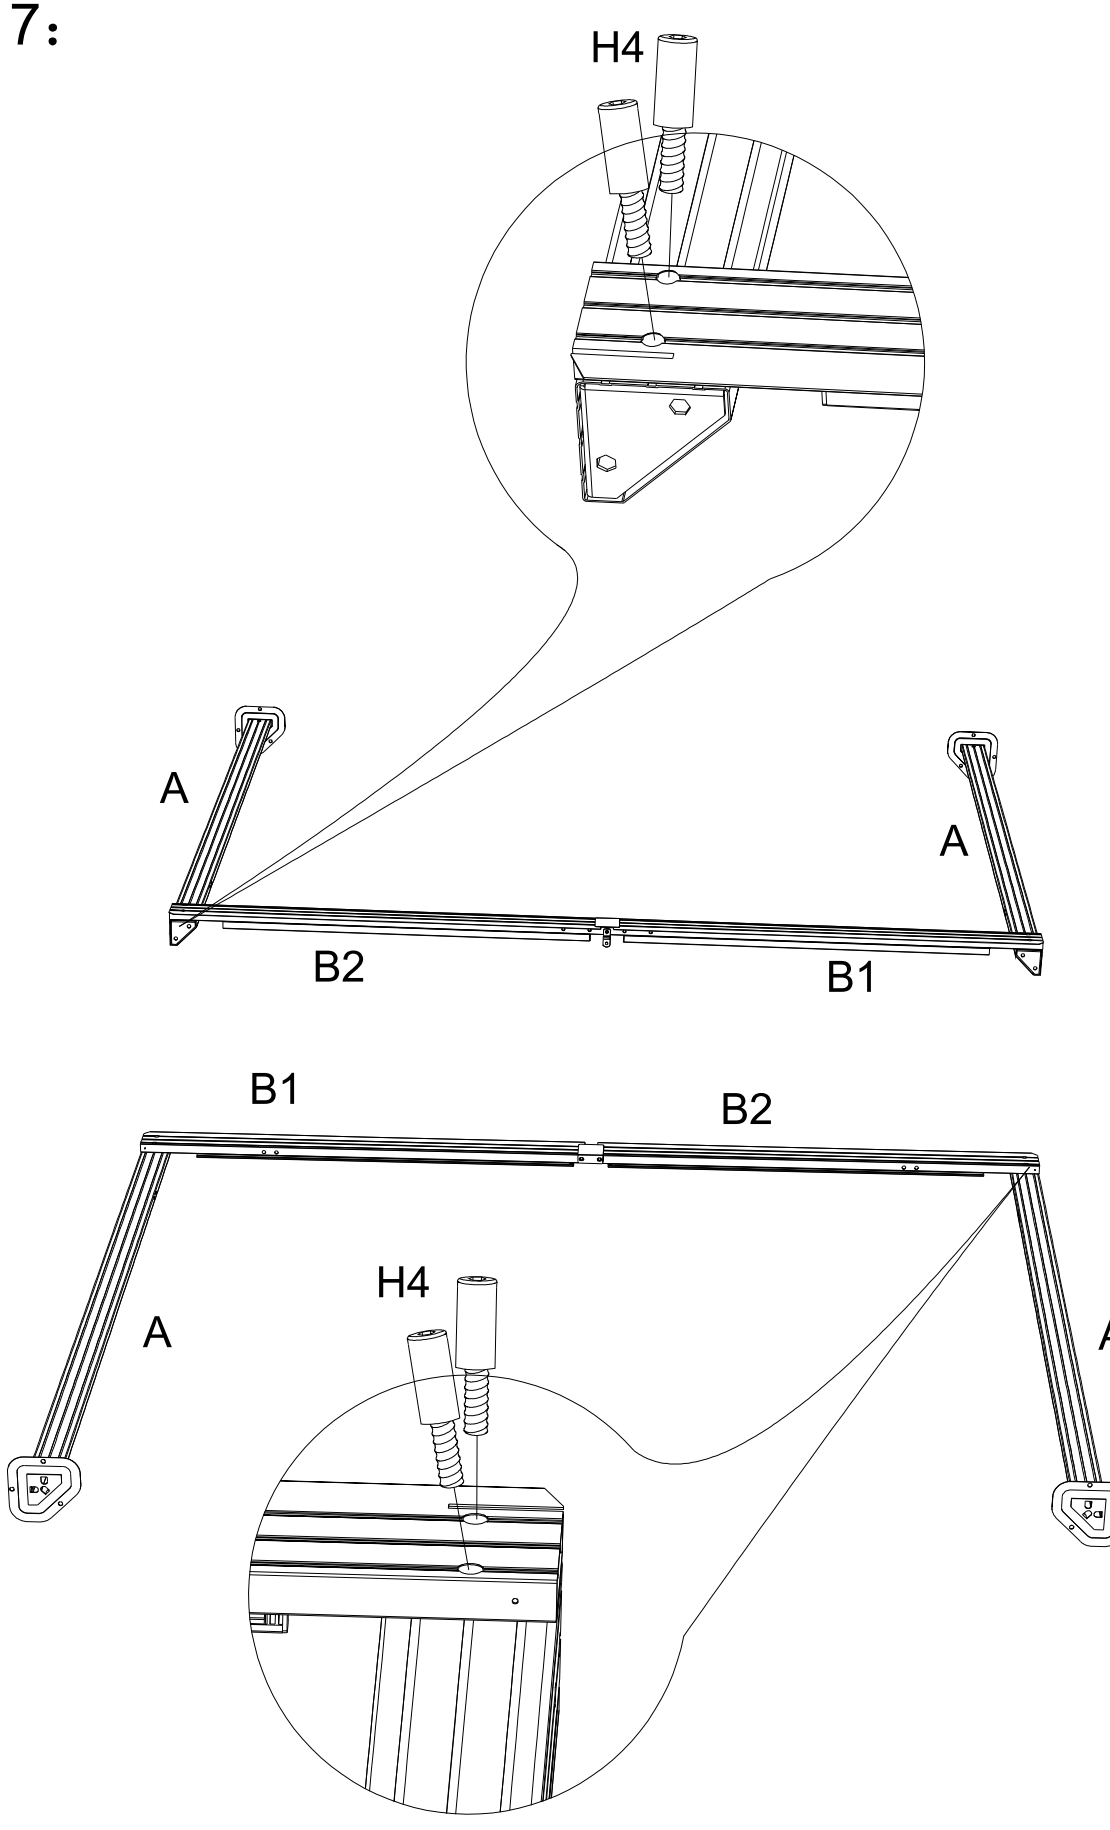

H4		25-M6X15	8


Step 8：

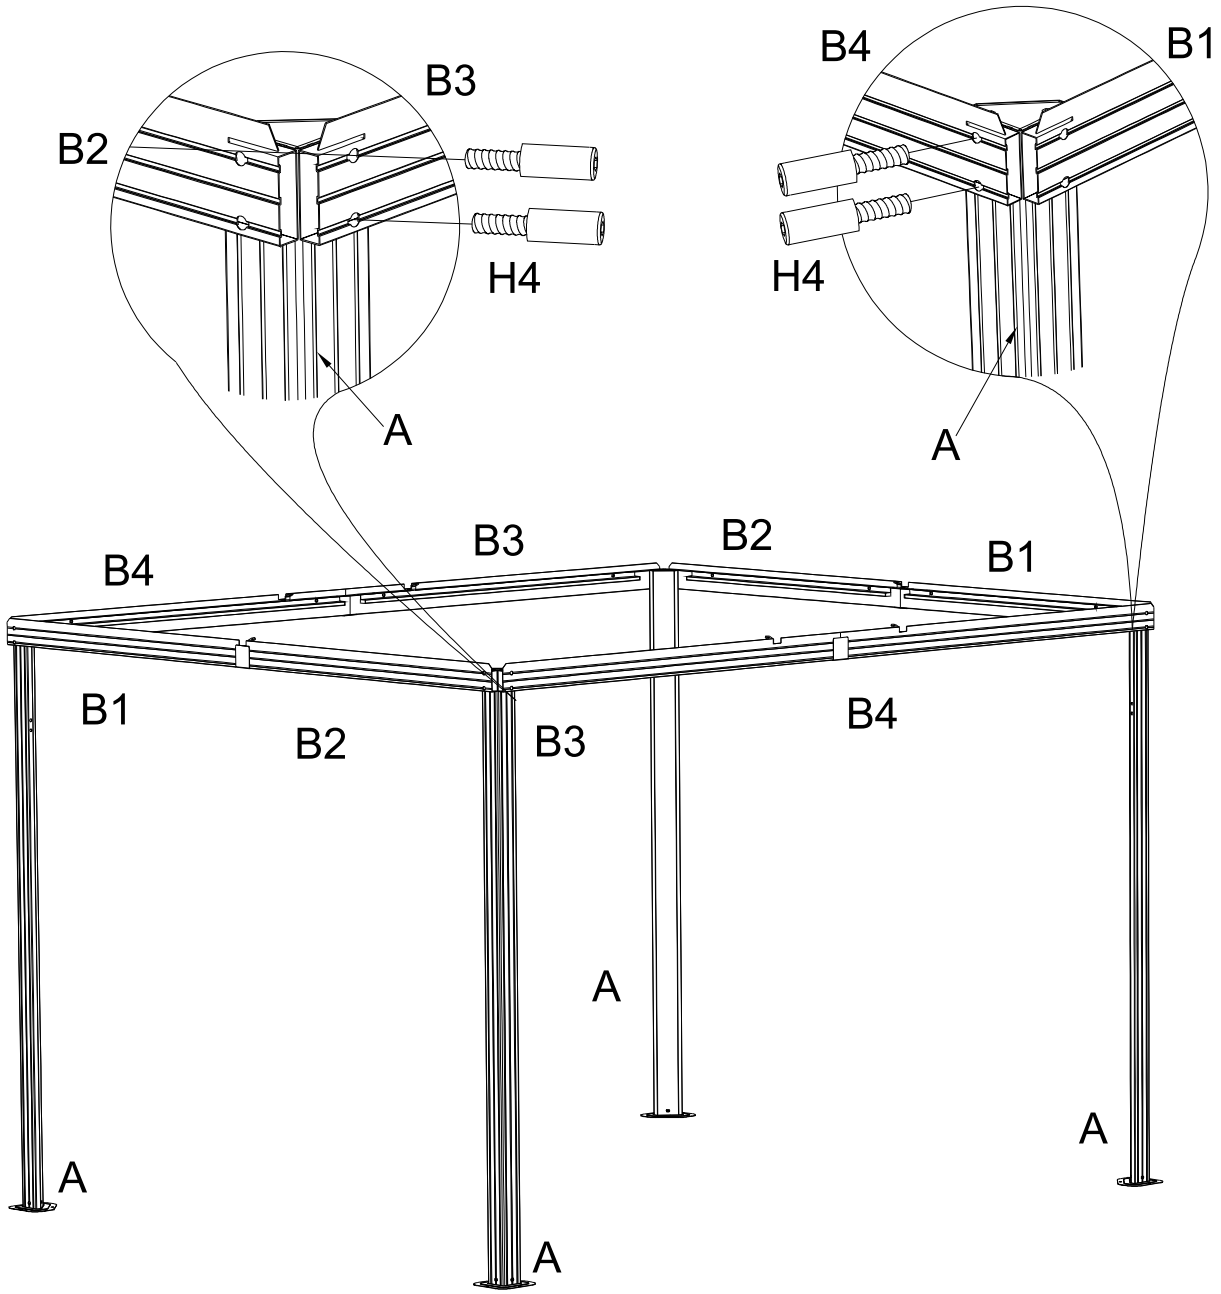

C1		4
C2		4

H1		M6X15	32
H5		M6	32

Step 9：

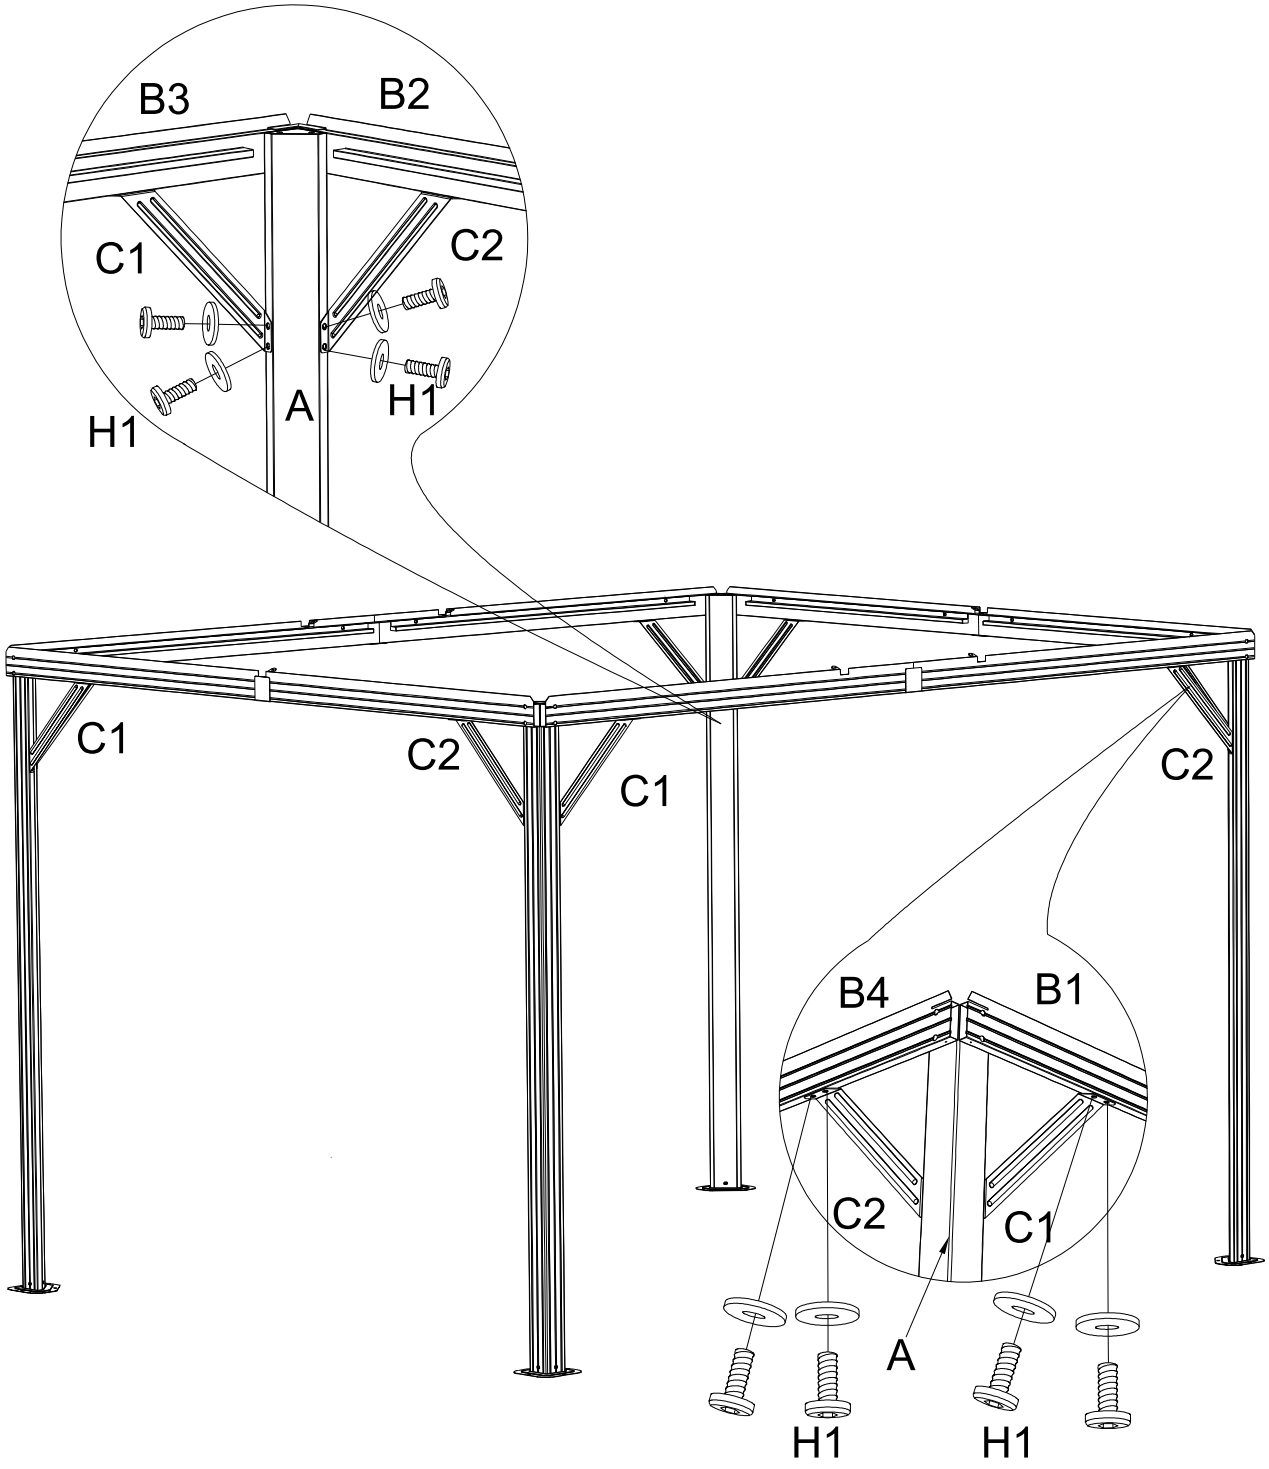


F1		4



H10		M5X15	8
H5		M6	8

Step 10：


Phillips screwdriver (not included in the package) required for screws H10.

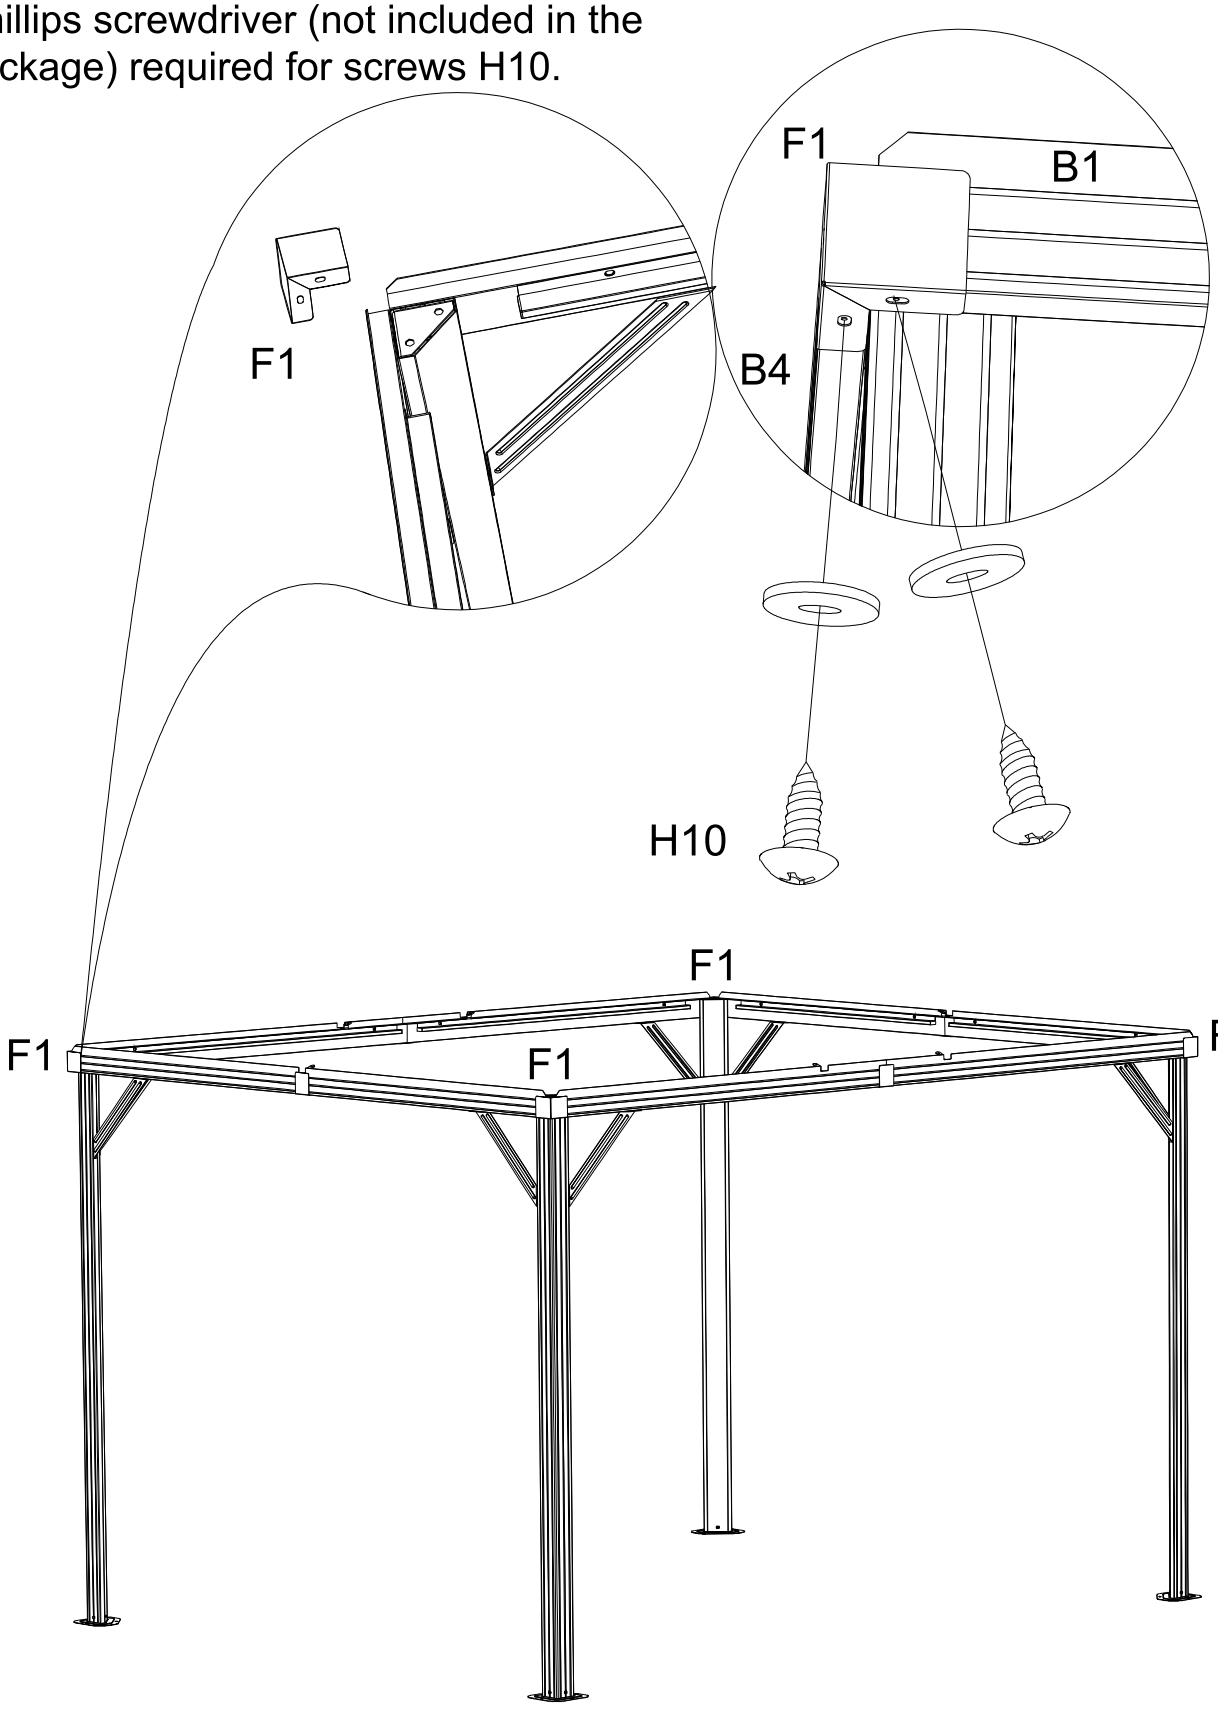

K1		4
K2		4
G1		4


G5			4
H1		M6X15	24
H5		M6	24



Step 11：

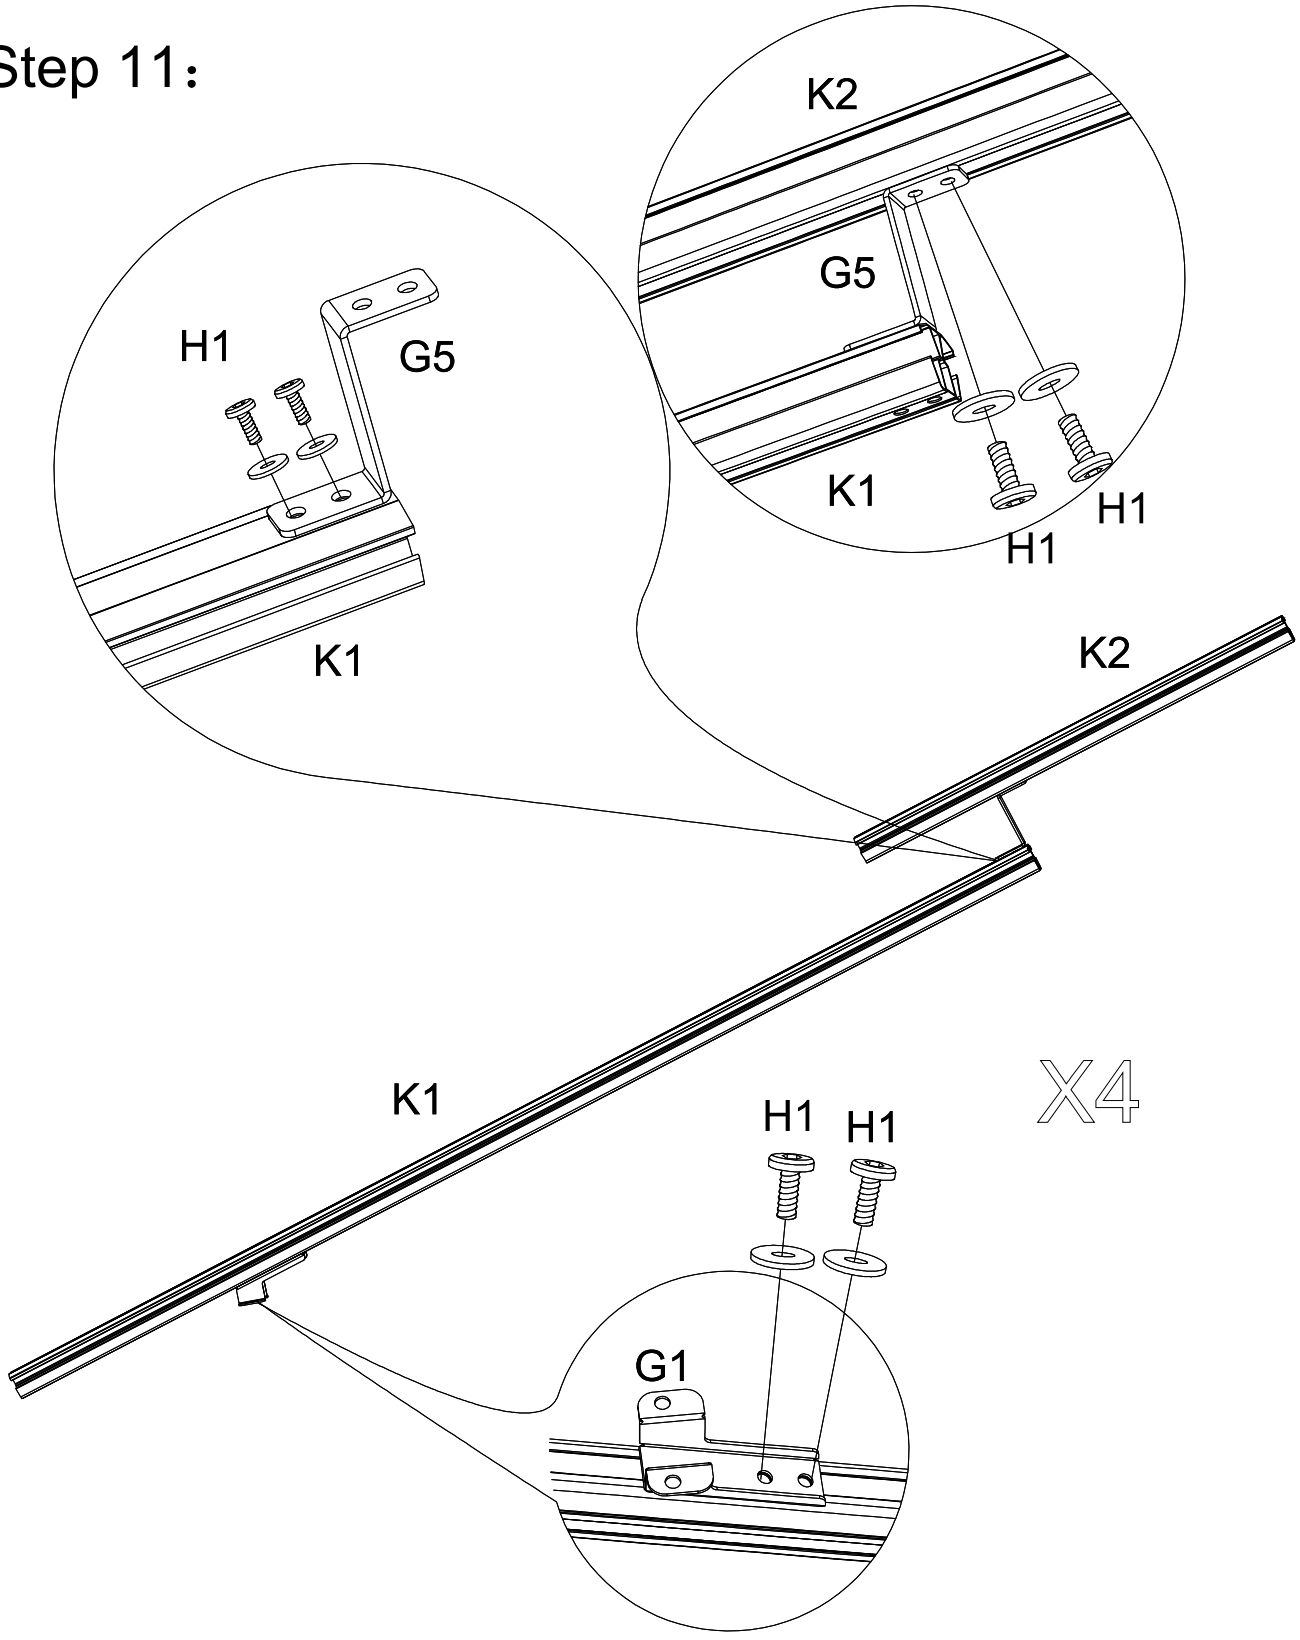

H1		M6X15	8
H5		M6	8


Step 12：

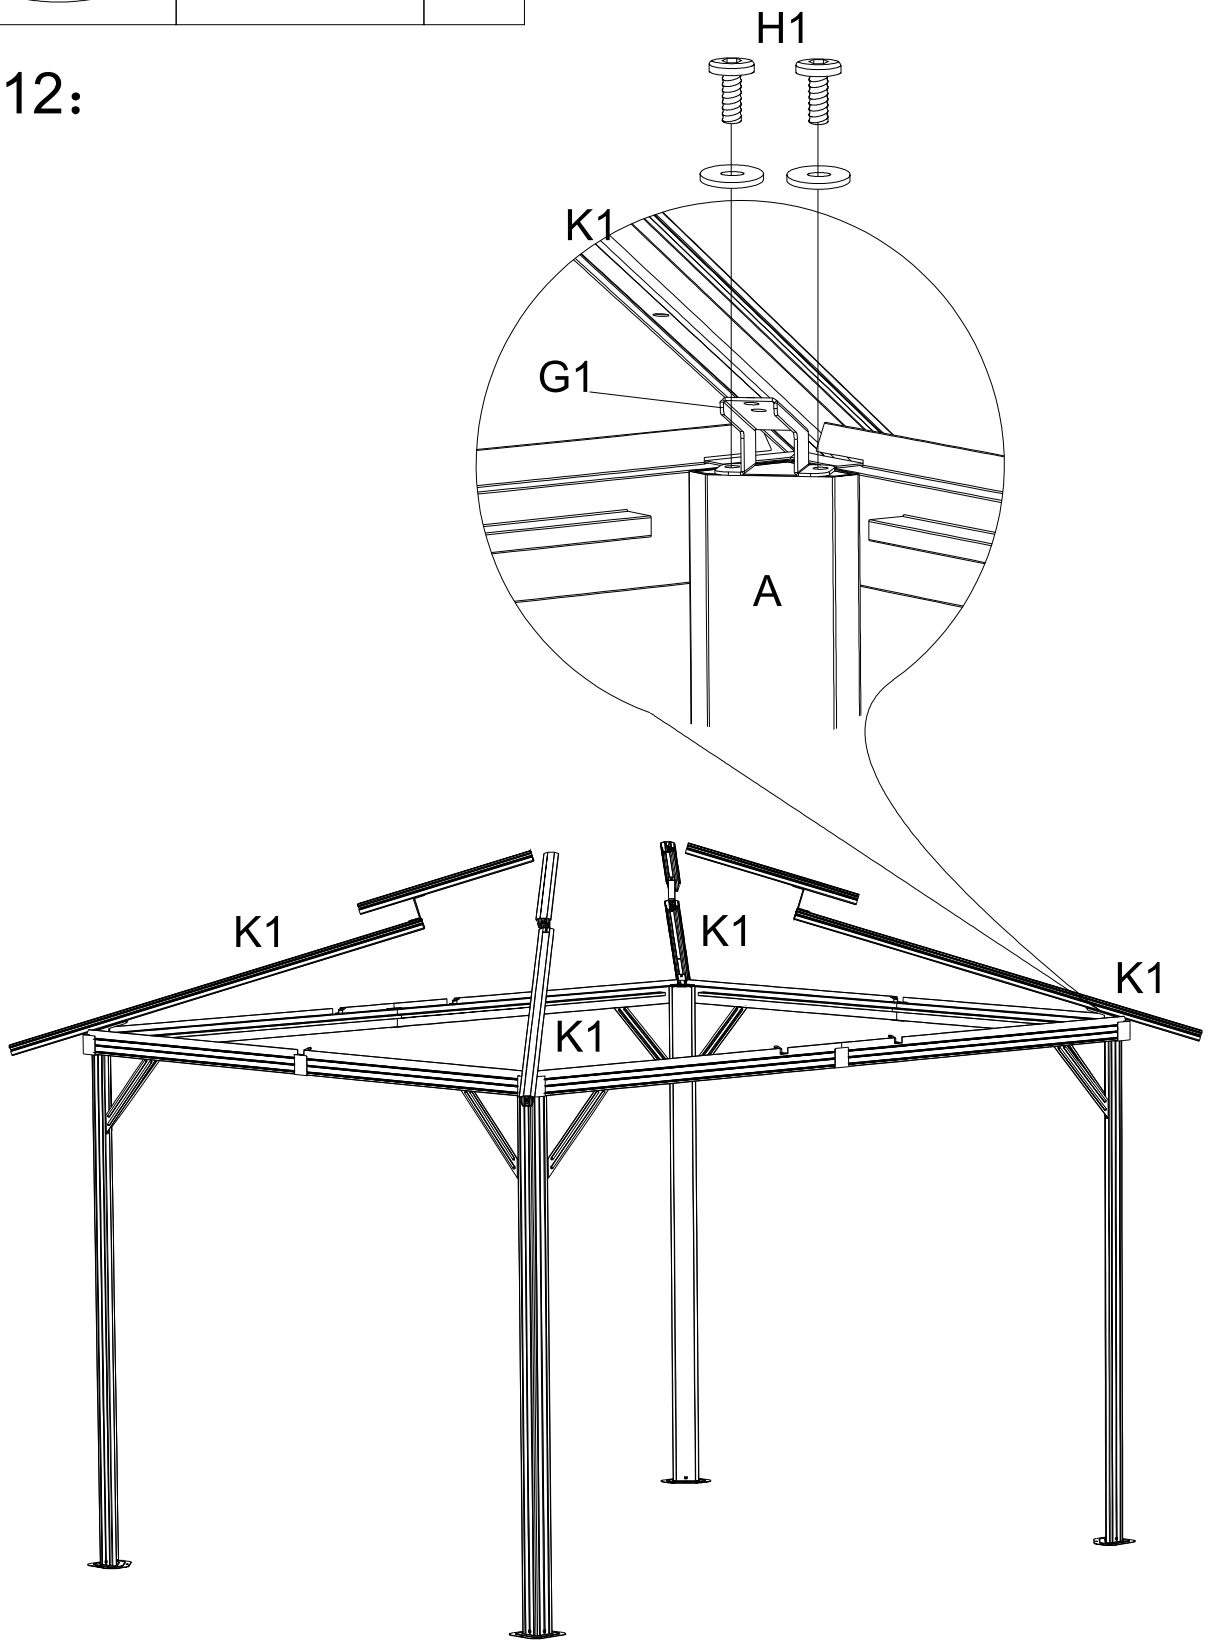

Q1		2
Q2		2
M		4


H1		M6X15	8
H5		M6	8

Step 13：

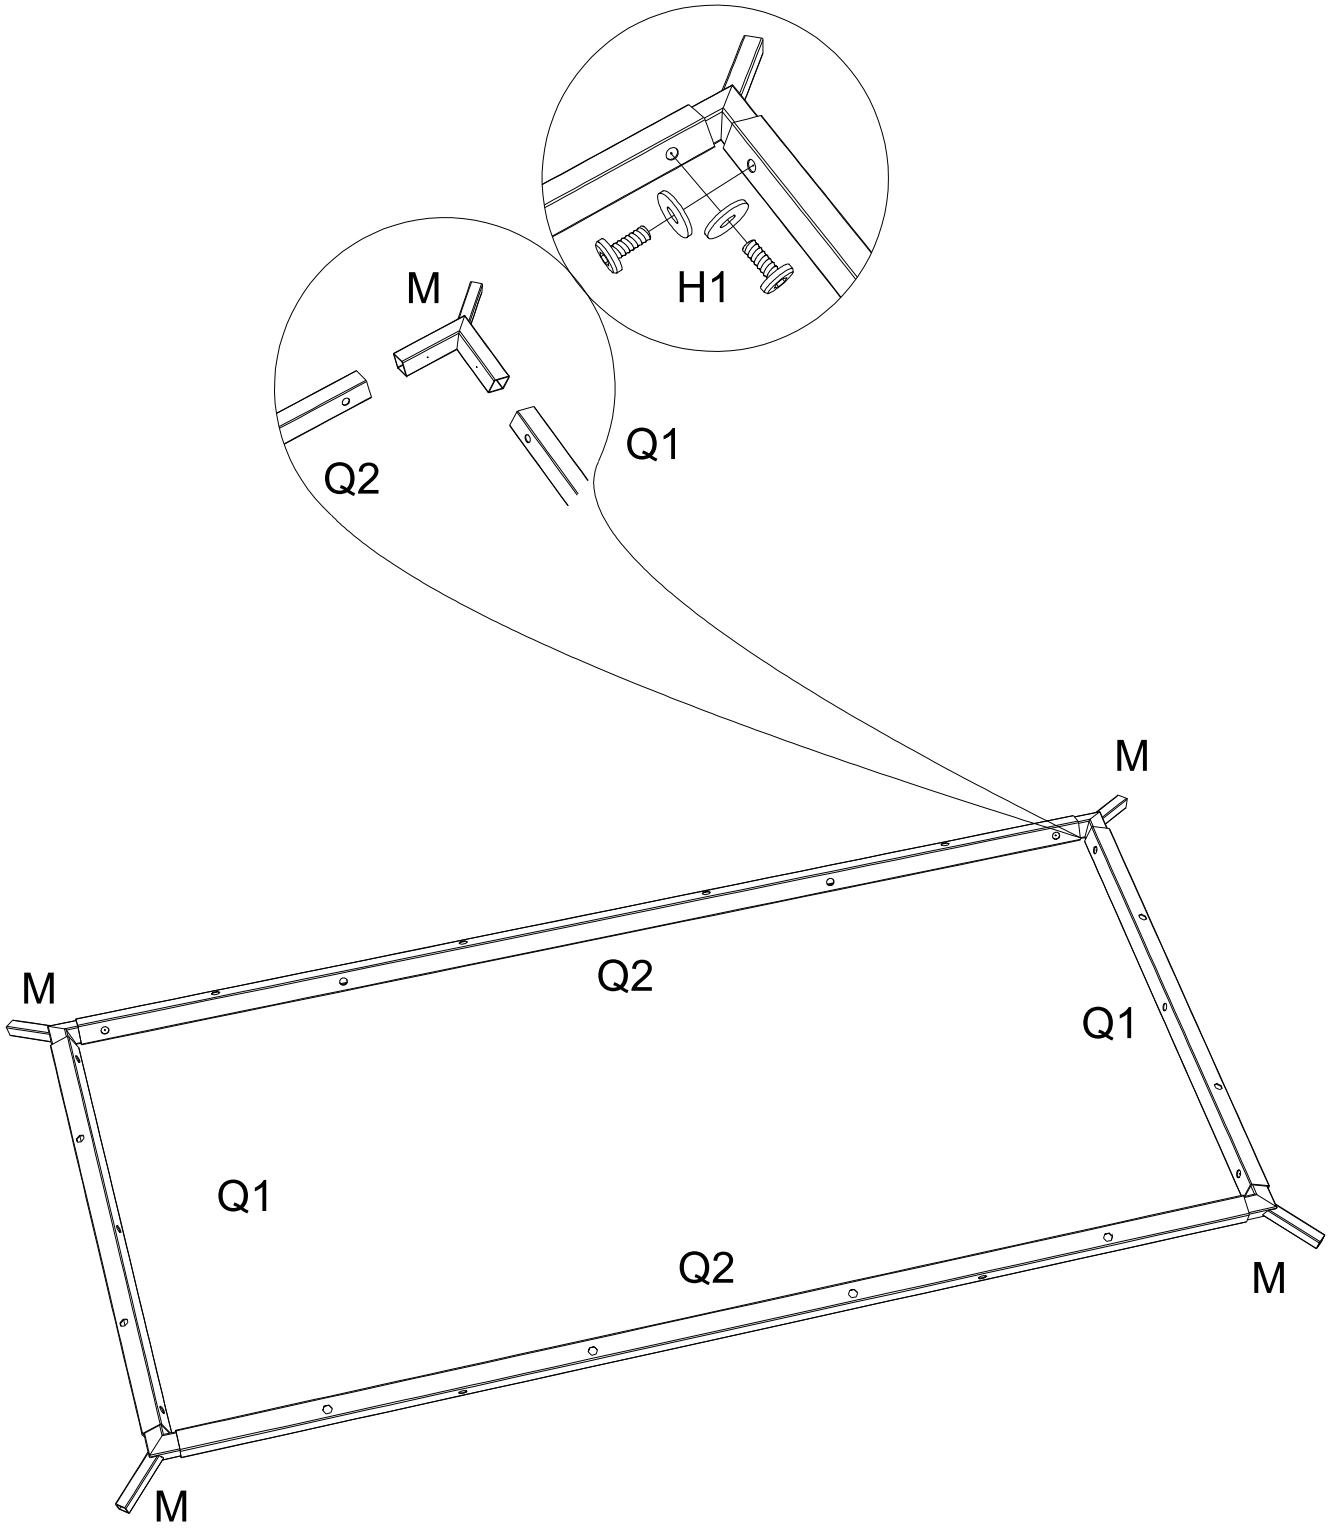

H1		M6X15	8
H5		M6	8


Step 14：

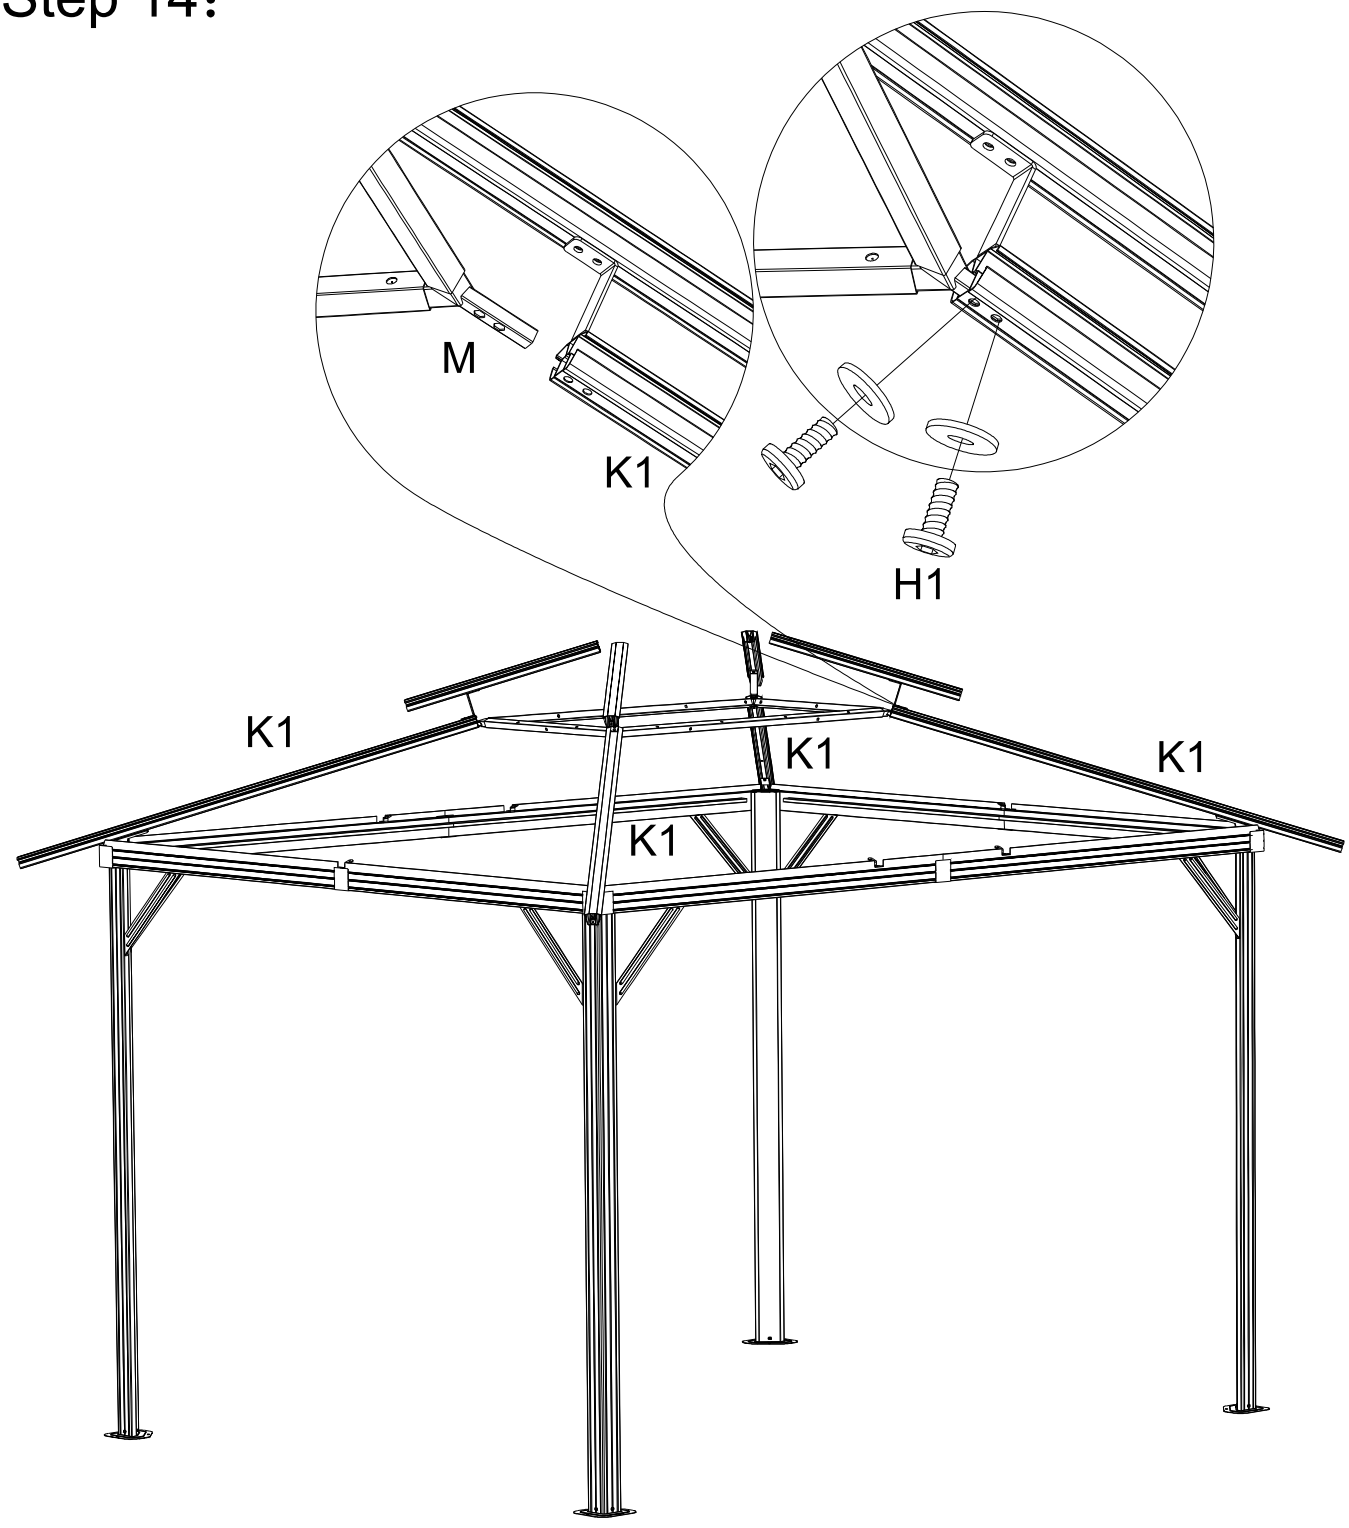

K3		6
G7		4

H1		M6X15	6
H5		M6	12
H3		M6X40	6


Step 15：

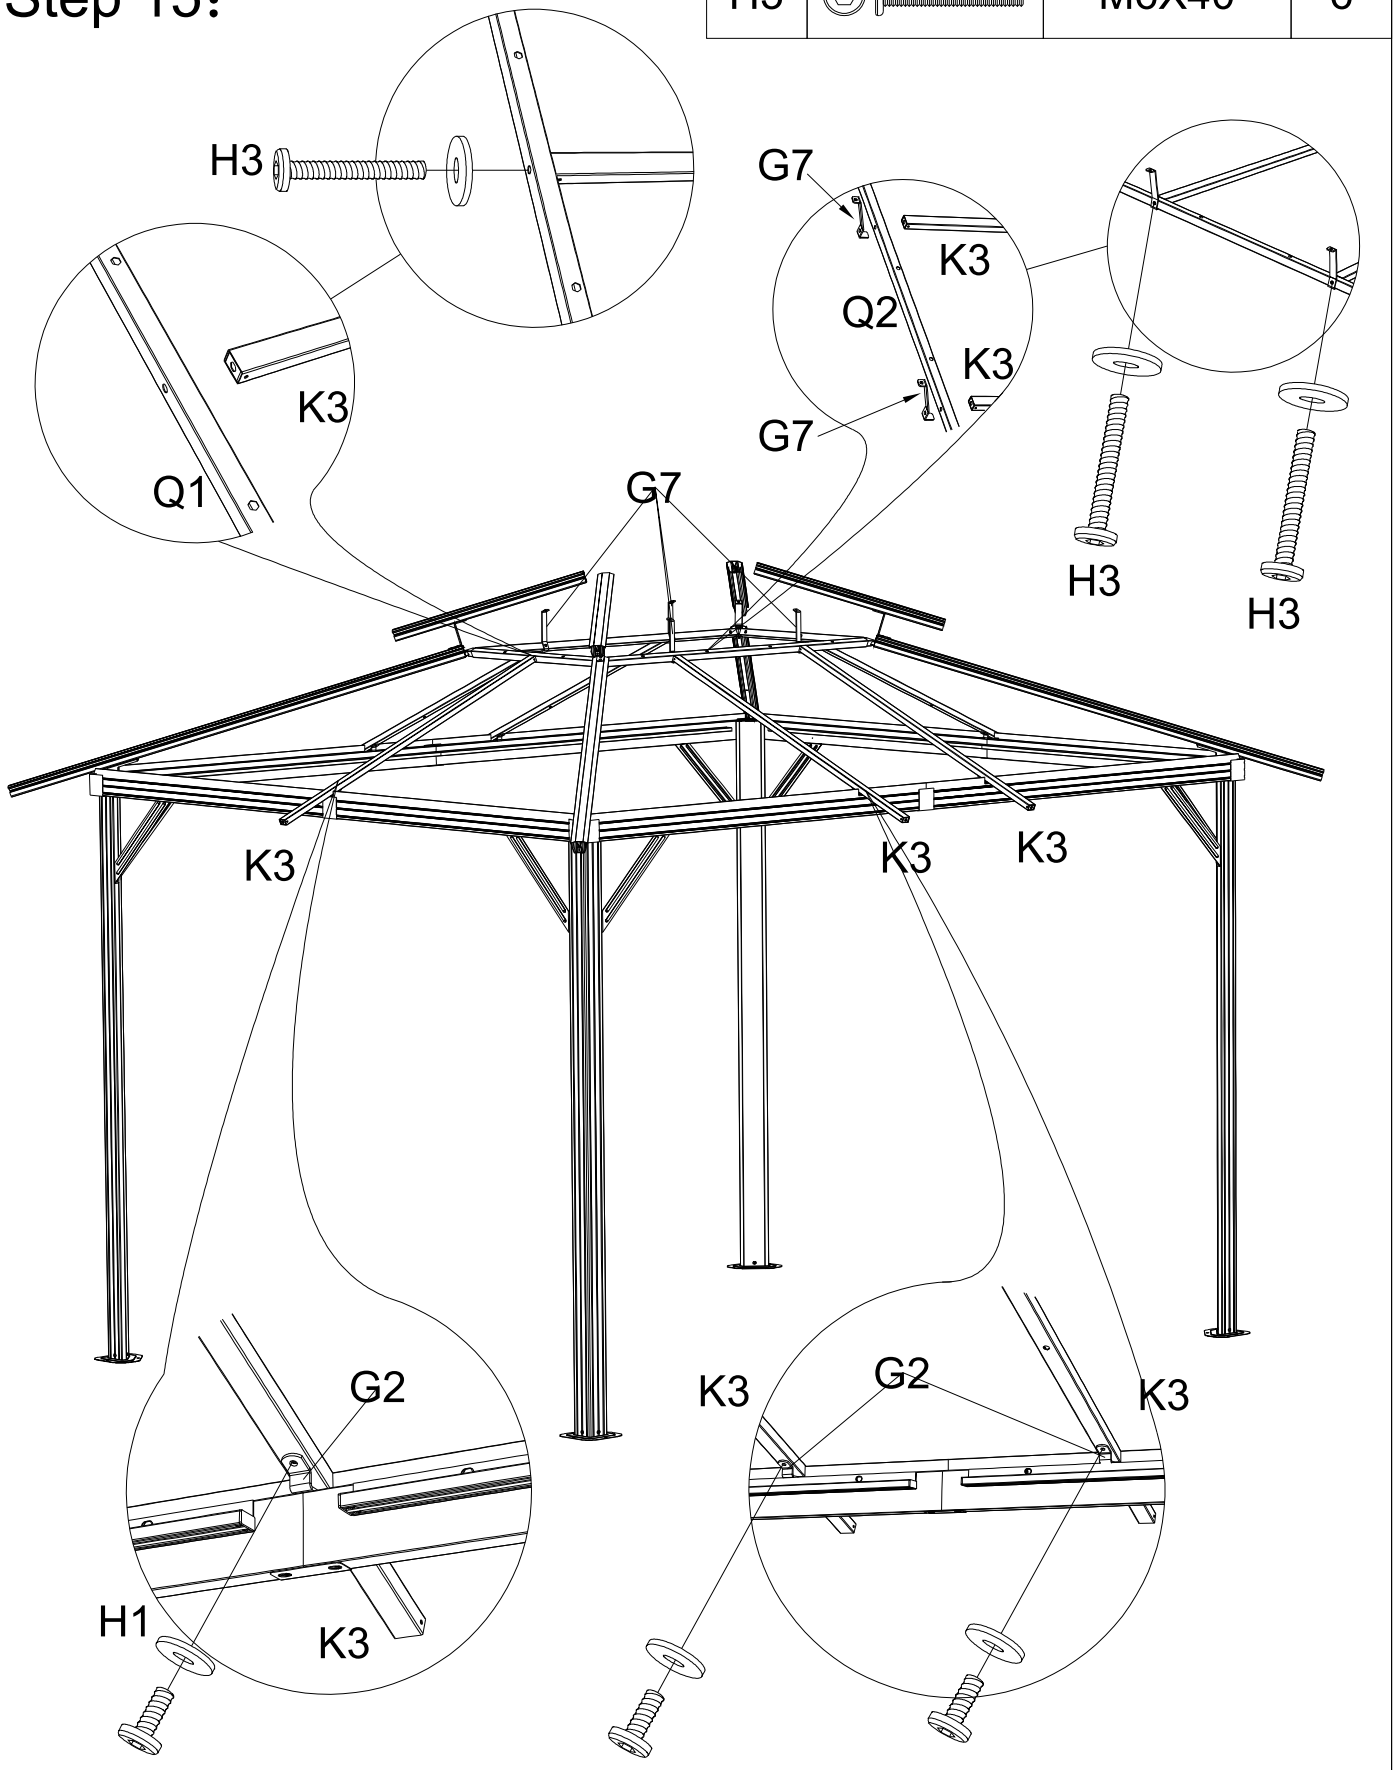



L1		1

H1		M6X15	4
H5		M6	4


Step 16：

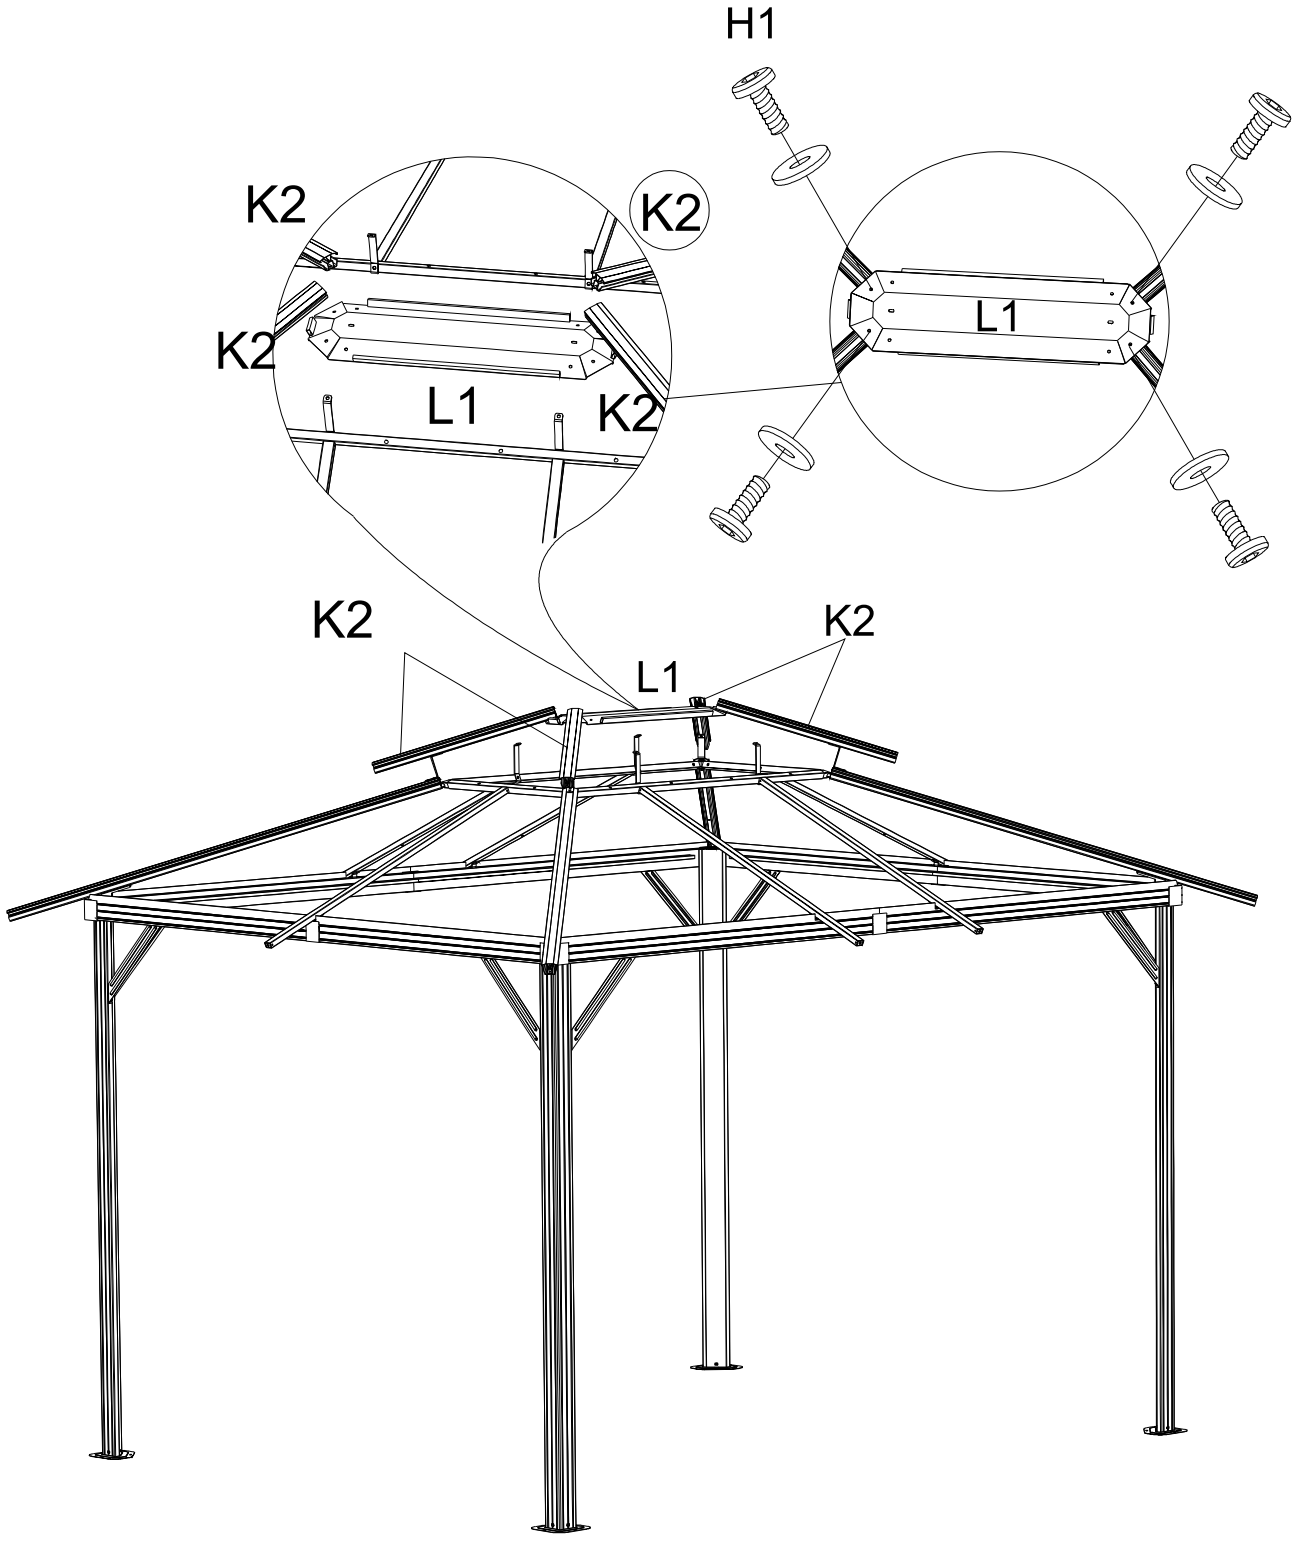


K4		4

H1		M6X15	8
H5		M6	8

Step 17：

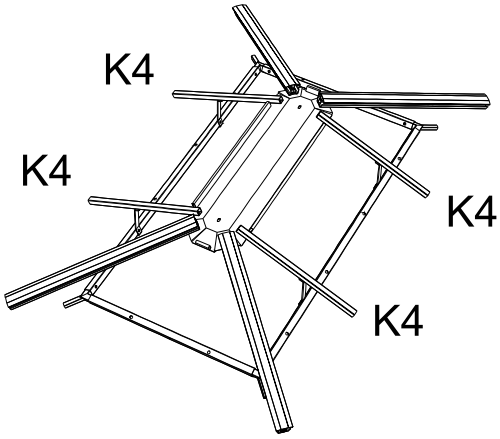



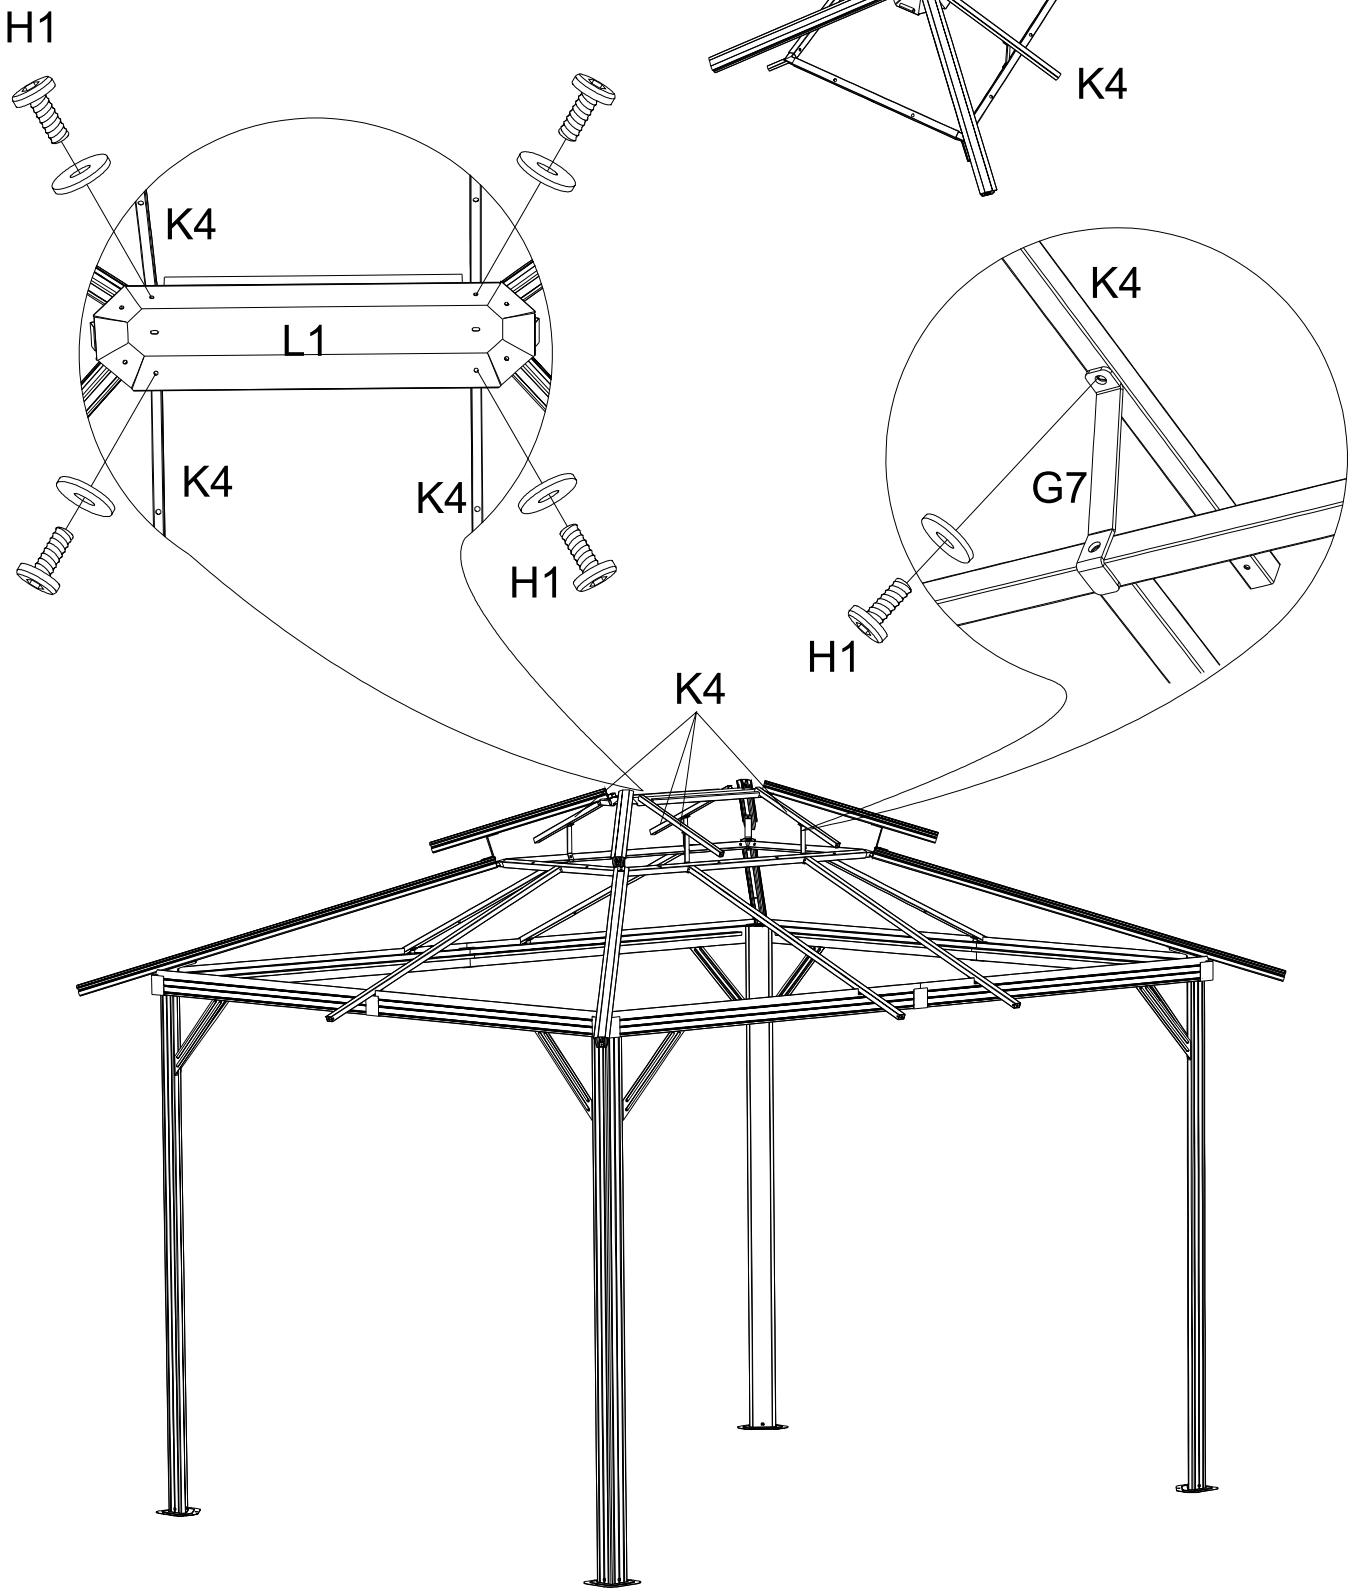



J1		2
J2		2
F2		4

H2		M6X25	4
H5		M6	8
H3		M6X40	4


Step 18:

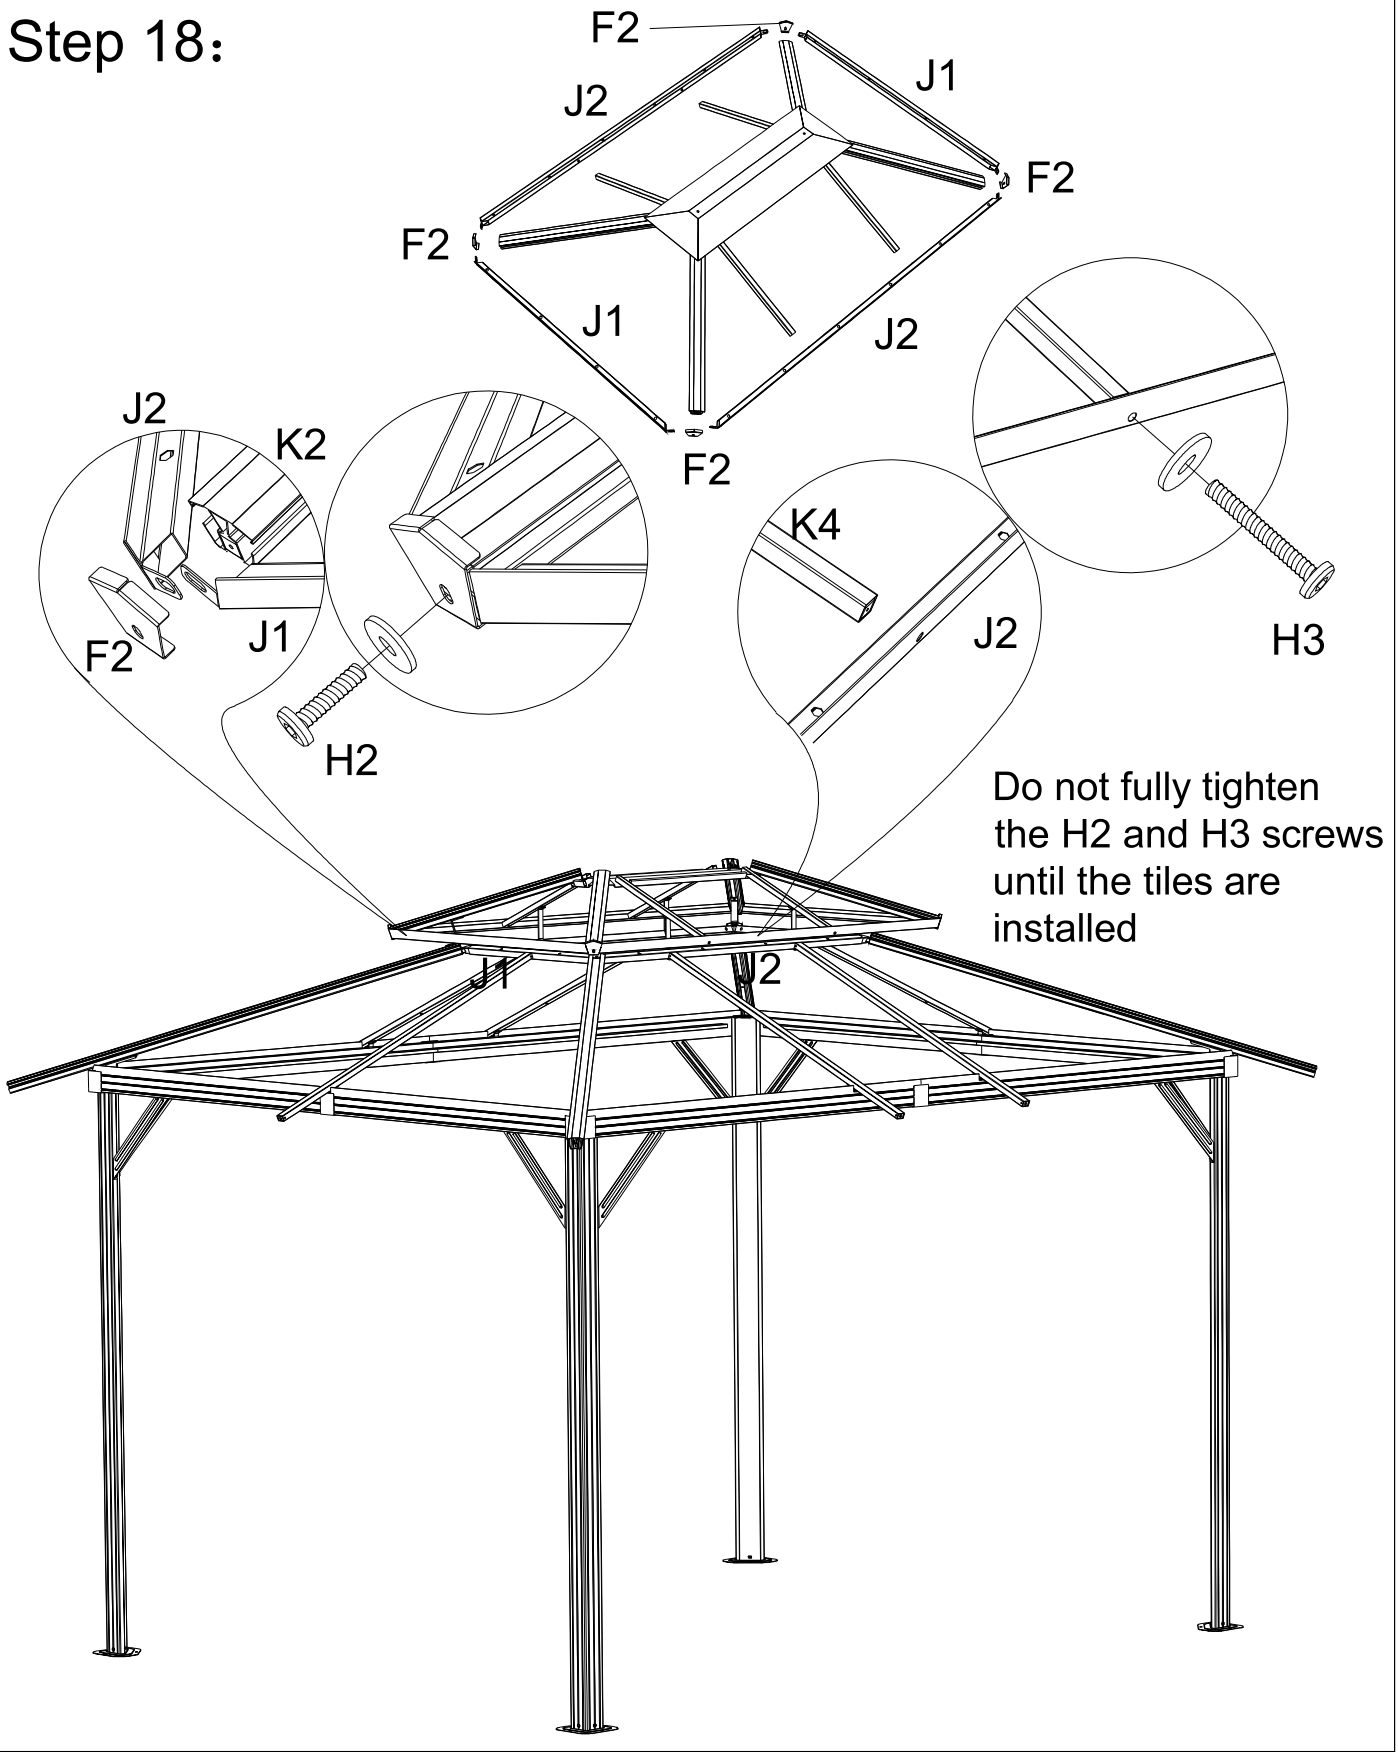


P1		4
P8		2

P2		4

Step 19:

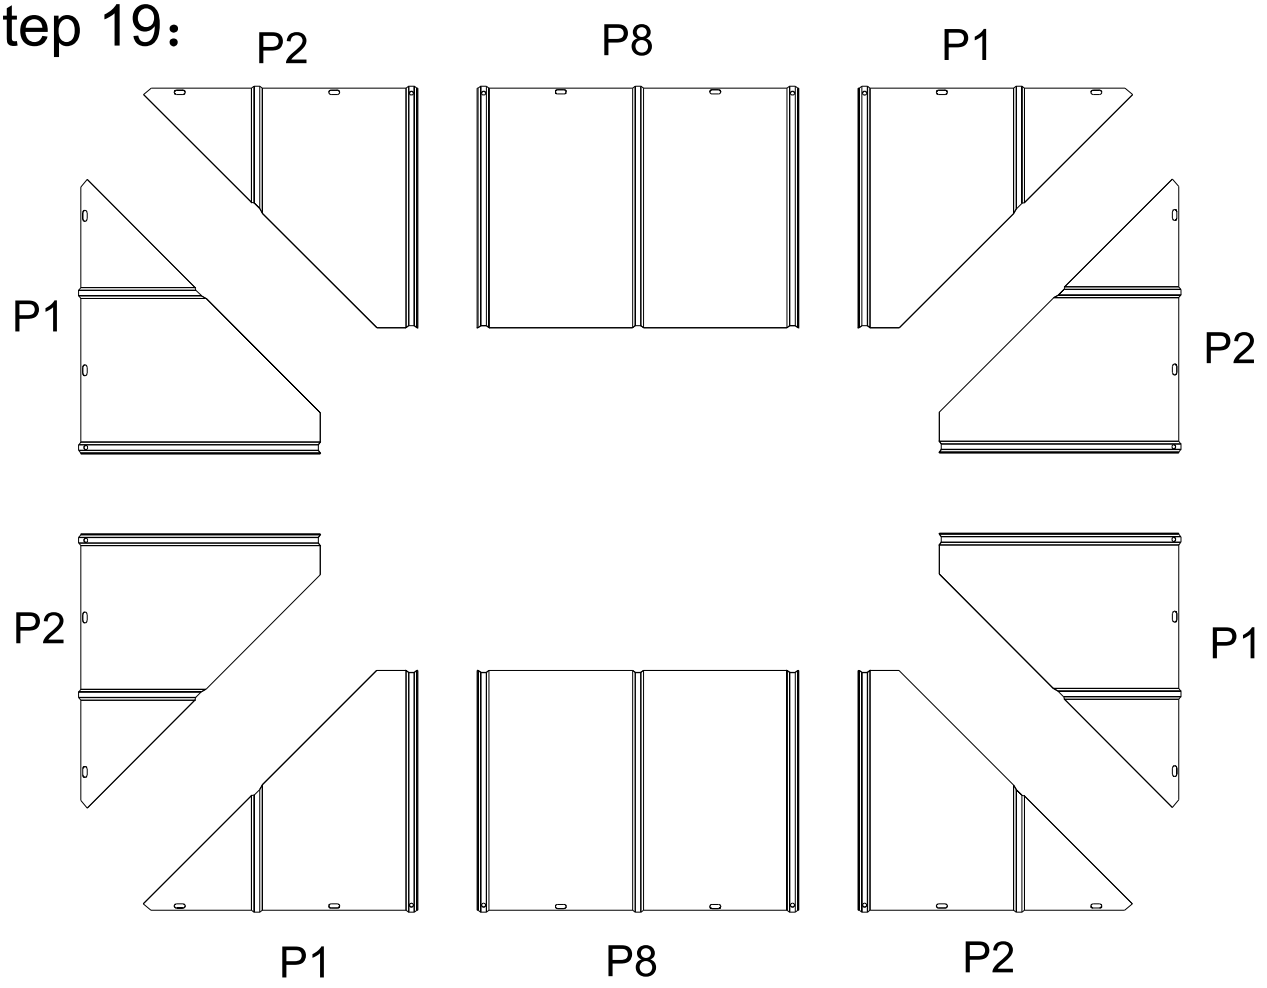


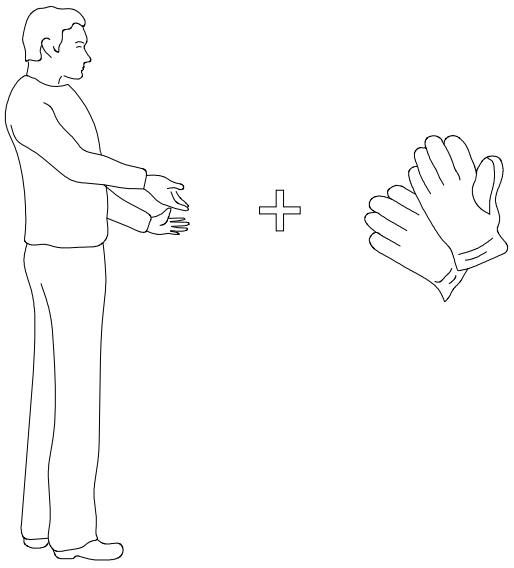

Warning:Wear protective gloves when installing the roof panels.


H11			6


Step 20：

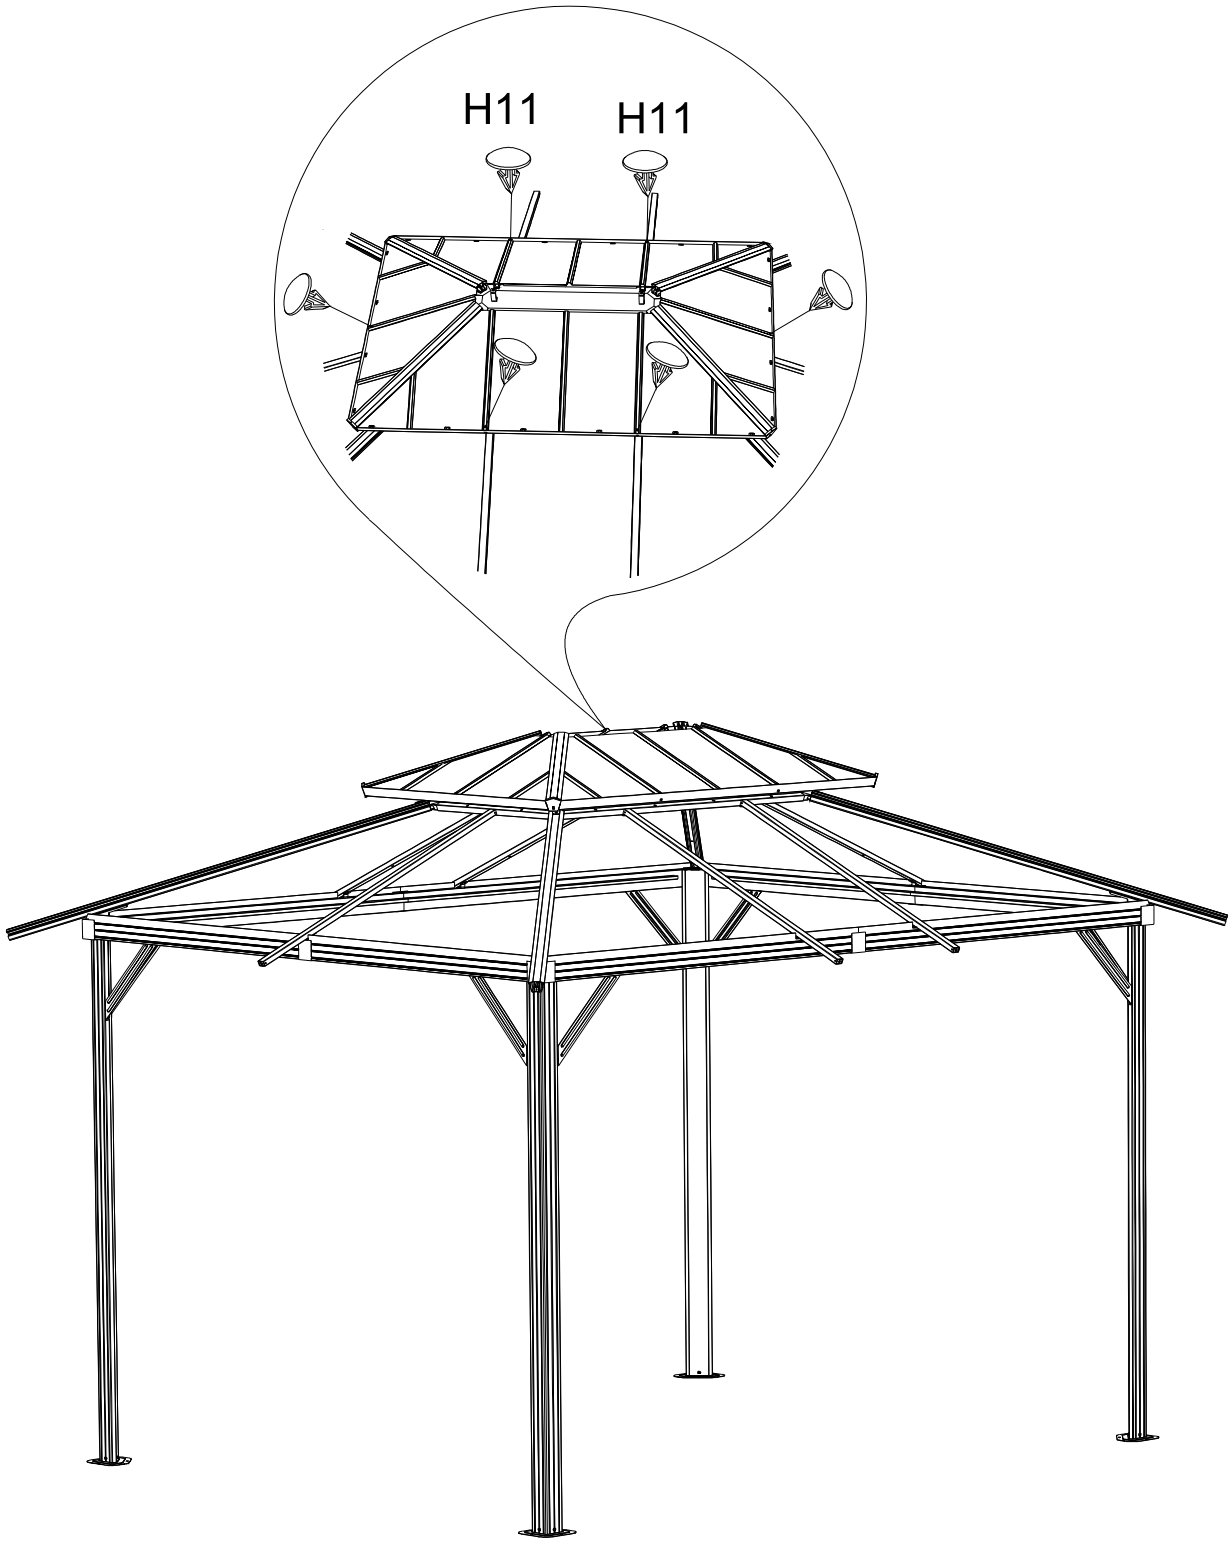

H1		M6X15	20
H5		M6	20


Step 21：

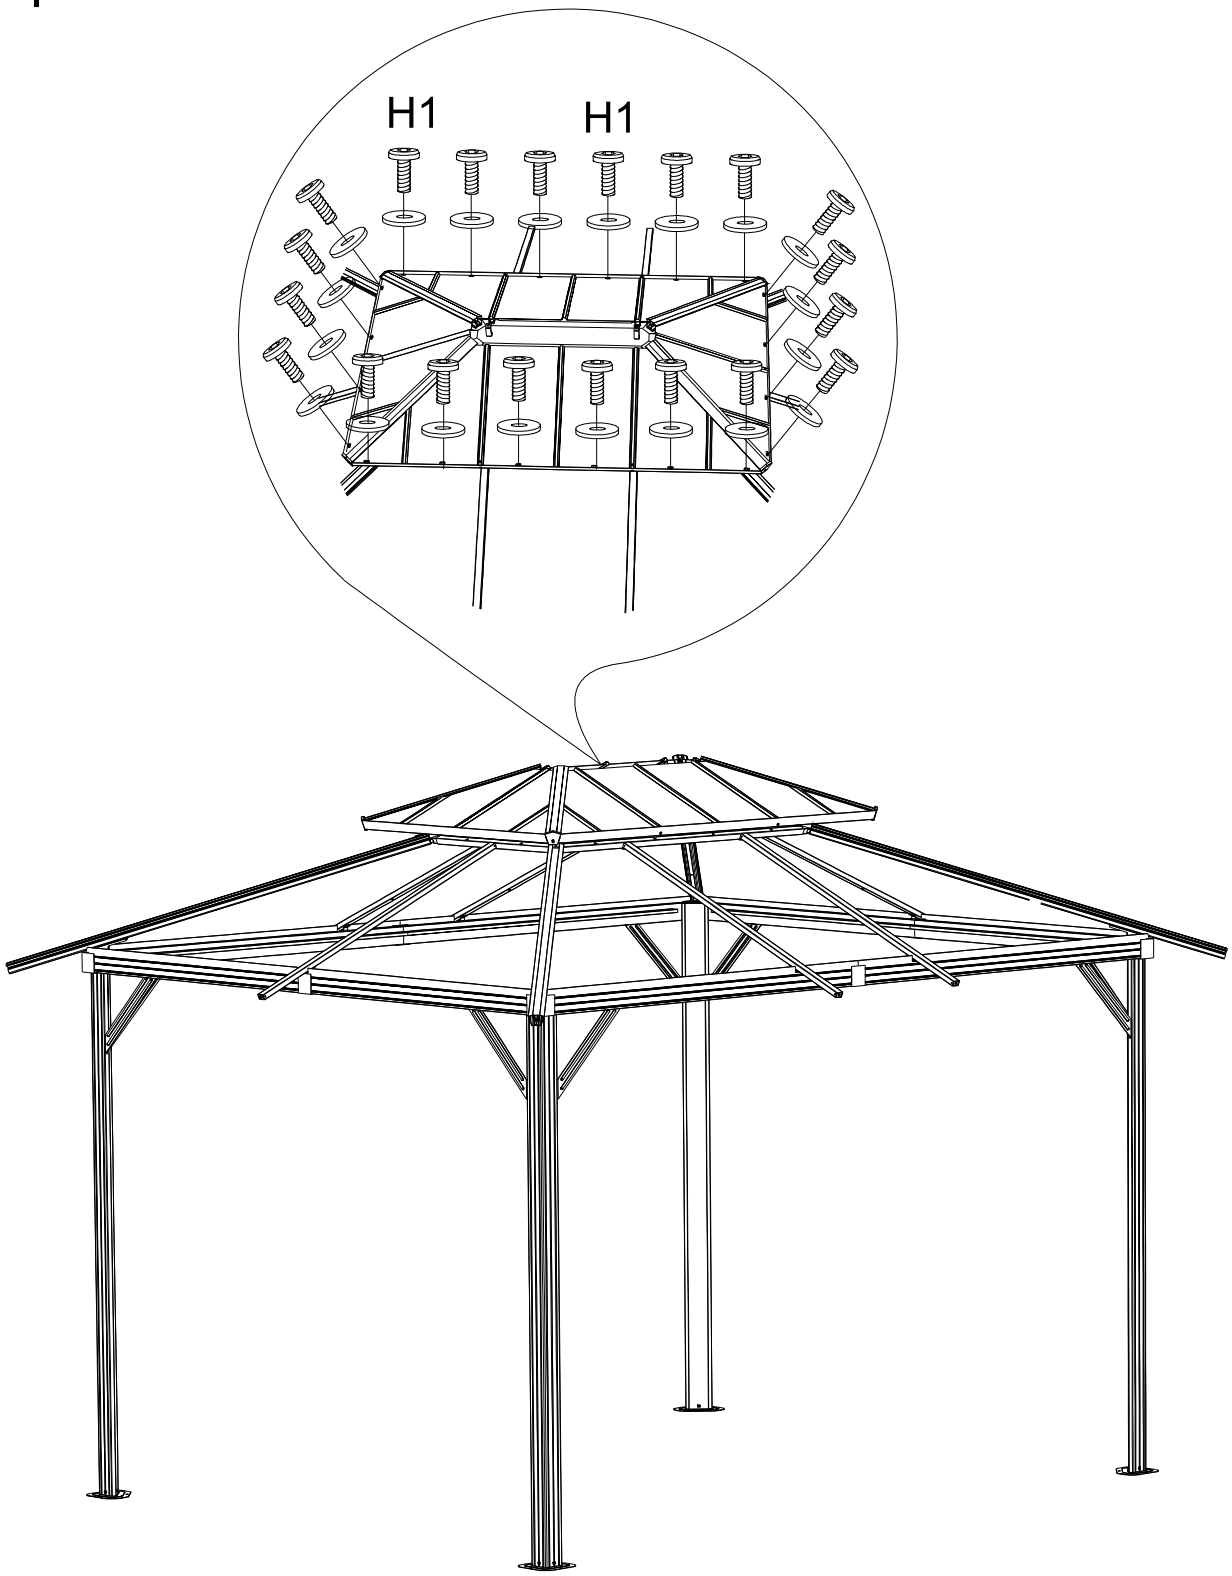


G6		2
L2		1


H1		M6X15	2
H6		RUBBER	2
H5		M6	2



Step 22：

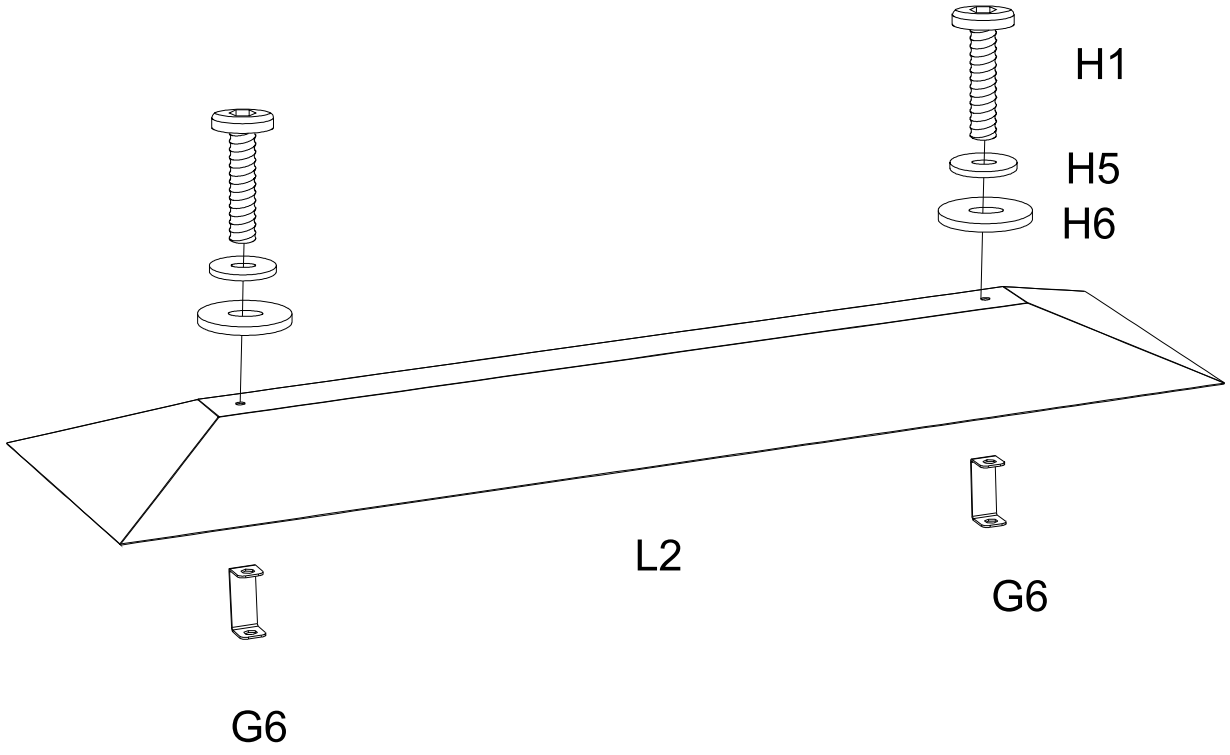


H9		2


Step 23：

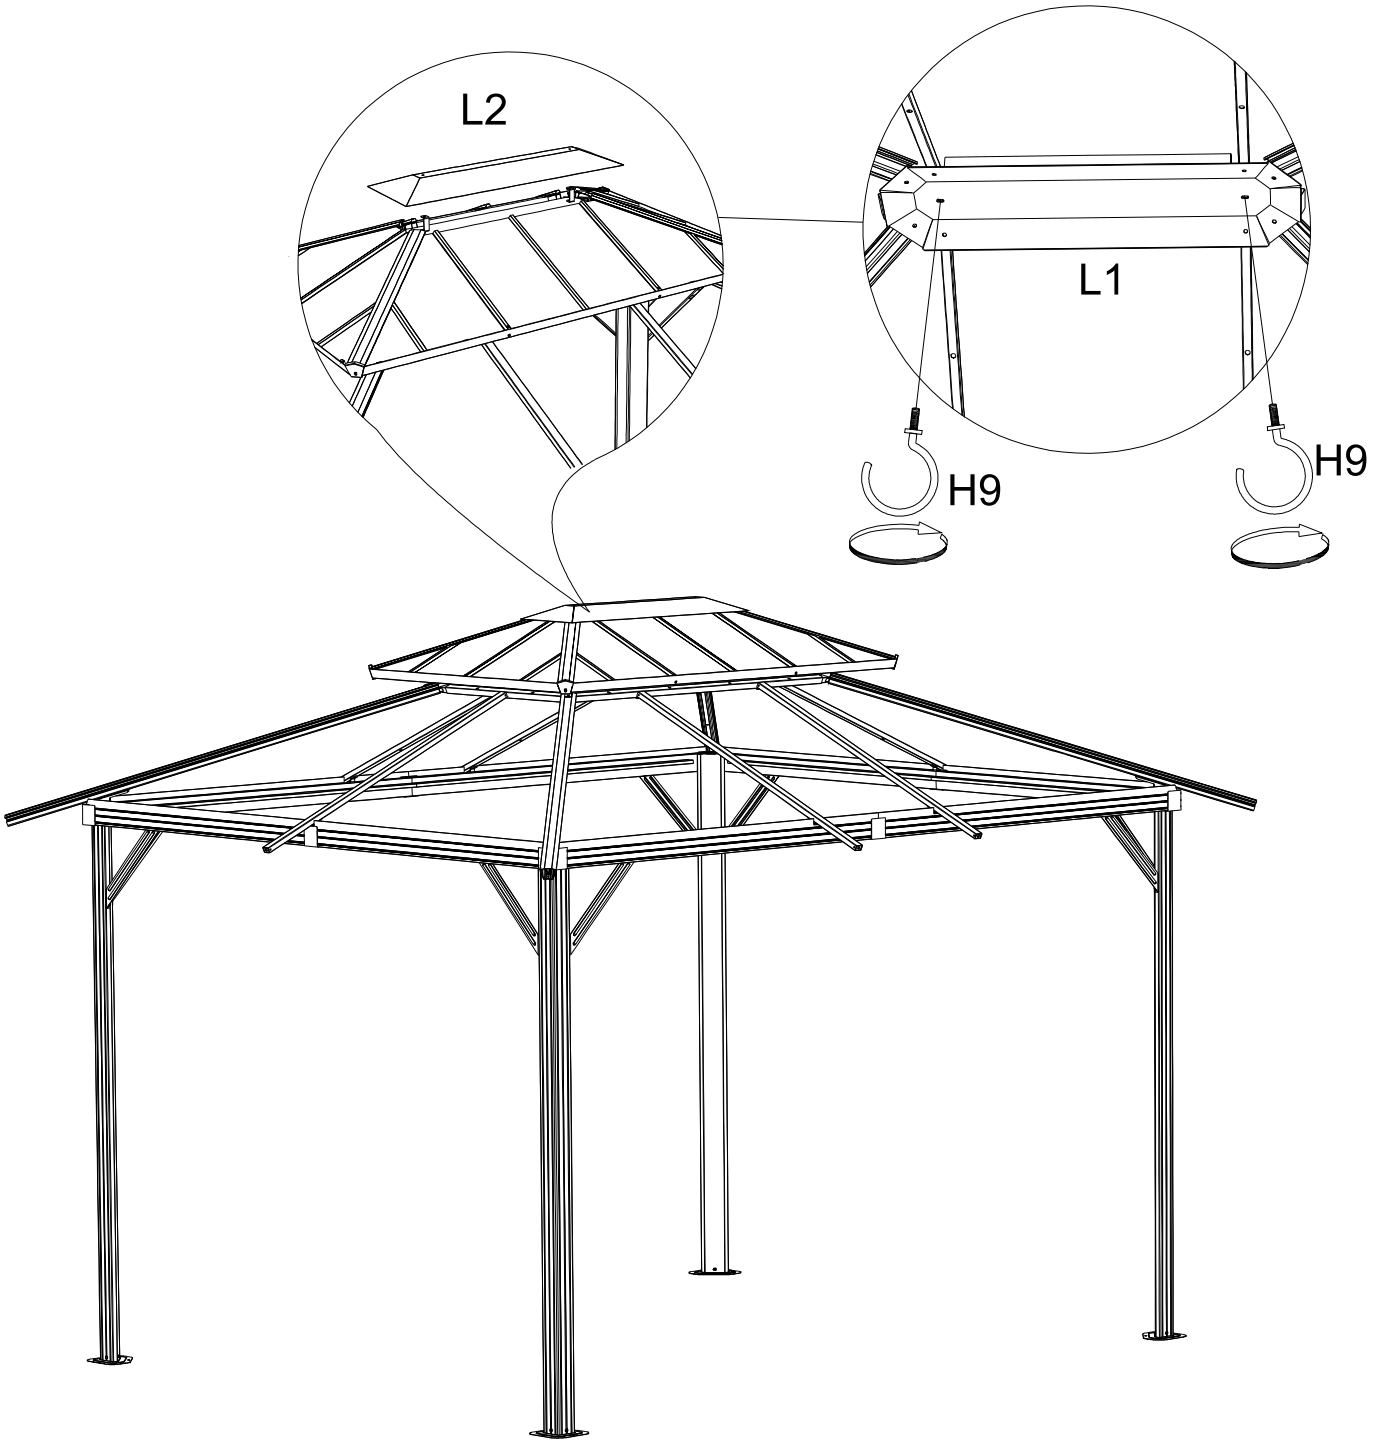

G3		6
G4		4

H1		M6X15	10
H5		M6	10


Step 24：

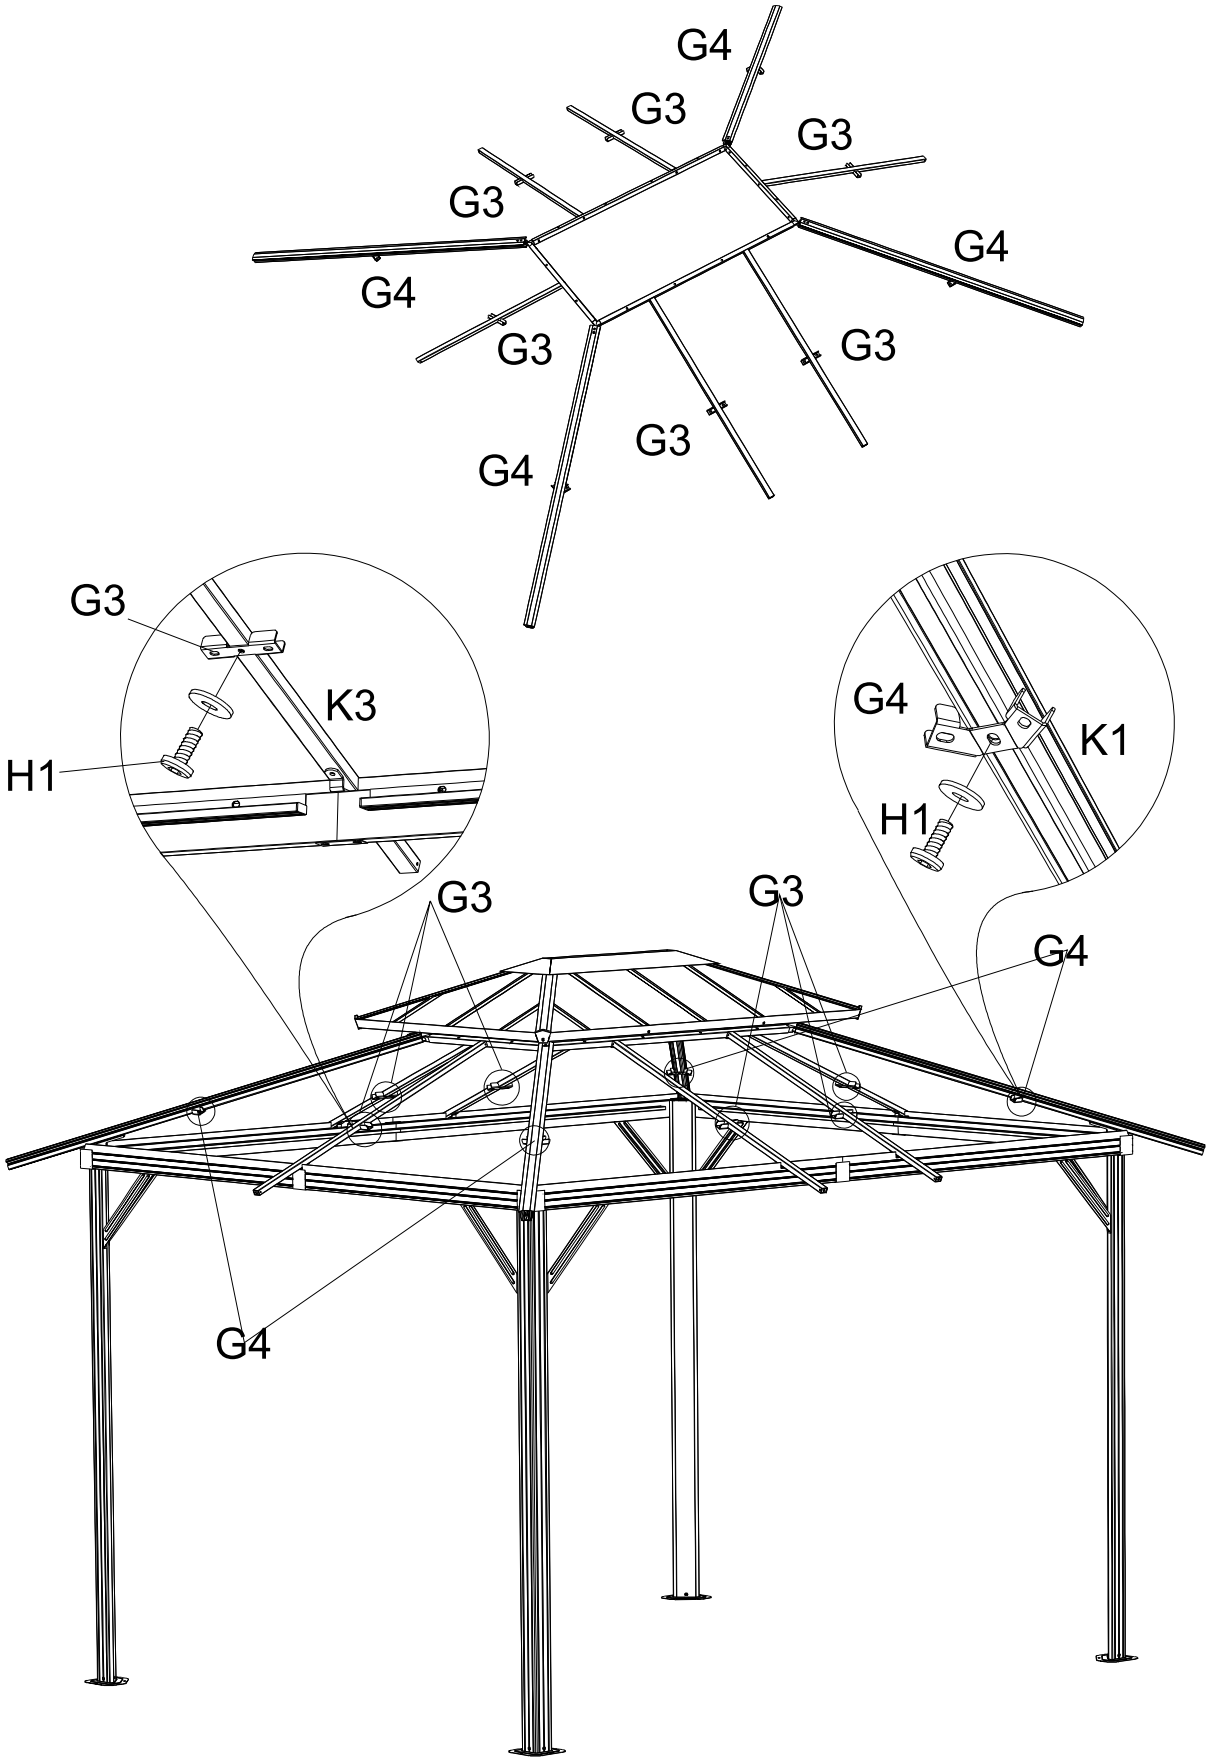

N1		8
N2		2


H1		M6X15	20
H5		M6	20

Step 25：

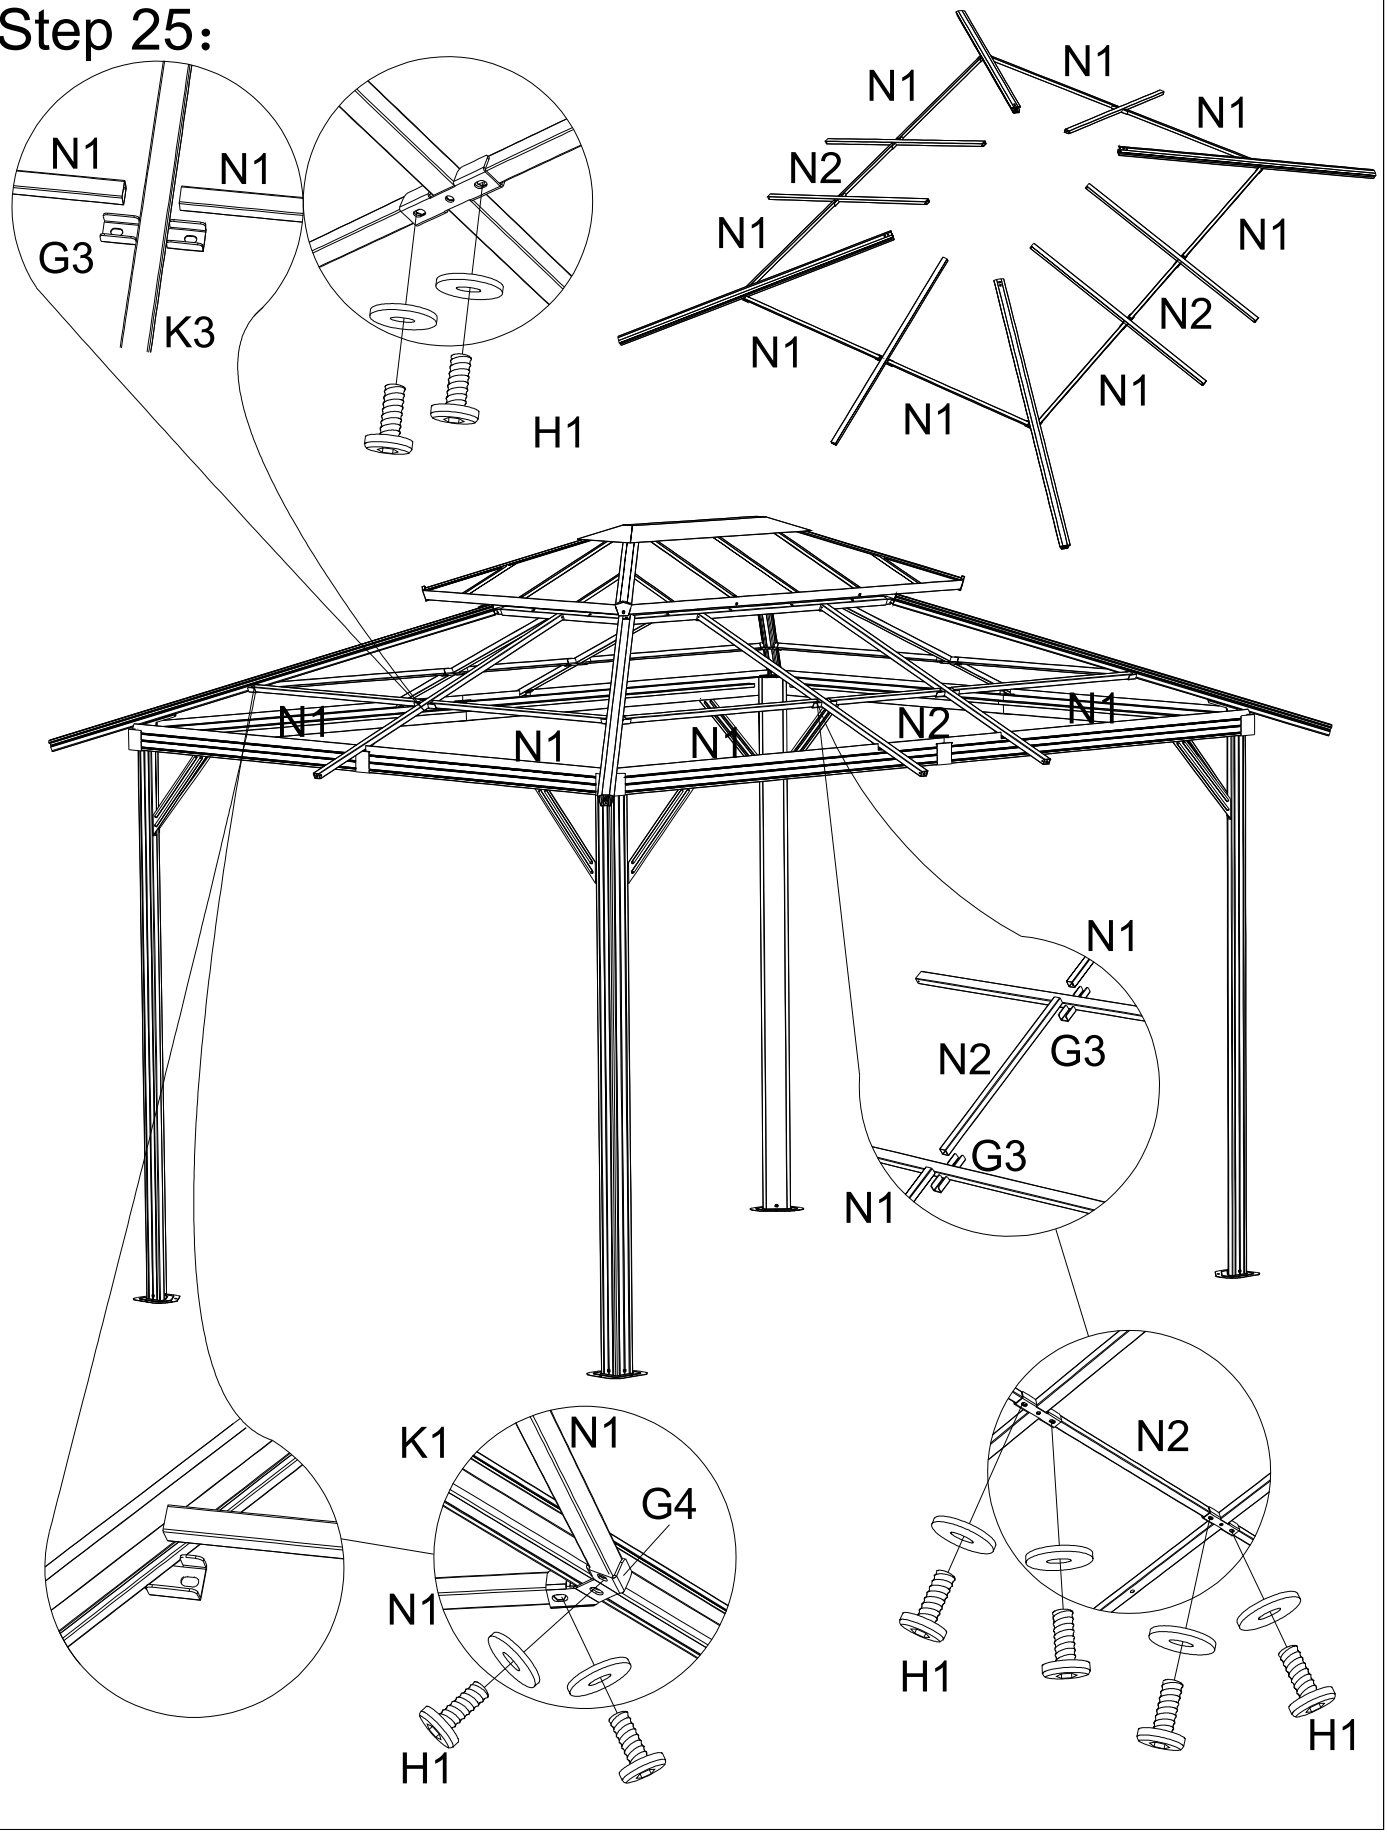


J3		4
J4		4
J5		2
F2		4
F3		6


H2		M6X25	10
H5		M6	10

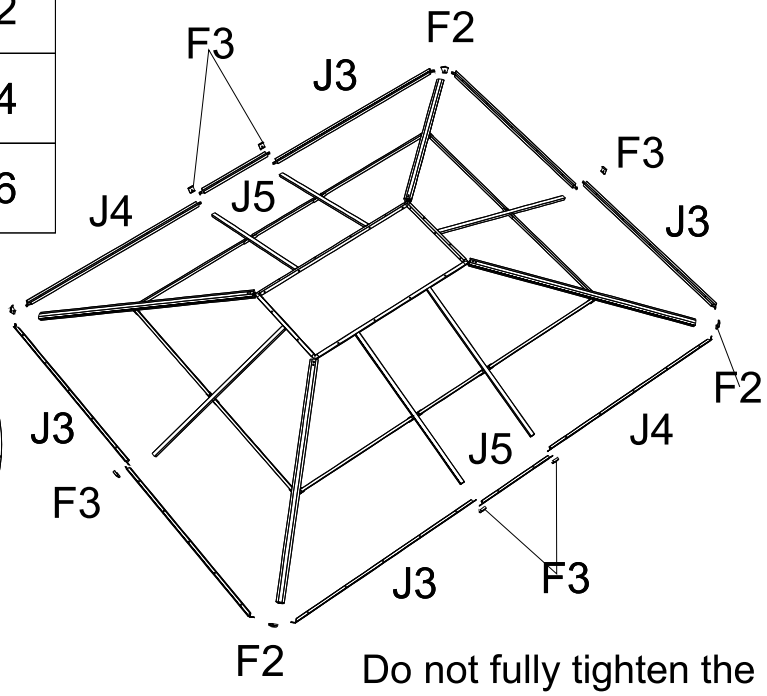



Step 26:


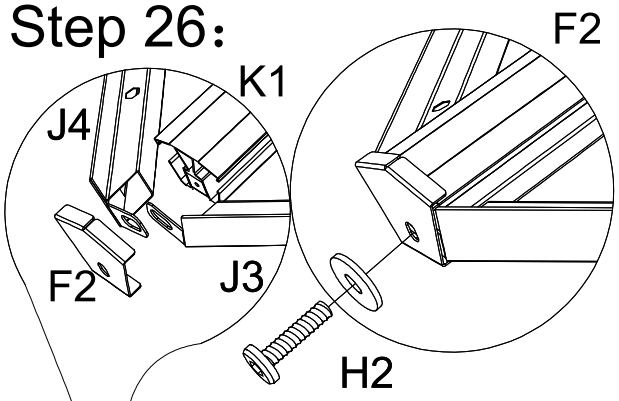



Do not fully tighten the H2 screws until the tiles are installed

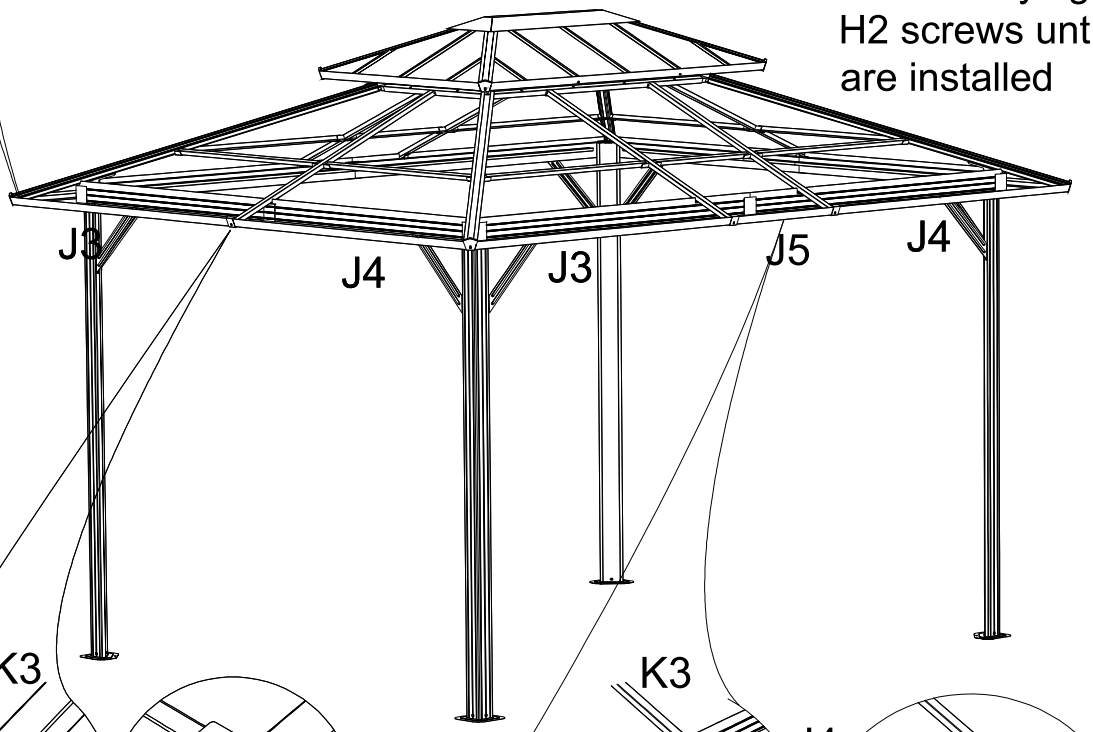

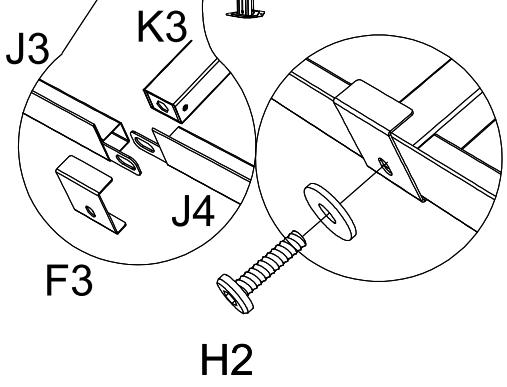


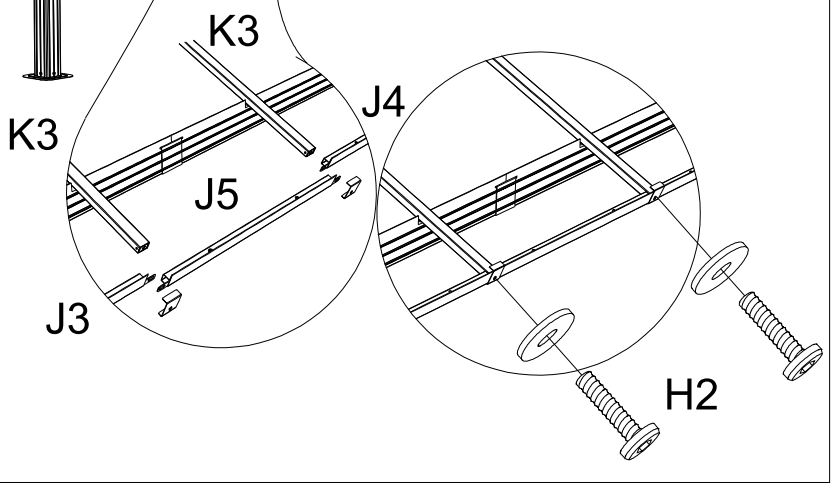



P3		4
P5		4
P7		6

P4		4
P6		4

Step 27：

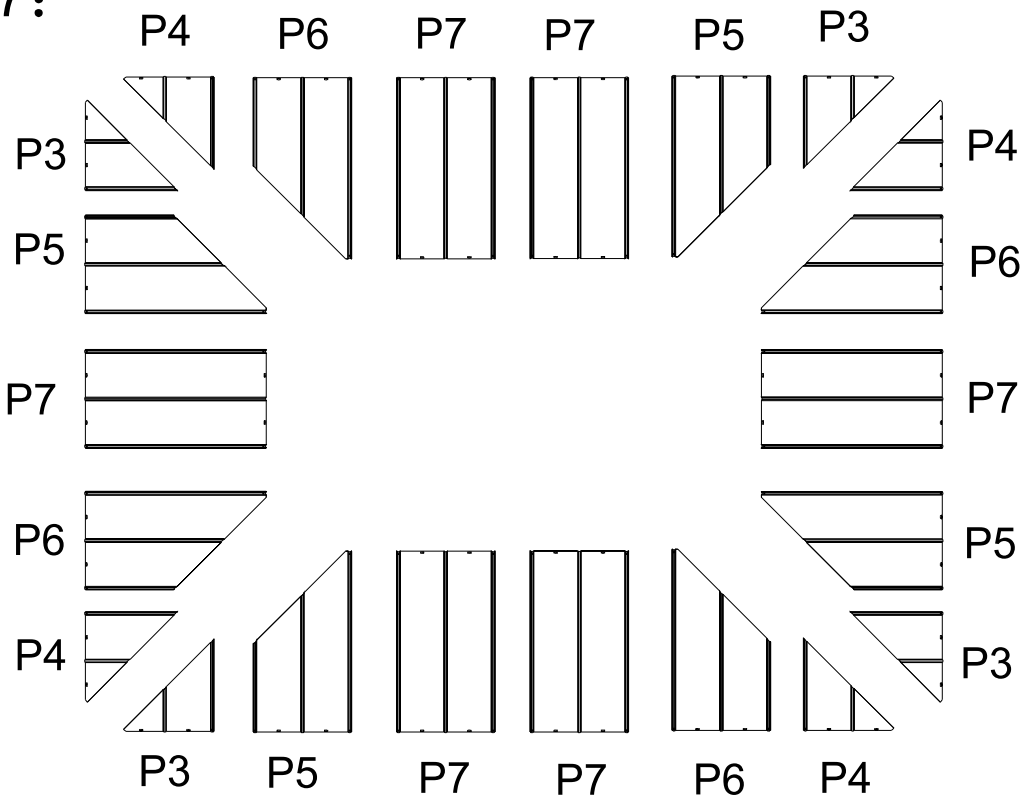


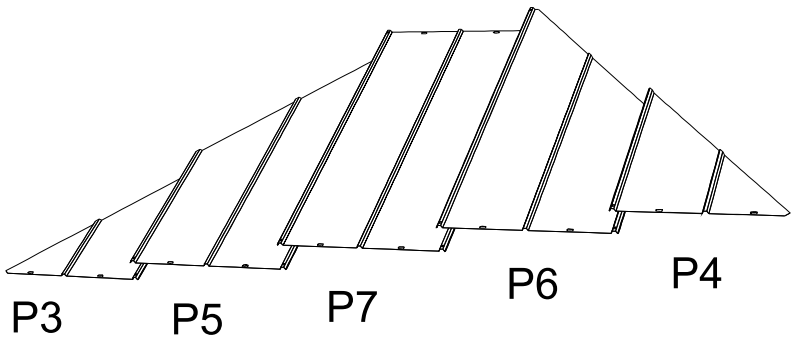

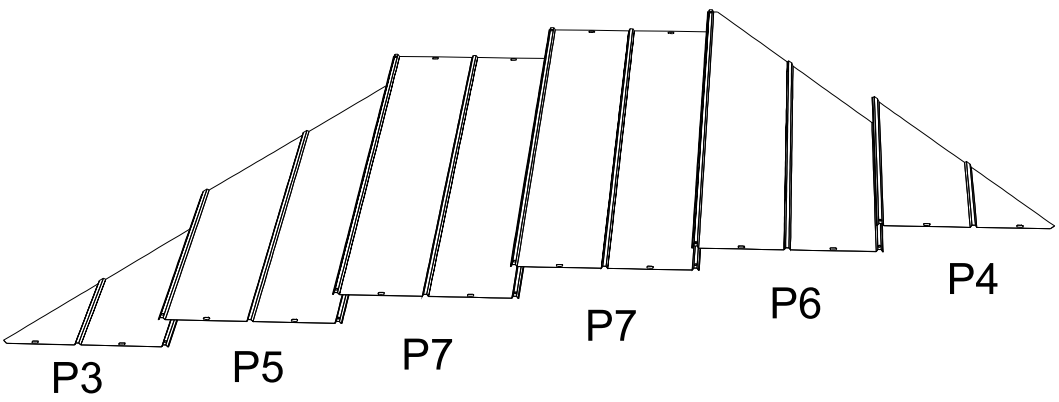


H11			28

Step 28：

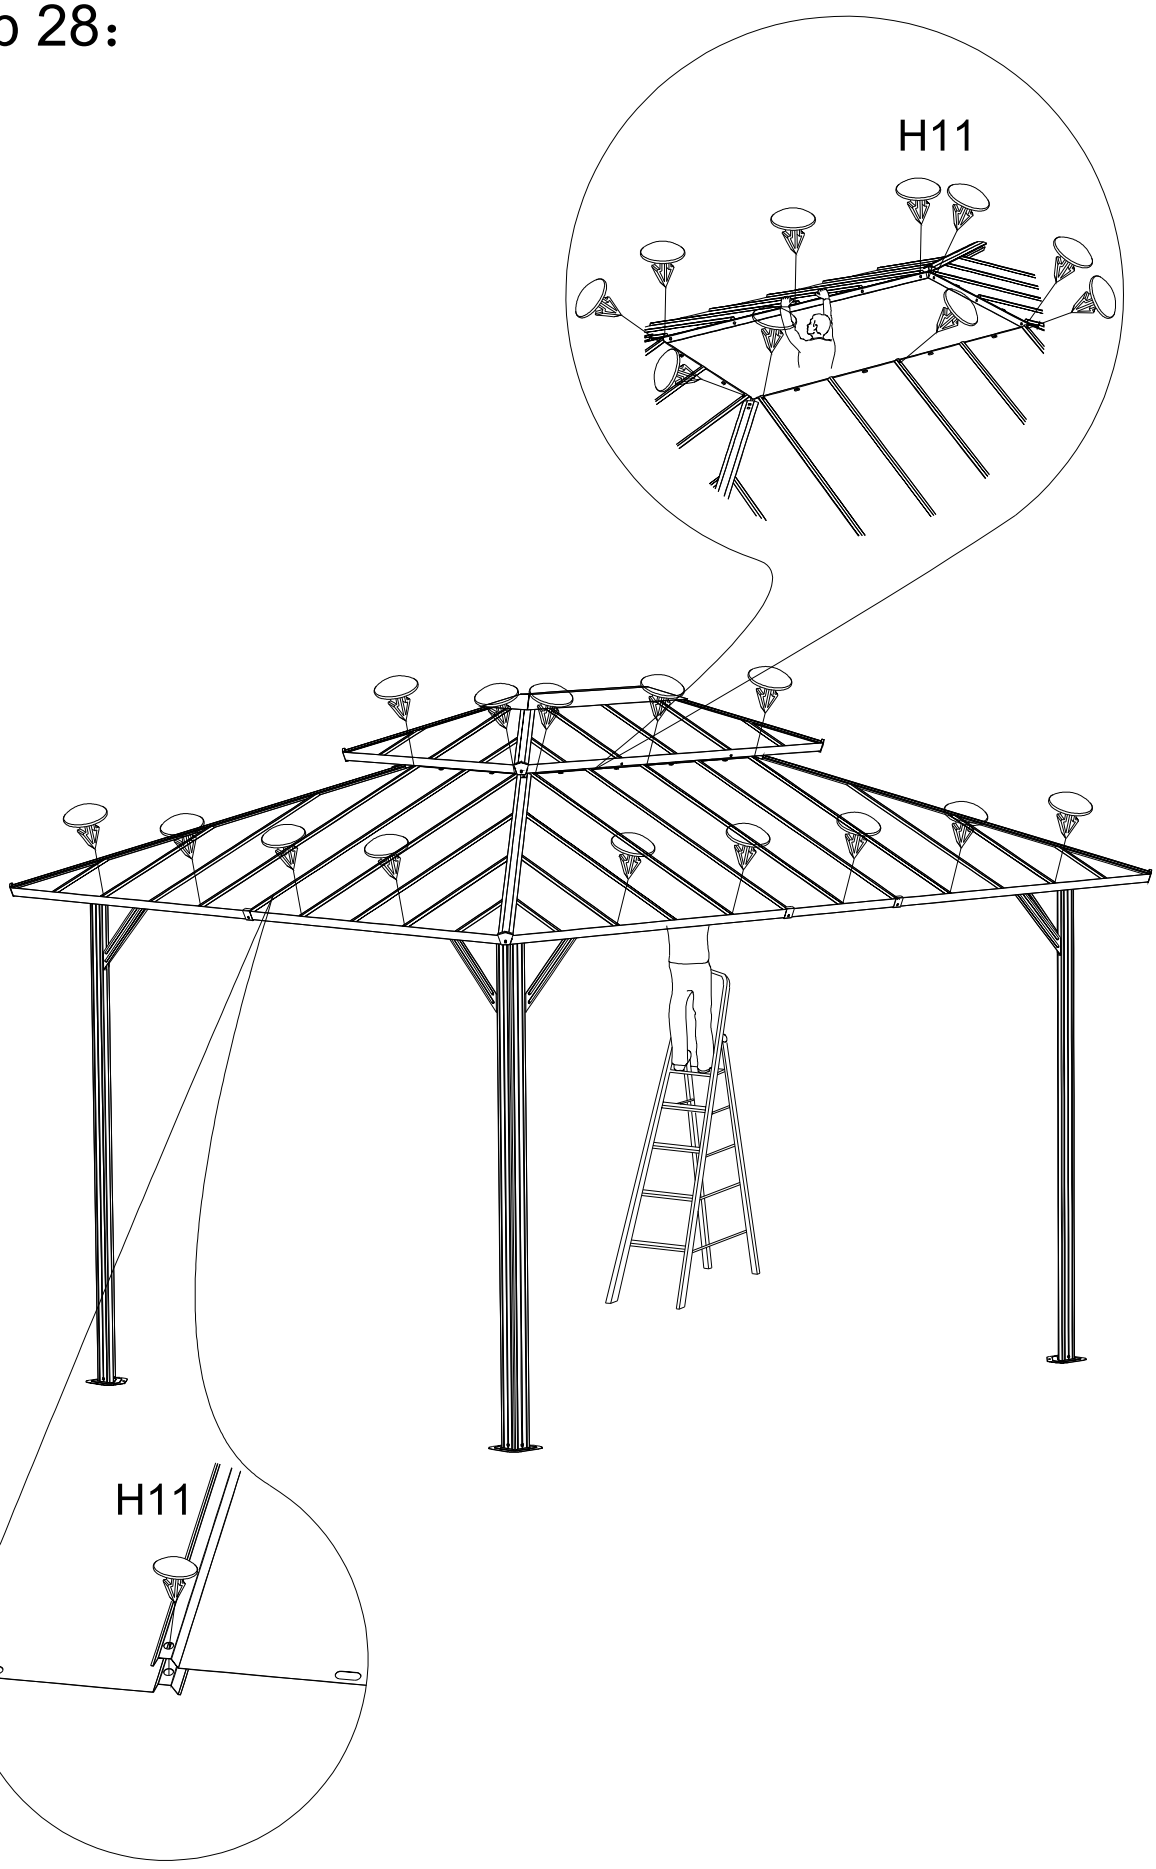


H1		M6X15	56
H5		M6	56

Step 29：

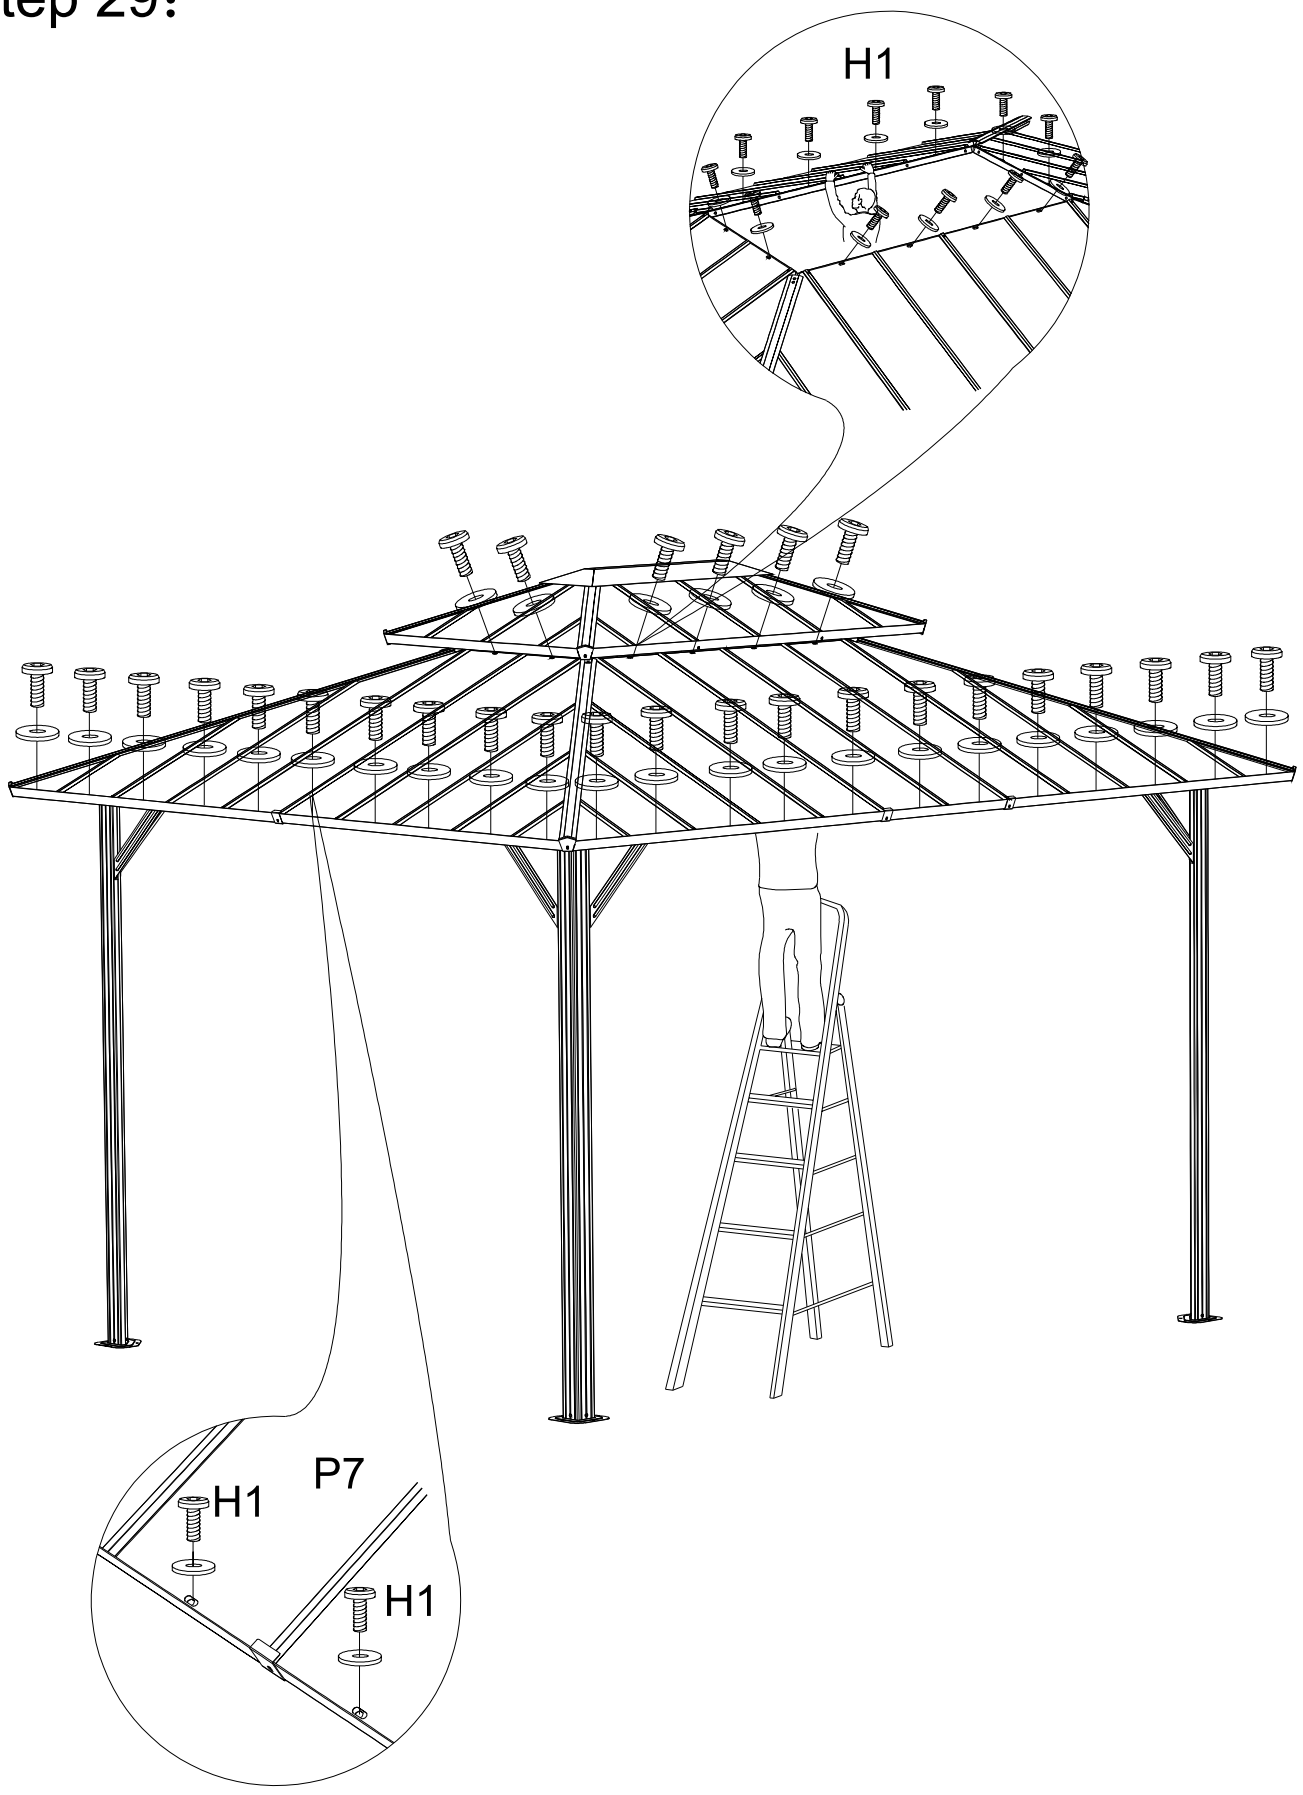


R1		1

Step 30：

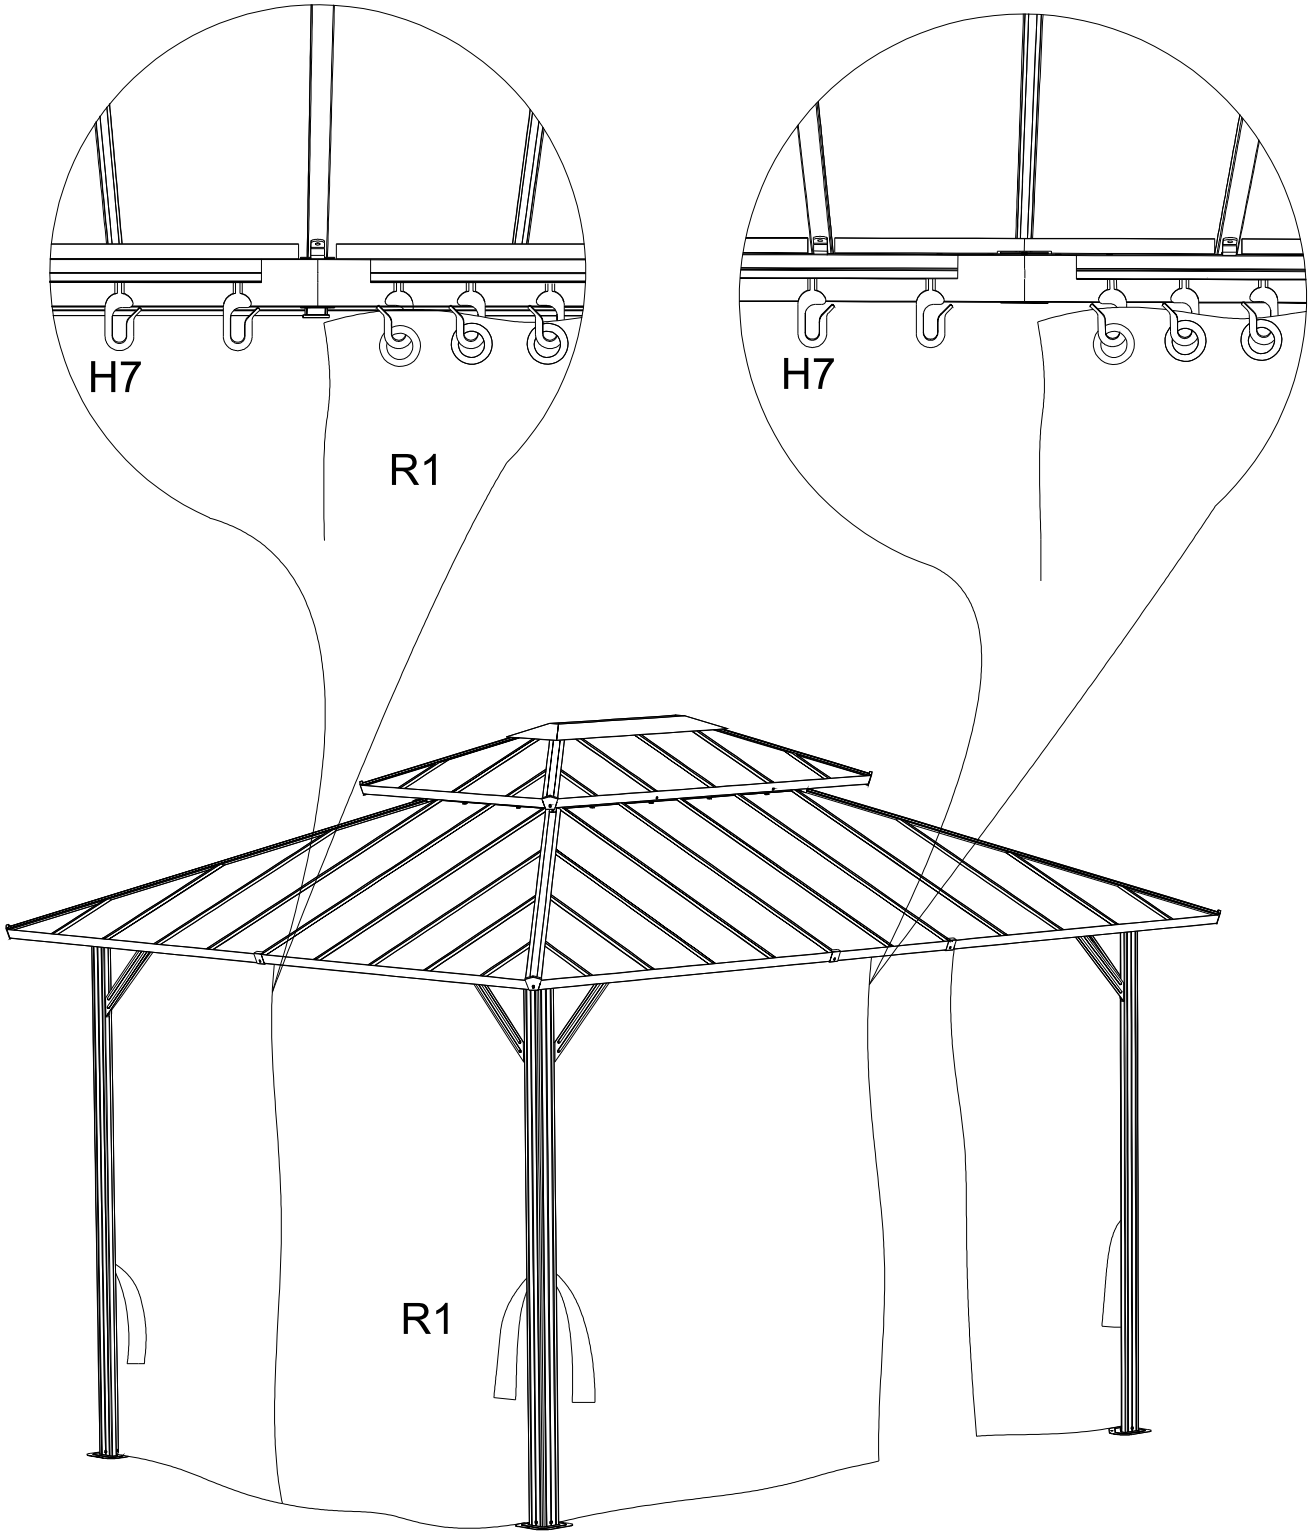


R2		1


Step 31：

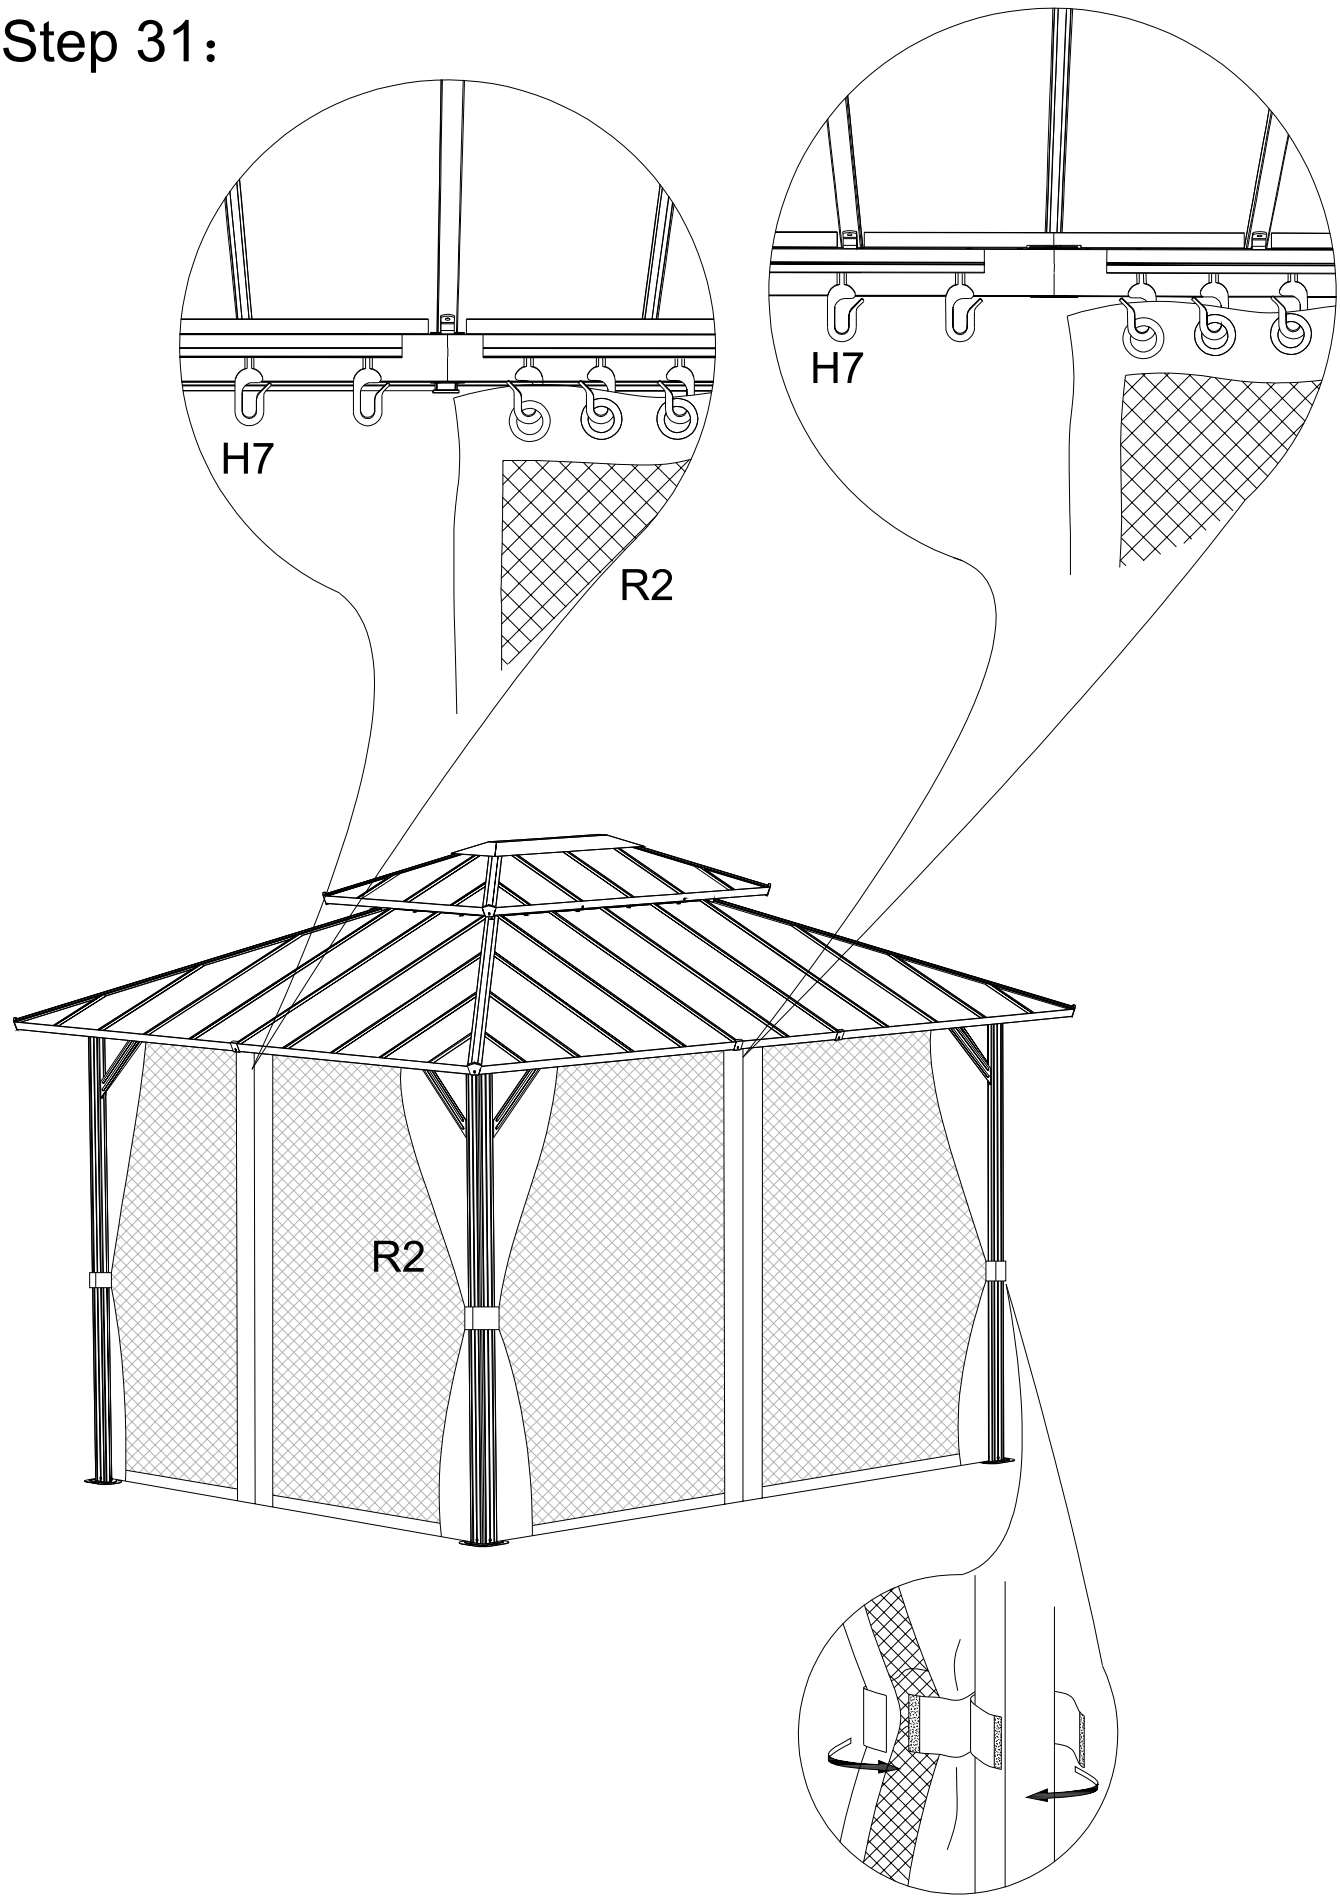



HQ1		4X140	12
HQ2		M8X70	12

Step 32：

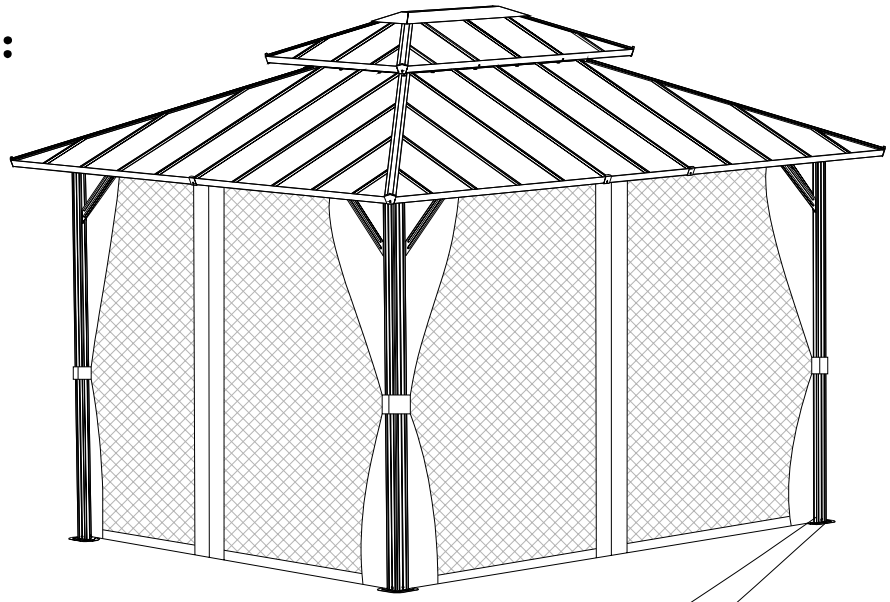

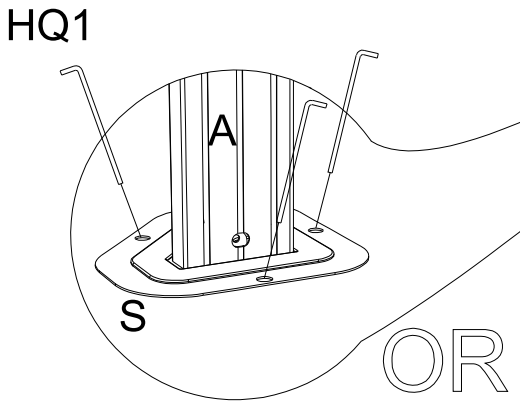

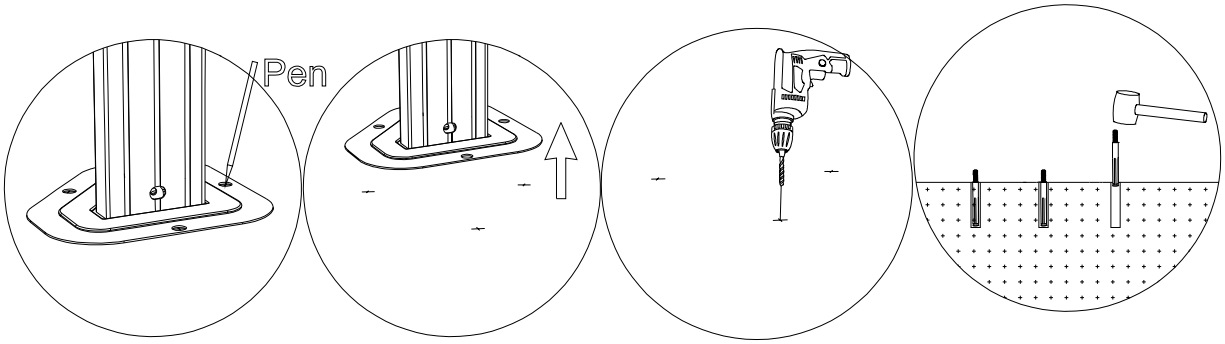

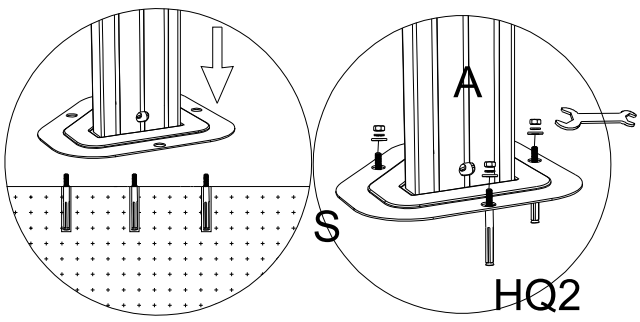

We recommend using HQ2 expansion bolts to secure the gazebo.

1.Mark the mounting locations on the ground and drill the holes.

2.Insert the expansion bolts into the holes.

3. Lift the gazebo, align it with the expansion bolts, and tighten the bolts securely.