
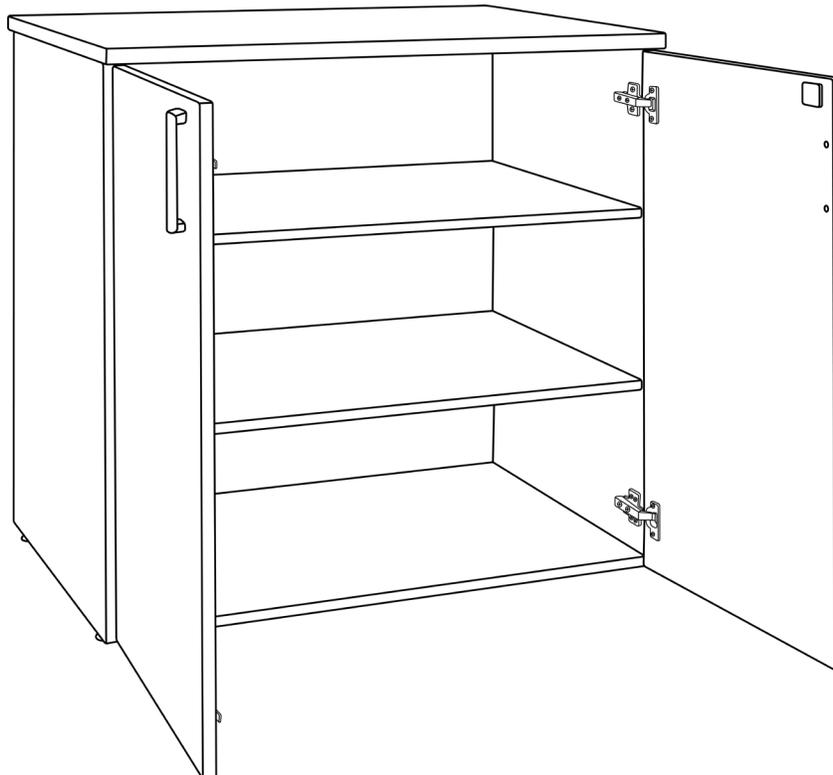


ReGENCY

RGS
FURNITURE

LSC3535XX
Regency Legacy 35" Office Storage Cabinet

CT-SC3535XX
RGS Cornerstone 35" Storage Cabinet

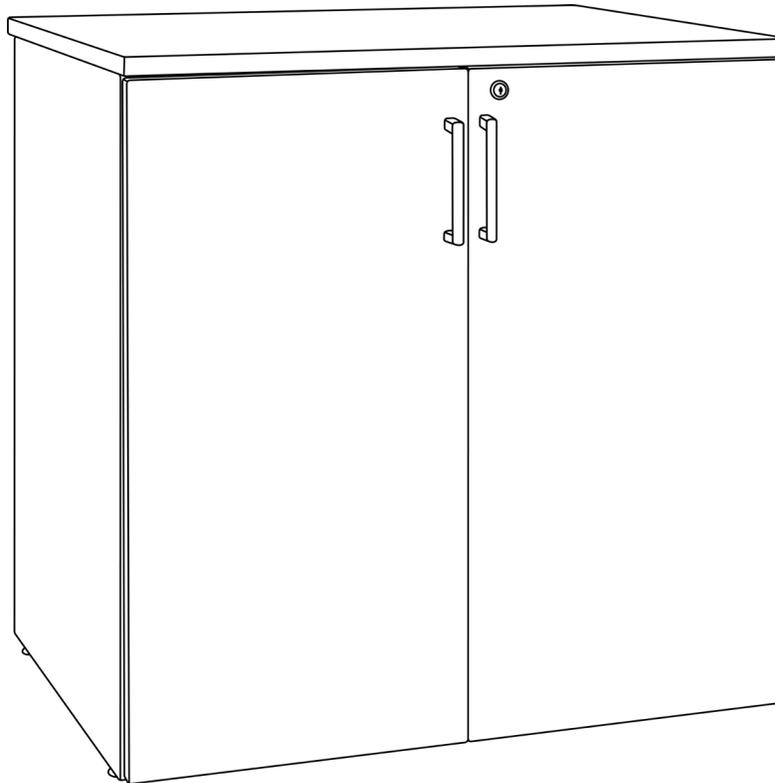


ReGENCY RGS **Missing Parts? Assembly Questions?**
FURNITURE


Call us at 1-866-816-9822 or email help@regencyof.com for immediate assistance.

| # | Part | Qty | Image | # | Part | Qty | Image |
|---|--------------|-----|-------|---|---------------|-----|-------|
| A | Top | 1 | | J | Cam Locks | 13 | |
| B | Back Panel | 1 | | K | Small Screws | 2 | |
| C | Side Panels | 2 | | L | Medium Screws | 16 | |
| D | Bottom Panel | 1 | | M | Large Screws | 4 | |
| E | Doors | 2 | | N | Shelf Pins | 8 | |
| F | Shelves | 2 | | O | Door Handles | 2 | |
| G | Hinge | 4 | | P | Feet Screws | 4 | |
| H | Lock Lip | 1 | | Q | Keys | 2 | |
| I | Cam Pins | 13 | | | | | |


Step 1: Place 5 Cam Locks (J) into the Back Panel (B).

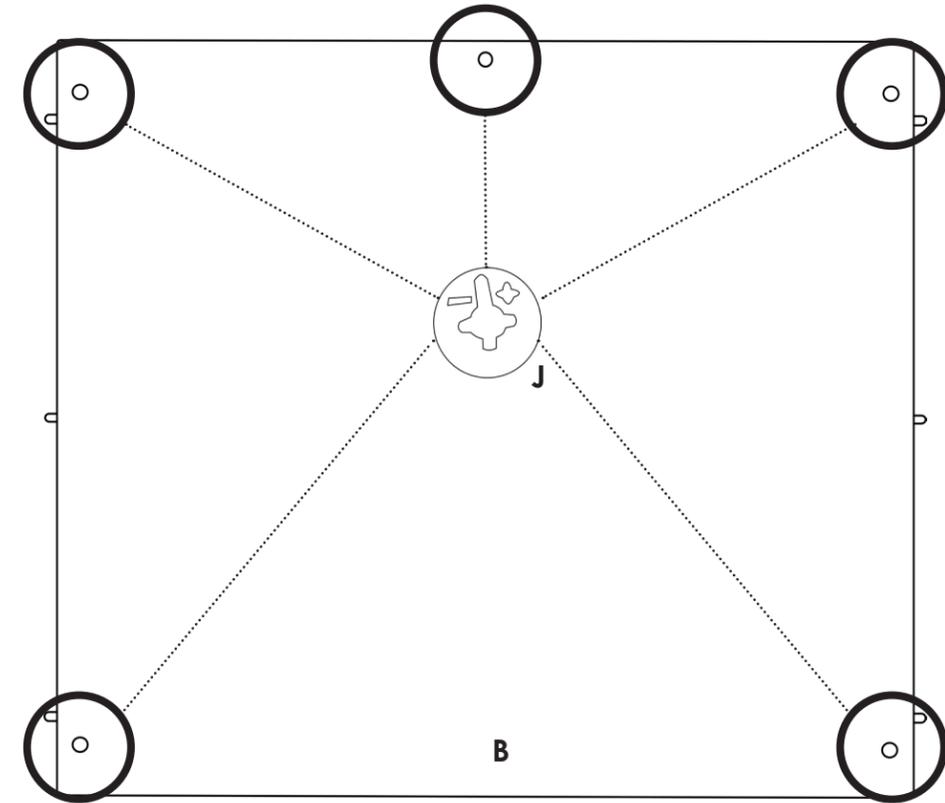


Step 2: Place 4 Cam Pins (I) and 2 Cam Locks (J) into each Side Panel (C).

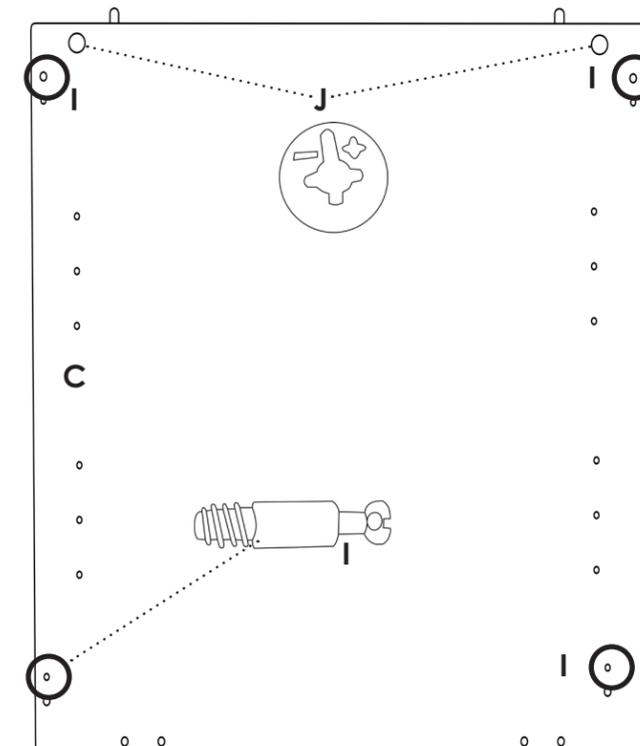


Step 3: Lay Back (B) on ground with Cam Locks facing up. Connect one Side (C) to Back (B) by inserting Cam Pins (I) into Locks and tightening.

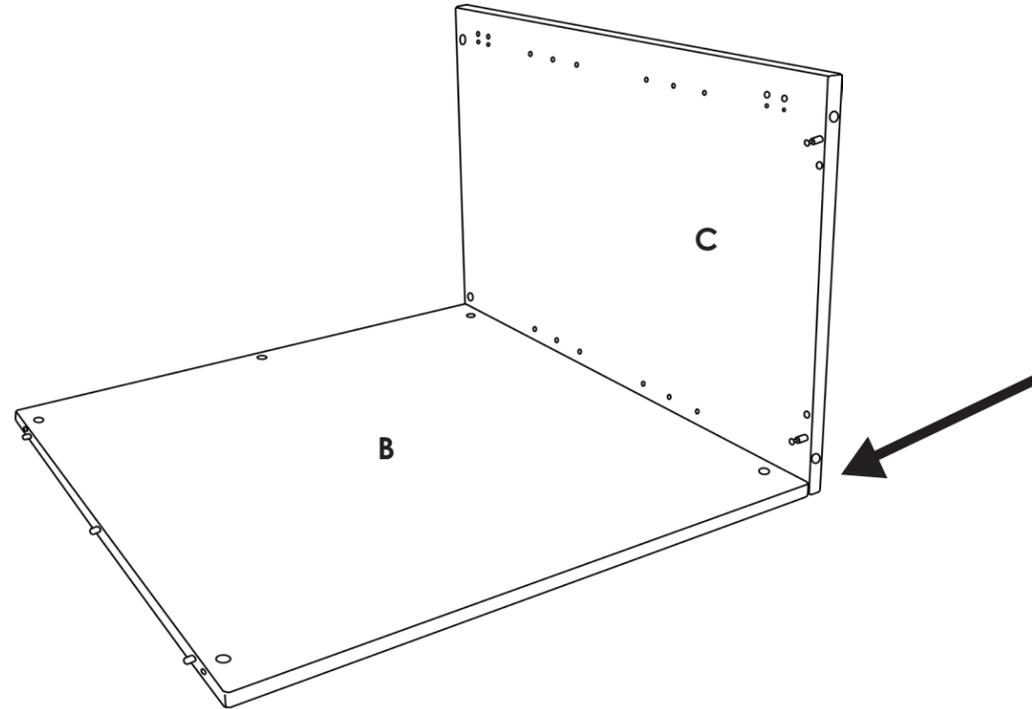

Step 4: Place Cam Locks (J) into Bottom (D) and connect by inserting Cam Pins into Locks and tightening.

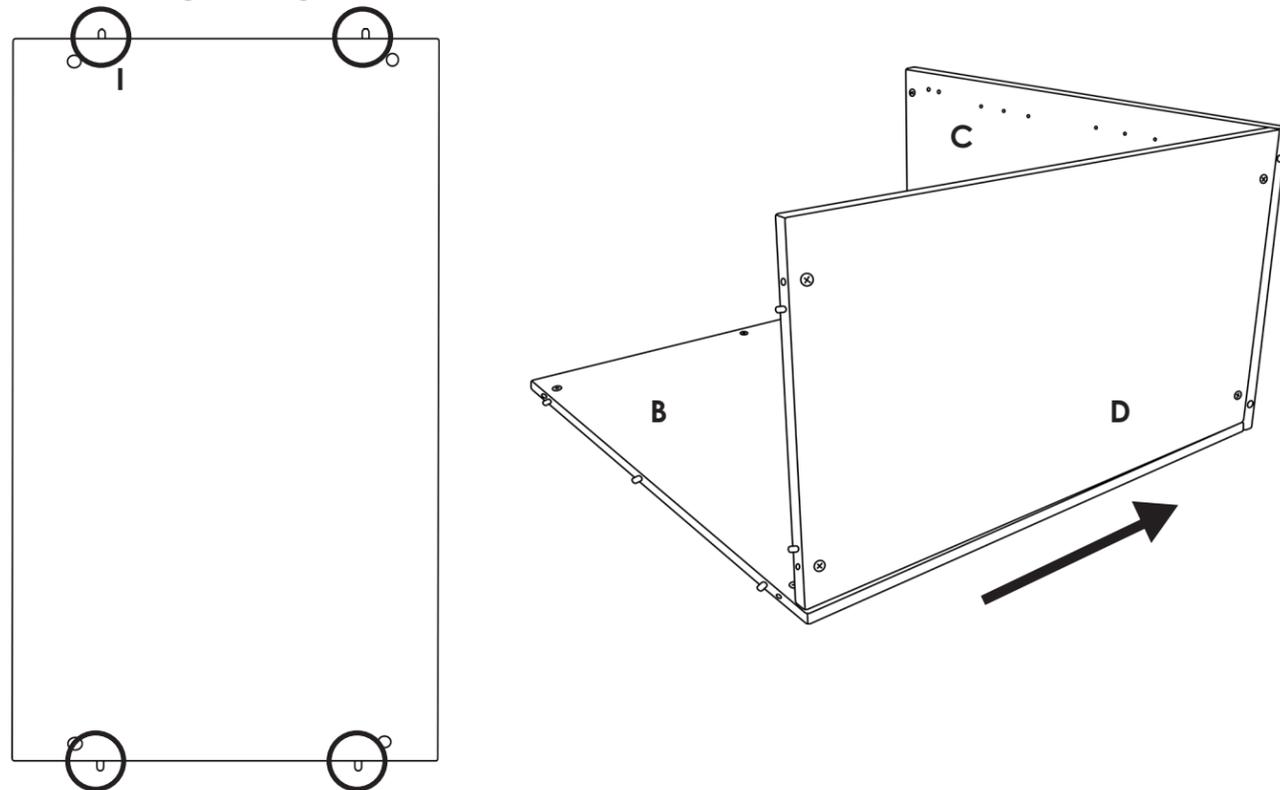


Step 5: Connect second Side (C) by inserting Cam Pins and tightening Cam Locks. Screw in Feet (P) to bottom of Sides (C).

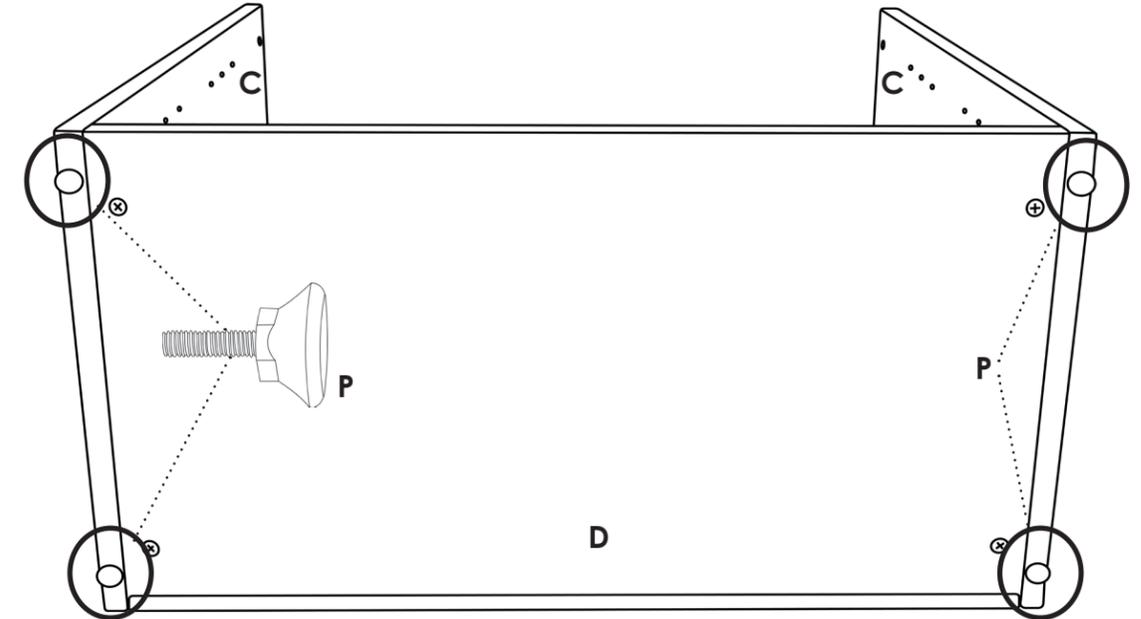


Note: If you are stacking the storage cabinet, feet are optional.


Step 6: Place Shelf Pins (N) at desired levels and insert Shelves (F).

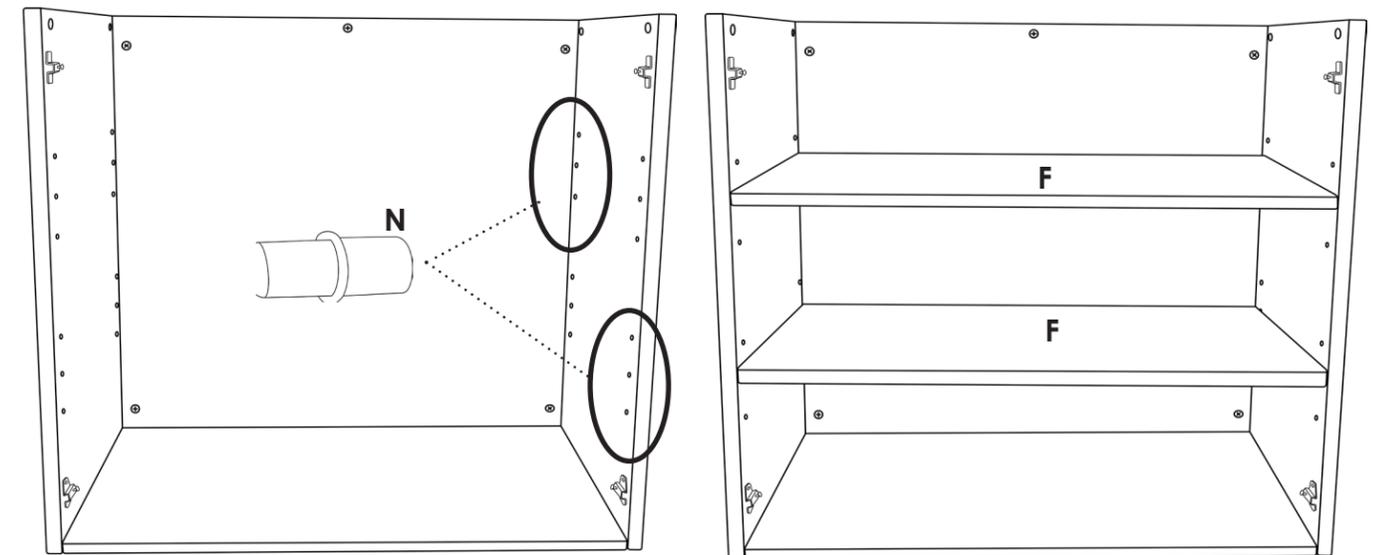


Step 7: Place 5 Cam Pins (I) into Top (A). Use 2 Small Screws (K) to secure Lock Lip (H) in the pre drilled holes.

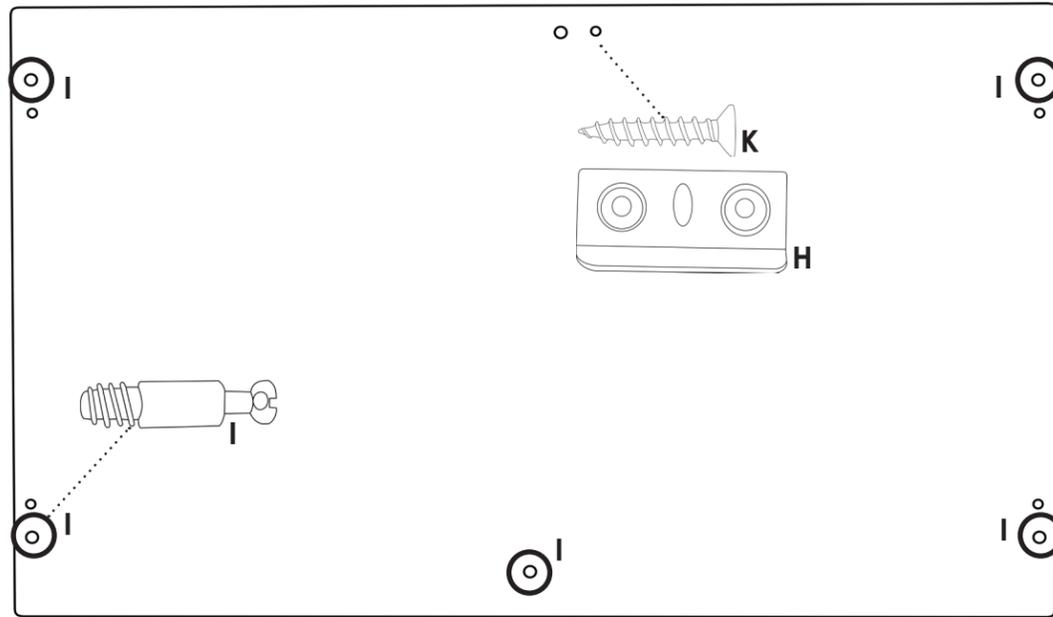


Step 8: Place Top (A) onto unit by inserting Cam Pins into Locks and tightening.

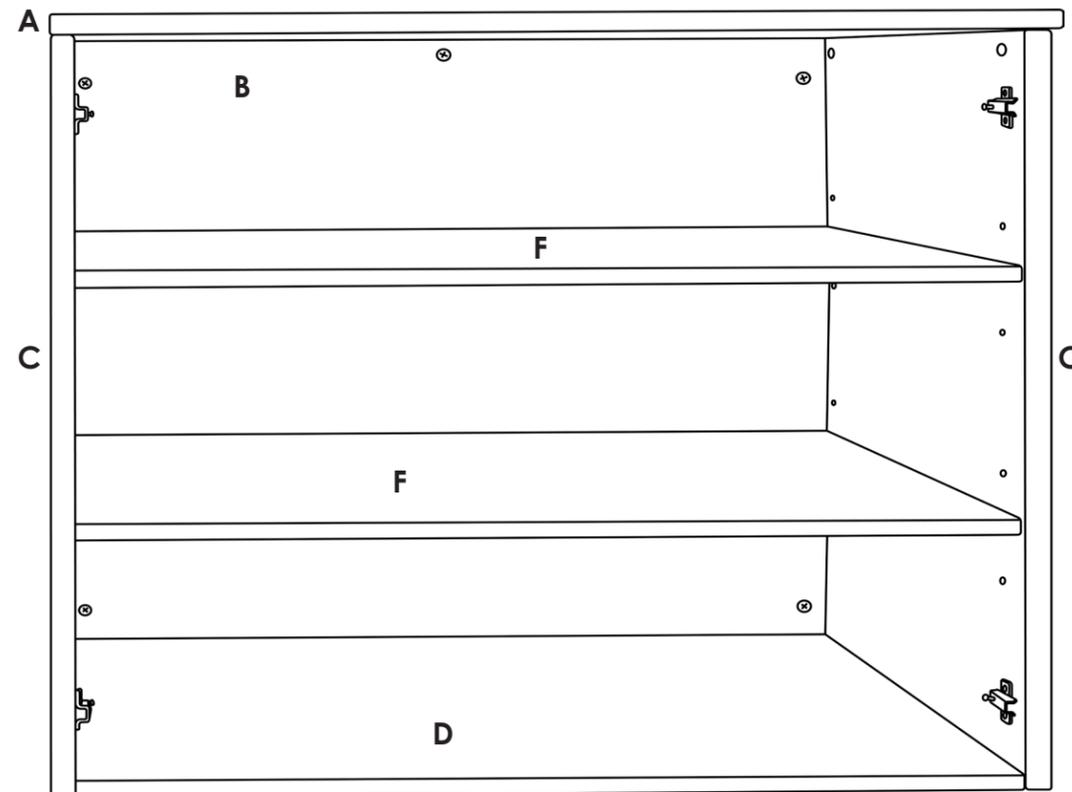

Step 9: Attach Handles (O) to Doors (E) by inserting 2 Large Screws (M) through existing holes in the Door and tightening the Handles to the Doors.

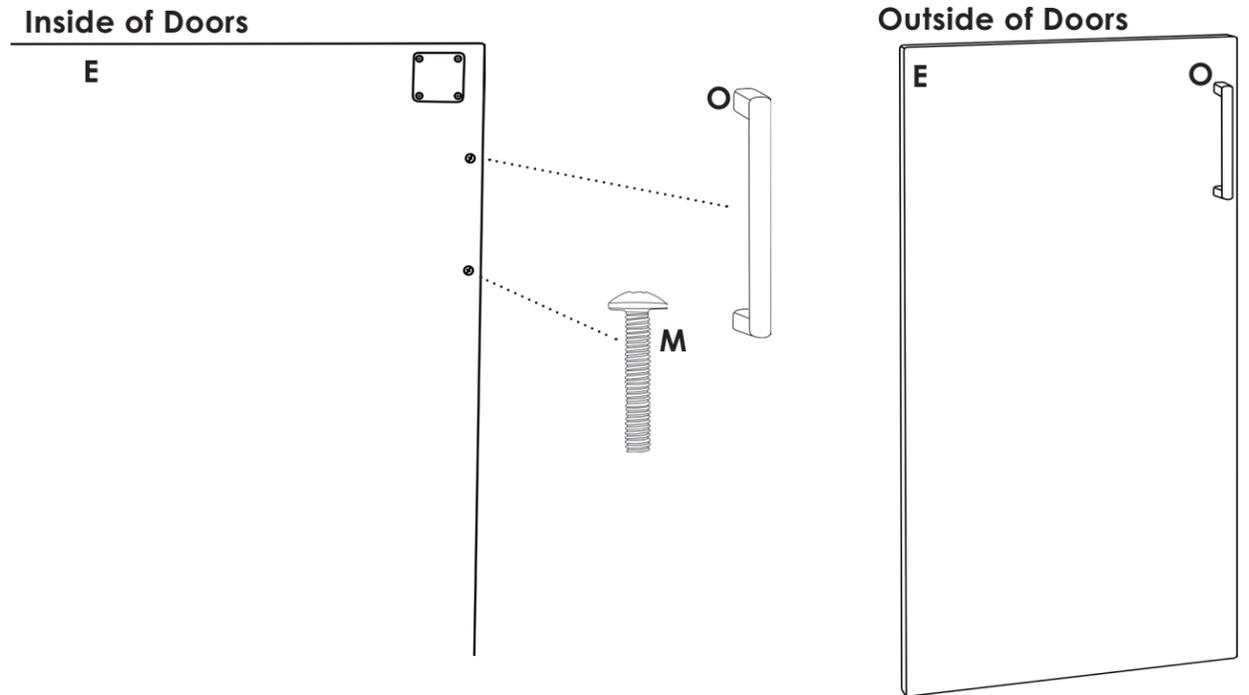

Step 10: Connect Hinges (G) to Doors (E).

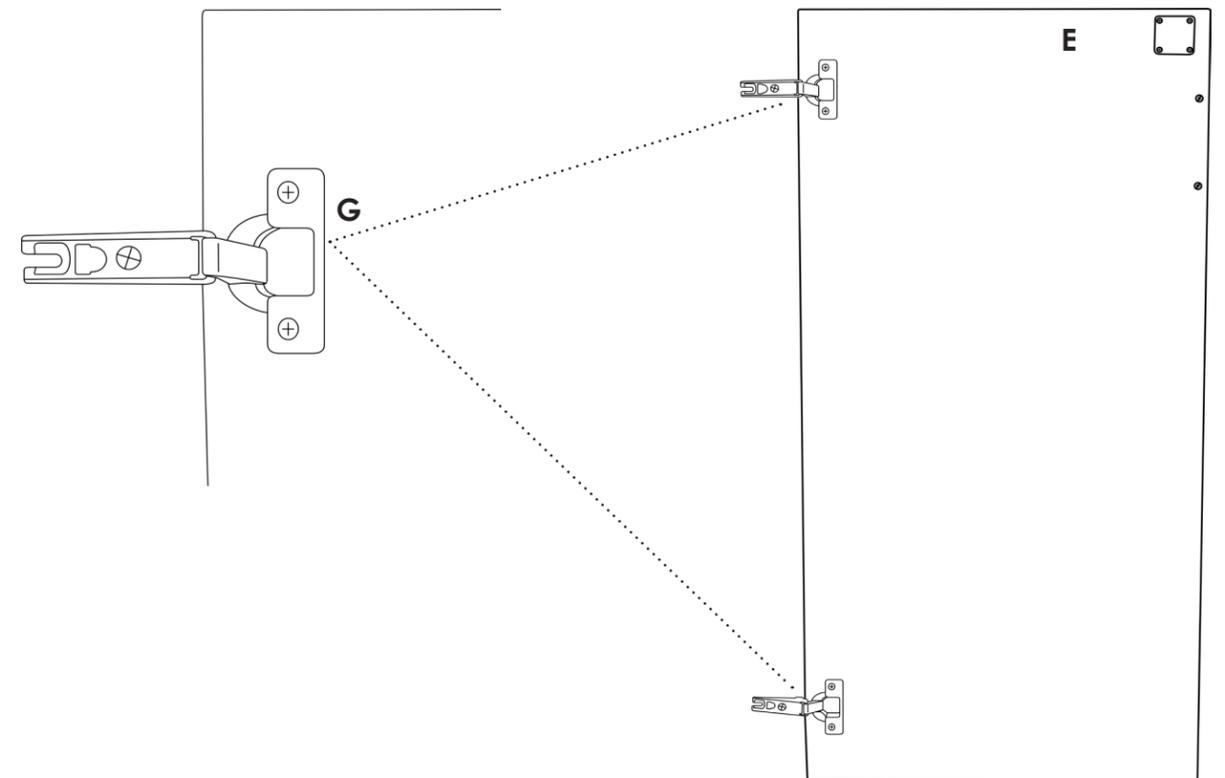

Step 11: Attach Hinges (G) to Sides (C) with 2 Medium Screws (L) each.

