


ASSEMBLY INSTRUCTION

ITEM#: 171957

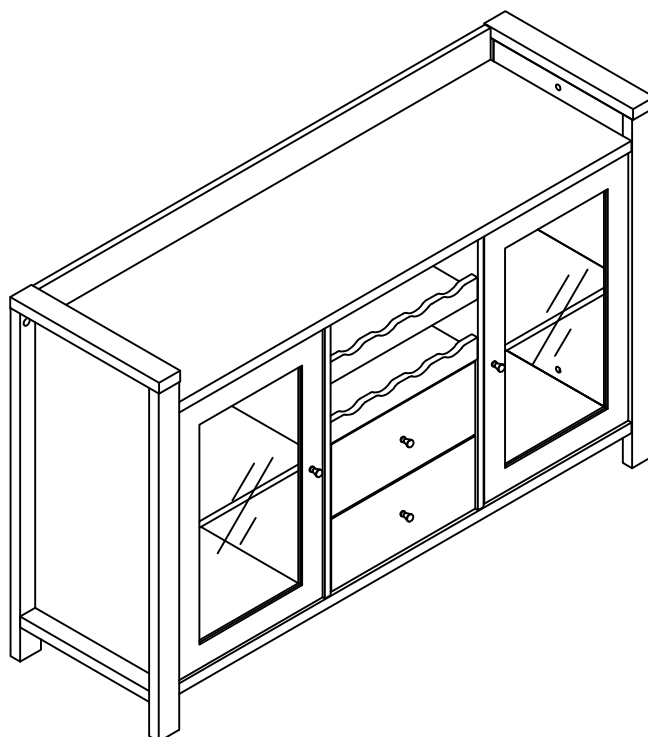

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 171957

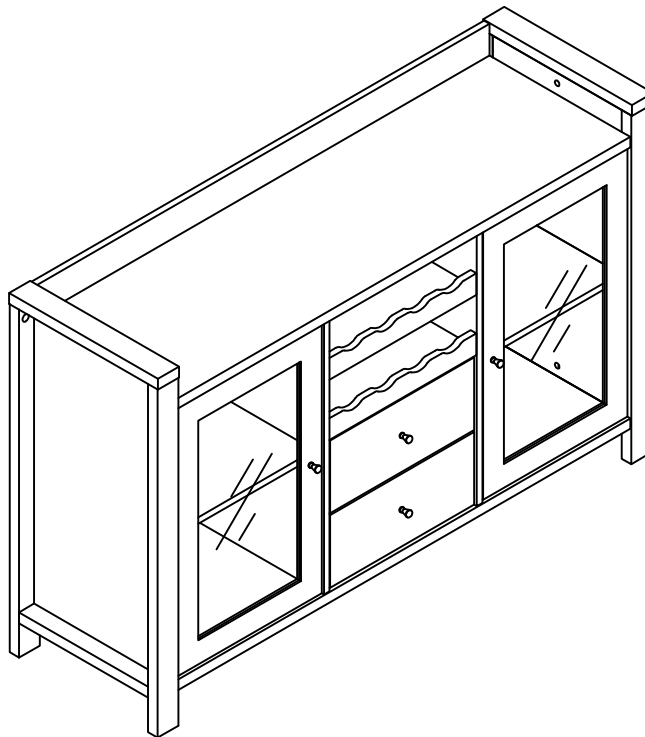

PARTS IDENTIFICATION








ITEM#:171957

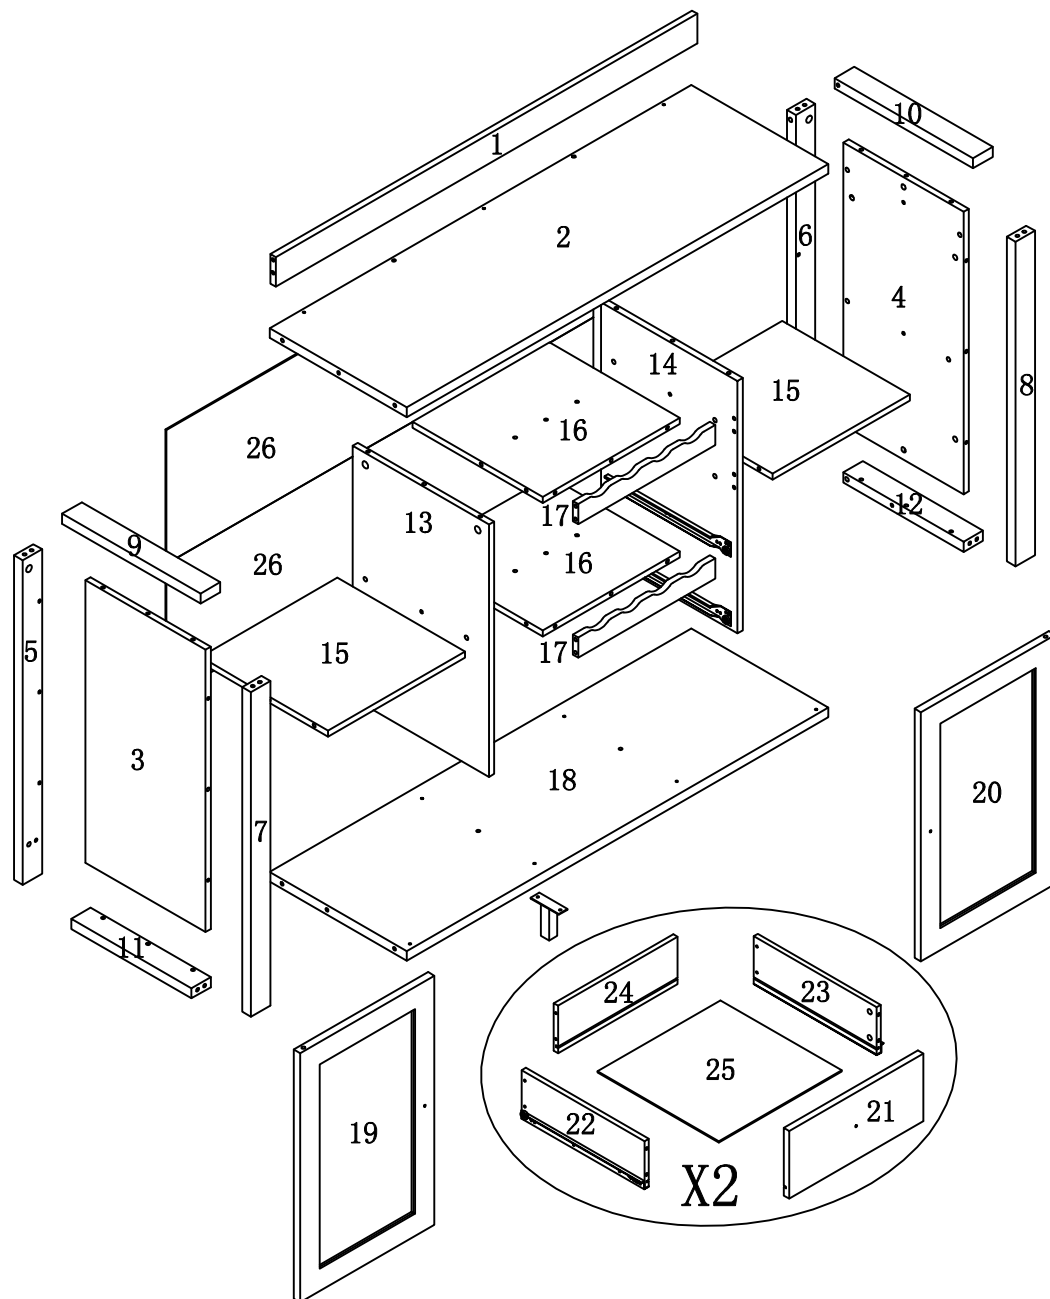

(1)	1pc	(8)	1pc	(15)	2pcs	(22)	2pcs
(2)	1pc	(9)	1pc	(16)	2pcs	(23)	2pcs
(3)	1pc	(10)	1pc	(17)	2pcs	(24)	2pcs
(4)	1pc	(11)	1pc	(18)	1pc	(25)	2pcs
(5)	1pc	(12)	1pc	(19)	1pc	(26)	2pcs
(6)	1pc	(13)	1pc	(20)	1pc		
(7)	1pc	(14)	1pc	(21)	2pcs		

HARDWARE IDENTIFICATION


ITEM#: 171957

A		L29	40pcs
B		Φ 15	40pcs
C		Φ 8 x 25	42pcs
D		Φ 22	20pcs
E		L24	12pcs
F		Φ 15	12pcs
G		Ø4 x 40	7pcs
H		Φ 16	4pcs
I		80 x 25x80	1pc
J		Φ 4 x 16	2pcs
K			36pcs
L		Φ 4 x 30	8pcs
M		L20	8pcs
N		Φ 12	8pcs
O			4pcs
P		Φ 4 x 22	4pcs
Q		Φ 8 x 40	6pcs
R			2pcs
S		Φ 3 x 16	4pcs
T			2pcs
U		Φ 3 x 14	4pcs
V			2pcs
W		Ø8x40	1pc
X		Ø12x12x1	2pcs
Y		Ø5x40	1pc
Z		Ø4x25	1pc
A1		197×5×1	1pc
B1		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#:171957

HOW TO

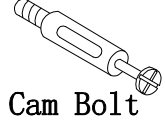


Cam Bolt




Cam Lock

1	2	3	4
1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

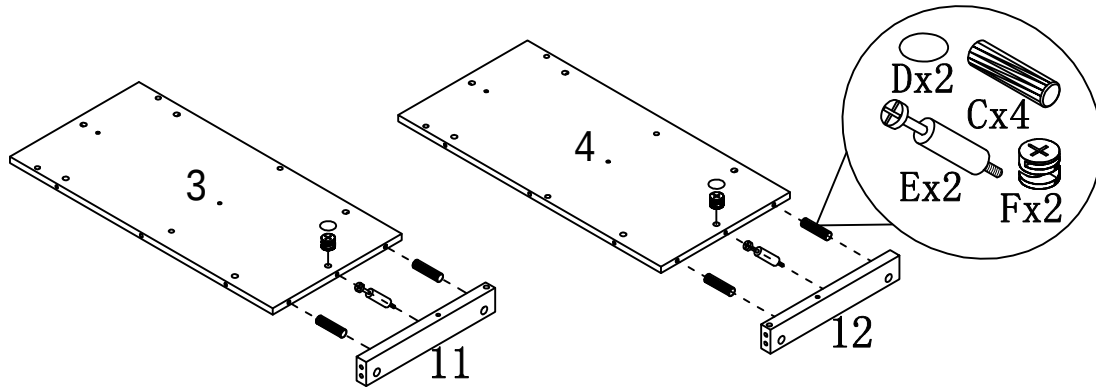


STEP1

STEP2

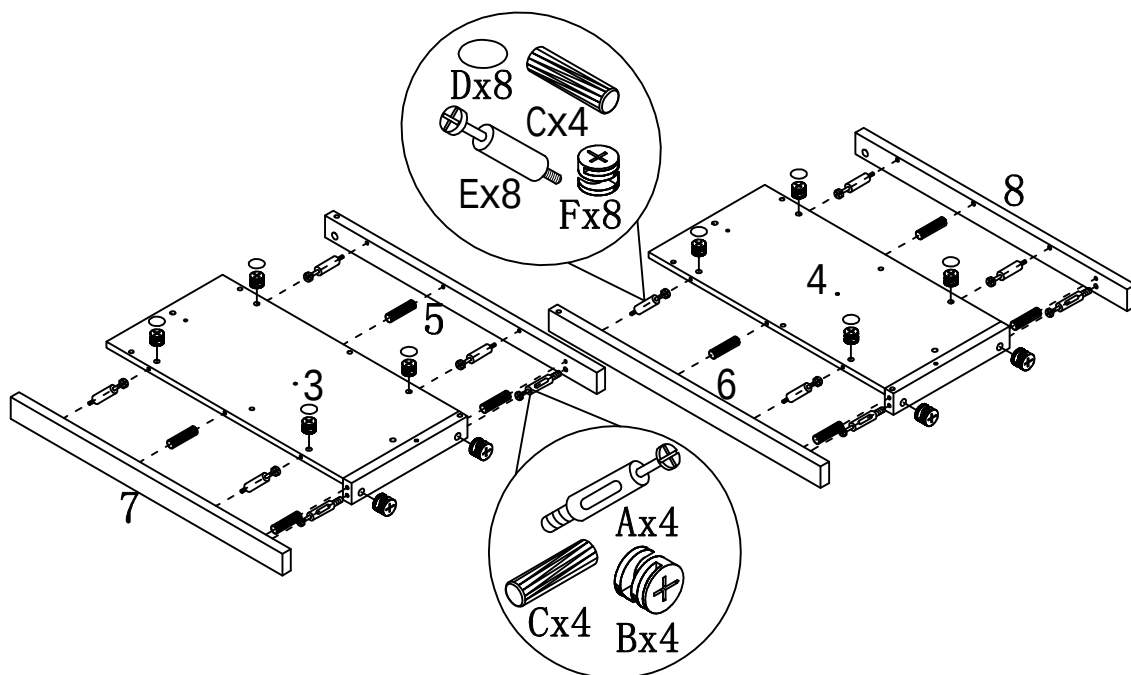


ASSEMBLY INSTRUCTION

ITEM#:171957

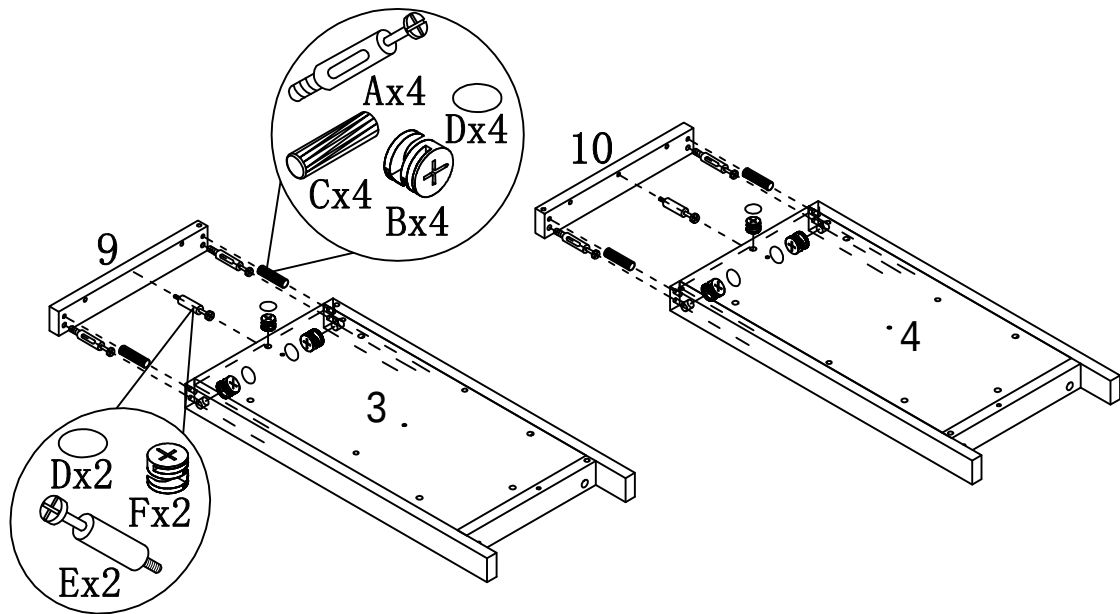


STEP3

STEP4

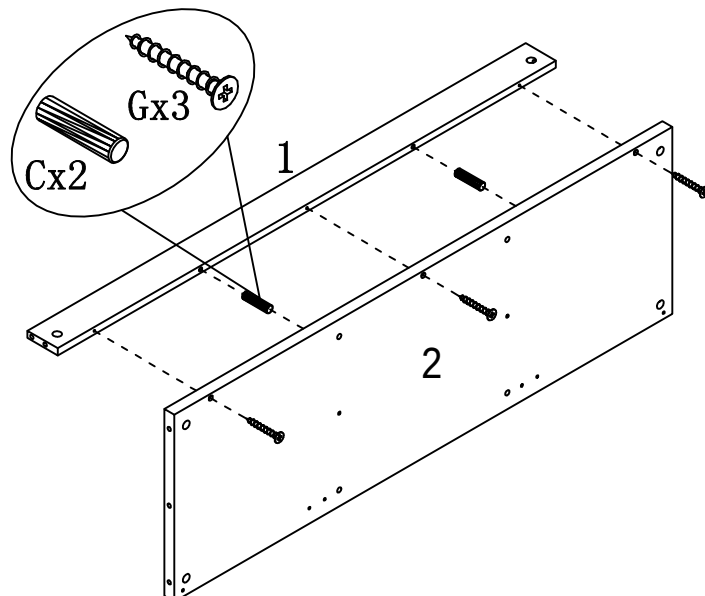


ASSEMBLY INSTRUCTION

ITEM#:171957

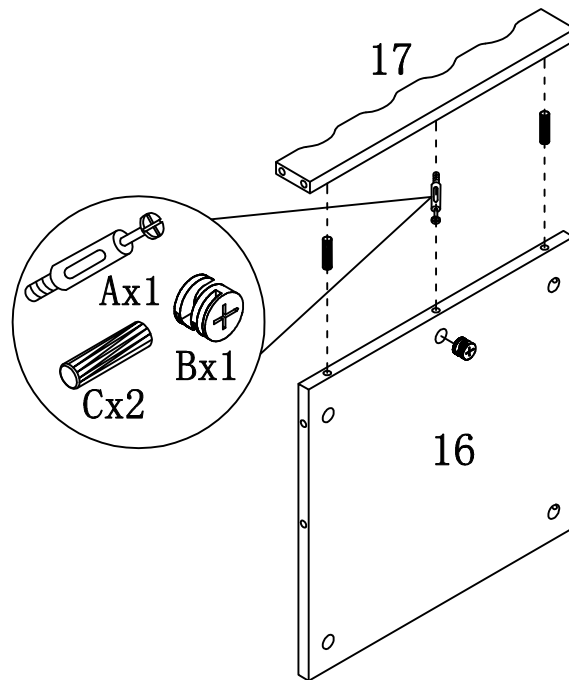


STEP5

STEP6

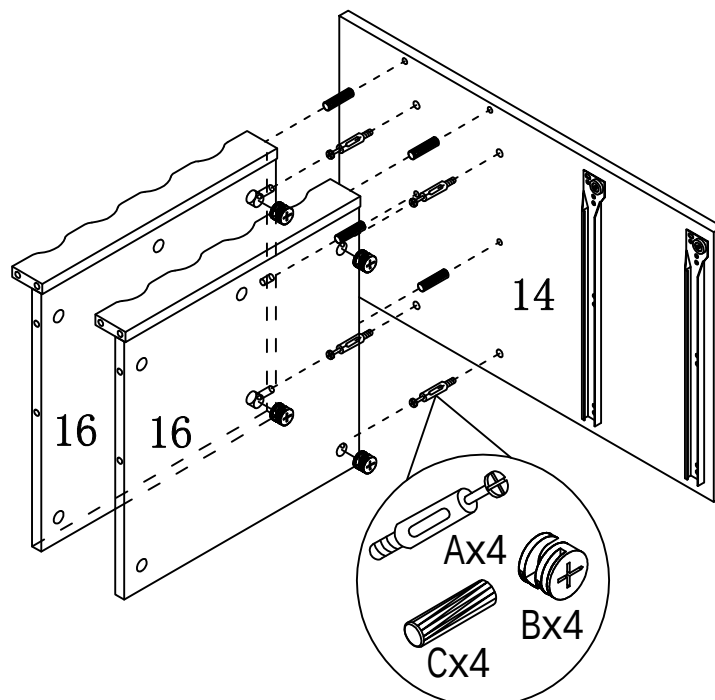


ASSEMBLY INSTRUCTION

ITEM#:171957

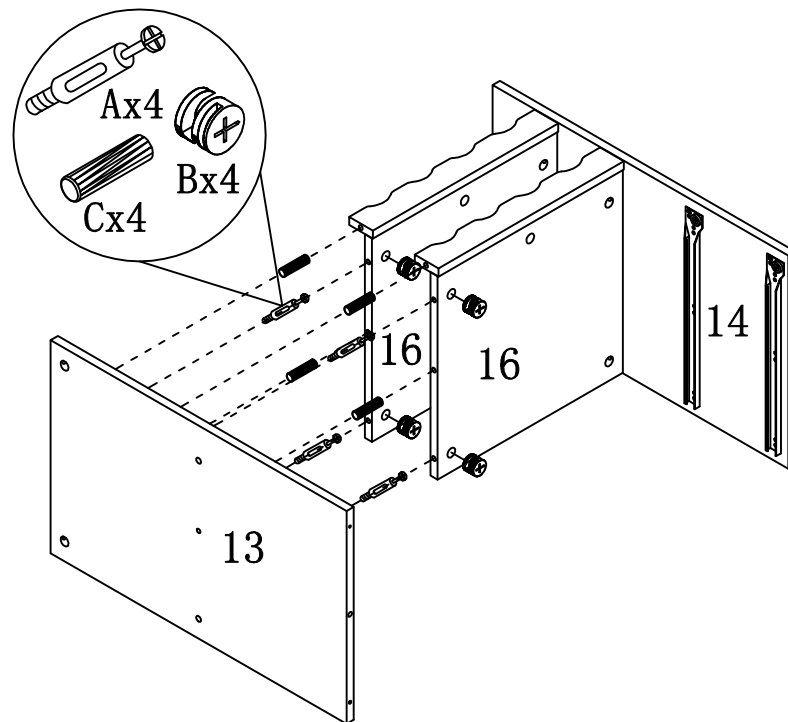


STEP7

STEP8

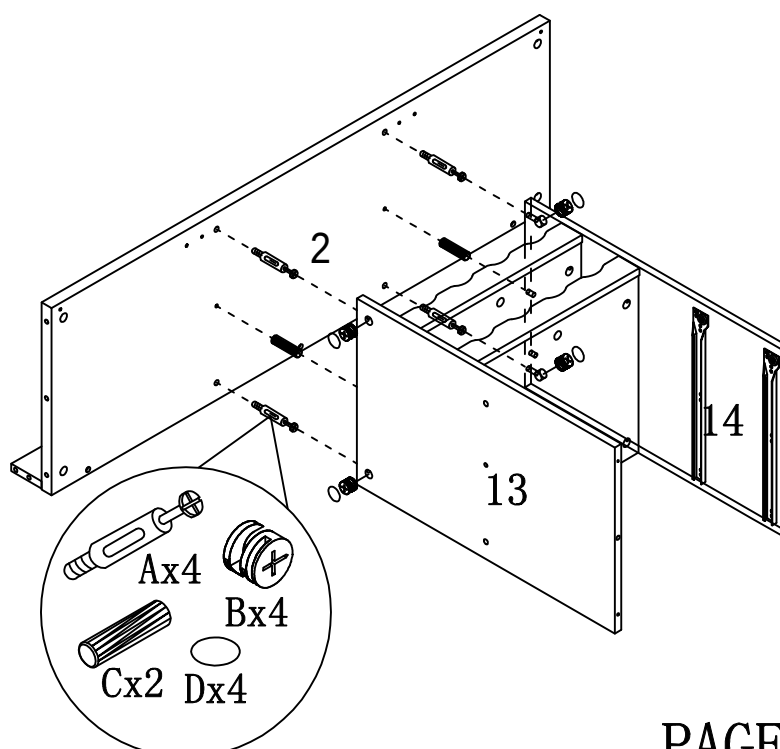


ASSEMBLY INSTRUCTION

ITEM#:171957

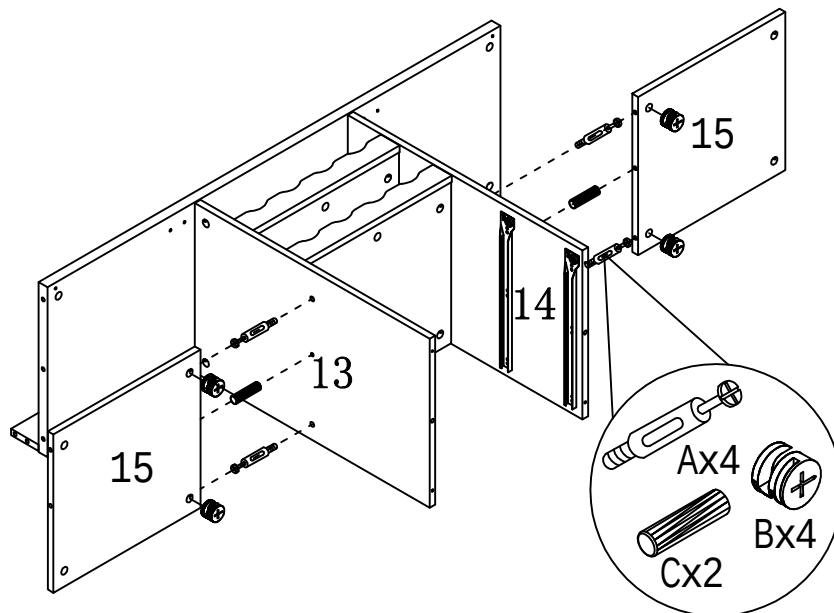


STEP9

STEP10

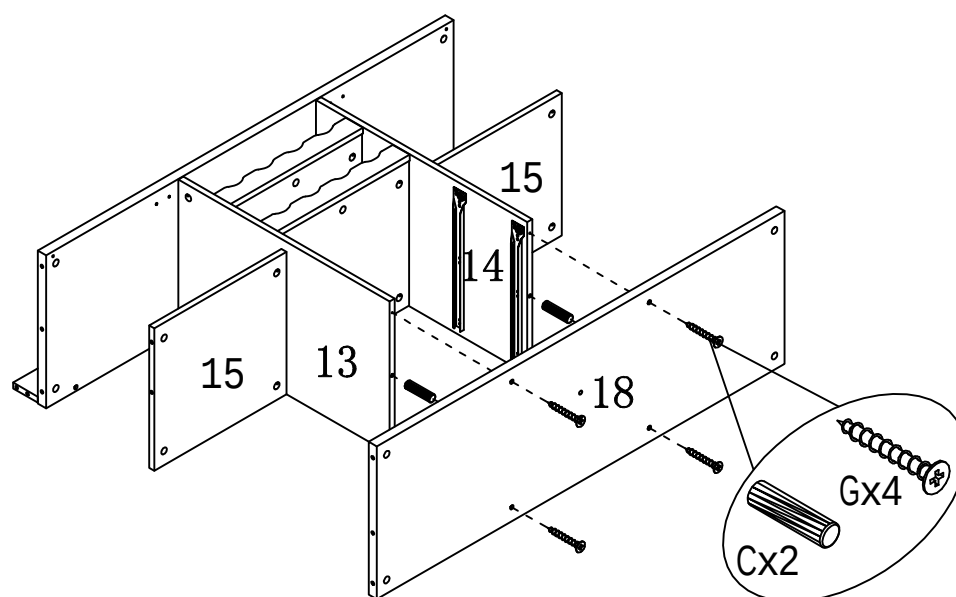


ASSEMBLY INSTRUCTION

ITEM#:171957

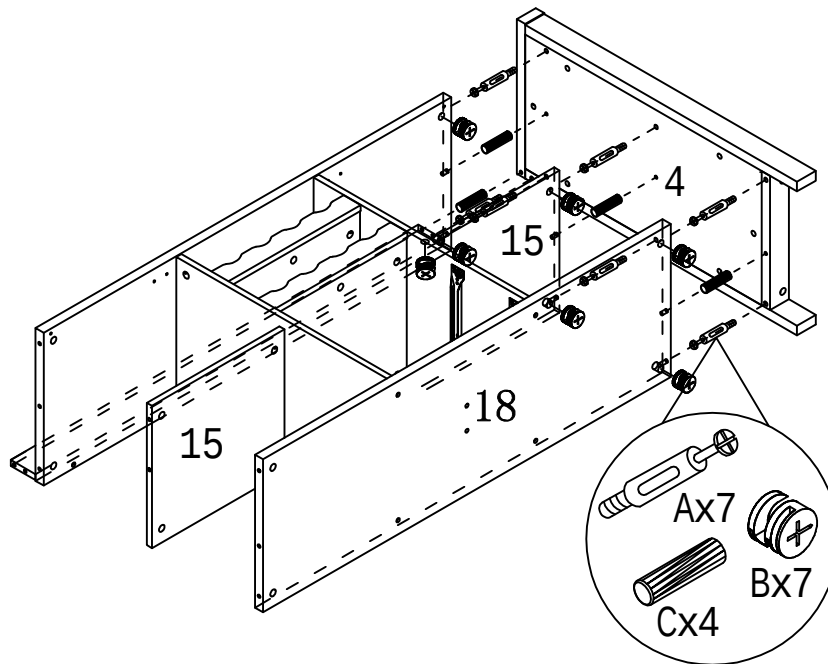


STEP11

STEP12

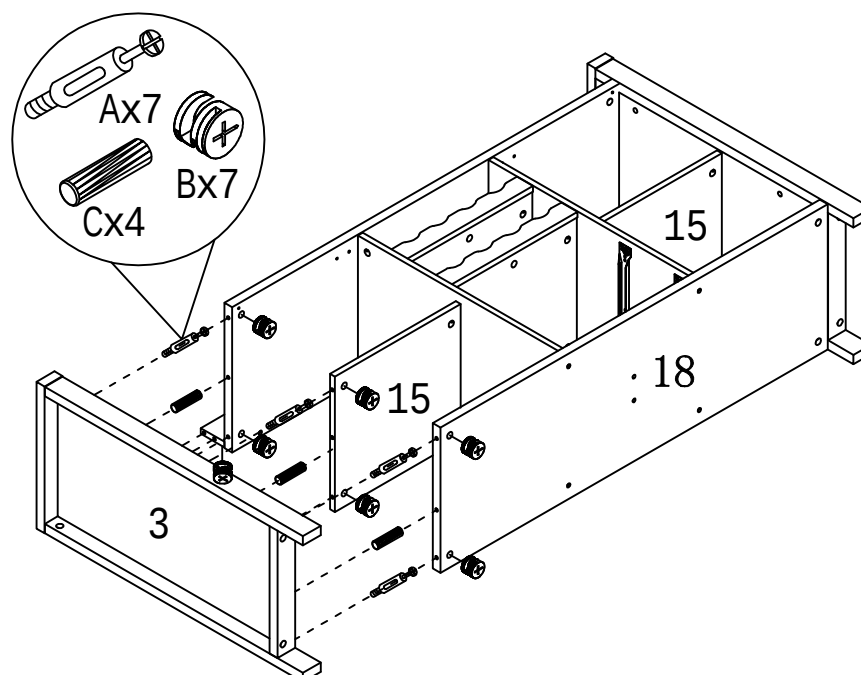


ASSEMBLY INSTRUCTION

ITEM#:171957

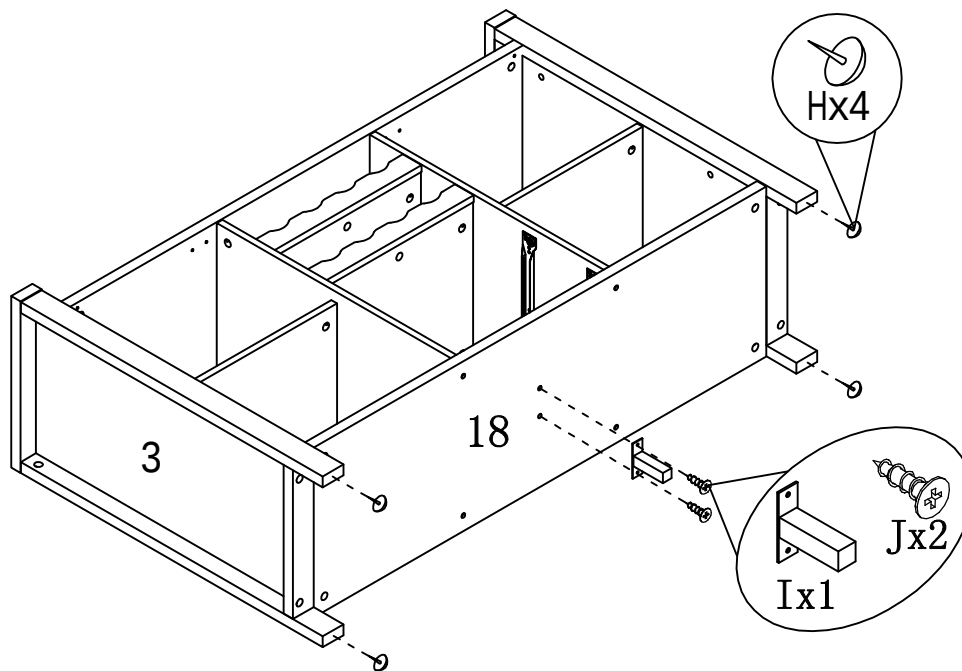


STEP13

STEP14

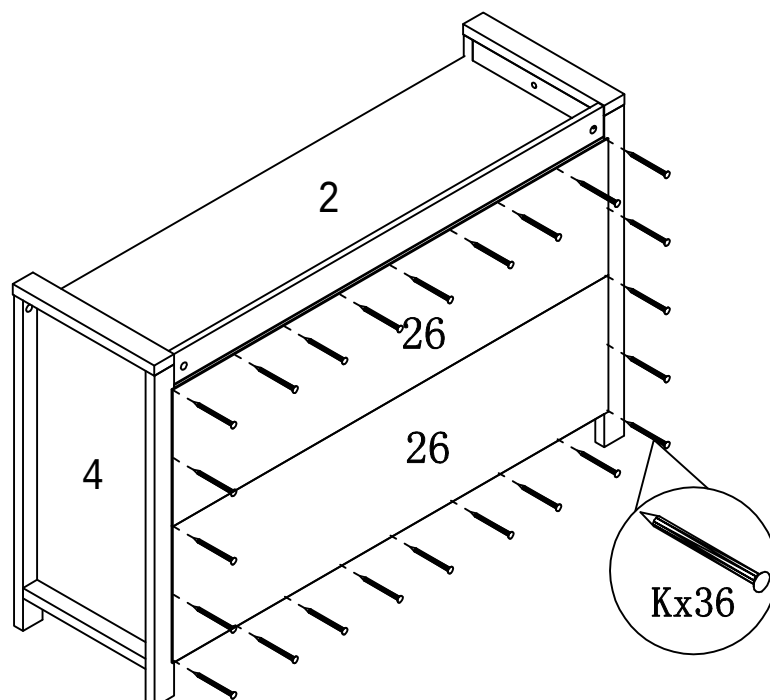


ASSEMBLY INSTRUCTION

ITEM#:171957

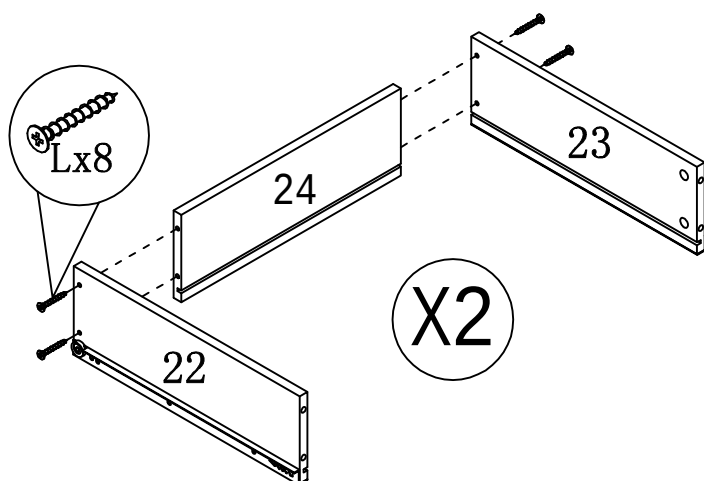


STEP13

STEP14

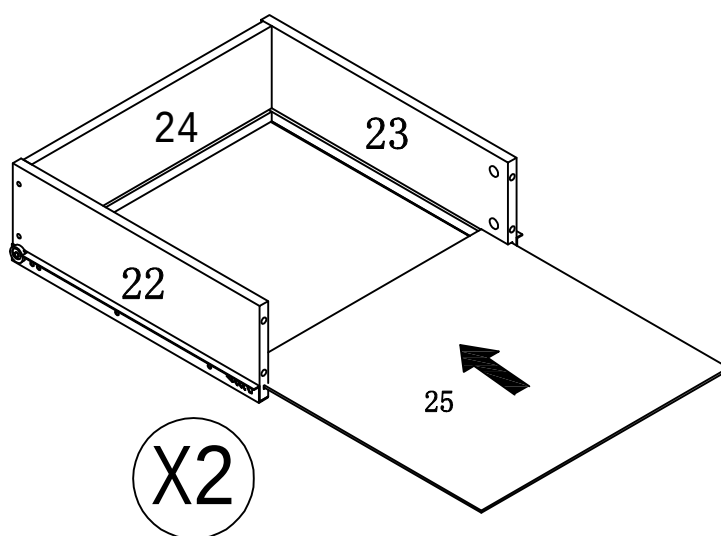


ASSEMBLY INSTRUCTION

ITEM#:171957

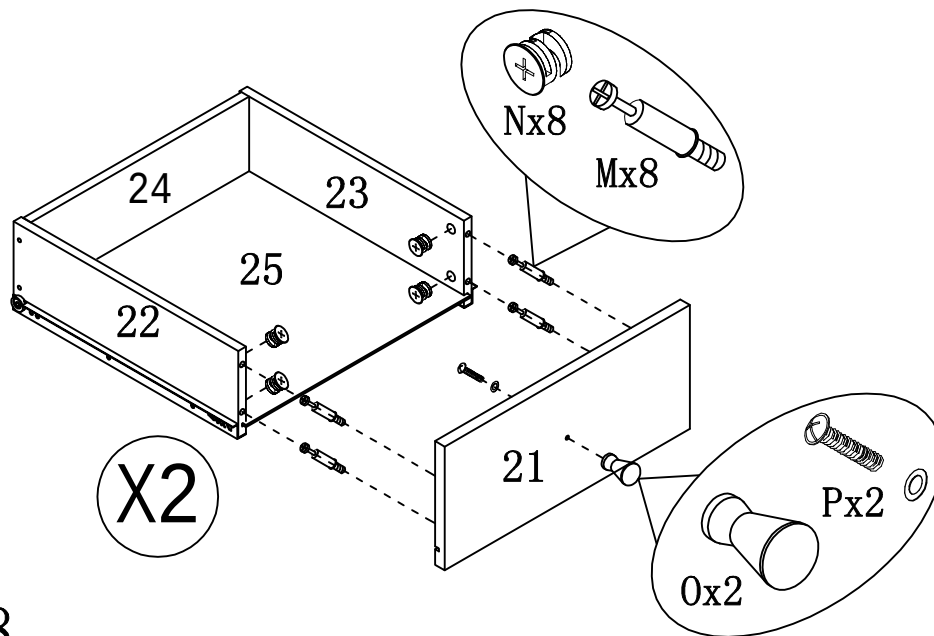


STEP18

STEP19

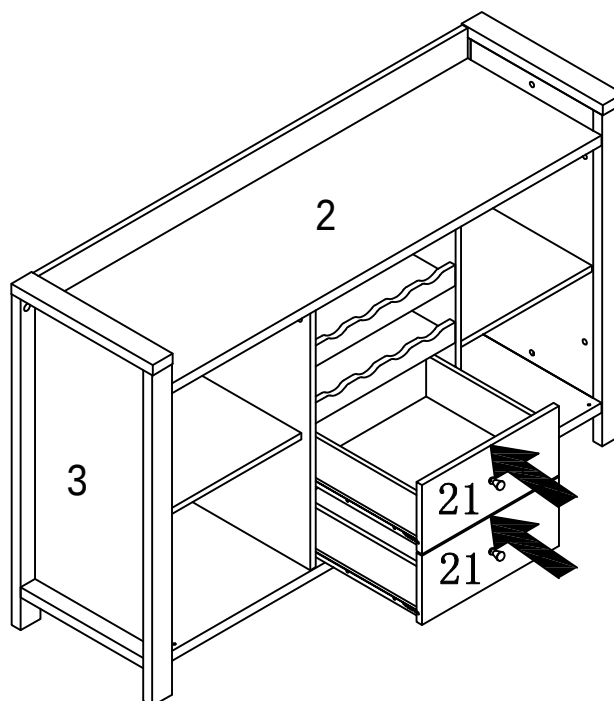


ASSEMBLY INSTRUCTION

ITEM#:171957

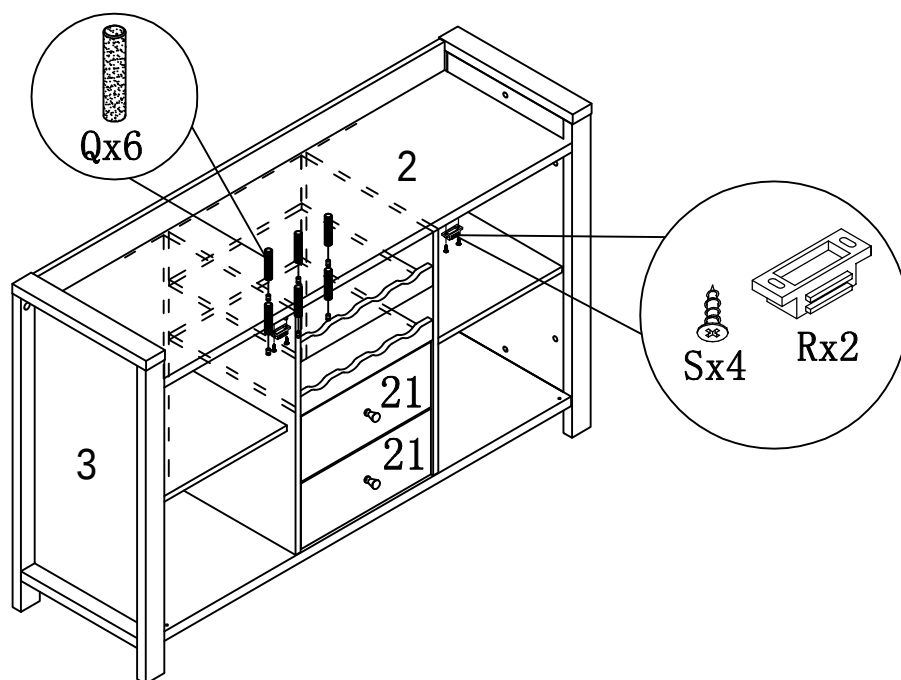


STEP18

STEP19

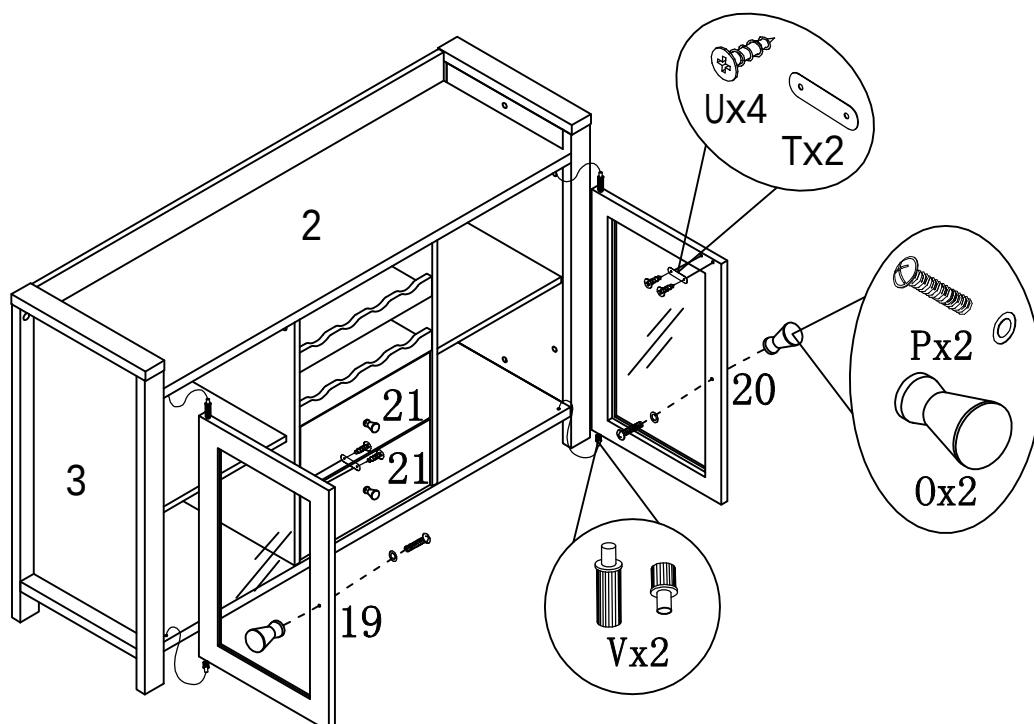


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

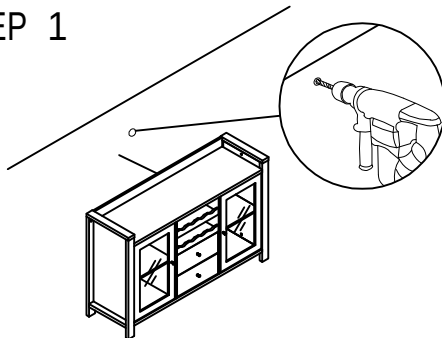


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

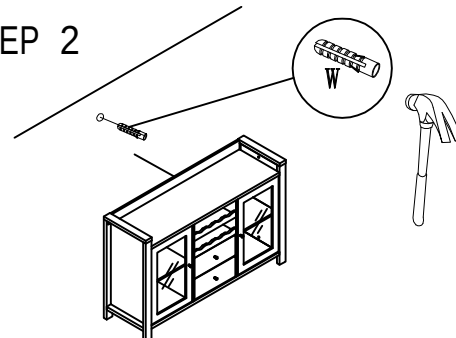


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

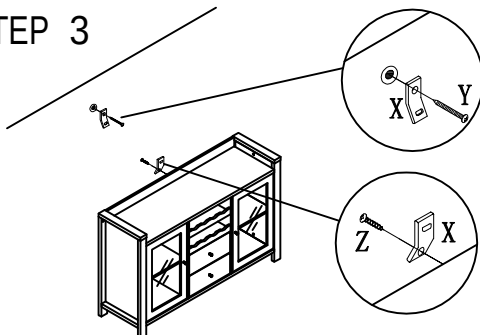

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

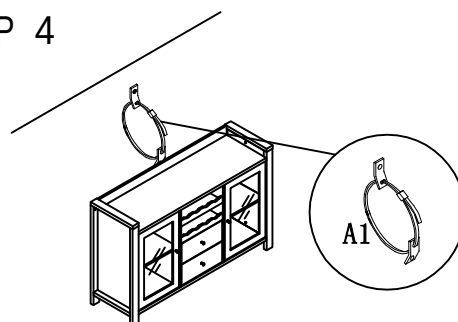

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.