

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**222931T(B1&B2)**  
***Twin Bed***

# ITEM: 222931T(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

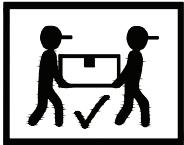


ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD  
PANEL



1PC

E LEG



2PCS

B LEFT HEADBOARD  
LEG  
(WITH "L" LABEL)



1PC

F BED SLAT




4PCS

C RIGHT HEADBOARD  
LEG  
(WITH "R" LABEL)



1PC

G BED SLAT  
SUPPORT  
WITH LEVELER



4PCS

D FOOTBOARD  
PANEL



1PC

H WOOD CLEAT



2PCS

### B2 (BOX 2)

I BED RAIL



2PCS

# ITEM: 222931T(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.














### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222931T (B1)

1	<b>BOLT 1</b> (M8 x 16mm - RBW)		8 PCS	7	<b>SMALL ALLEN WRENCH</b> (M4 x 65MM - BLK)		1 PC
2	<b>BOLT 2</b> (M8 x 35mm - RBW)		6 PCS	8	<b>BIG ALLEN WRENCH</b> (M5 x 65MM - BLK)		1 PC
3	<b>BOLT 3</b> (M6 x 35mm - RBW)		8 PCS	9	<b>ADAPTER PLUG</b>		1 PC
4	<b>BIG LOCK WASHER</b> (5/16" x 14ø - RBW)		6 PCS	10	<b>SMALL LOCK WASHER</b> (1/4" x 12ø - RBW)		8 PCS
5	<b>BIG FLAT WASHER</b> (5/16" x 22ø - RBW)		6 PCS	11	<b>SMALL FLAT WASHER</b> (1/4" x 19ø - RBW)		8 PCS
6	<b>FLAT HEAD SCREW</b> (M4 x 32MM - RBW)		8 PCS				

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

# ITEM: 222931T(B1&B2)




## ASSEMBLY INSTRUCTIONS

### STEP 1

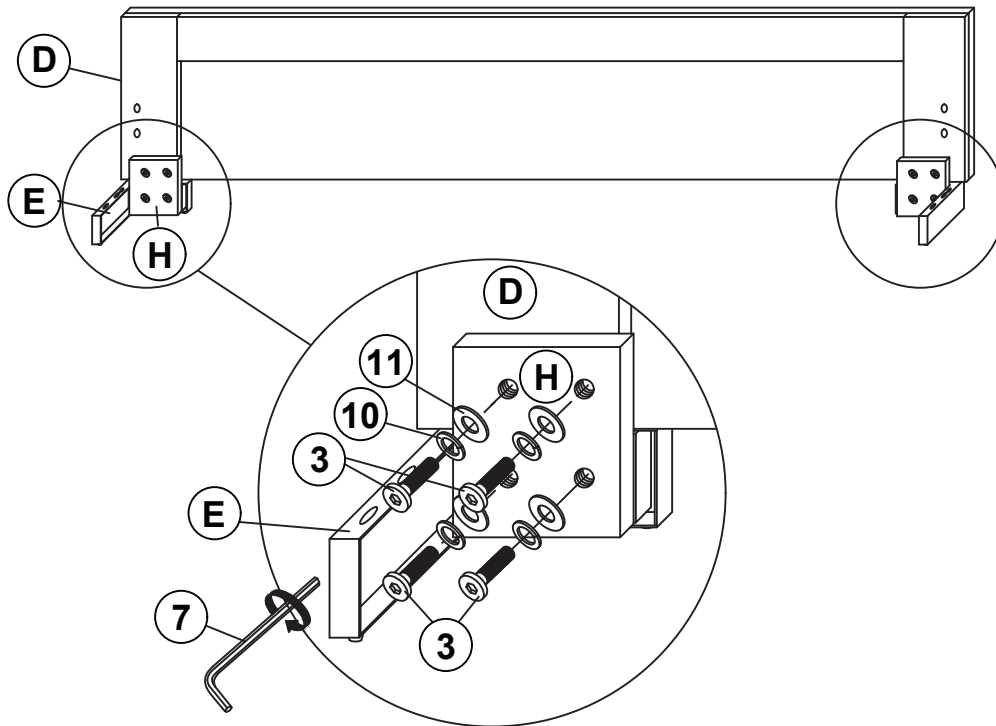

### STEP 2

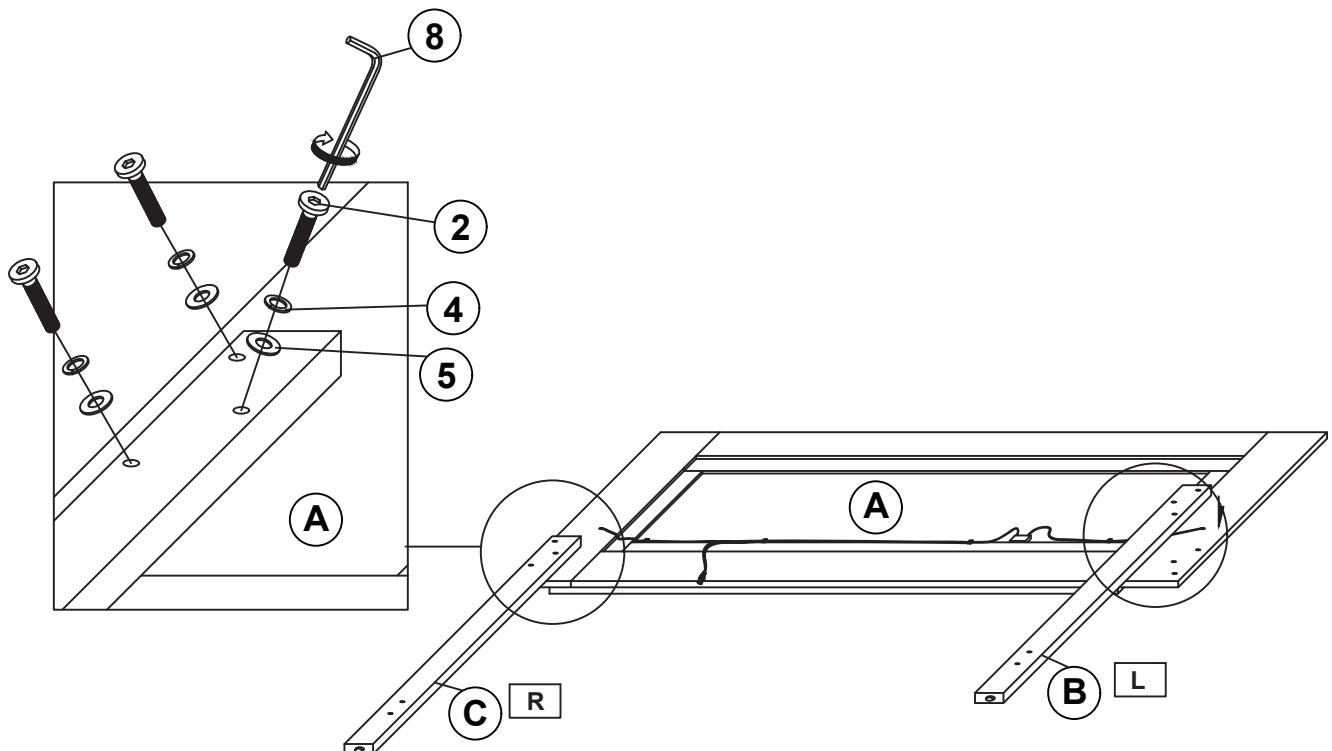


**\*\* BACK VIEW**

# ITEM: 222931T(B1&B2)




## ASSEMBLY INSTRUCTIONS

### STEP 3

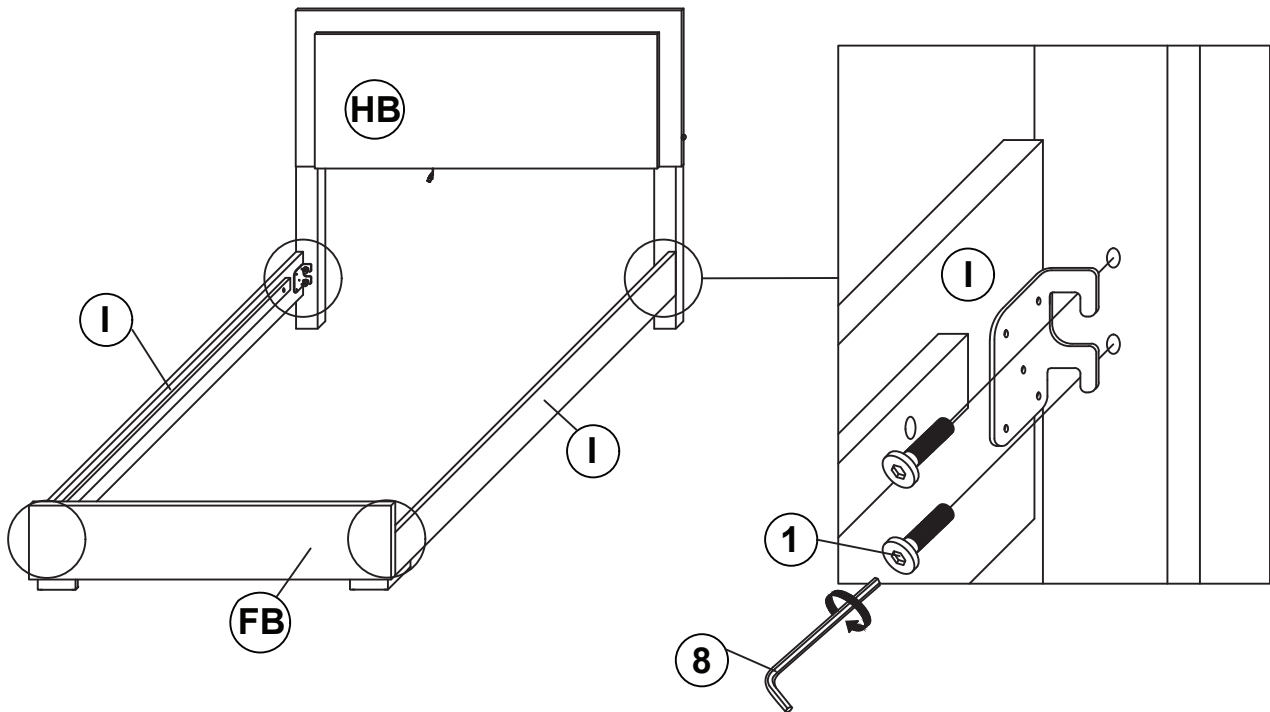

### STEP 4


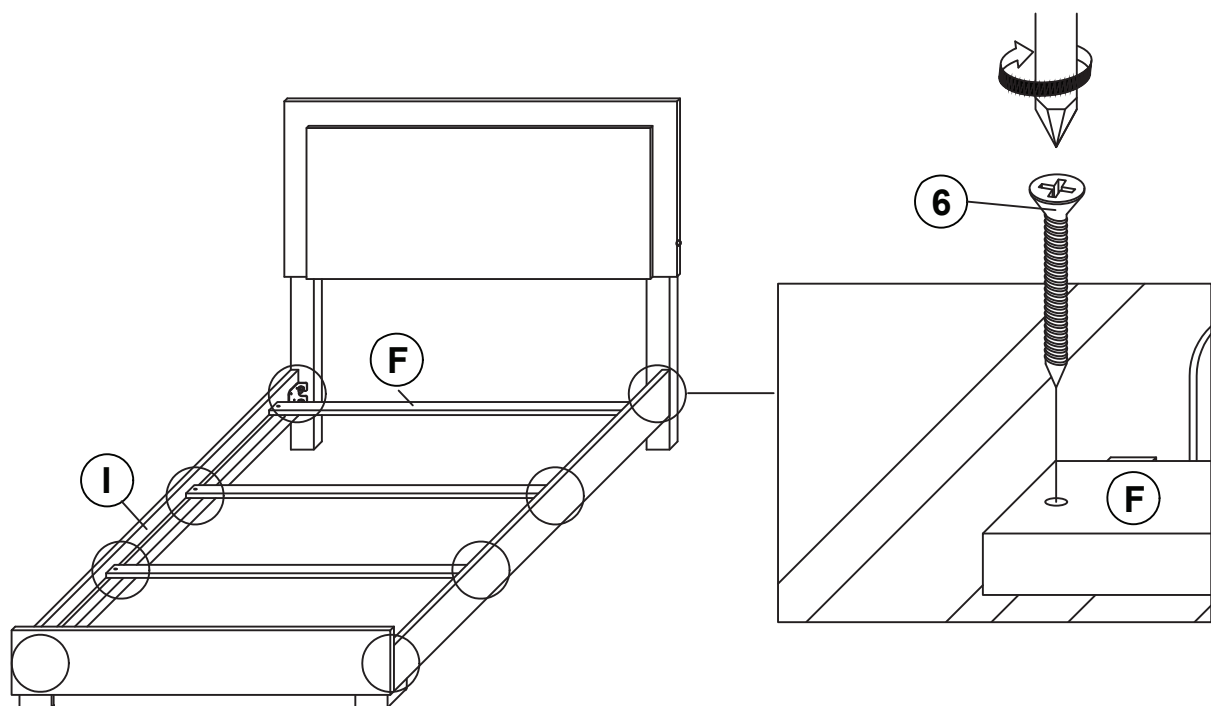


ITEM: **222931T(B1&B2)**

## ASSEMBLY INSTRUCTIONS

### STEP 5


### COMPLETE

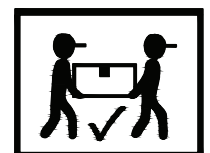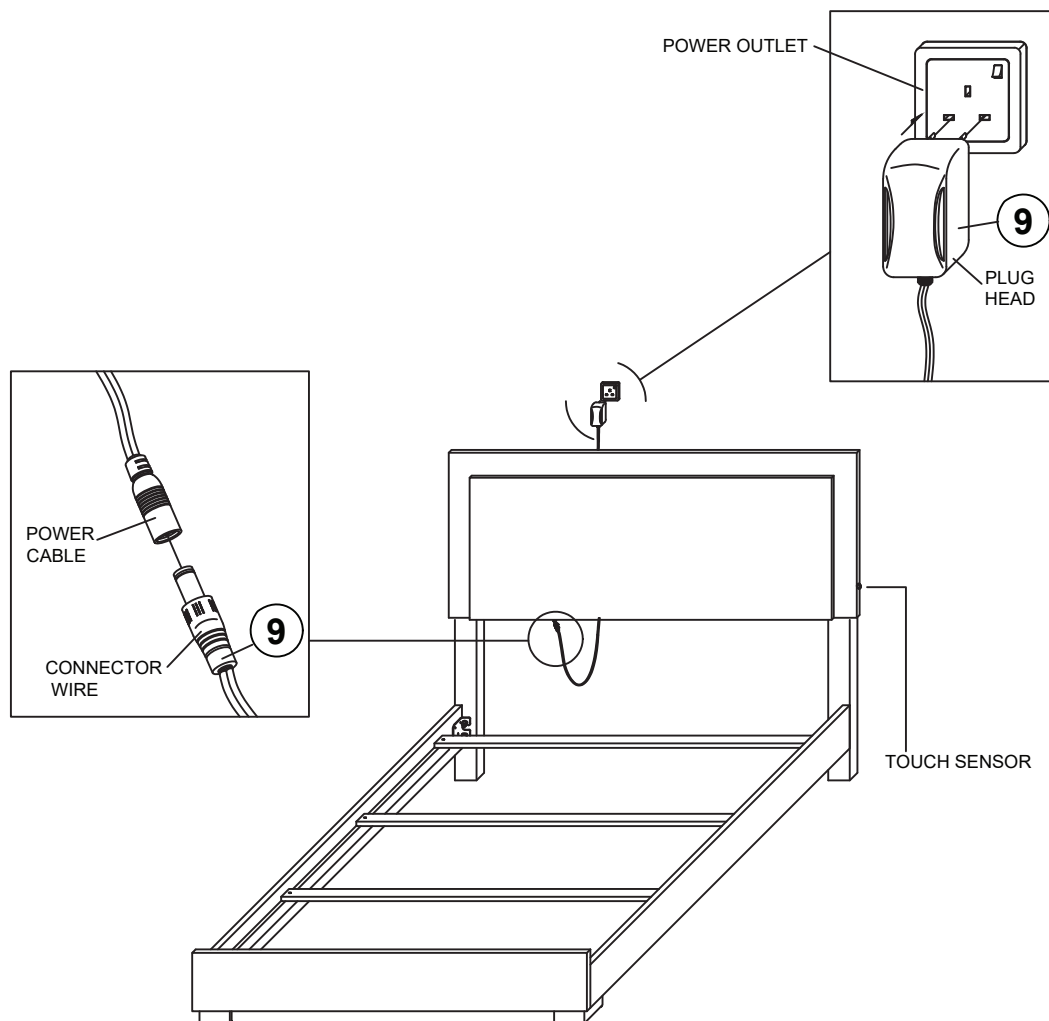

ITEM: **222931T(B1&B2)**



**Inner Size : 39.50"W X 75.00"D**

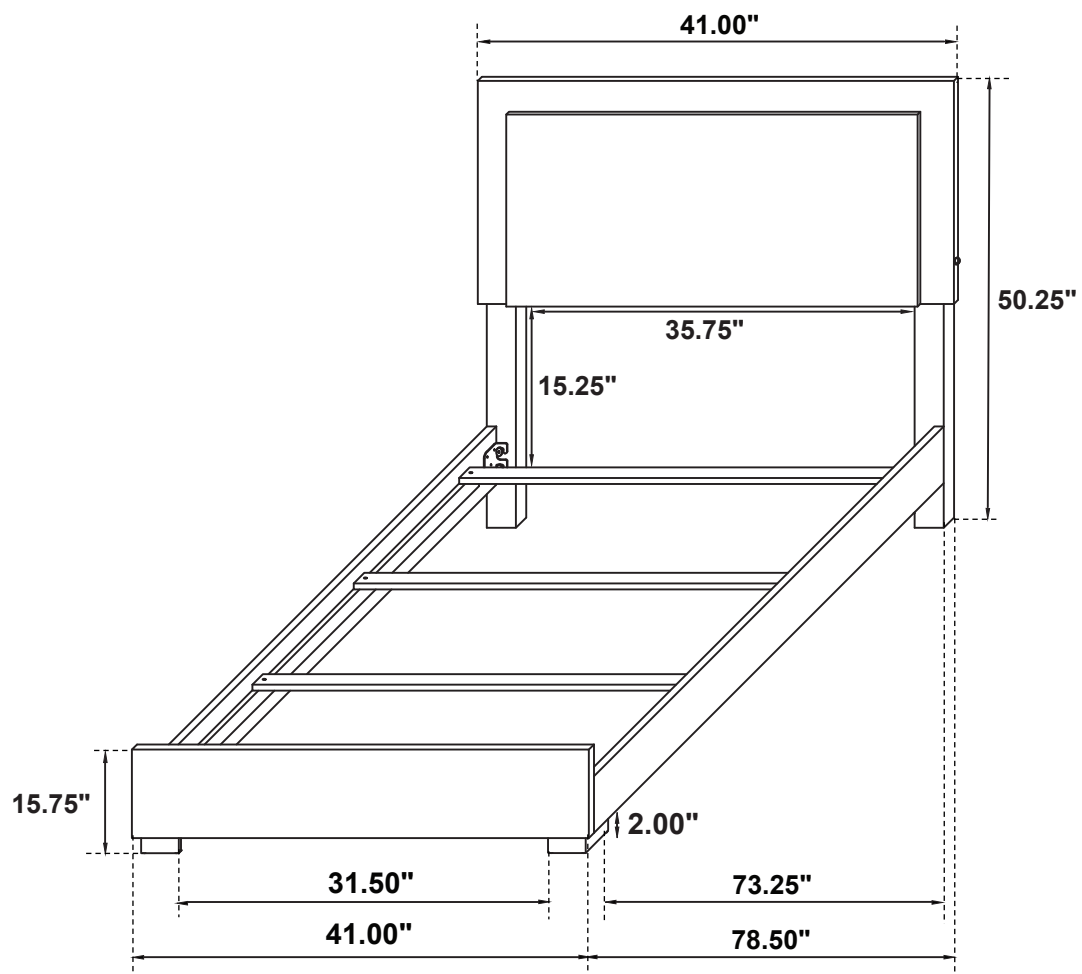

**Note : Dimension tolerance  $\pm 5\%$**