Cushion Recovery Notice

For convenient packaging, the seat cushions, back cushions, and ottoman pads have been vacuum-compressed. After unpacking, please allow 5 to 7 days for them to fully expand and regain their original shape. Gently patting or fluffing the cushions can help speed up the recovery process. which typically takes between 72 hours and one week.





Back Cushion





Seat Cushion







Ottoman Cushion

To fix 2 pieces together, use the clips included with the set.
Refer to following pictures below.


Pour unir 2 pièces de façon inamovible, les assembler à l'aide des pinces jointes.
Voir les photos au bas

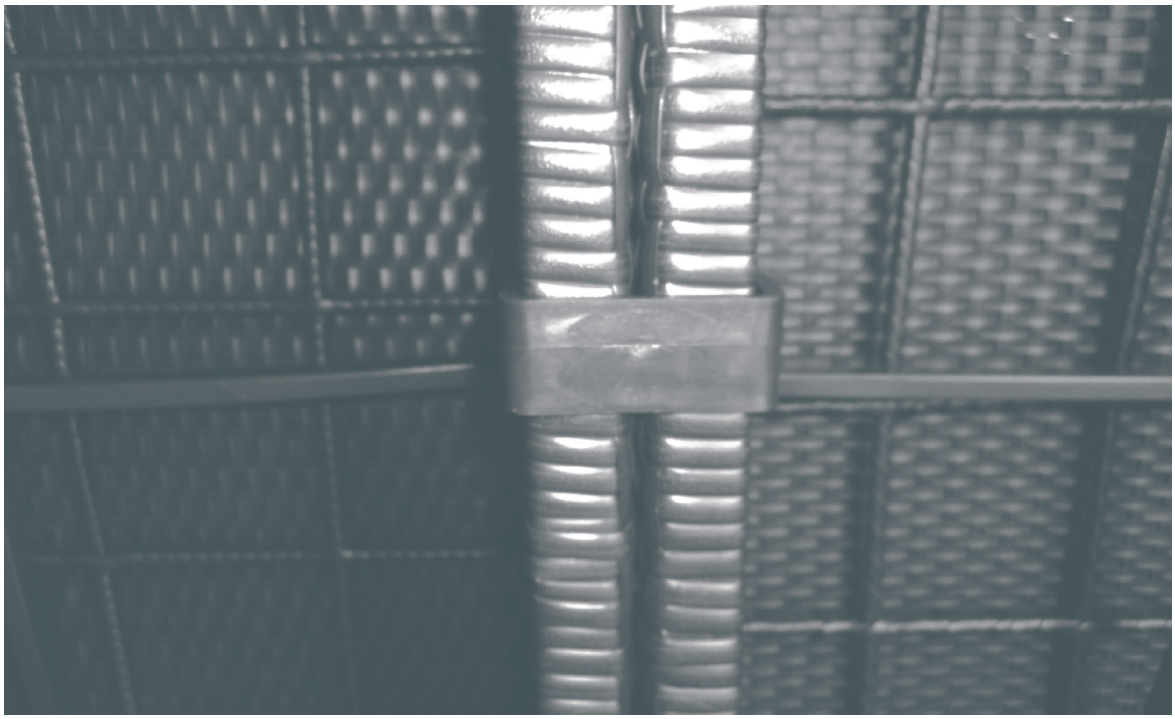

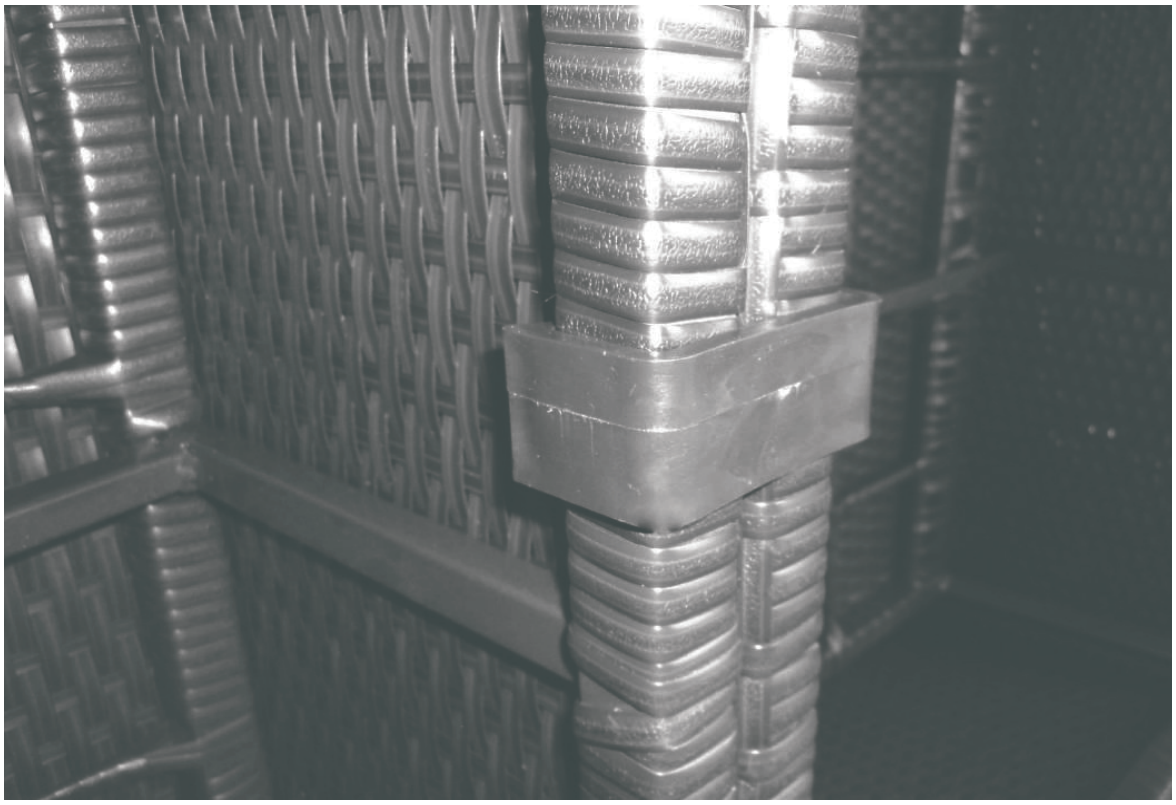

Assembly Instruction






Advice:
1. Power tools are suggested to be used during installation.
2. More than one person may be required to assemble this product.
3. The best advice is not tightening up any screws until the whole piece is assembled. If having difficulty aligning holes, loosen the screws already installed and readjust the armrest.
4. To avoid mess-up or mismatch, please use the hardware of each box to install the furniture in the same box.

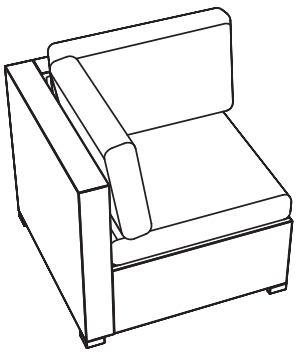


Right Arm Sofa


Assembly Video

Parts List

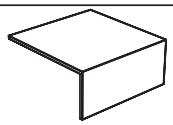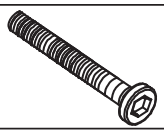Part Number	Picture	Description	QTY
RA-A		Chair Back	1
RA-B		Chair Seat	1
RA-C		Right Arm	1
RA-D		Side Panel	1
V		Screw (M6*35)	9
P		Screw (M6*95)	1
N		Washer (M6)	10

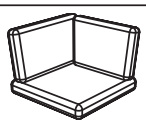
Part Number	Picture	Description	QTY
X		Screw (M6*25)	8
E		L Shape Foot	3
F		Sofa Foot	1
L		Allen Key	1
RA-M		Seat and Back Cushion	1
A1		Fastener Clip	2


STEP 1

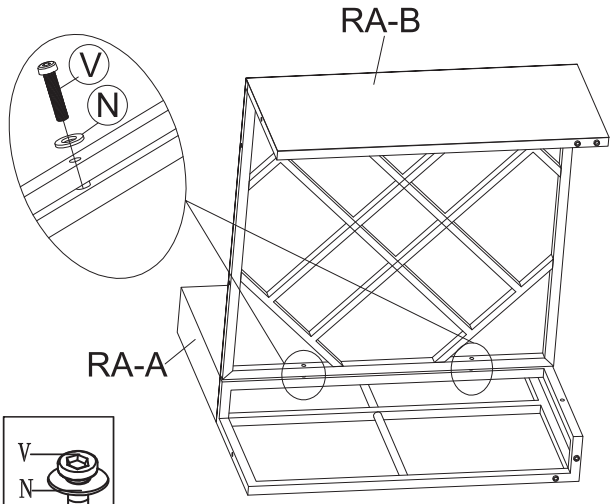

X2

STEP 2

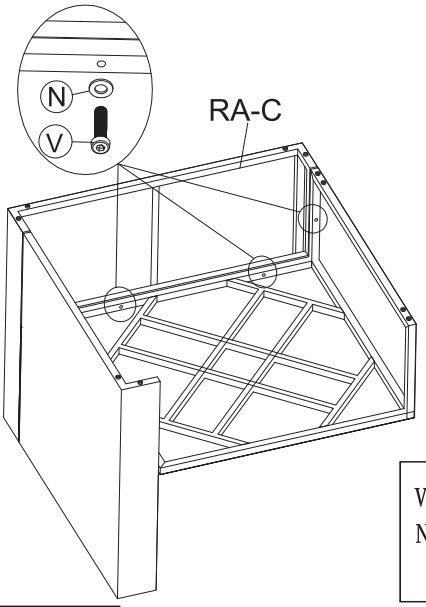





X3

The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

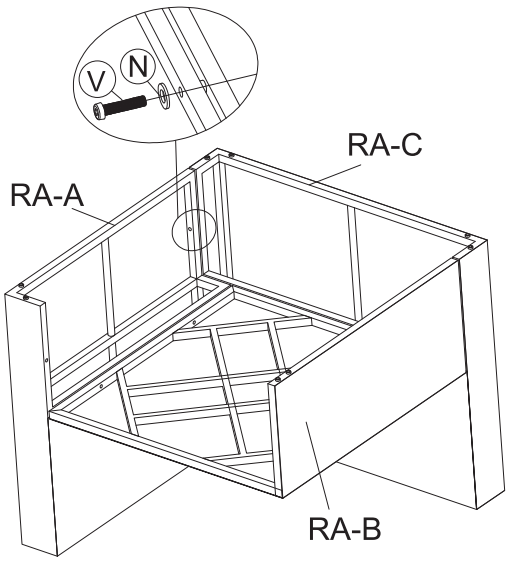




X1


STEP 4

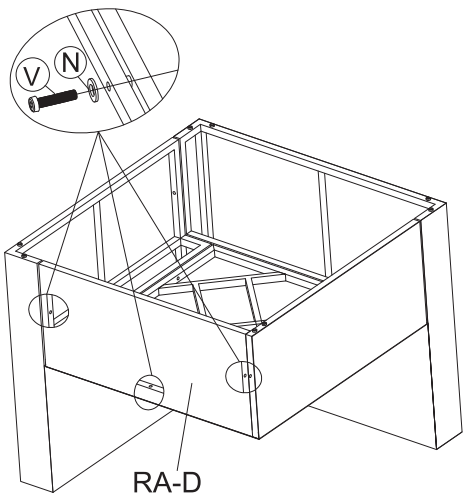



X3


STEP 5

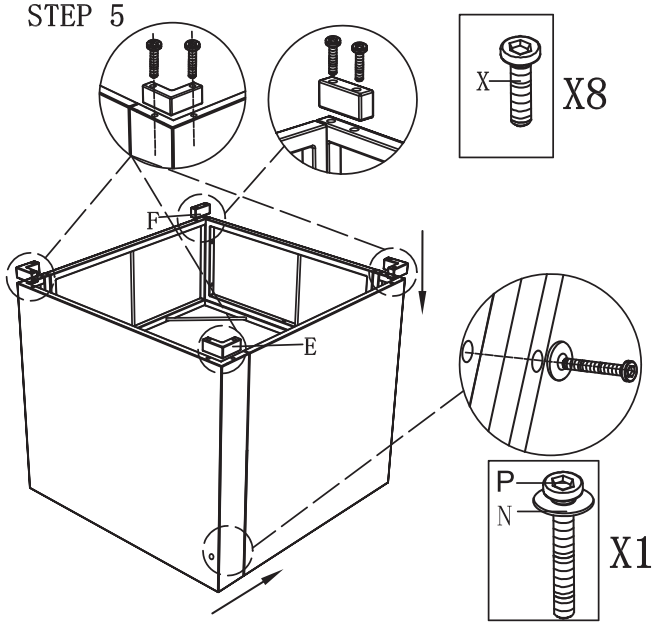

X8

X1

FINISH

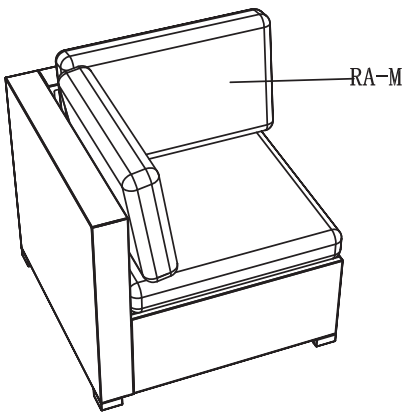


Please tap the cushions and wait 48 to 72 hours to fully rebound

Assembly Instruction

Advice:





1. Power tools are suggested to be used during installation.
2. More than one person may be required to assemble this product.
3. The best advice is not tightening up any screws until the whole piece is assembled. If having difficulty aligning holes, loosen the screws already installed and readjust the armrest.
4. To avoid mess-up or mismatch, please use the hardware of each box to install the furniture in the same box.

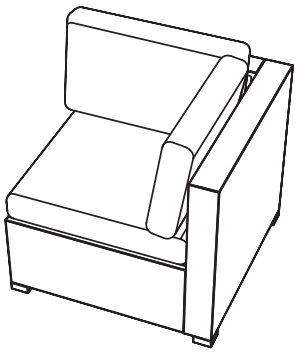


Left Arm Sofa


Assembly Video

Parts List

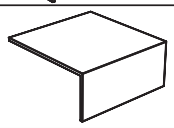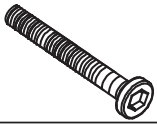Part Number	Picture	Description	QTY
LA-A		Chair Back	1
LA-B		Chair Seat	1
LA-C		Left Arm	1
LA-D		Side Panel	1
V		Screw (M6*35)	9
P		Screw (M6*95)	1
N		Washer (M6)	10


Part Number	Picture	Description	QTY
X		Screw (M6*25)	8
E		L Shape Foot	3
F		Sofa Foot	1
L		Allen Key	1
LA-M		Seat and Back Cushion	1
A1		Fastener Clip	2


STEP 1

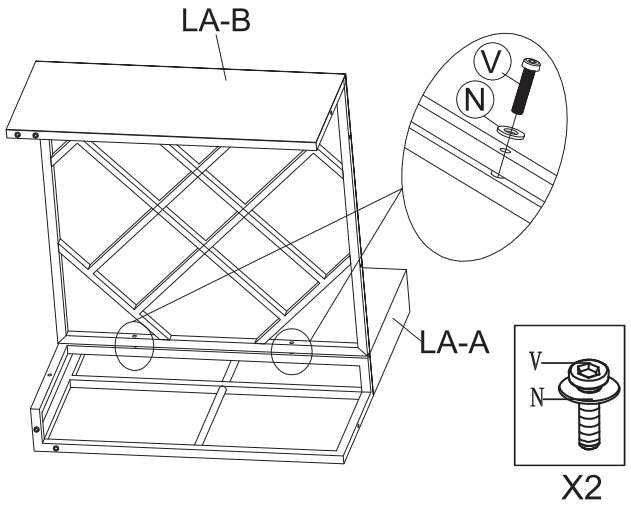

X2

STEP 2

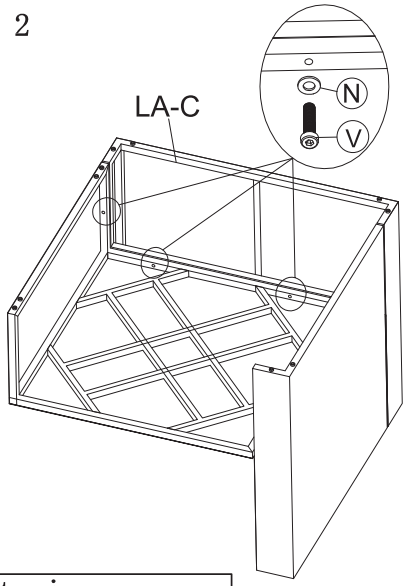


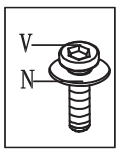


X3

The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

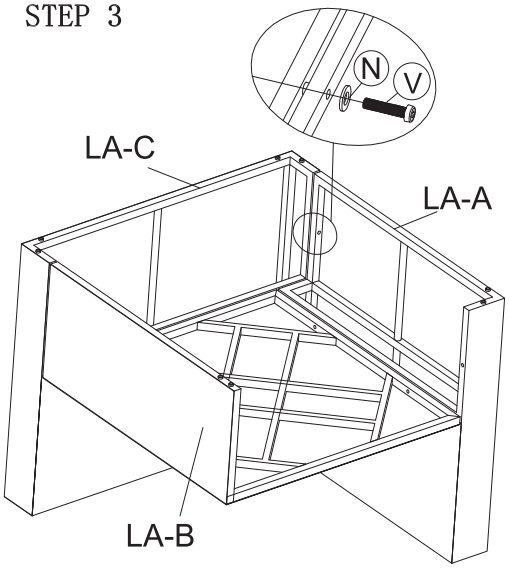


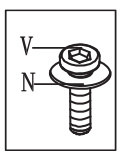

X1


STEP 4

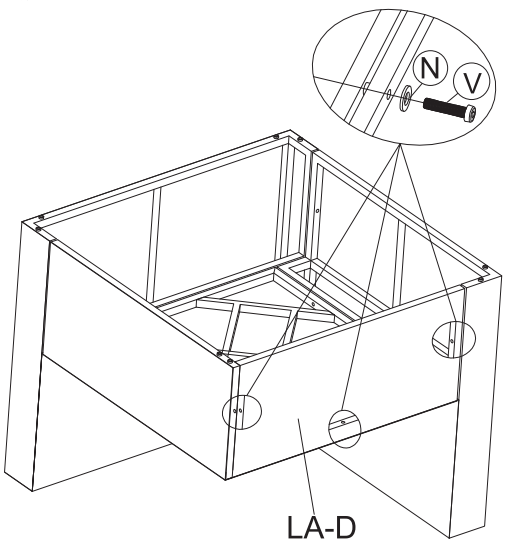



X3


STEP 5



X8

X1

FINISH

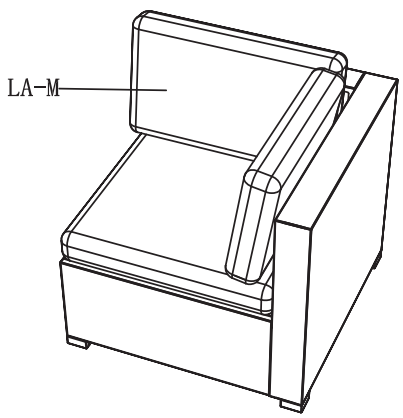


Please tap the cushions and wait 48 to 72 hours to fully rebound

Assembly Instruction

Advice:



1. Power tools are suggested to be used during installation.
2. More than one person may be required to assemble this product.
3. The best advice is not tightening up any screws until the whole piece is assembled. If having difficulty aligning holes, loosen the screws already installed and readjust the armrest.
4. To avoid mess-up or mismatch, please use the hardware of each box to install the furniture in the same box.

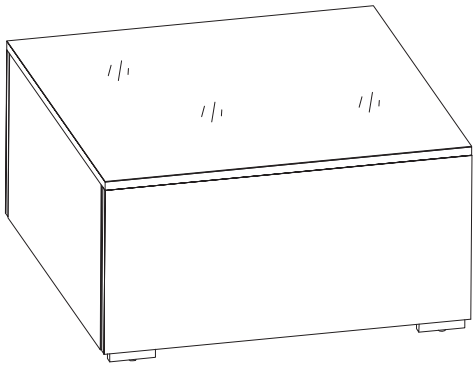


Table

Assembly Video


Parts List

Part Number	Picture	Description	QTY
T-A		Top Panel	1
T-B		Side Panel with Legs	2
T-C		Side Panel without Legs	2
T-D		Glass Top	1
N		Washer (M6)	14
V		Screw (M6*35)	14
L		Allen Key	1
F		Sofa Foot	4
X		Screw (M6*25)	8

STEP 1

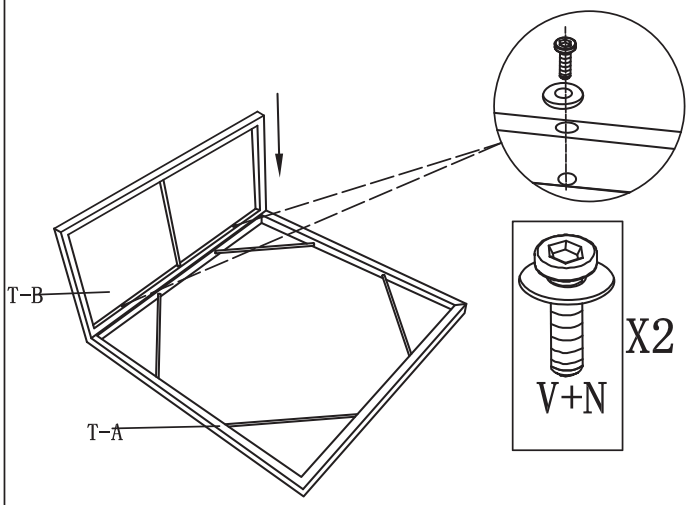


STEP 2

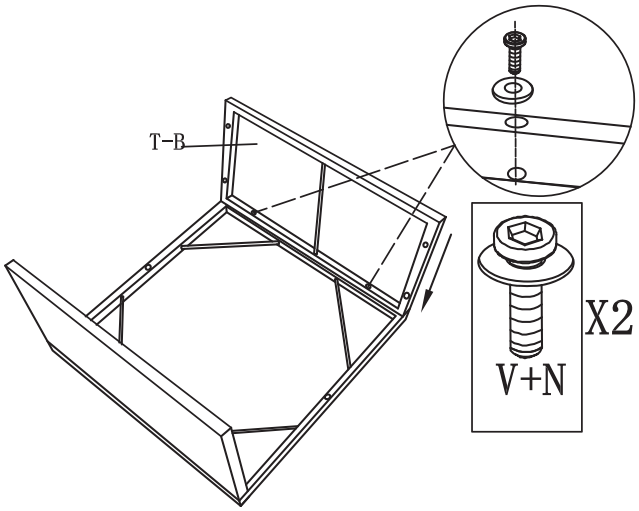


The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

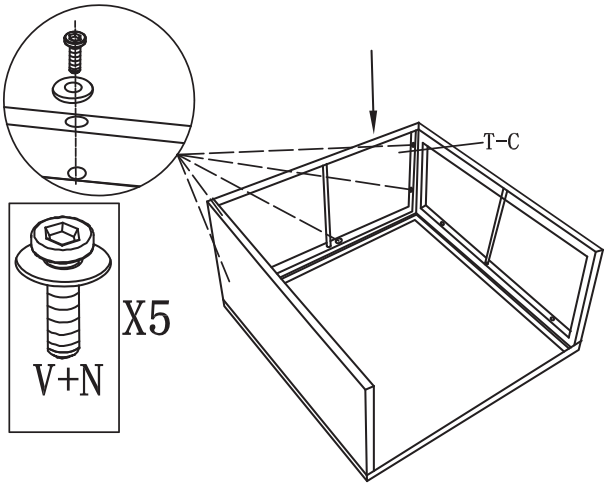


STEP 4

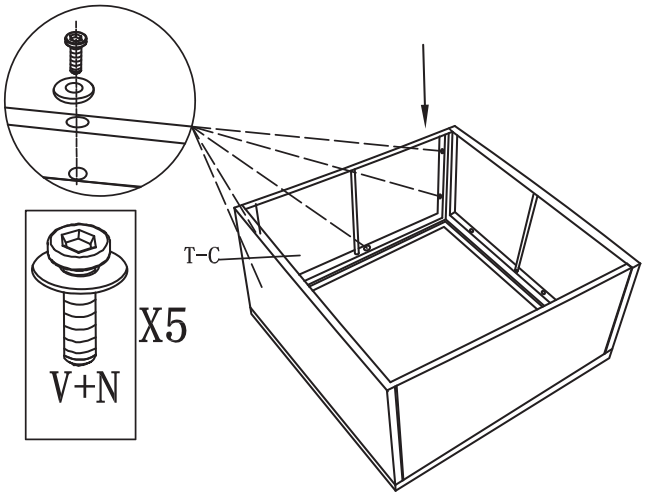

STEP 5

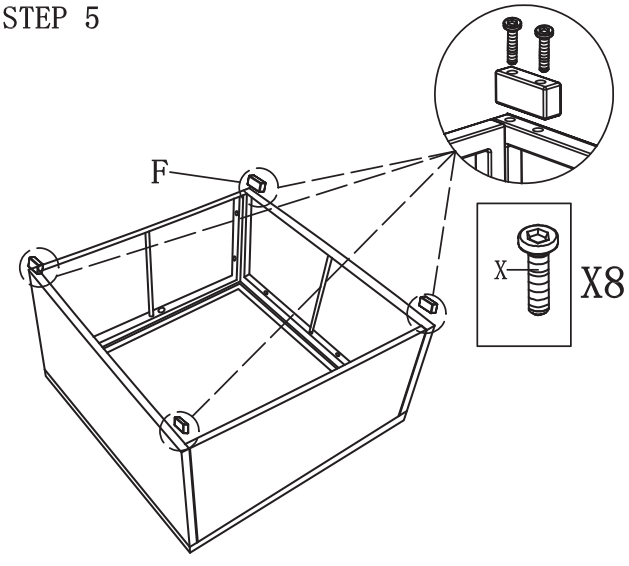

FINISH

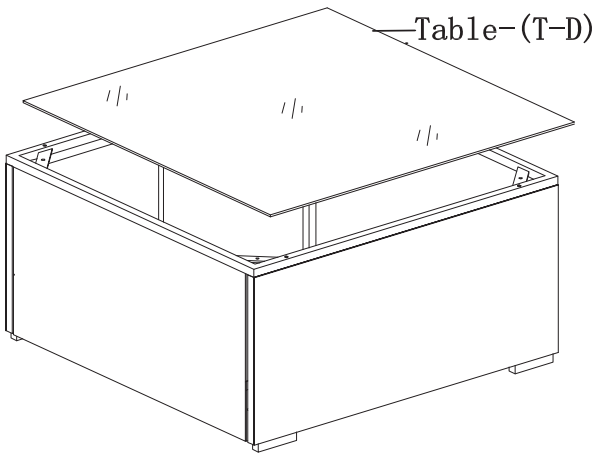

Cushion Recovery Notice

For convenient packaging, the seat cushions, back cushions, and ottoman pads have been vacuum-compressed. After unpacking, please allow 5 to 7 days for them to fully expand and regain their original shape. Gently patting or fluffing the cushions can help speed up the recovery process. which typically takes between 72 hours and one week.





Back Cushion





Seat Cushion







Ottoman Cushion

To fix 2 pieces together, use the clips included with the set.
Refer to following pictures below.


Pour unir 2 pièces de façon inamovible, les assembler à l'aide des pinces jointes.
Voir les photos au bas

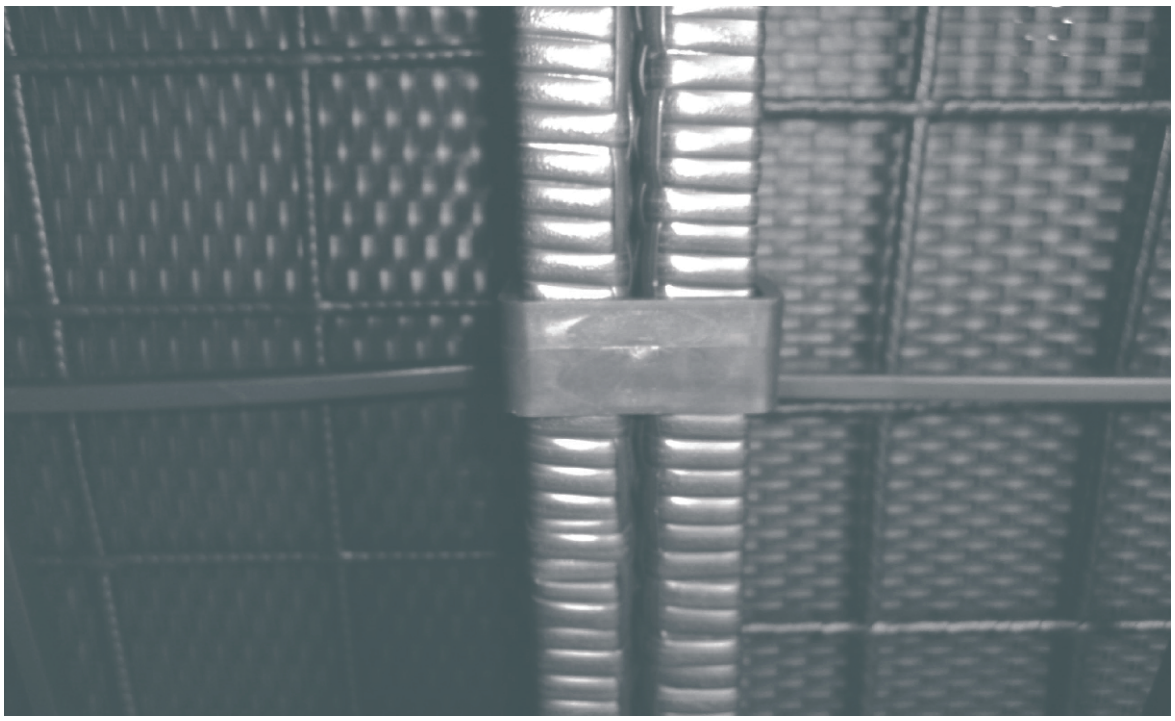

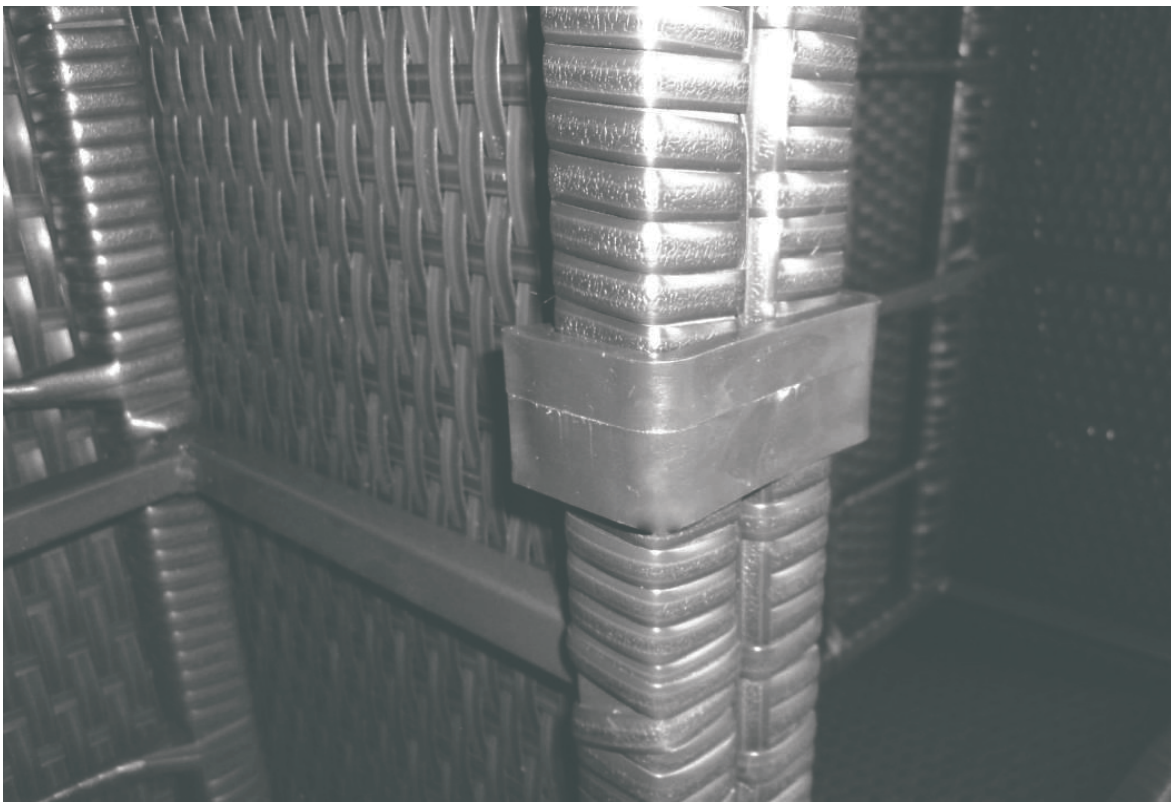

Assembly Instruction



Advice:
1. Power tools are suggested to be used during installation.
2. More than one person may be required to assemble this product.
3. The best advice is not tightening up any screws until the whole piece is assembled. If having difficulty aligning holes, loosen the screws already installed and readjust the armrest.
4. To avoid mess-up or mismatch, please use the hardware of each box to install the furniture in the same box.

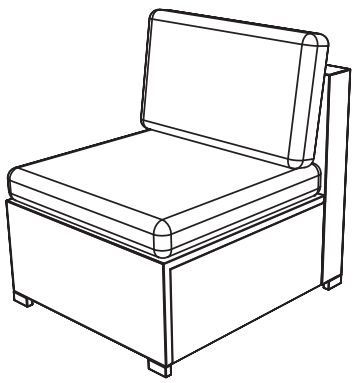

Armless Sofa


Assembly Video


Parts List

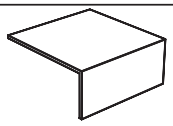Part Number	Picture	Description	QTY
AS-A		Chair Seat	2
AS-B		Chair Back	2
AS-C		Side Panel	4
AS-D		Seat and Back Cushion	2
V		Screw (M6*35)	16
X		Screw (M6*25)	16

Part Number	Picture	Description	QTY
N		Washer (M6)	16
E		L Shape Foot	4
F		Sofa Foot	4
L		Allen Key	1
A1		Fastener Clip	4


STEP 1

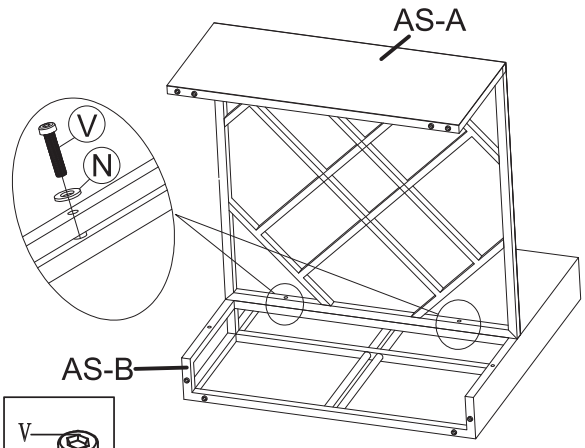




x2

STEP 2

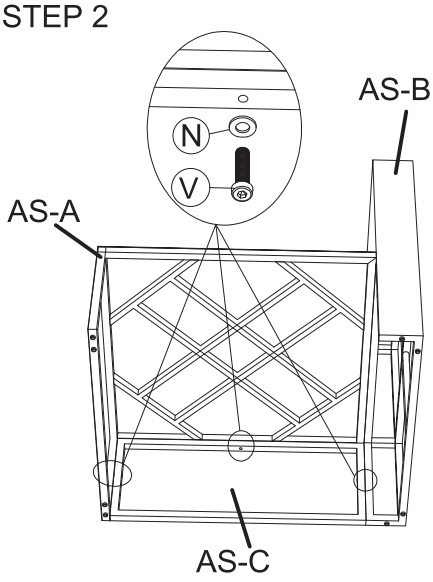





X3

The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

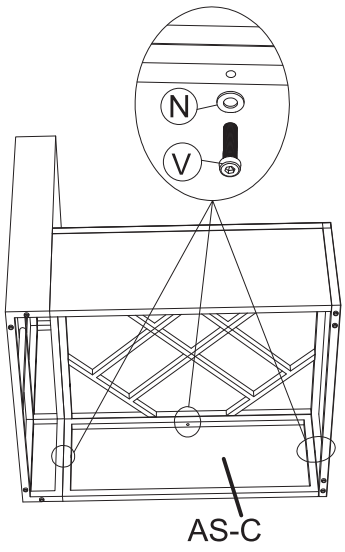




X3

STEP 4

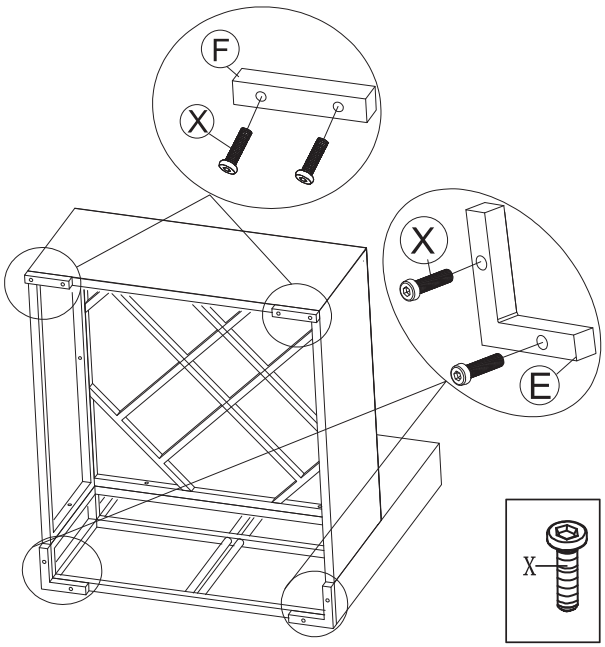

X8

FINISH

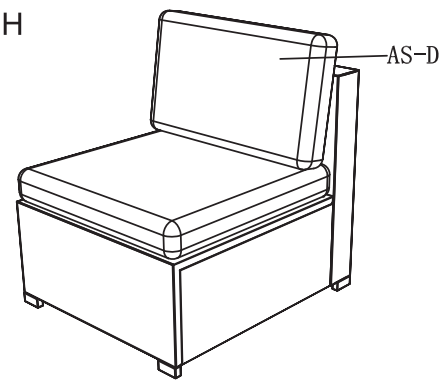

Please tap the cushions and wait 48 to 72 hours to fully rebound