

# 97053 Full / Queen Headboard


**Assembly Instructions** 

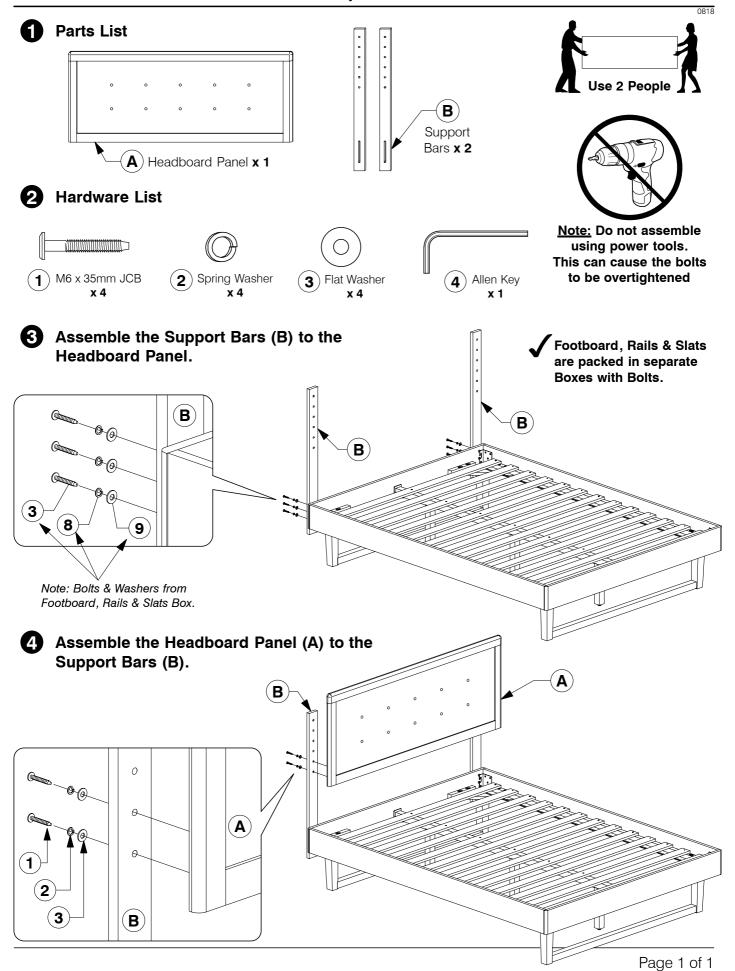

**Assembly Instructions** 

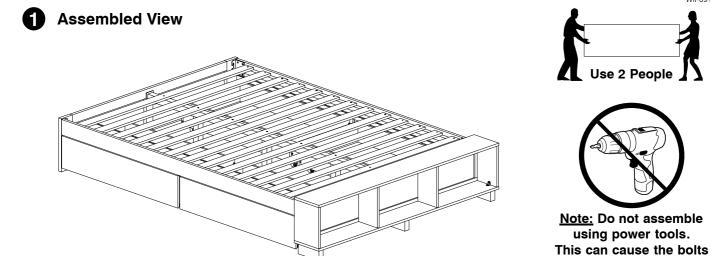


#### 2 Parts List

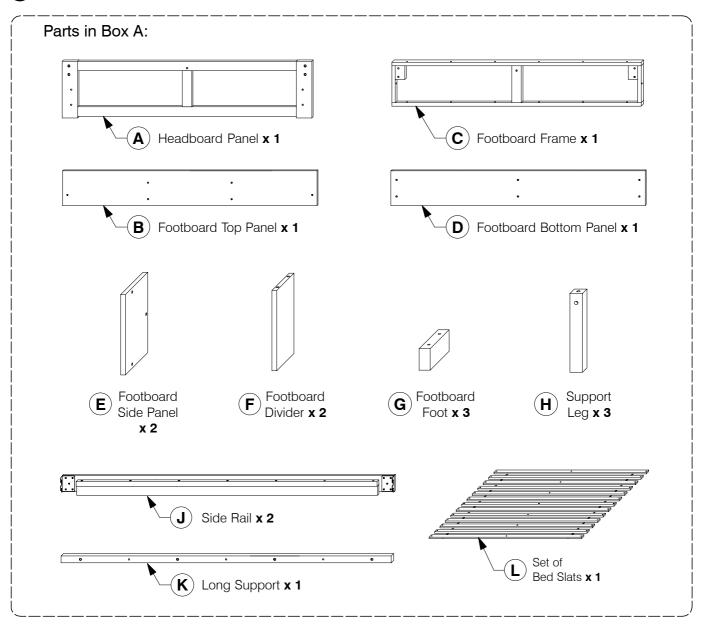


to be overtightened

**Assembly Instructions** 

#### **3** Hardware List

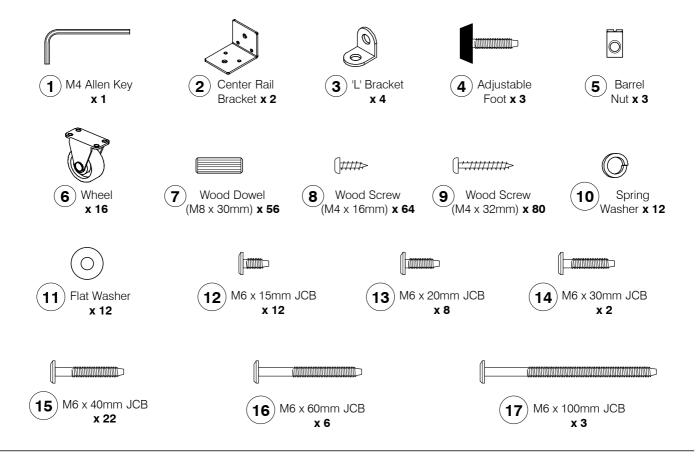


**Assembly Instructions** 

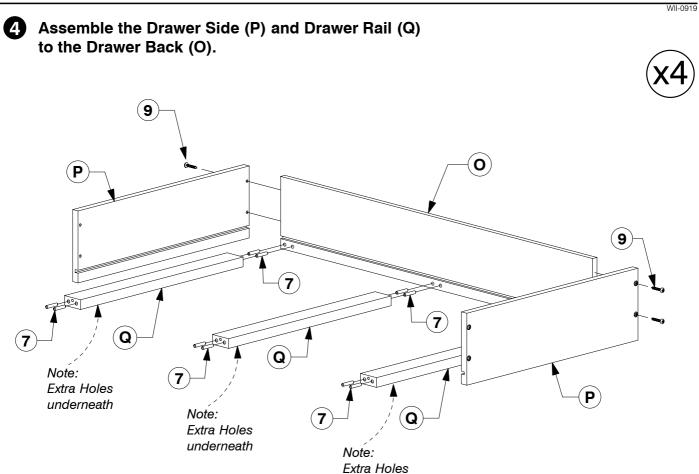

underneath


**5** Slide the Drawer Bottom (N) into the groove on the Drawer Sides (P).

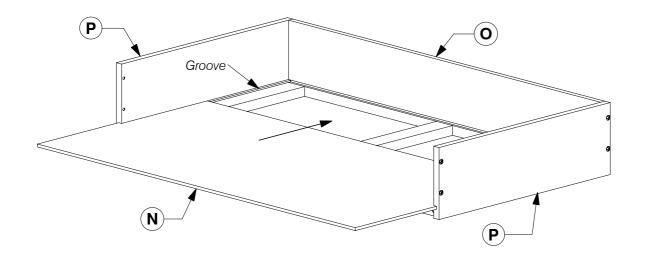


**Assembly Instructions** 

WII-0919


6 Assemble the Drawer Face (M) to the Drawer Sides (P).

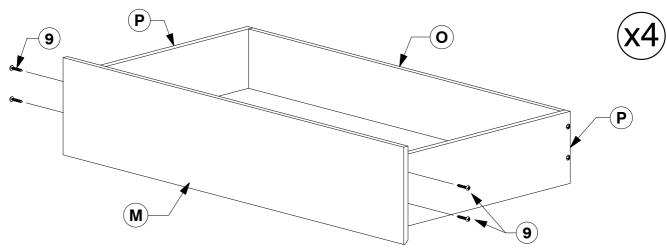

Turn the Drawer over to fit angled 32mm Wood Screws (9) to the Drawer Rails (Q).

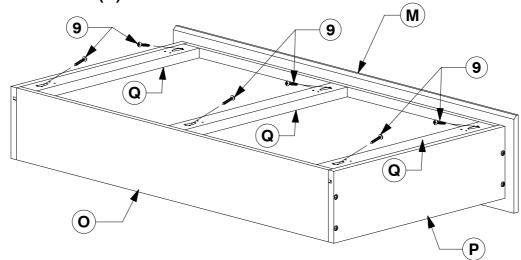


8 Fit the Wheels (6) to the Drawer Side Rail (Q).

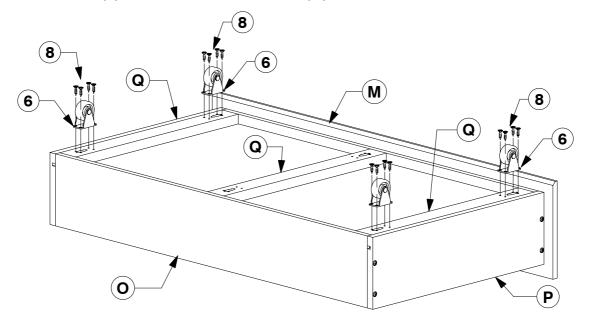


**Assembly Instructions** 

9 Fix the Adjustable foot to the bottom of the Support Leg (H).

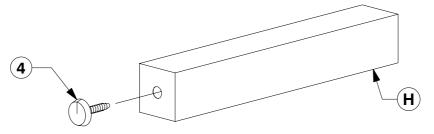


Fit the Center Rail Bracket to the

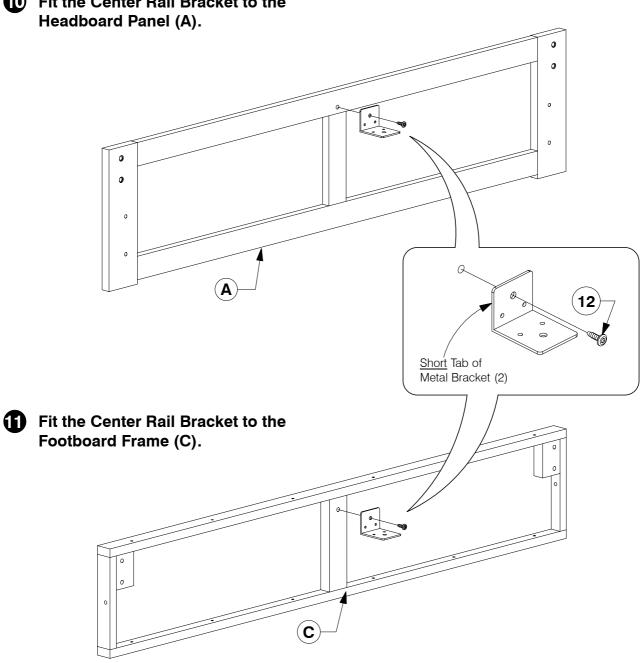


**Assembly Instructions** 

W/II\_0919


Fit 'L' Bracket to the Footboard Side Panel (E). Assembly the Footboard Side Panel (E) to the Footboard Frame (C).

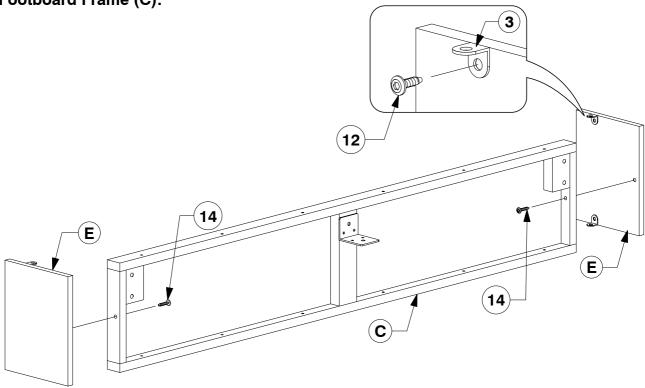


13 Fit the Footboard Foot (G) to the Footboard Bottom Panel (D).

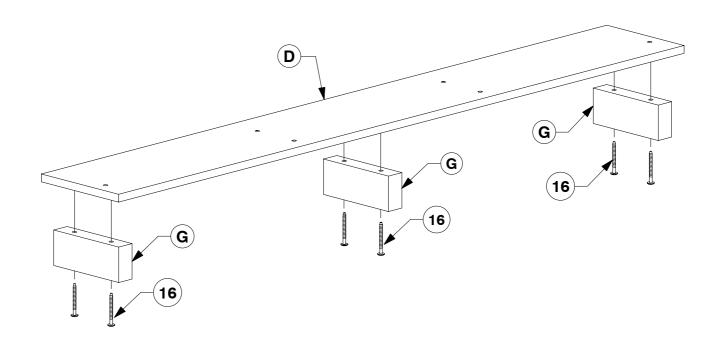



**Assembly Instructions** 

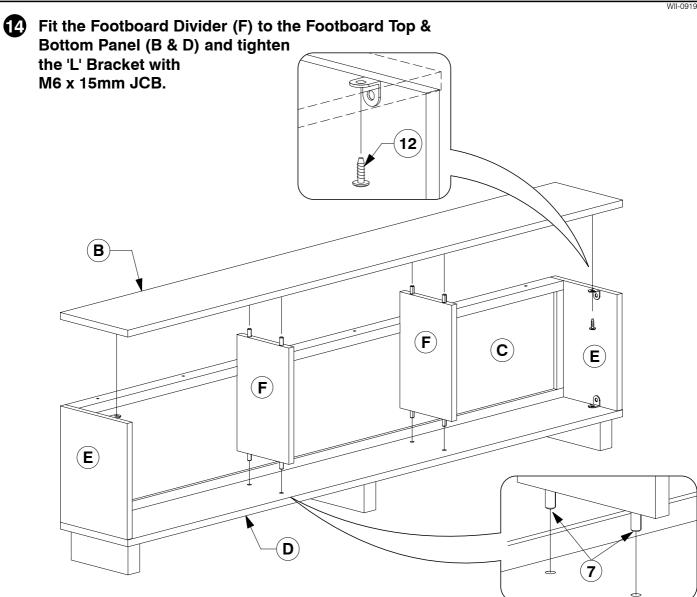

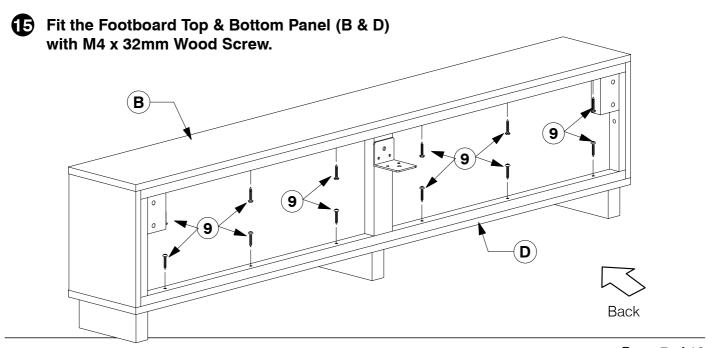


**Assembly Instructions** 

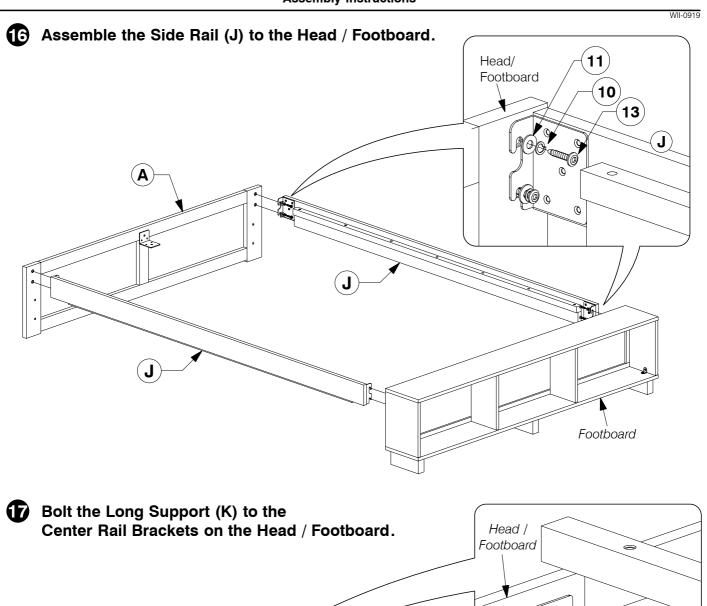


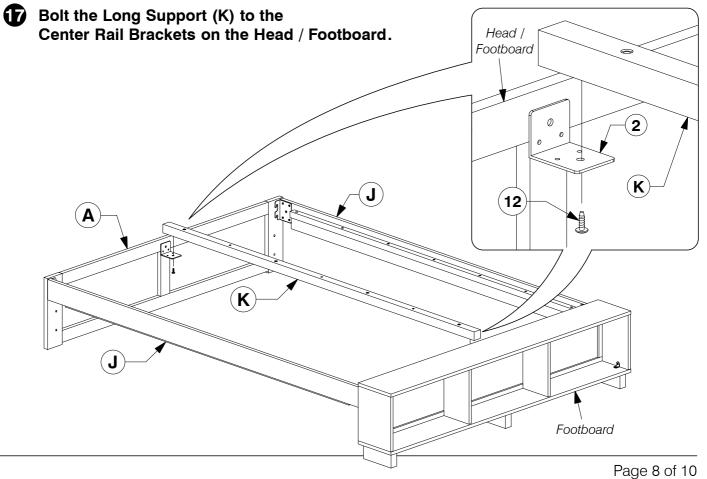

**Assembly Instructions** 

/II 0010

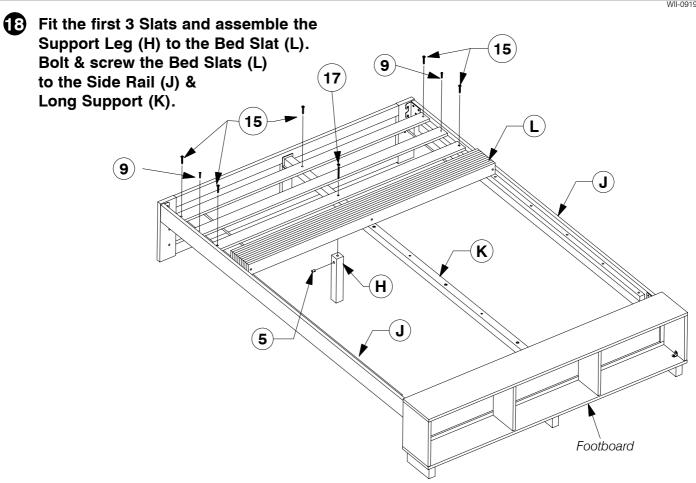

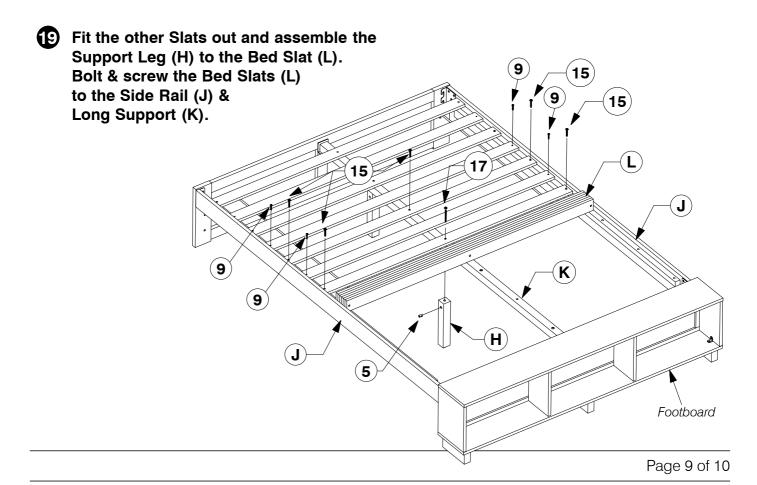

**Assembly Instructions** 

**Λ/II\_∩**010

