



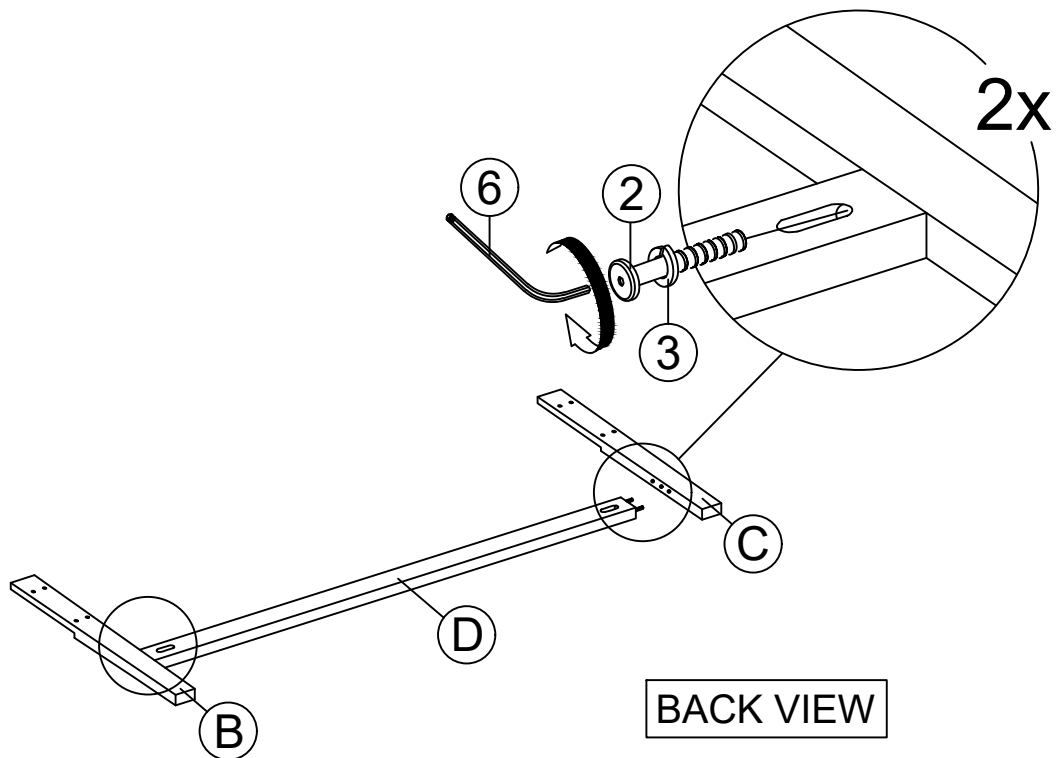


**STEP 1 :** Assemble the Headboard Cross Bar (D) between the Headboard RSF Leg (B) and Headboard LSF Leg (C) by using the Allen Key (6) and the hardware Long Bolt 1/4" x 2" (2) & Spring washer (3).

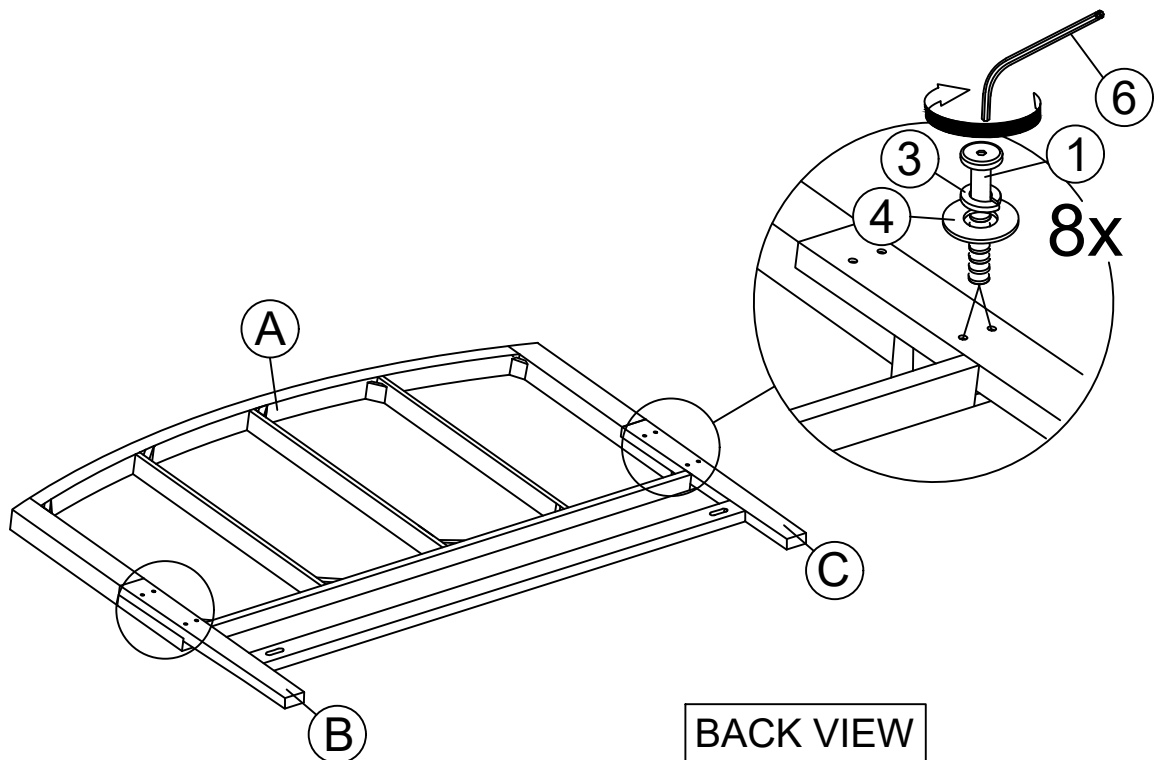


**STEP 2 :** Place the Headboard (A) face down on a flat and clean surface. Assemble the Headboard Legs (B & C) to the Headboard (A) by using the Allen Key (6) and the hardware Short Bolt 1/4" x 1 3/8" (1), Spring washer (3) & Flat washer (4).




**STEP 3 : Assemble the Side Rails (E) to the Headboard Legs (B & C) and Footboard (F) by using the Allen Key (7).**

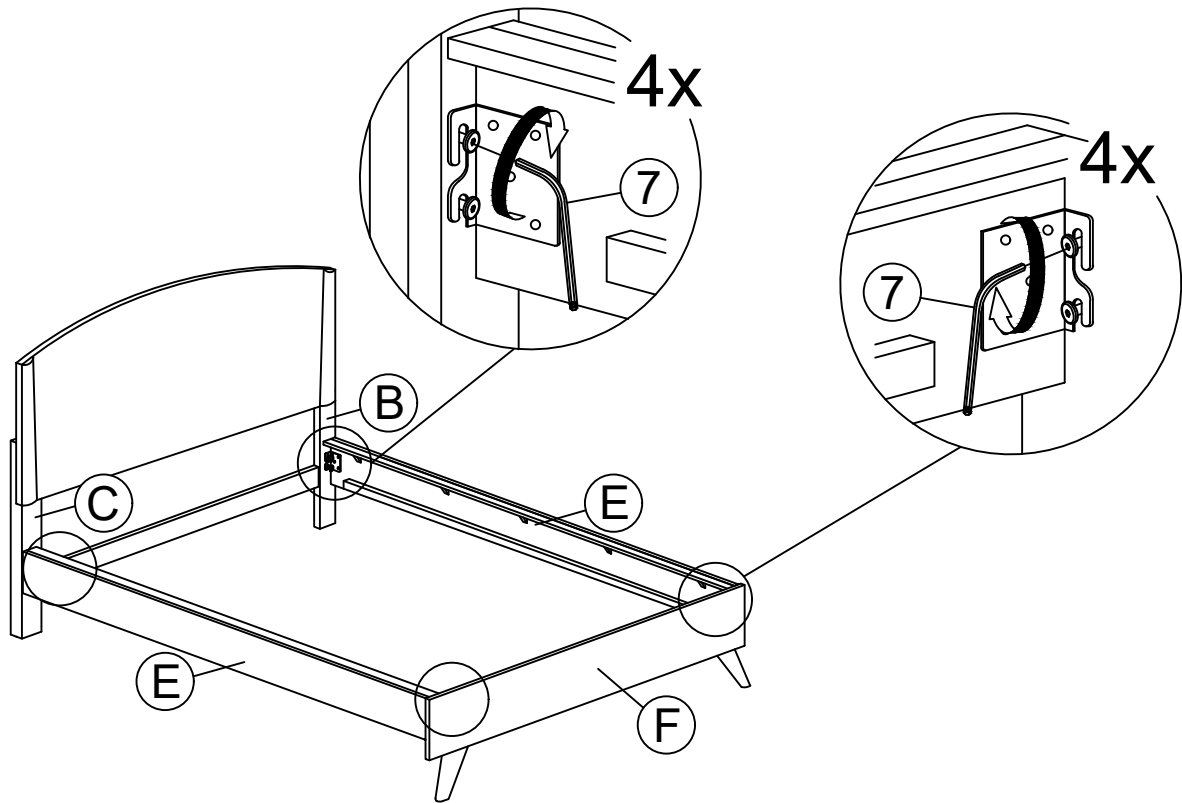

**STEP 4 : Assemble the Slat Support leg (H) to the Slat (G) by using the Allen Key (6) and the hardware Short Bolt 1/4" x 1 3/8" (1) & Spring washer (3).**

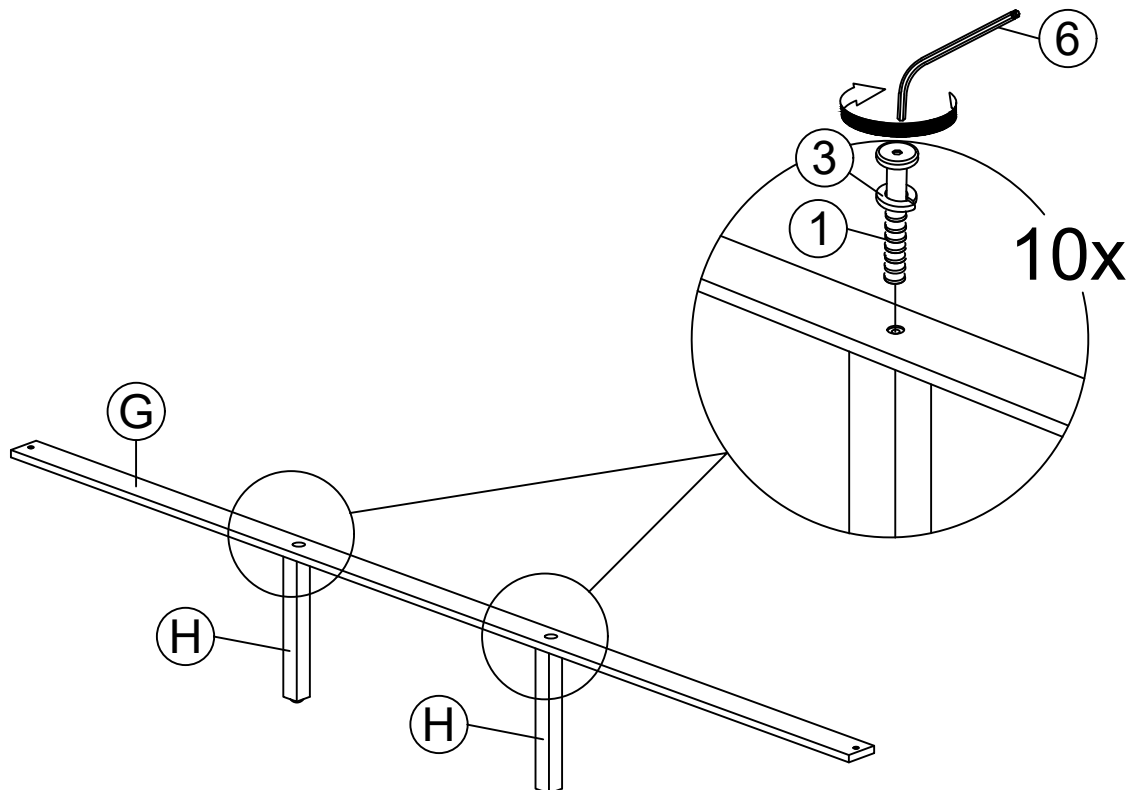

STEP 5 : Assemble the Slat (G) to the the Side Rails (E) by using the Csk Screw 5/32" x 1 1/4" (5) with a screwdriver.

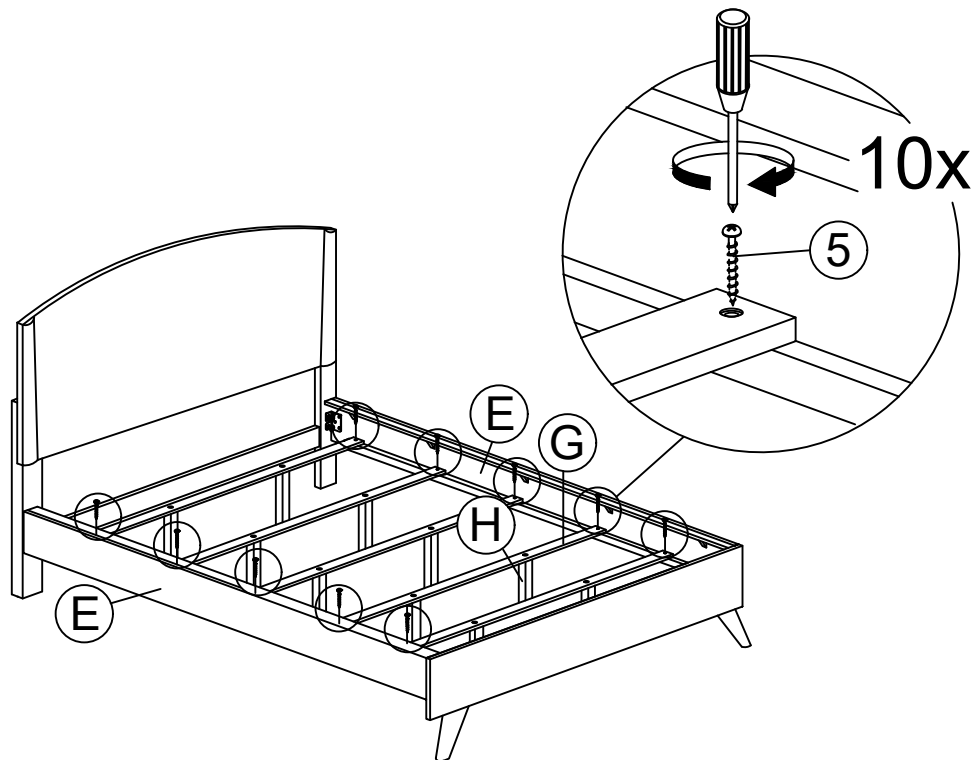

COMPLETED ASSEMBLY.

