
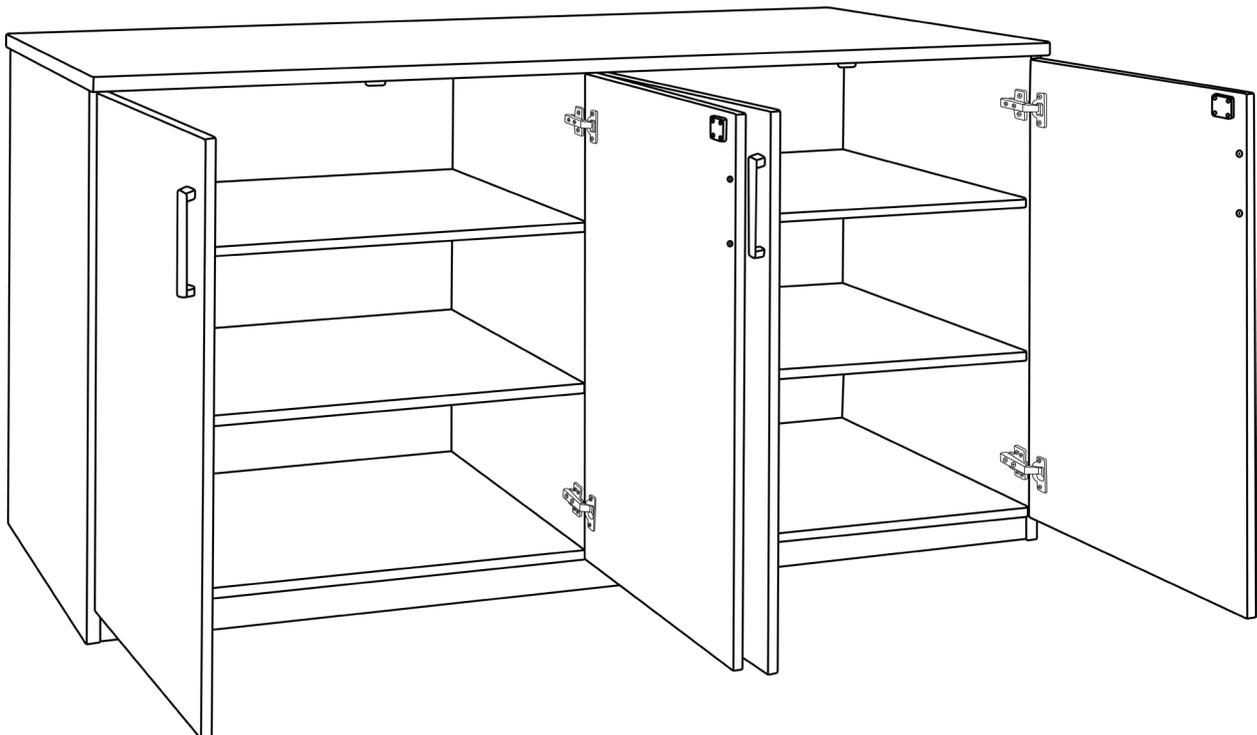


REGENCY

RGS  
FURNITURE

**LSC7236XX**  
Regency Legacy 72" Office Storage Buffet












**CT-SC7236XX**  
RGS Cornerstone 72" Office Storage Buffet

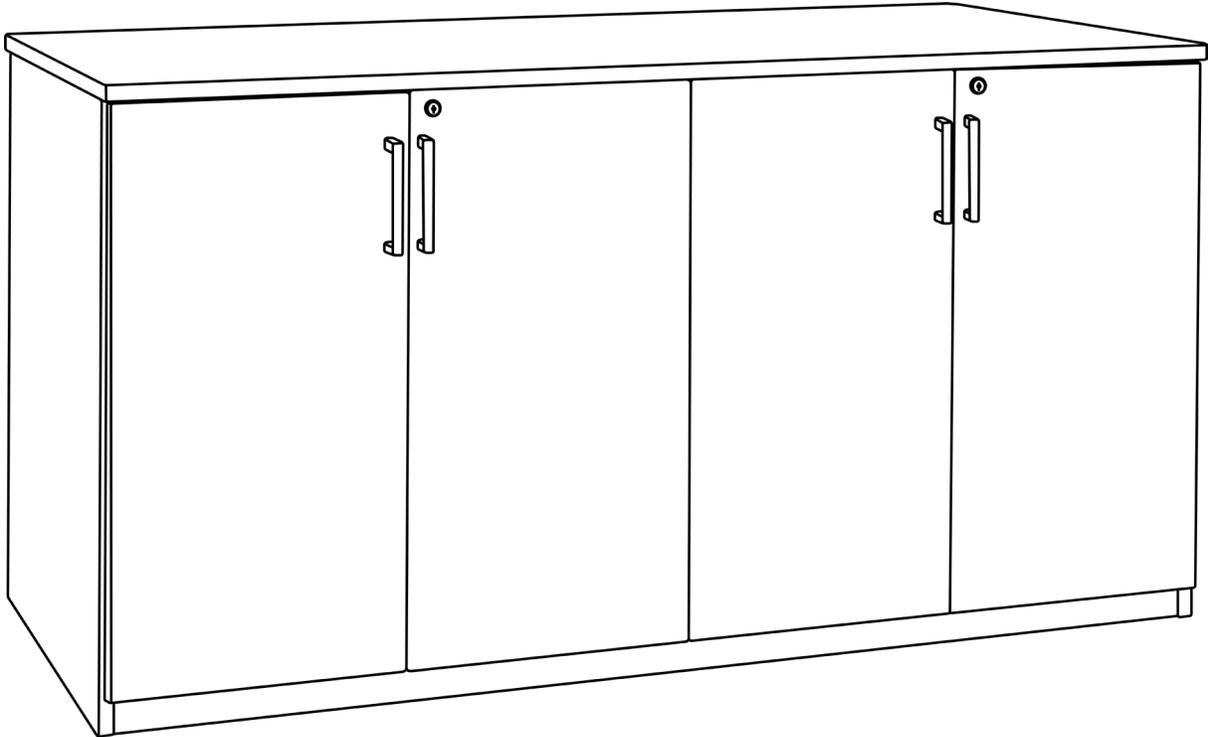


REGENCY RGS  
FURNITURE

**Missing Parts? Assembly Questions?**


Call us at 1-866-816-9822 or email [help@regencyof.com](mailto:help@regencyof.com) for immediate assistance.
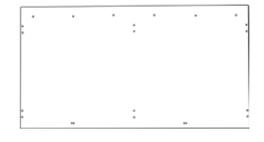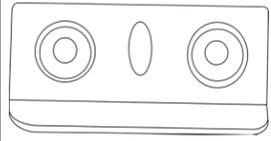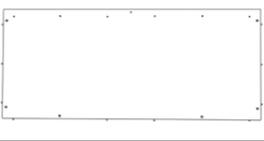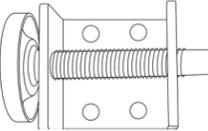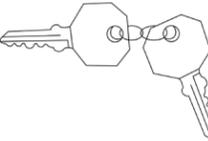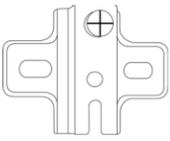
#	Part	Qty	Image	#	Part	Qty	Image
A	Top	1		L	Hinge	8	
B	Sides	2		M	Lock Lip	2	
C	Back Panel	1		N	Cam Pins	20	
D	Bottom Panel	1		O	Small Wood Screws	4	
E	Front Support	1		P	Medium Wood Screws	56	
F	Middle Support	1		Q	Shelf Pins	16	
G	Right Doors	2		R	Adjustable Glides	6	
H	Left Doors	2		S	Large Bolts	8	
I	Center Wall	1		T	Door Handles	4	
J	Shelves	4		U	Keys	2	
K	Hinge Mounting Bracket	8					


**Step 1: Connect Front Support (E) to Middle Support (F) by inserting dowel rods on the Middle Support into the middle of the Front Support**

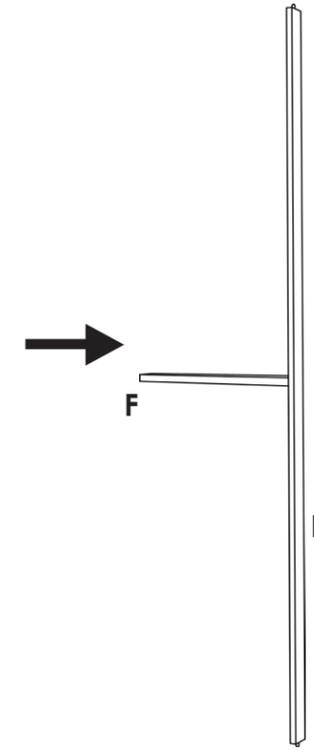


**Step 2: Attach Front Support (E) and Middle Support (F) to the Bottom Panel (D).**

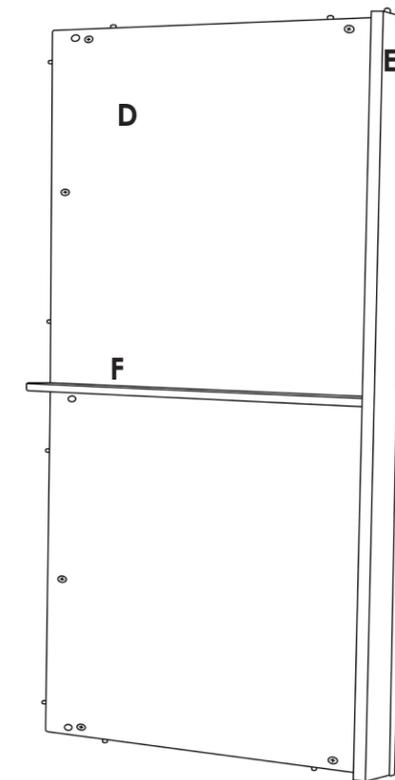


**Step 3: Insert 2 Cam Pins (N) into Back Panel (C) and connect to Bottom by inserting and locking cams.**

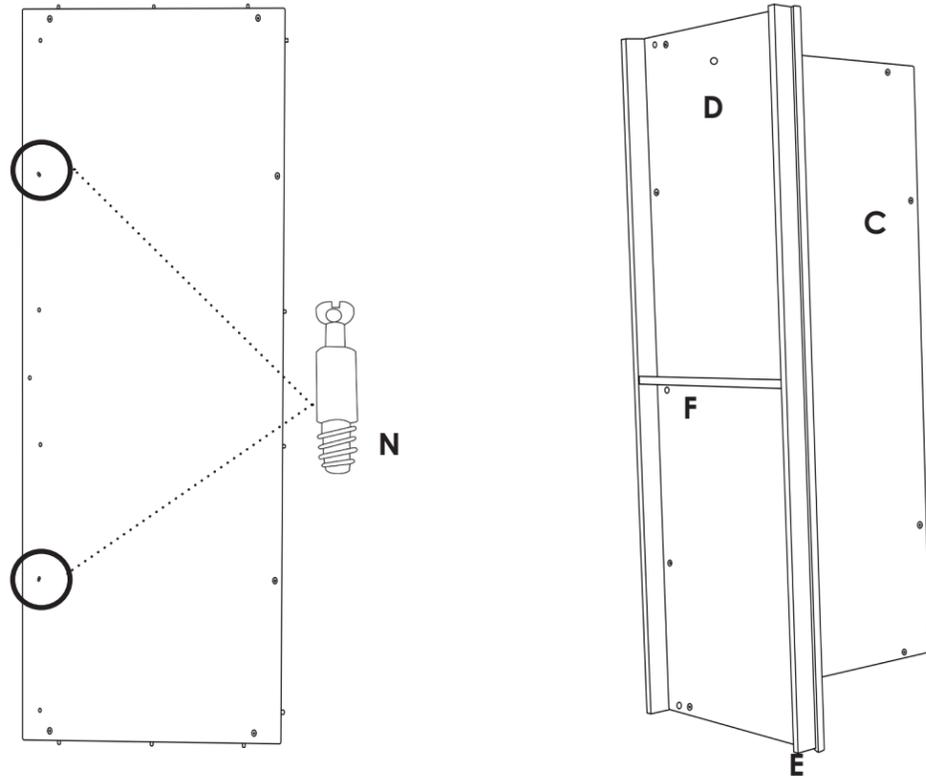


**Step 4: Insert 4 Cam Pins (N) into each Side (B).**

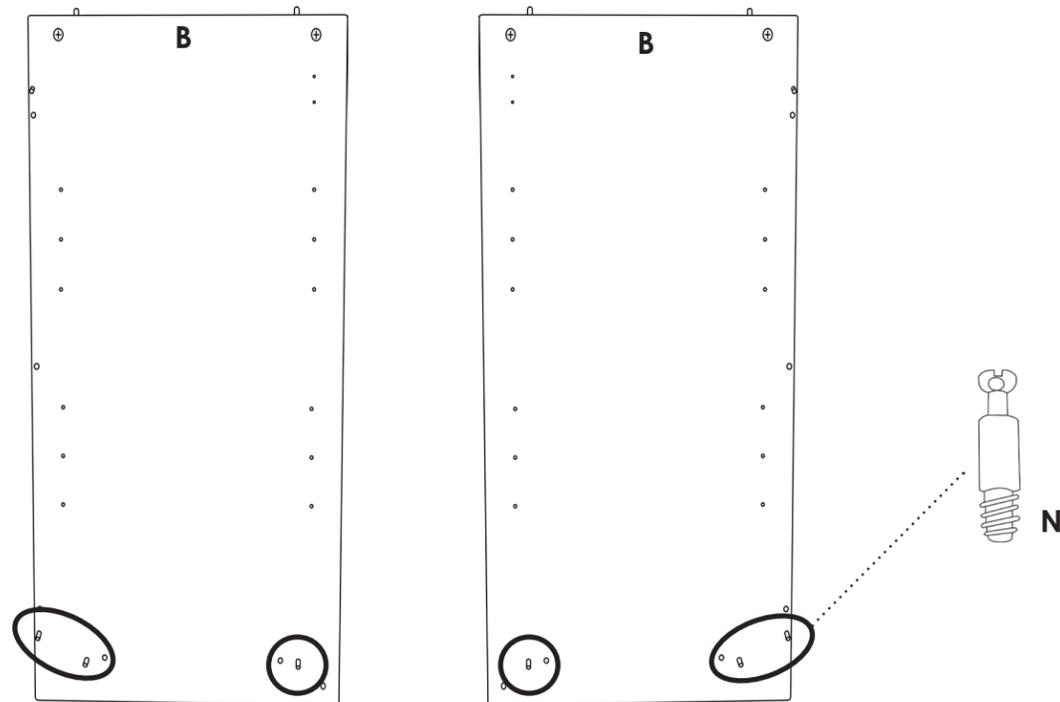


**Step 5: Attach Sides (B) to Back (C) and Bottom by inserting and locking cams.**

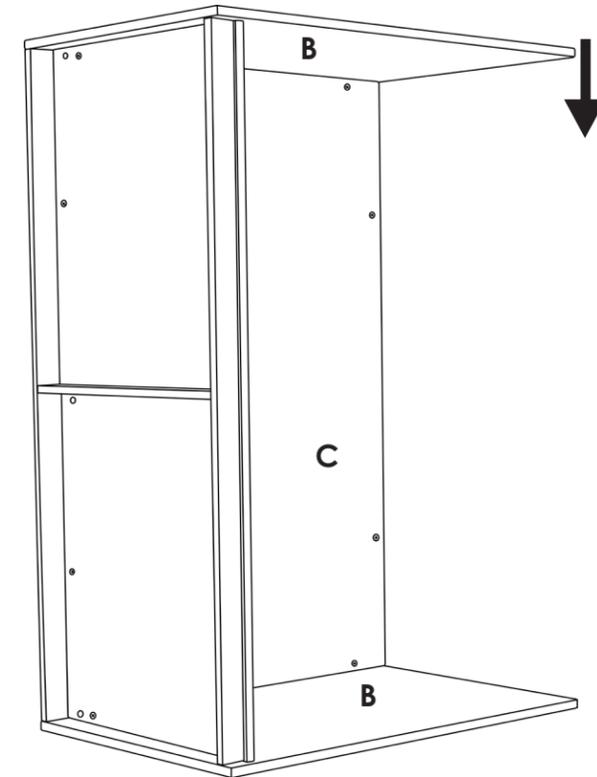


**Step 6: Screw in 6 Adjustable Glides (R) in the locations with 4 Medium Screws (P) each.**

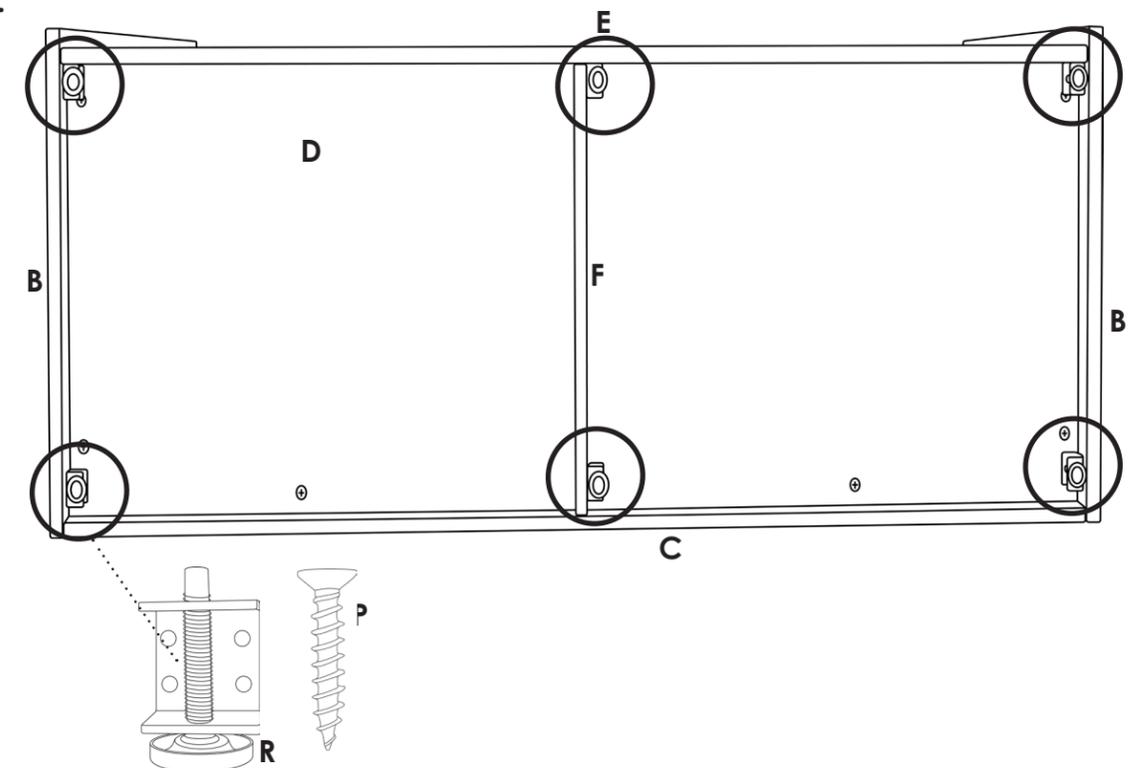


**Step 7: Place 2 Cam Pins (N) in Bottom and attach Center Wall (I) with banded edge facing out.**

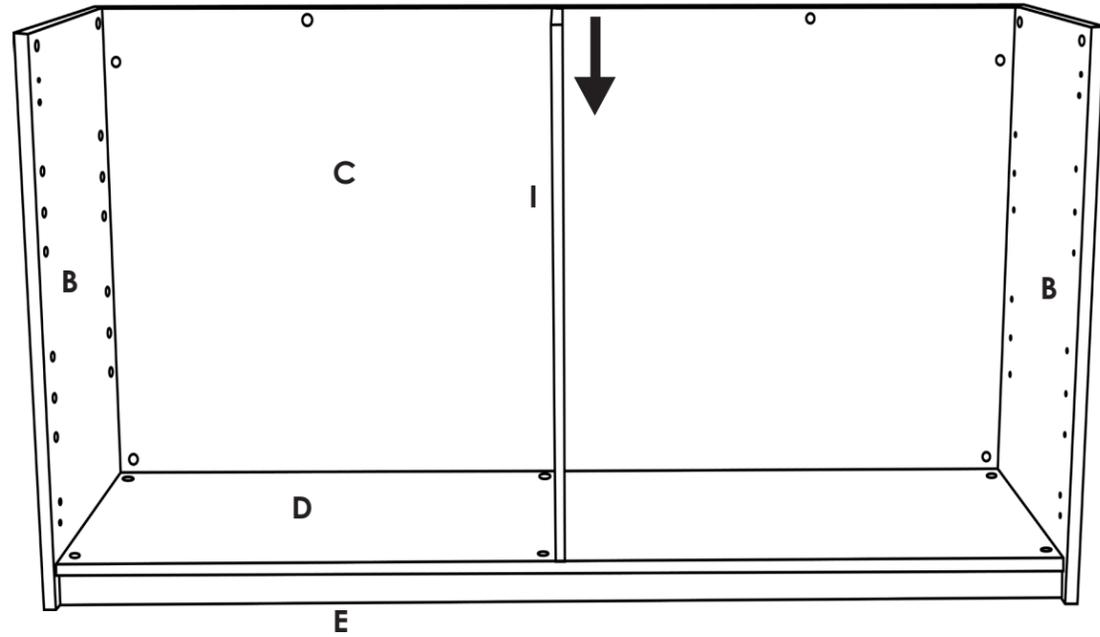


**Step 8: Screw 8 Cam Pins (N) into Top Panel (A). Use 2 Small Screws (O) each to attach Locking Lips (M). Attach Top (A)**

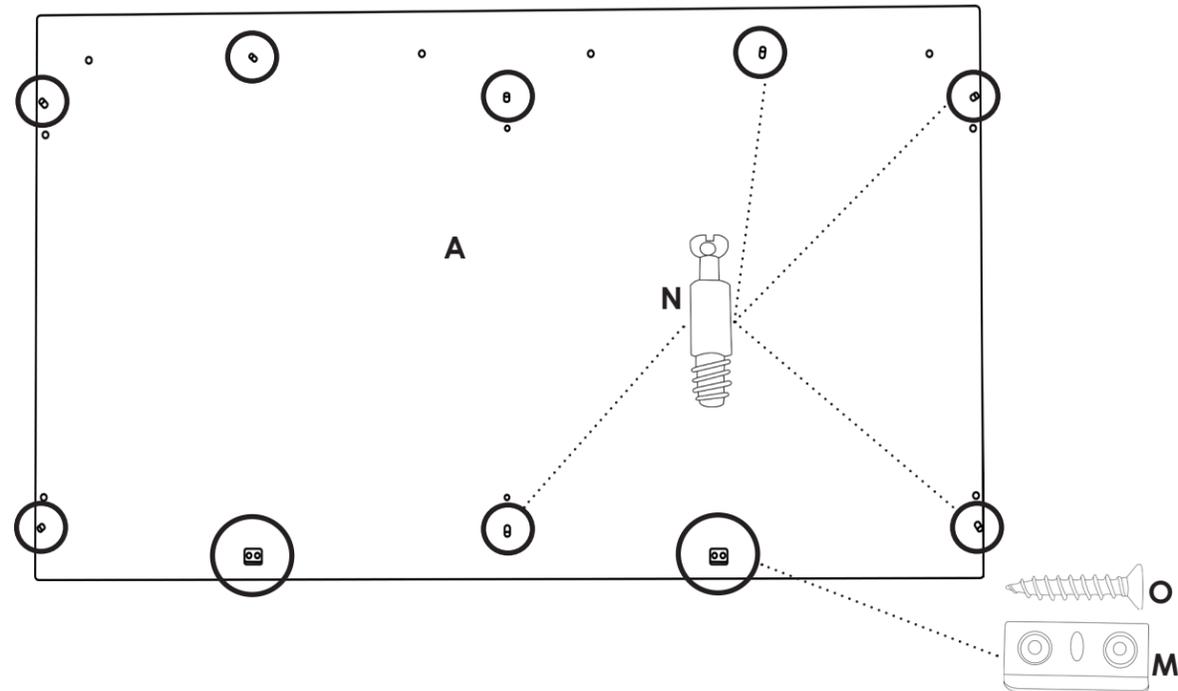


**Step 9: Attach 8 Mounting Brackets (K) to the pre-drilled holes on the Sides and Center Wall with open end facing out.**

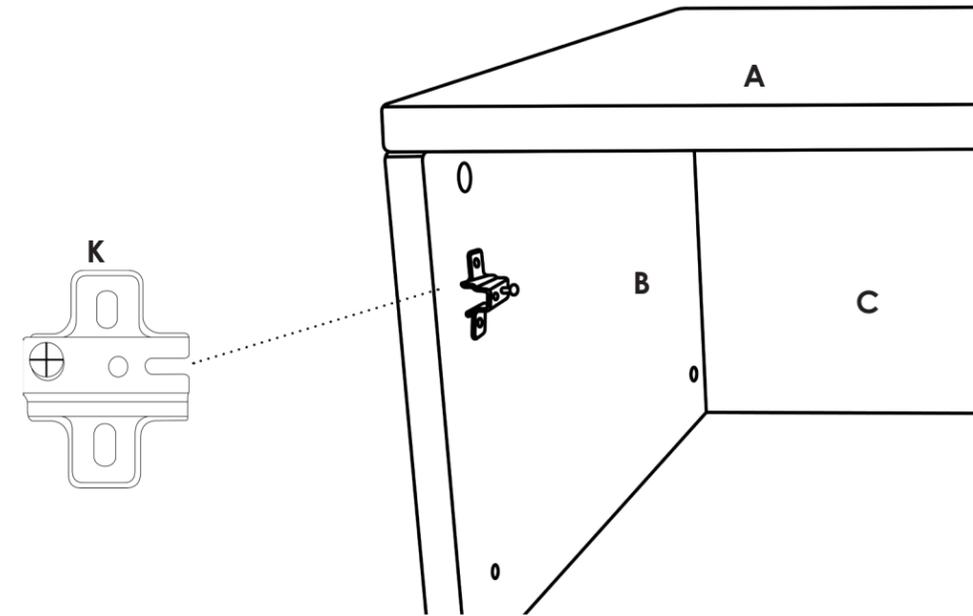

**Step 10: Attach Hinges (L) to Doors (G/H) with 2 Medium Screws (P) each.**

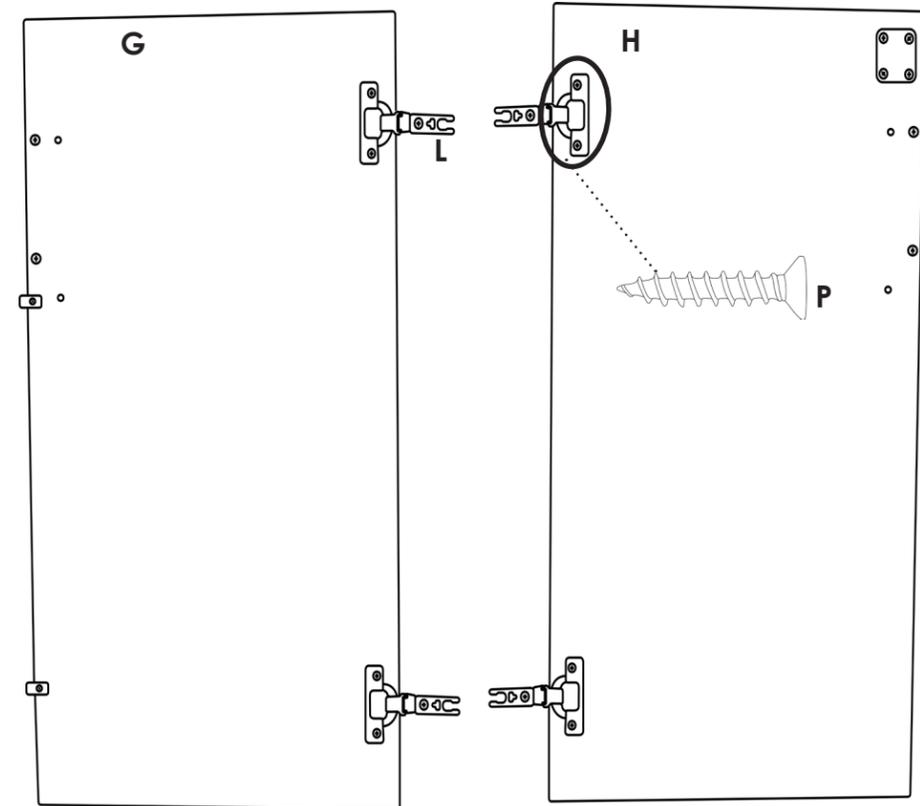

**Step 11: Mount Doors (G/H) to Sides (C) by connecting Mounting Brackets and Hinges. Insert Shelf Pins (Q) at desired heights on Sides (B) & Wall (I) and place Shelves (J).**

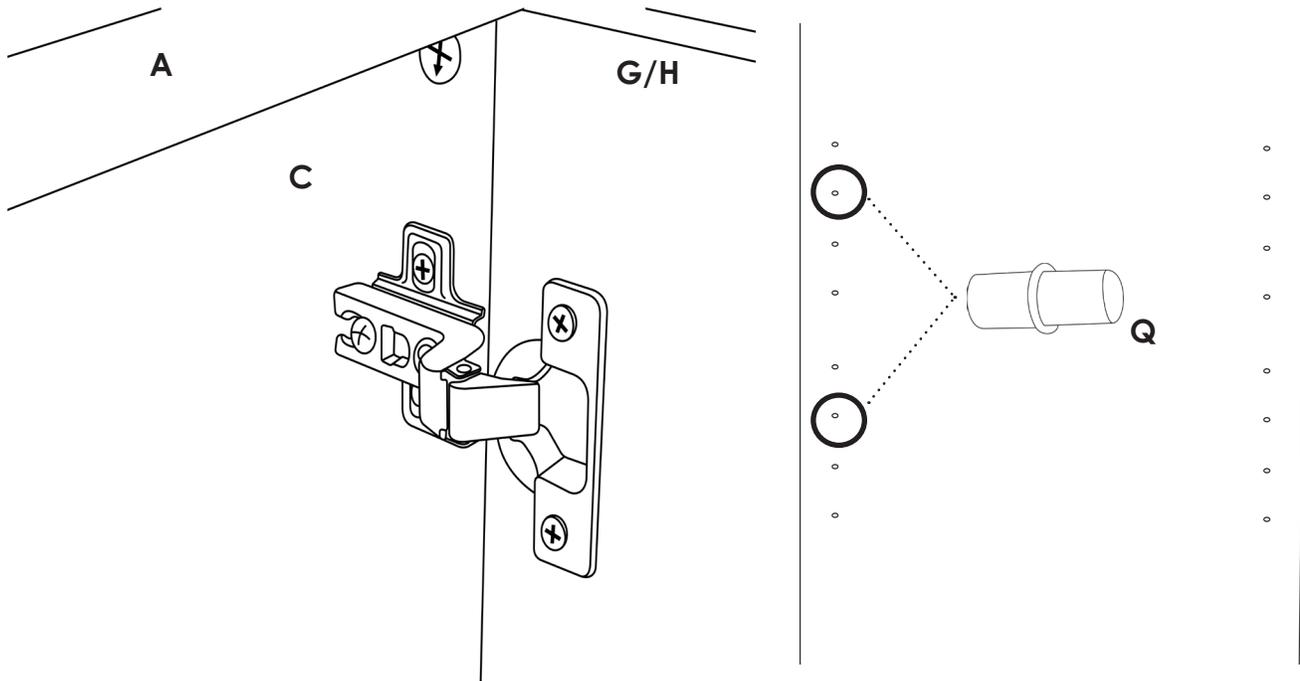

**Step 12: Using 2 Large Bolts (S), attach Handles (T) to Doors (G/H) through the pre-drilled holes.**

