



ITEM NO: I222-422-1/-422-LIN-1 Queen Uph HB
I222-402-1/-402-LIN-1 Queen Rails w/ Decking
I222-403-1/-403-LIN-1 Queen Low Profile FB


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I222-422-1/-422-LIN-1

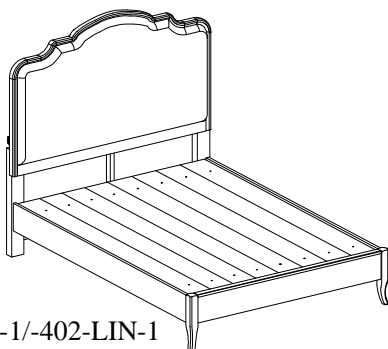

I222-402-1/-402-LIN-1

I222-403-1/-403-LIN-1

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I222-422-1/-422-LIN-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-1/2"		10 PCS
B	Lock Washer Ø5/16"		10 PCS
C	Flat Washer Ø5/16" x 3/4"		10 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-1/4"		4 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" x 3/4"		4 PCS

HARDWARE LIST: I222-402-1/-402-LIN-1

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3"		8 PCS
I	Half Moon Washer Ø5/16"		8 PCS
J	Hex Nut Ø5/16"		8 PCS
K	Hex Wrench 13mm		1 PC
L	Wood Screw #4 x 1-1/4"		12 PCS
M	Wood Screw #4 x 3/4"		16 PCS
N	Bolt Ø1/4" x 1-1/4"		10 PCS
O	Lock Washer Ø1/4"		10 PCS
P	Flat Washer Ø1/4" x 3/4"		10 PCS
Q	Allen Wrench 4mm		1 PC

COMPONENTS LIST: I222-422-1/-422-LIN-1

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I222-402-1/-402-LIN-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Decking		8 PCS
4	Support Leg (for center rail)		3 PCS
5	Center rail		1 PC

COMPONENTS LIST: I222-403-1/-403-LIN-1


No.	Description	Sketch	Quantity
1	Footboard		1 PC

FOR INDOOR USE ONLY




ITEM NO: I222-422-1/-422-LIN-1 Queen Uph HB
I222-402-1/-402-LIN-1 Queen Rails w/ Decking
I222-403-1/-403-LIN-1 Queen Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts (A), lock washers (B) and flat washers (C). Do not tighten bolts until STEP 3.

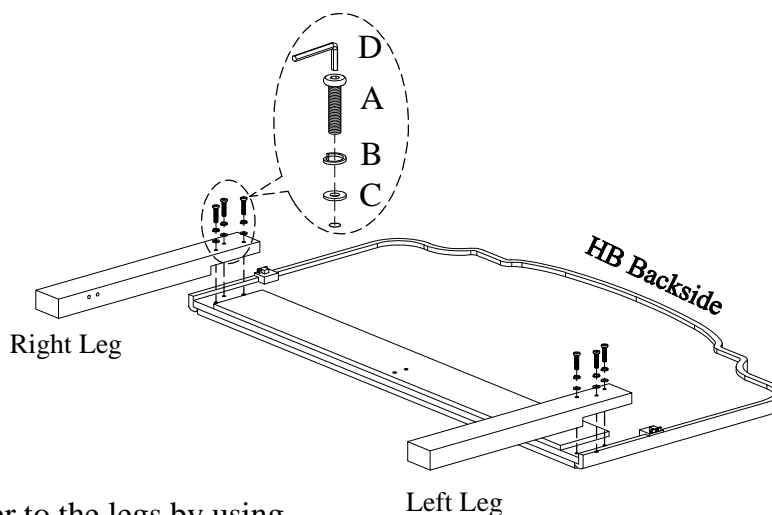

STEP 2: Attach the wood stretcher to the legs by using 4 bolts (A), lock washers (B) and flat washers (C).

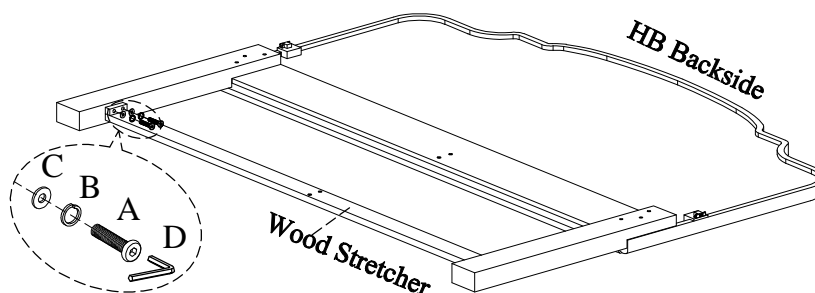


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts (E), lock washers (F) and flat washers (G). Completely tighten all bolts.

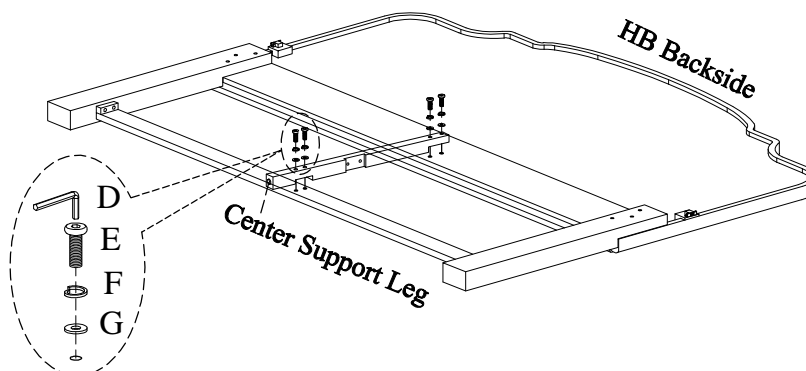


ITEM NO: I222-422-1/-422-LIN-1
 I222-402-1/-402-LIN-1
 I222-403-1/-403-LIN-1

Queen Uph HB
 Queen Rails w/ Decking
 Queen Low Profile FB


STEP 4: Screw the bolts (H) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer (I) and hex nuts (J). Then use a hex wrench (K) to tighten all the nuts.

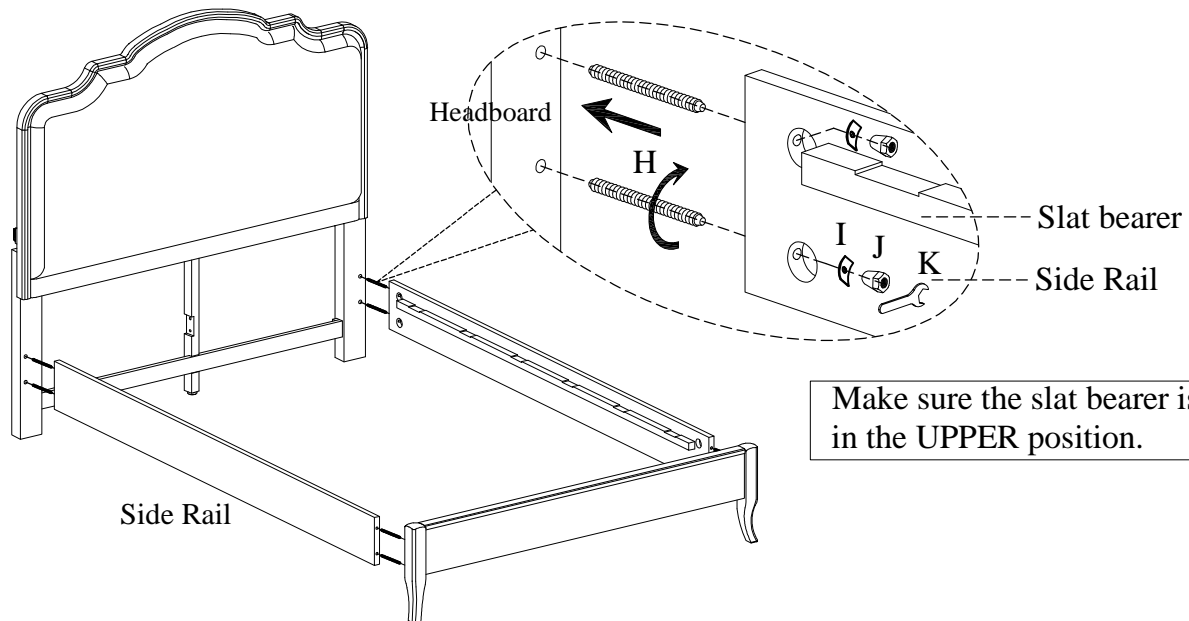

STEP 5: The center support is in the Bed rails carton. Attach the center rail to the footboard and center support leg of headboard using 4 bolts (N), lock washers (O) and flat washers (P).

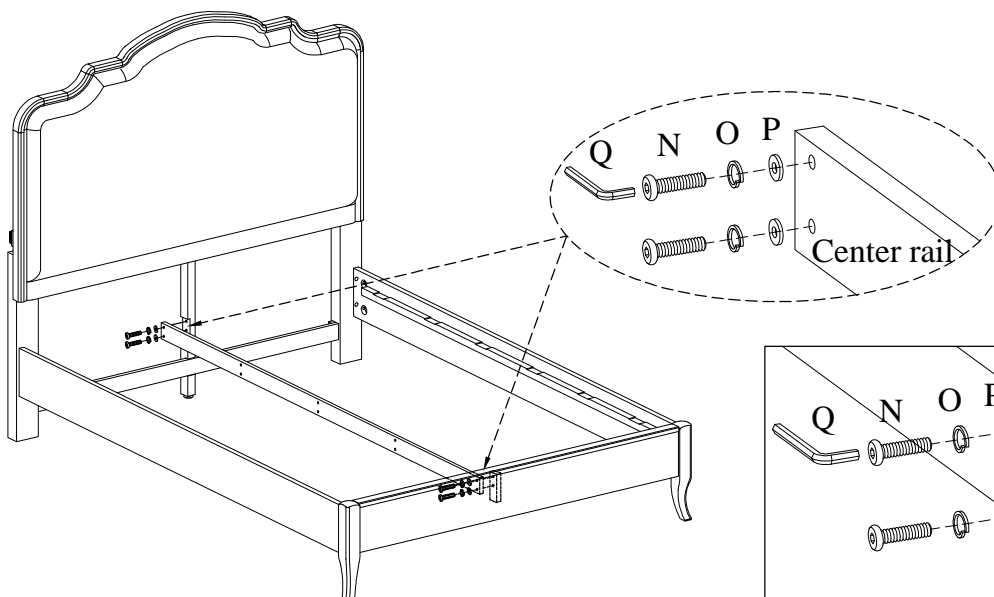

STEP 6: Attach 3 support legs (for center rail) to the center rail using 6 bolts (N), lock washers (O) and flat washers (P). Use the Allen Wrench (Q) to tighten all of the bolts.

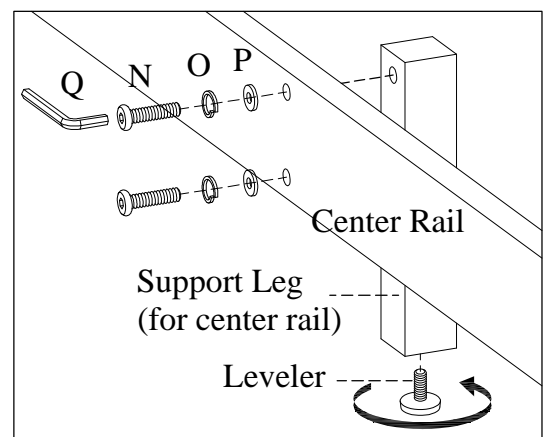





ITEM NO: I222-422-1/-422-LIN-1
I222-402-1/-402-LIN-1
I222-403-1/-403-LIN-1

Queen Uph HB
Queen Rails w/ Decking
Queen Low Profile FB

STEP 7: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (L).

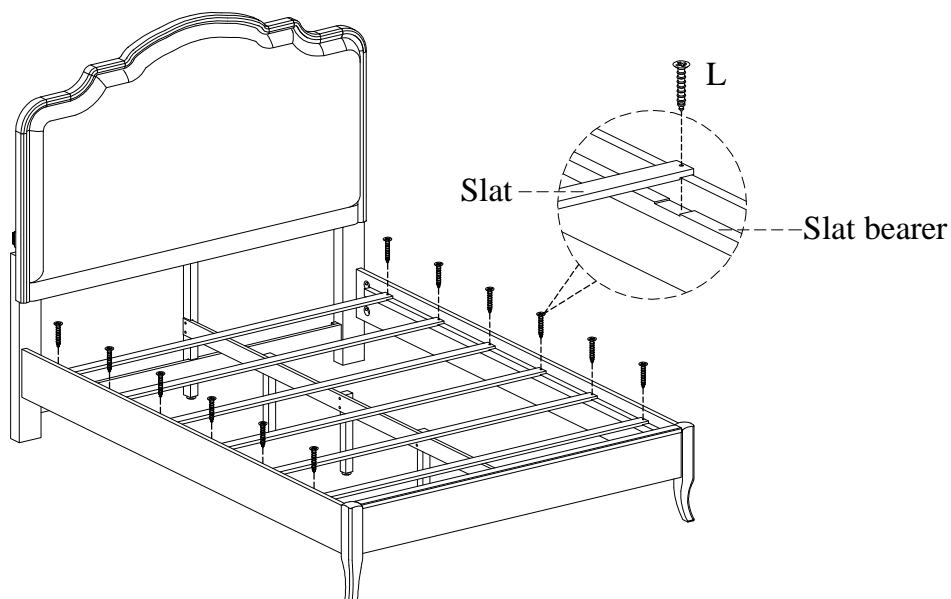

STEP 8: Put the decking over the slats, secure decking to the slats with wood screws (M) through the pre-drilled holes in the decking as shown below.

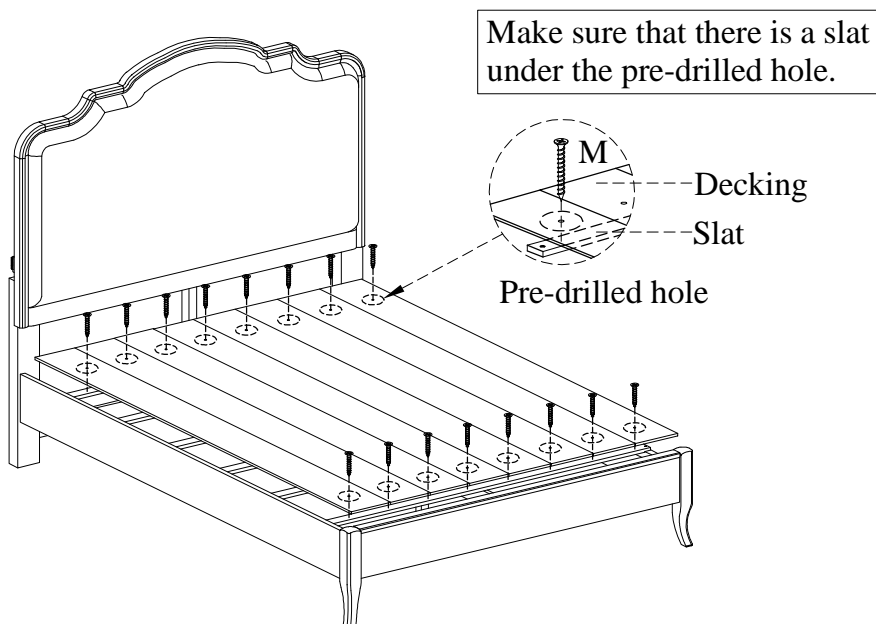




ITEM NO: I222-422-1/-422-LIN-1
I222-402-1/-402-LIN-1
I222-403-1/-403-LIN-1

Queen Uph HB
Queen Rails w/ Decking
Queen Low Profile FB

FUNCTIONALITY INSTRUCTION

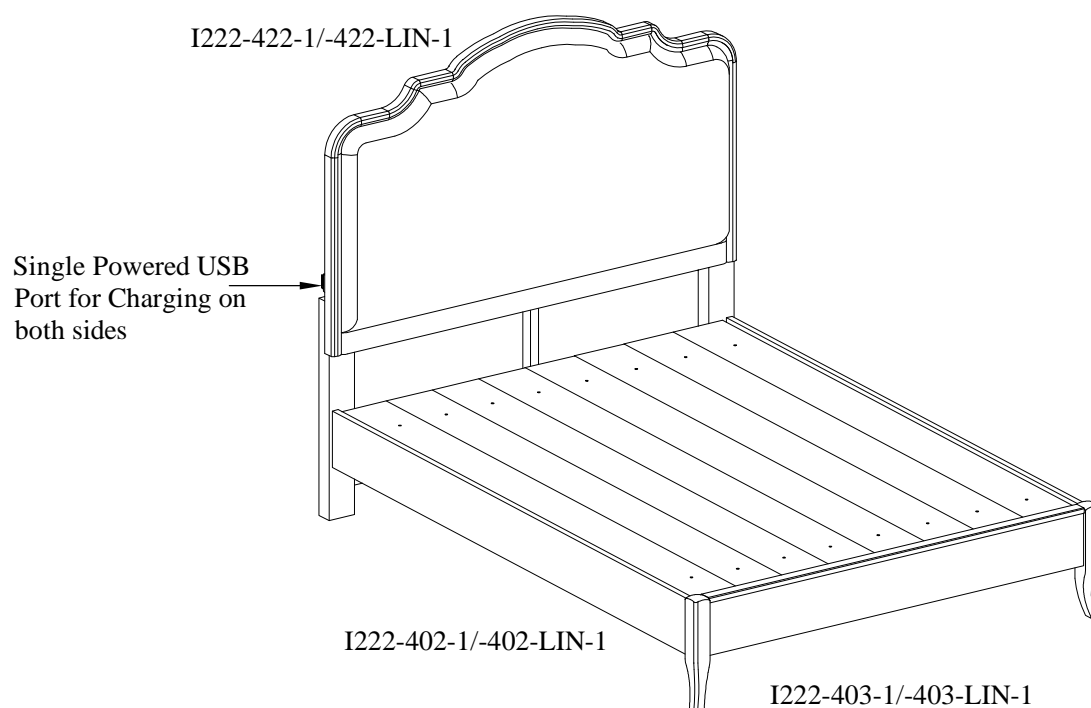

ITEM NO: I222-425-1/-425-LIN-1 King Uph HB
 I222-406-1/-406-LIN-1 King Rails w/ Decking
 I222-410-1/-410-LIN-1 Cal King Rails w/ Decking
 I222-407-1/-407-LIN-1 King Low Profile FB


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I222-425-1/-425-LIN-1

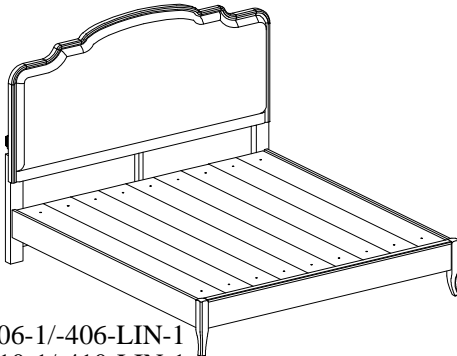

I222-406-1/-406-LIN-1
 I222-410-1/-410-LIN-1

I222-407-1/-407-LIN-1

HARDWARE LIST: I222-425-1/-425-LIN-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-1/2"		10 PCS
B	Lock Washer Ø5/16"		10 PCS
C	Flat Washer Ø5/16" x 3/4"		10 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-1/4"		4 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" x 3/4"		4 PCS

HARDWARE LIST: I222-406-1/-406-LIN-1/410-1/-410-LIN-1

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3"		8 PCS
I	Half Moon Washer Ø5/16"		8 PCS
J	Hex Nut Ø5/16"		8 PCS
K	Hex Wrench 13mm		1 PC
L	Wood Screw #4 x 1-1/4"		12 PCS
M	Wood Screw #4 x 3/4"(only for-406)		18 PCS
N	Wood Cap (only for 410)		8 PCS
O	Wood Screw #4 x 3/4"(only for-410)		16 PCS
P	Bolt Ø1/4" x 1-1/4"		10 PCS
Q	Lock Washer Ø1/4"		10 PCS
R	Flat Washer Ø1/4" x 3/4"		10 PCS
S	Allen Wrench 4mm		1 PC

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

COMPONENTS LIST: I222-425-1/-425-LIN-1

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I222-406-1/-406-LIN-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Decking		9 PCS
4	Support Leg (for center rail)		3 PCS
5	Center rail		1 PC

COMPONENTS LIST: I222-410-1/-410-LIN-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Decking		8 PCS
4	Support Leg (for center rail)		3 PCS
5	Center rail		1 PC

COMPONENTS LIST: I222-407-1/-407-LIN-1


No.	Description	Sketch	Quantity
1	Footboard		1 PC

FOR INDOOR USE ONLY




ITEM NO: I222-425-1/-425-LIN-1	King Uph HB
I222-406-1/-406-LIN-1	King Rails w/ Decking
I222-410-1/-410-LIN-1	Cal King Rails w/ Decking
I222-407-1/-407-LIN-1	King Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts (A), lock washers (B) and flat washers (C). Do not tighten bolts until STEP 3.

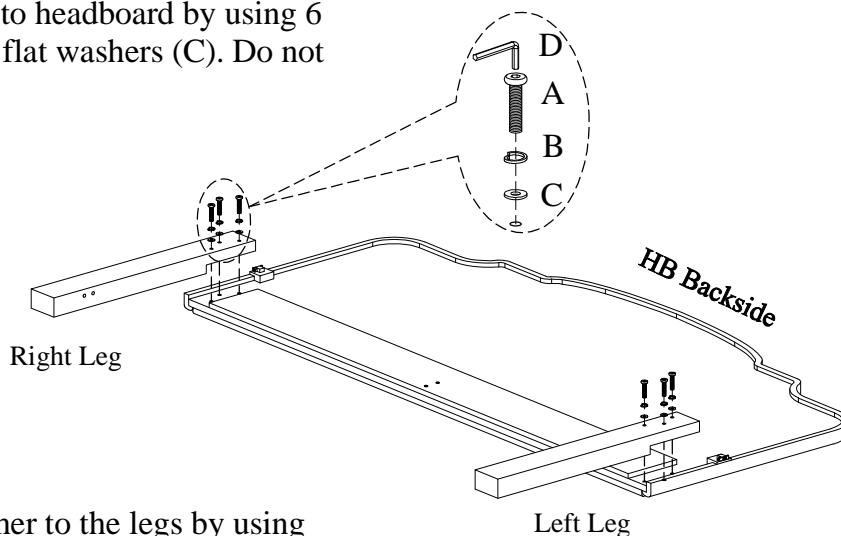

STEP 2: Attach the wood stretcher to the legs by using 4 bolts (A), lock washers (B) and flat washers (C).

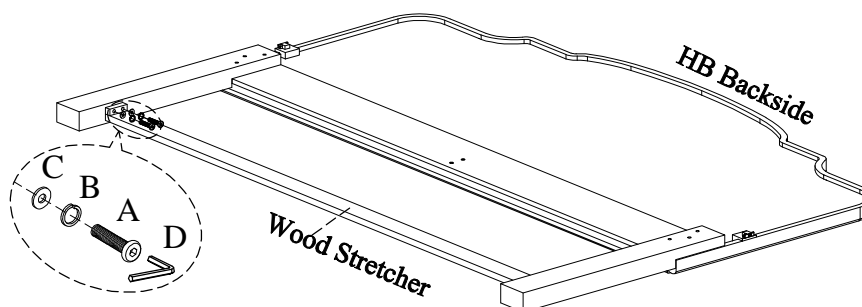


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts (E), lock washers (F) and flat washers (G). Completely tighten all bolts.

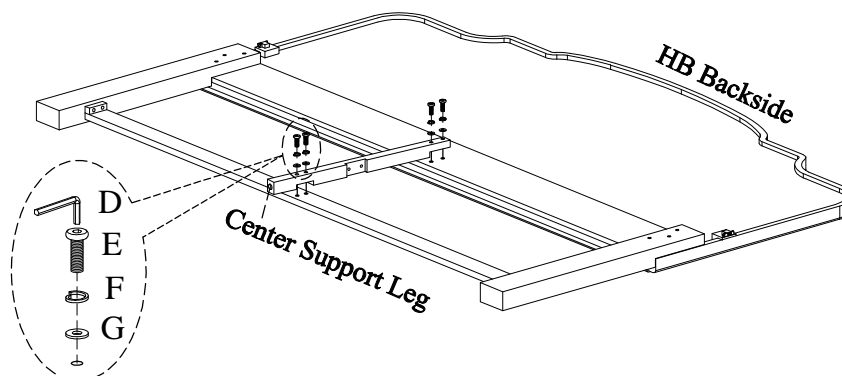


ITEM NO: I222-425-1/-425-LIN-1 King Uph HB
 I222-406-1/-406-LIN-1 King Rails w/ Decking
 I222-410-1/-410-LIN-1 Cal King Rails w/ Decking
 I222-407-1/-407-LIN-1 King Low Profile FB


STEP 4: Screw the bolts (H) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer (I) and hex nuts (J). Then use a hex wrench (K) to tighten all the nuts.

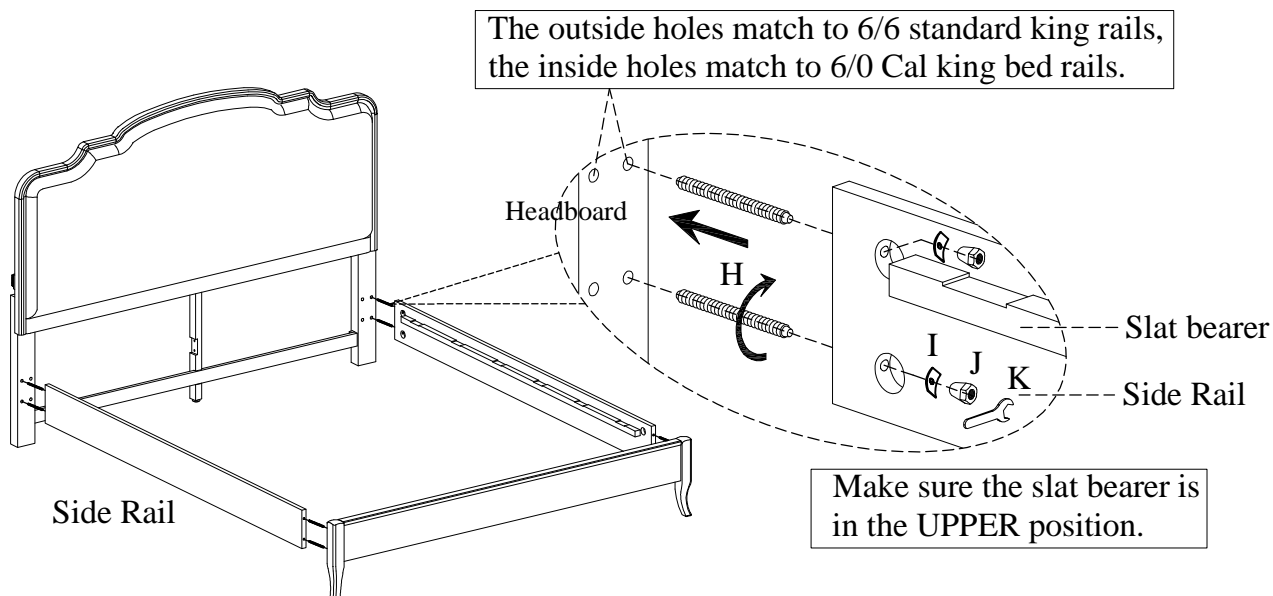

STEP 5: The standard king center support is in the King rails carton, and the Cal king center rail is in the Cal King rails carton. Attach the appropriate center rail to the footboard and center support leg of headboard using 4 bolts (P), lock washers (Q) and flat washers (R).

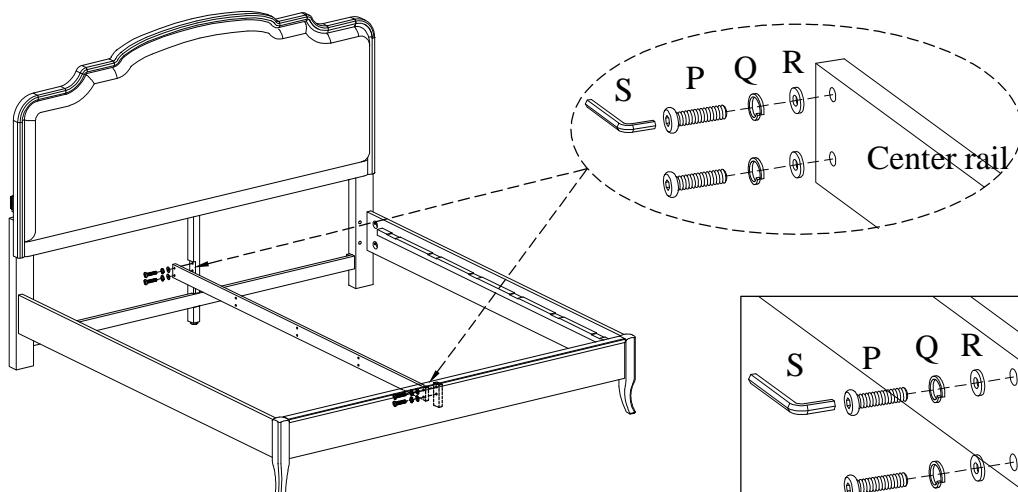


STEP 6: Attach 3 support legs (for center rail) to the center rail using 6 bolts (P), lock washers (Q) and flat washers (R). Use the Allen Wrench (S) to tighten all of the bolts.

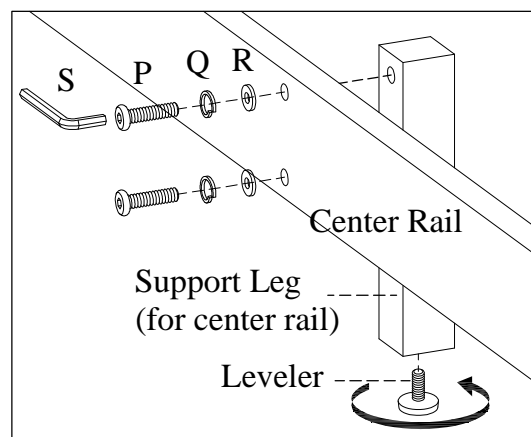




ITEM NO: I222-425-1/-425-LIN-1 King Uph HB
I222-406-1/-406-LIN-1 King Rails w/ Decking
I222-410-1/-410-LIN-1 Cal King Rails w/ Decking
I222-407-1/-407-LIN-1 King Low Profile FB


STEP 7: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (L).

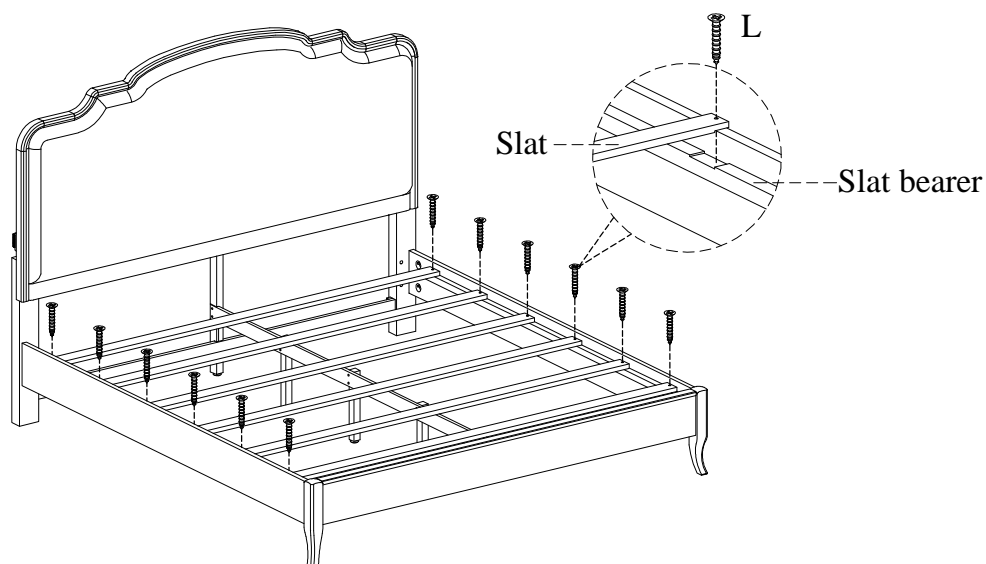

STEP 8: Put the decking over the slats, secure decking to the slats with wood screws (M & O) through the pre-drilled holes in the decking as shown below.

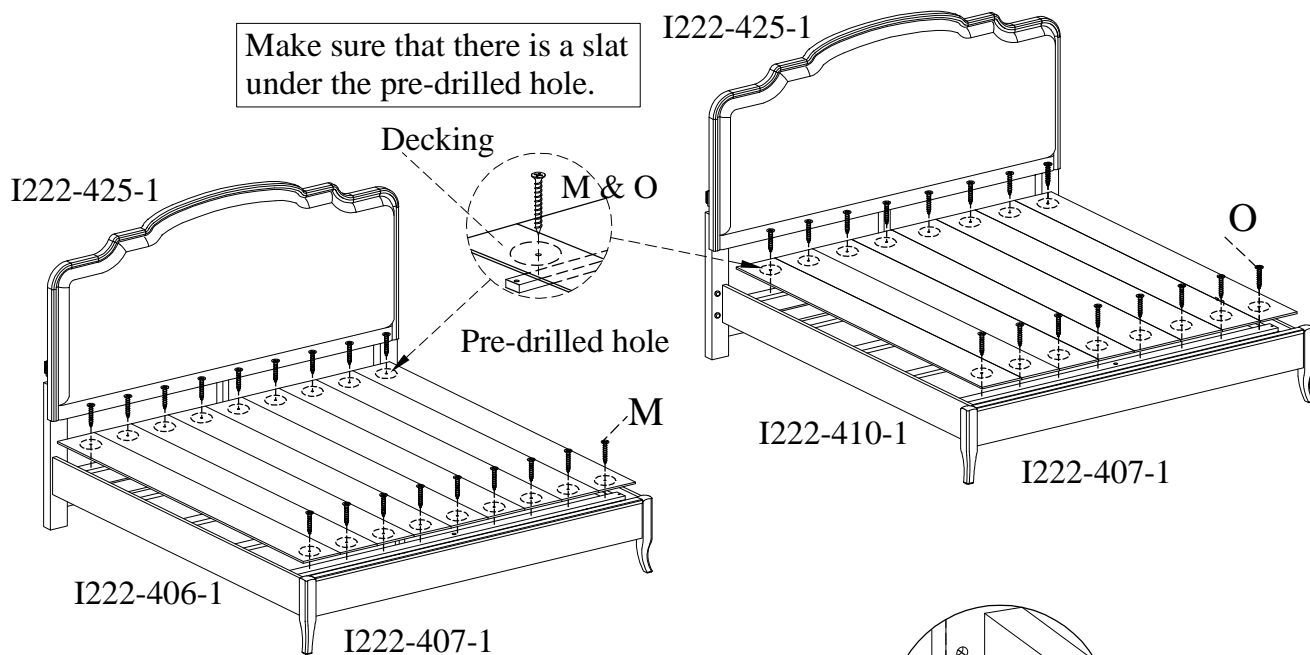


STEP 9: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

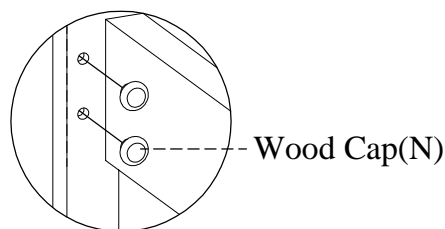




ITEM NO: I222-425-1/-425-LIN-1 King Uph HB
I222-406-1/-406-LIN-1 King Rails w/ Decking
I222-410-1/-410-LIN-1 Cal King Rails w/ Decking
I222-407-1/-407-LIN-1 King Low Profile FB

FUNCTIONALITY INSTRUCTION

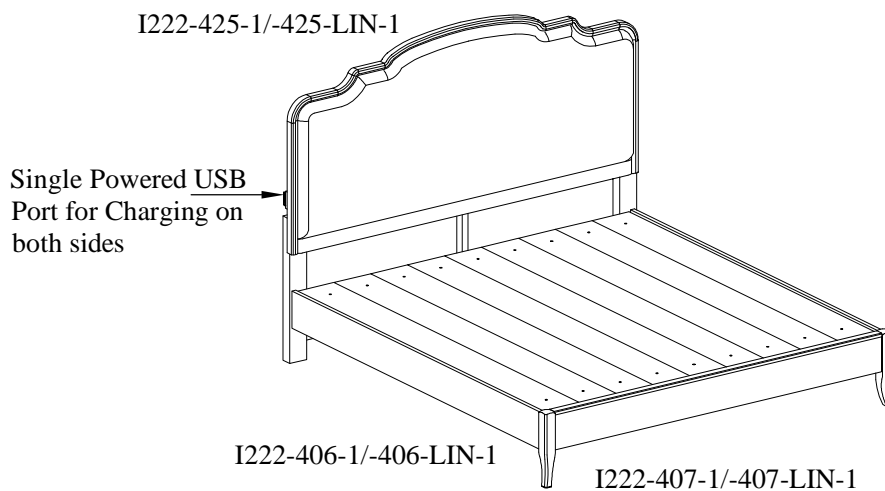

Standard king bed

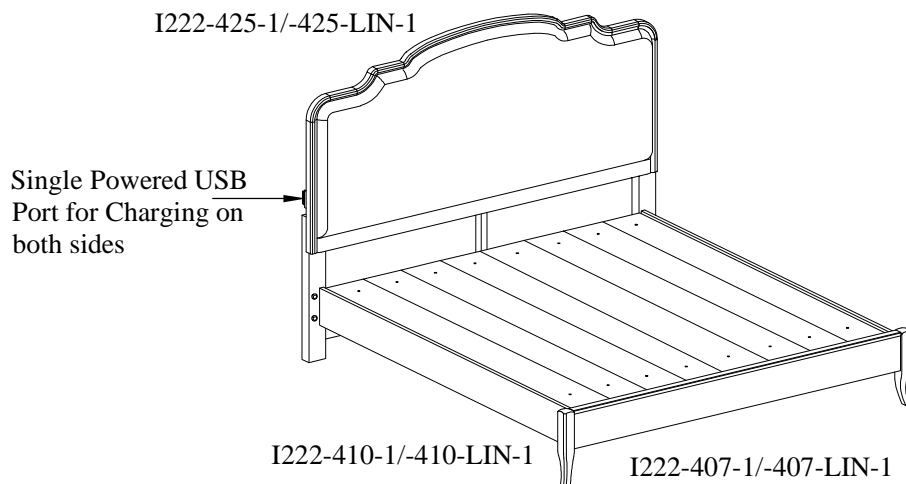

Cal king bed



ITEM NO: I222-522-1/-522-LIN-1 Twin Uph HB
I222-503-1/-503-LIN-1 Twin Low Profile FB
I222-517-1/-517-LIN-1 Twin Rails w/ Decking


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I222-522-1/-522-LIN-1

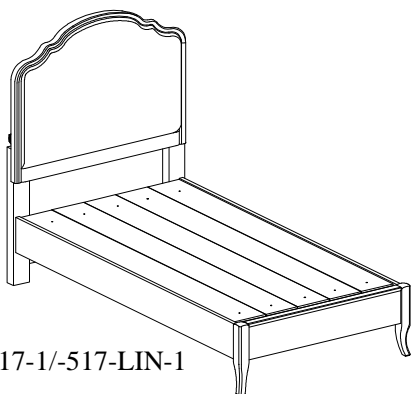

I222-517-1/-517-LIN-1

I222-503-1/-503-LIN-1

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I222-522-1/-522-LIN-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-1/2"		10 PCS
B	Lock Washer Ø5/16"		10 PCS
C	Flat Washer Ø5/16" x 3/4"		10 PCS
D	Allen Wrench M4		1 PC

HARDWARE LIST: I222-517-1/-517-LIN-1

No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 13mm		1 PC
I	Wood Screw #4 x 1-1/4"		10 PCS
J	Wood Screw #4 x 3/4"		10 PCS

COMPONENTS LIST: I222-522-1/-522-LIN-1

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

COMPONENTS LIST: I222-517-1/-517-LIN-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Decking		5 PCS

COMPONENTS LIST: I222-503-1/-503-LIN-1


No.	Description	Sketch	Quantity
1	Footboard		1 PC

FOR INDOOR USE ONLY




ITEM NO: I222-522-1/-522-LIN-1 Twin Uph HB
I222-503-1/-503-LIN-1 Twin Low Profile FB
I222-517-1/-517-LIN-1 Twin Rails w/ Decking

STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts (A), lock washers (B) and flat washers (C).

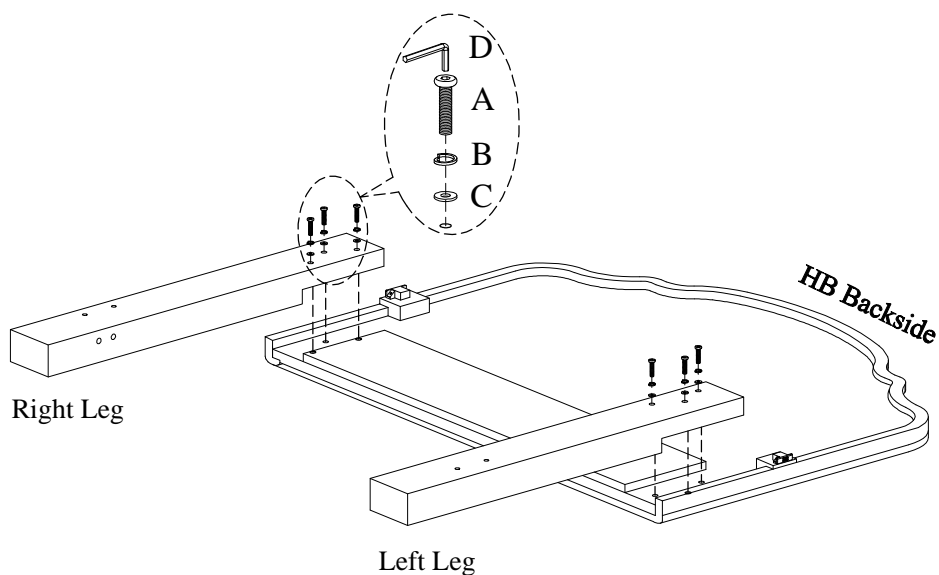


STEP 2: Attach the wood stretcher to the legs by using 4 bolts (A), lock washers (B) and flat washers (C). Completely tighten all bolts.

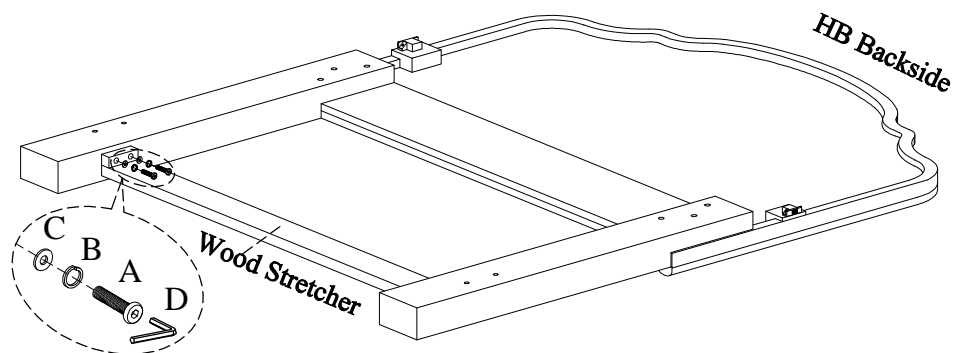




ITEM NO: I222-522-1/-522-LIN-1 Twin Uph HB
I222-503-1/-503-LIN-1 Twin Low Profile FB
I222-517-1/-517-LIN-1 Twin Rails w/ Decking

STEP 3: Screw the bolts (E) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer (F) and hex nuts (G). Then use a hex wrench to tighten all the nuts.

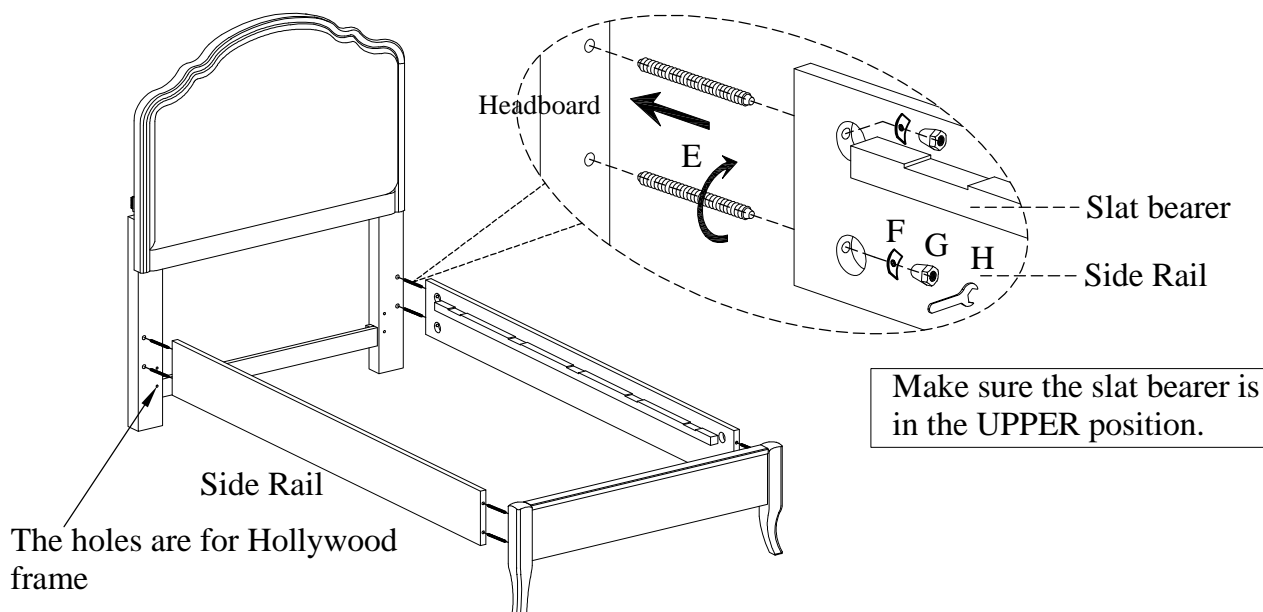


STEP 4: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (I).

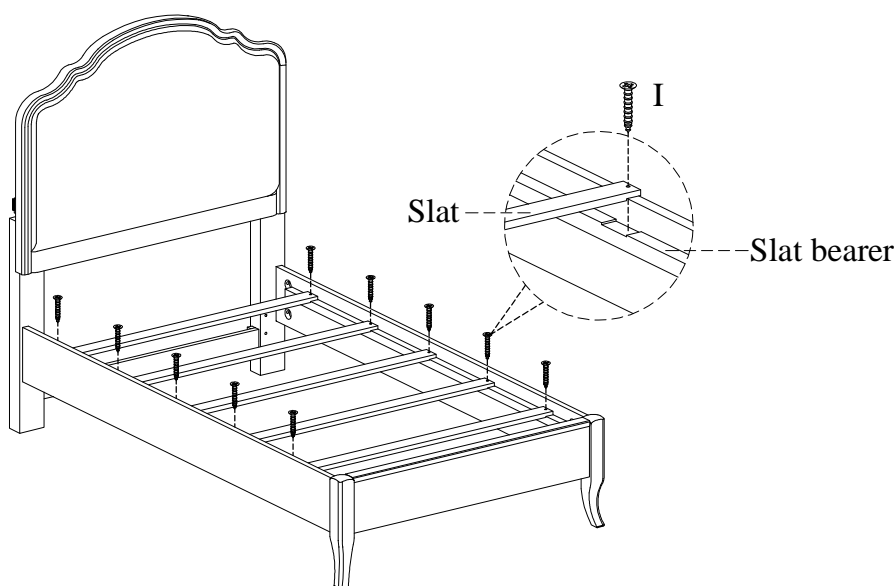




ITEM NO: I222-522-1/-522-LIN-1 Twin Uph HB
I222-503-1/-503-LIN-1 Twin Low Profile FB
I222-517-1/-517-LIN-1 Twin Rails w/ Decking

STEP 5: Put the decking over the slats, secure decking to the slats with wood screws (J) through the pre-drilled holes in the decking as shown below.

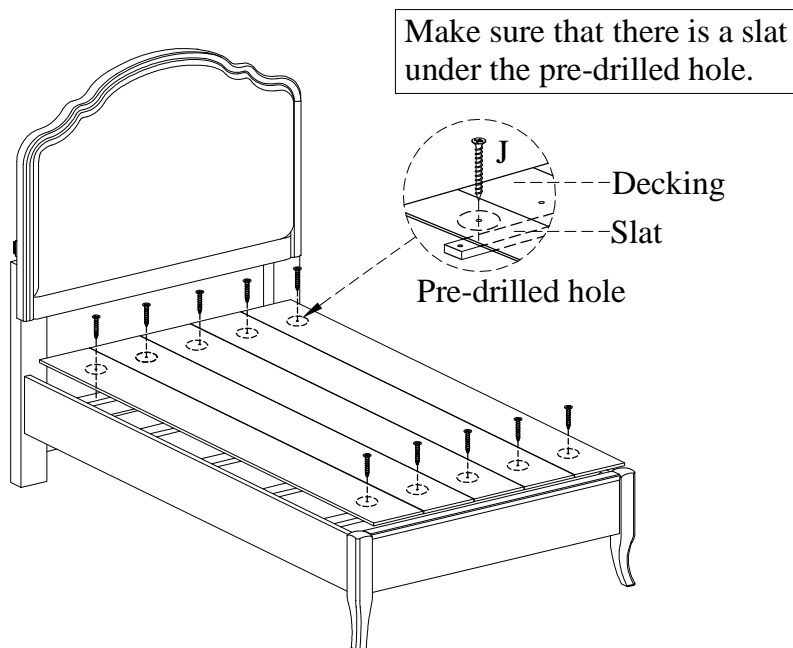

FUNCTIONALITY INSTRUCTION

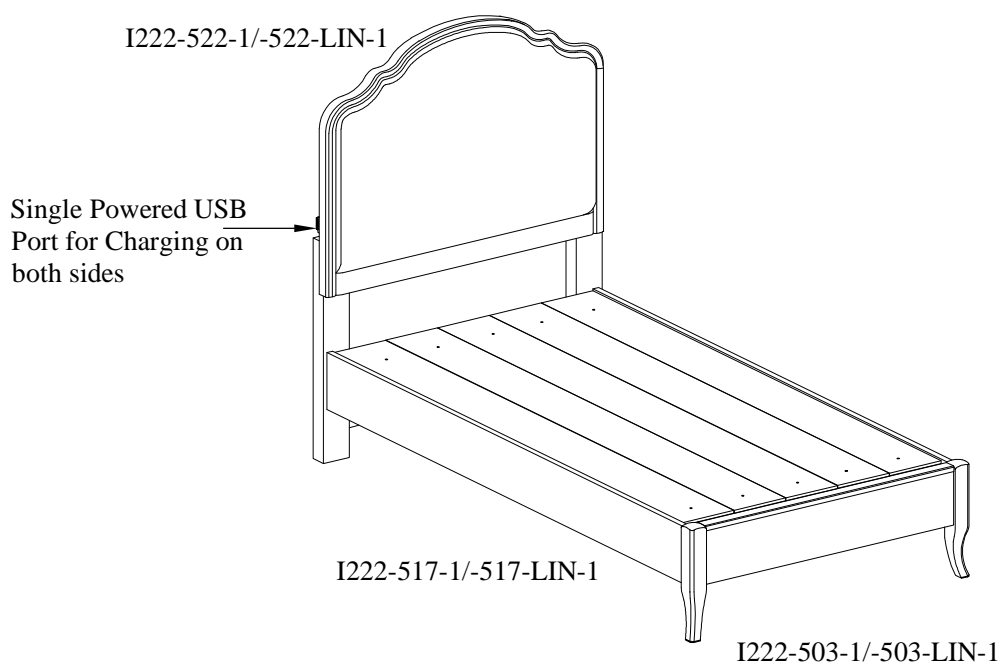



ITEM NO: I222-525-1/-525-LIN-1 Full Uph HB
I222-507-1/-507-LIN-1 Full Low Profile FB
I222-514-1/-514-LIN-1 Full Rails w/ Decking


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I222-525-1/-525-LIN-1

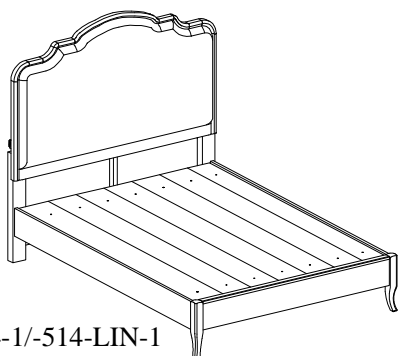

I222-514-1/-514-LIN-1

I222-507-1/-507-LIN-1

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I222-525-1/-525-LIN-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-1/2"		10 PCS
B	Lock Washer Ø5/16"		10 PCS
C	Flat Washer Ø5/16" x 3/4"		10 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-1/4"		4 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" x 3/4"		4 PCS

HARDWARE LIST: I222-514-1/-514-LIN-1

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3"		8 PCS
I	Half Moon Washer Ø5/16"		8 PCS
J	Hex Nut Ø5/16"		8 PCS
K	Hex Wrench 13mm		1 PC
L	Wood Screw #4 x 1-1/4"		10 PCS
M	Wood Screw #4 x 3/4"		14 PCS
N	Bolt Ø1/4" x 1-1/4"		10 PCS
O	Lock Washer Ø1/4"		10 PCS
P	Flat Washer Ø1/4" x 3/4"		10 PCS
Q	Allen Wrench 4mm		1 PC

COMPONENTS LIST: I222-525-1/-525-LIN-1

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I222-514-1/-514-LIN-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Decking		7 PCS
4	Support Leg (for center rail)		3 PCS
5	Center rail		1 PC

COMPONENTS LIST: I222-507-1/-507-LIN-1


No.	Description	Sketch	Quantity
1	Footboard		1 PC

FOR INDOOR USE ONLY




ITEM NO: I222-525-1/-525-LIN-1 Full Uph HB
I222-507-1/-507-LIN-1 Full Low Profile FB
I222-514-1/-514-LIN-1 Full Rails w/ Decking


STEP 1: Lay the headboard face down on a soft surface.
Attach the left leg and right leg to headboard by using 6 bolts (A), lock washers (B) and flat washers (C).

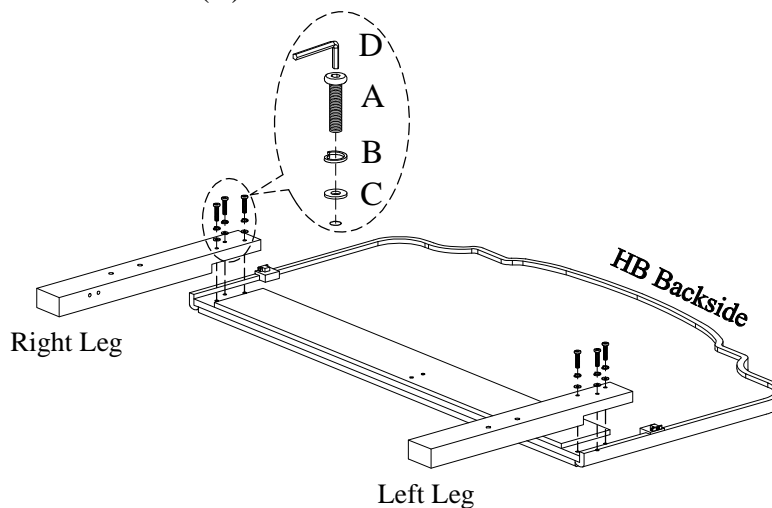

STEP 2: Attach the wood stretcher to the legs by using 4 bolts (A), lock washers (B) and flat washers (C).

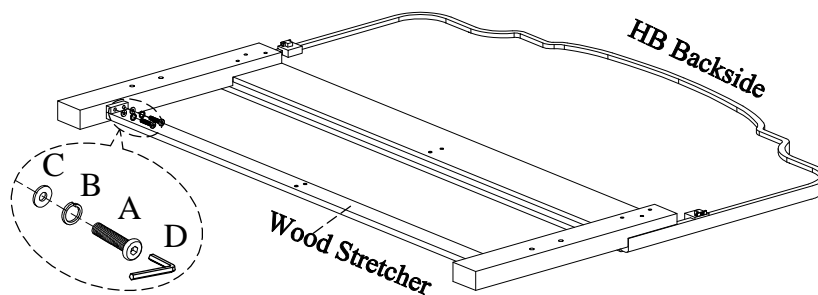


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts (E), lock washers (F) and flat washers (G). Completely tighten all bolts.

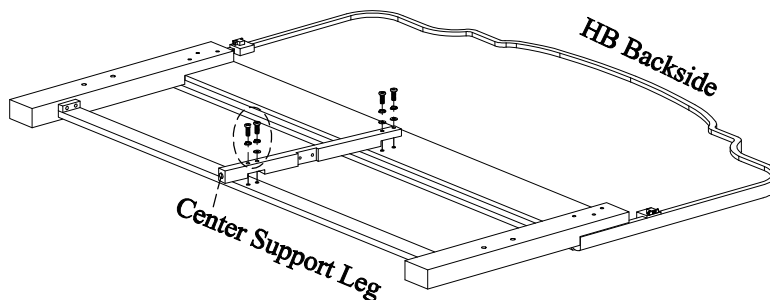


ITEM NO: I222-525-1/-525-LIN-1 Full Uph HB
 I222-507-1/-507-LIN-1 Full Low Profile FB
 I222-514-1/-514-LIN-1 Full Rails w/ Decking


STEP 4: Screw the bolts (H) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer (I) and hex nuts (J). Then use a hex wrench (K) to tighten all the nuts.

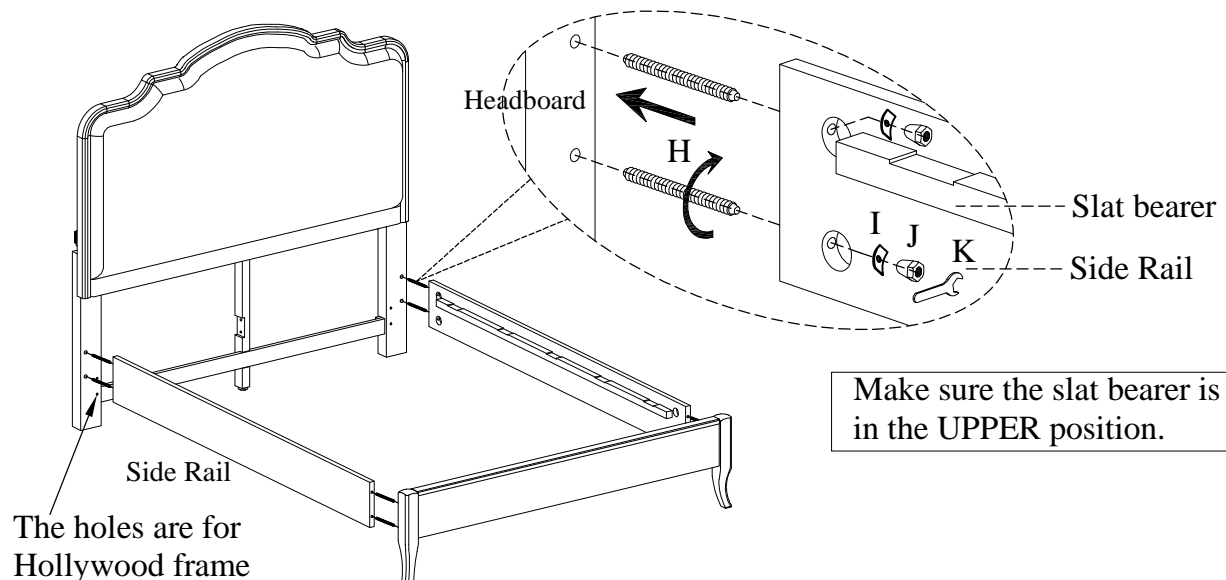

STEP 5: The center support is in the Bed rails carton. Attach the center rail to the footboard and center support leg of headboard using 4 bolts (N), lock washers (O) and flat washers (P).

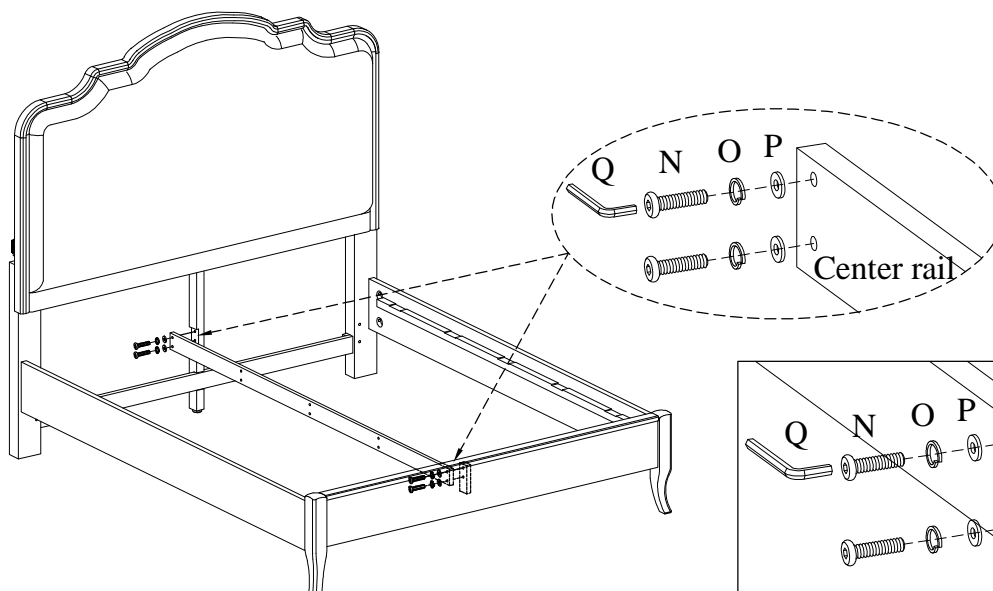


STEP 6: Attach 3 support legs (for center rail) to the center rail using 6 bolts (N), lock washers (O) and flat washers (P). Use the Allen Wrench (Q) to tighten all of the bolts.

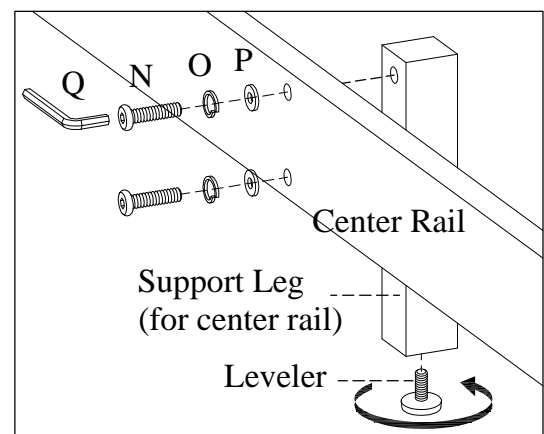




ITEM NO: I222-525-1/-525-LIN-1 Full Uph HB
I222-507-1/-507-LIN-1 Full Low Profile FB
I222-514-1/-514-LIN-1 Full Rails w/ Decking

STEP 7: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (L).

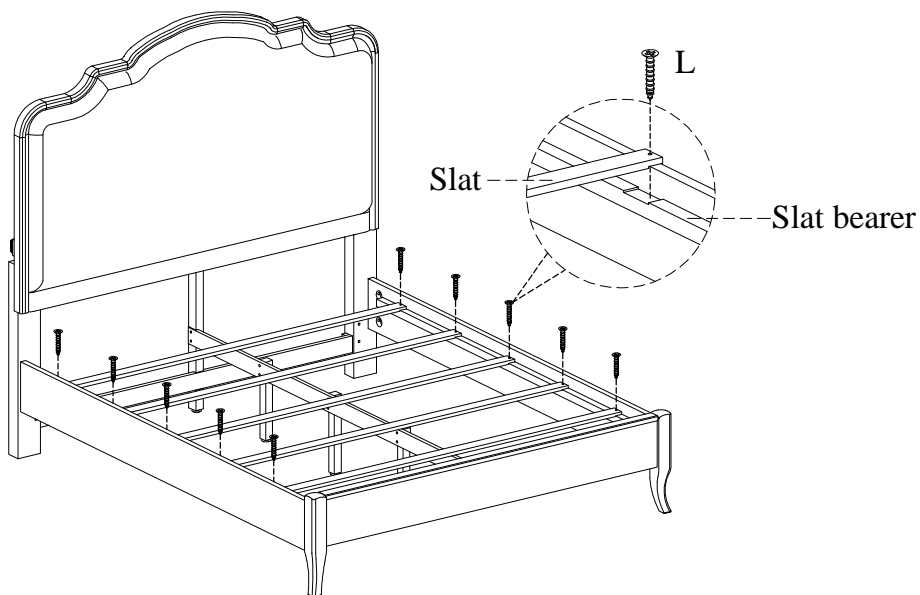

STEP 8: Put the decking over the slats, secure decking to the slats with wood screws (M) through the pre-drilled holes in the decking as shown below.

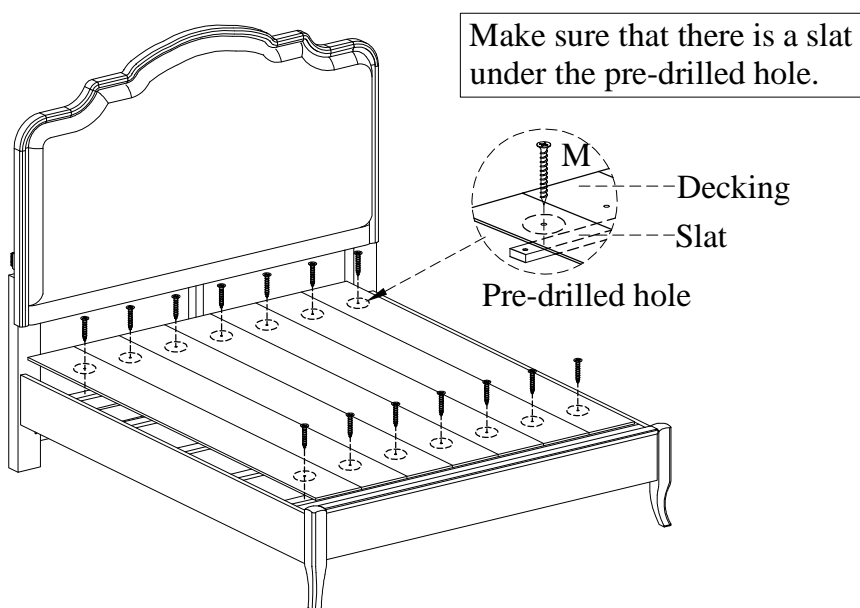



ITEM NO: I222-525-1/-525-LIN-1	Full Uph HB
I222-507-1/-507-LIN-1	Full Low Profile FB
I222-514-1/-514-LIN-1	Full Rails w/ Decking

FUNCTIONALITY INSTRUCTION

