

ASSEMBLY INSTRUCTIONS

COVENTRY HALL COLLECTION





MODEL : B1828-115 COVENTRY HALL 6/6 EK HB,FB AND SLATS
: B1828-335 COVENTRY HALL 6/6-5/0 EK/Q SIDE RAILS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.

CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

PARTS LIST				HARDWARE LIST			
ITEM	DESCRIPTION	SKETCH	QTY	ITEM	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1 PC	1	BOLT M8 x 5/8"		8 PCS
B	HEADBOARD LEFT SIDE FACING (LSF) LEG		1 PC	2	BOLT M8 x 1 9/16"		8 PCS
C	HEADBOARD RIGHT SIDE FACING (RSF) LEG		1 PC	3	SPRING WASHER M8 x 9/16"		8 PCS
D	FOOTBOARD		1 PC	4	FLAT WASHER M8 x 7/8"		8 PCS
E	FOOTBOARD LEFT SIDE FACING (LSF) LEG		1 PC	5	ALLEN KEY M5 x 2 5/8"		1 PC
F	FOOTBOARD RIGHT SIDE FACING (RSF) LEG		1 PC	6	BOLT M6 x 1 9/16"		2 PC
G	SIDE RAIL		2 PCS	7	SPRING WASHER M6 x x 1/2"		2 PC
H	SLAT		4 PCS	8	FLAT WASHER M6 x 3/4"		2 PC
I	SLAT SUPPORT LEG		8 PCS	9	WOOD DOWEL Ø8 x 1 3/16"		2 PC
J	HEADBOARD STRETCHER		1 PC	10	ALLEN KEY M4 x 2 3/8"		1 PC
WEIGHT CAPACITY				11	CSK SCREW M4 x 1 1/4"		8 PCS
800LBS							

HARDWARE DIMENSIONS VERIFICATION TOOL

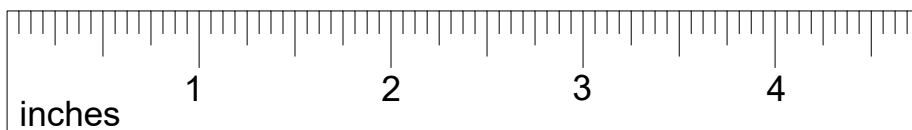

ASSEMBLY INSTRUCTIONS


COVENTRY HALL COLLECTION

MODEL : B1828-115 COVENTRY HALL 6/6 EK HB,FB AND SLATS
: B1828-335 COVENTRY HALL 6/6-5/0 EK/Q SIDE RAILS

STEP 1: Lay the Headboard (A) face down on a flat and clean surface.


Unzip the zipper at the back of the Headboard (A) to reach holes to assemble the Headboard Legs (B & C) with the Headboard (A) by using Allen Key (5) with hardware (2), (3) and (4).

**** Attention: DO NOT OVER TIGHTEN THE BOLTS.**

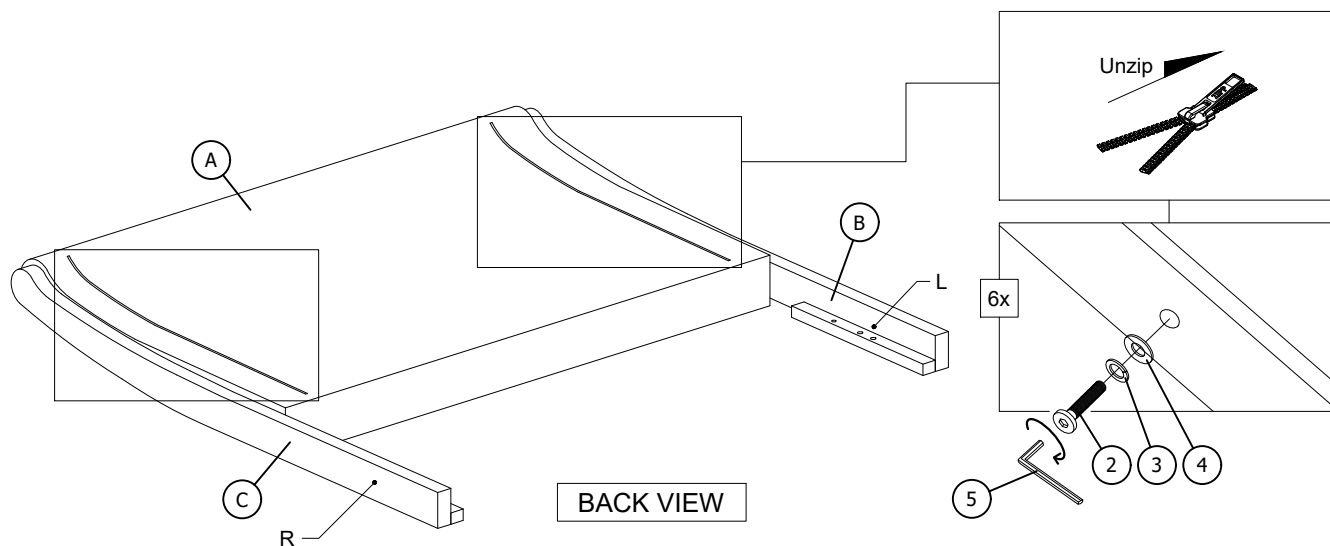

STEP 2: Assemble the Headboard Stretcher (J) with the Headboard Legs (B & C) by using Allen Key (5) with hardware (2), (3) and (4).

**** Attention: DO NOT OVER TIGHTEN THE BOLTS.**

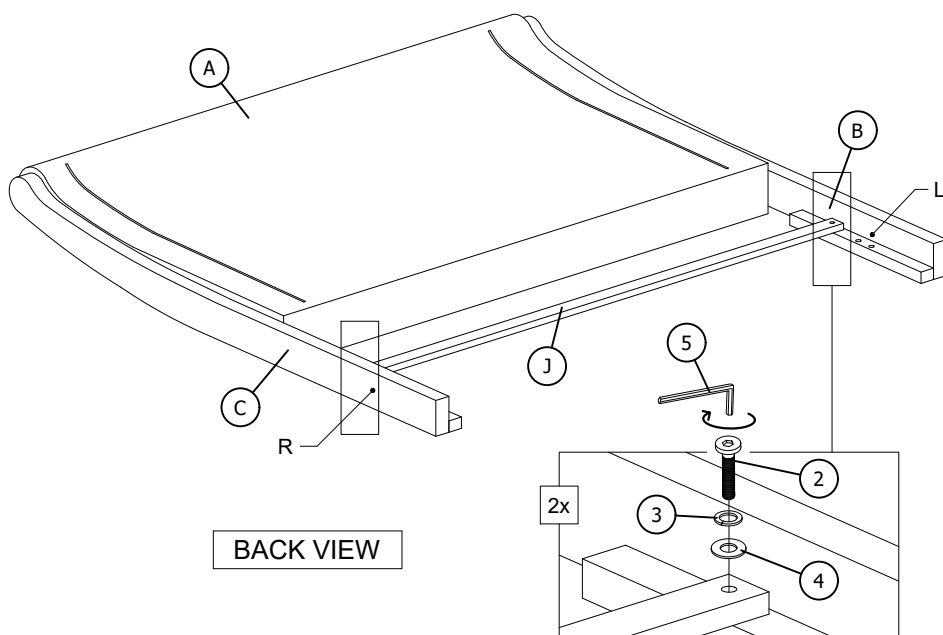

ASSEMBLY INSTRUCTIONS


COVENTRY HALL COLLECTION

MODEL : B1828-115 COVENTRY HALL 6/6 EK HB,FB AND SLATS
: B1828-335 COVENTRY HALL 6/6-5/0 EK/Q SIDE RAILS

STEP 3: Lay the Footboard (D) face down on a flat and clean surface.


Assemble the Footboard Legs (E & F) with the Footboard (D) by using Allen Key (10) with hardware (6), (7), (8) and (9).

**** Attention: DO NOT OVER TIGHTEN THE BOLTS**

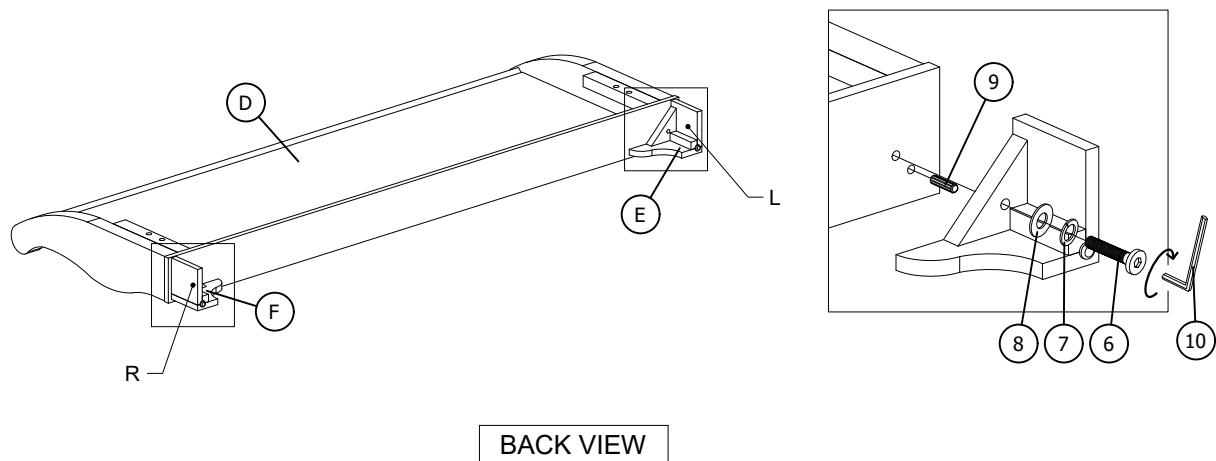

STEP 4: Attach Slat support Leg (I) to Slat (H) by rotating it clockwise.

Repeat this step for all Support Legs (I) and Slats (H).

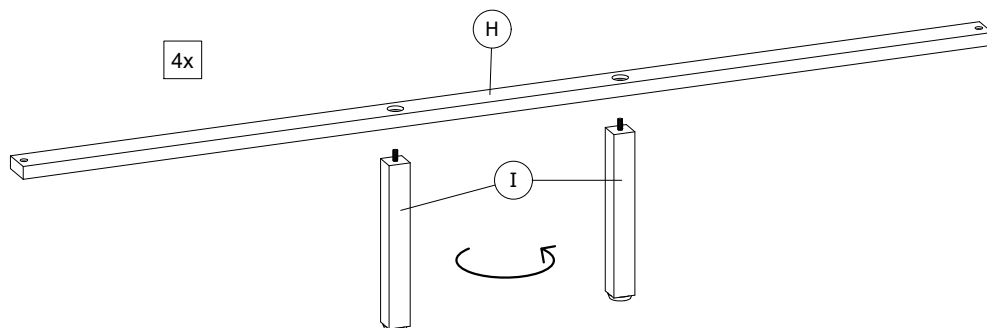


ASSEMBLY INSTRUCTIONS

COVENTRY HALL COLLECTION

MODEL : B1828-115 COVENTRY HALL 6/6 EK HB,FB AND SLATS
: B1828-335 COVENTRY HALL 6/6-5/0 EK/Q SIDE RAILS


STEP 5: Assemble the Side Rail (G) with the Headboard Legs (B & C) and Footboard (D) by using Allen Key (5) with hardware (1).

**** Attention: DO NOT OVER TIGHTEN THE BOLTS.**

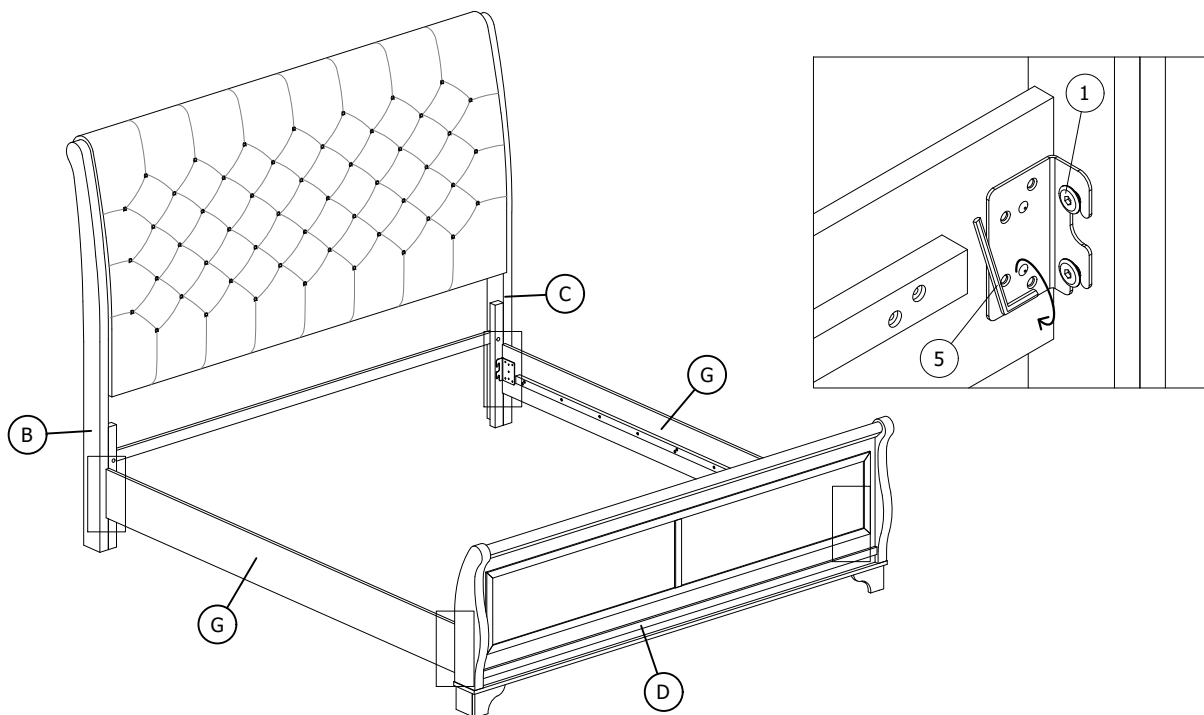

STEP 6: Assemble the Slat (H) with the Side Rail (G) by using a screwdriver with hardware CSK Screw (11).

**** Attention: DO NOT OVER TIGHTEN THE SCREW**

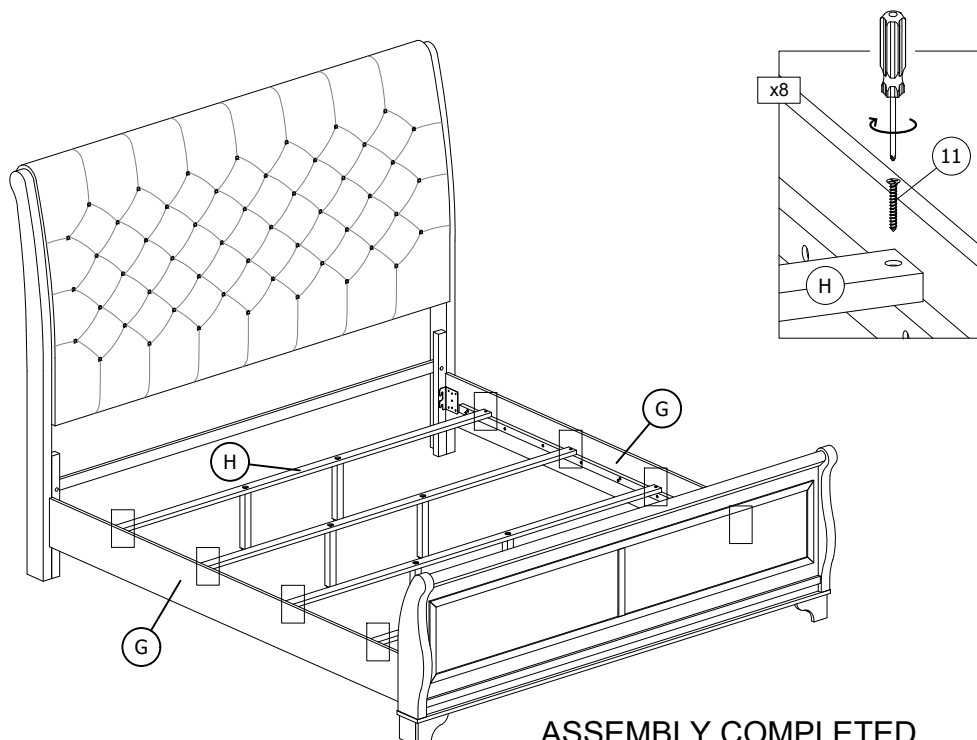

ASSEMBLY COMPLETED