



UTTERMOST

Item#24773

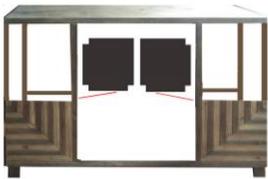
Parts list

Wood feet	4 pcs
Shelf board	2 pcs

Assembly Instruction

Hardware list

bolt	4 pcs
Spanner	1 pc

**A****B**

1. Take all parts out of the carton carefully and place on a clean flat surface.

2. Screw the feet into cabinet with bolts as show in photo A.

3. Use wrench to secure tightly. Then set cabinet upright.

4. Put the shelf board inside of cabinet at a slight angle as show in photo B

5. Assembly is complete.

6. Once Assembly is completed, the door hinges may need some adjustments.