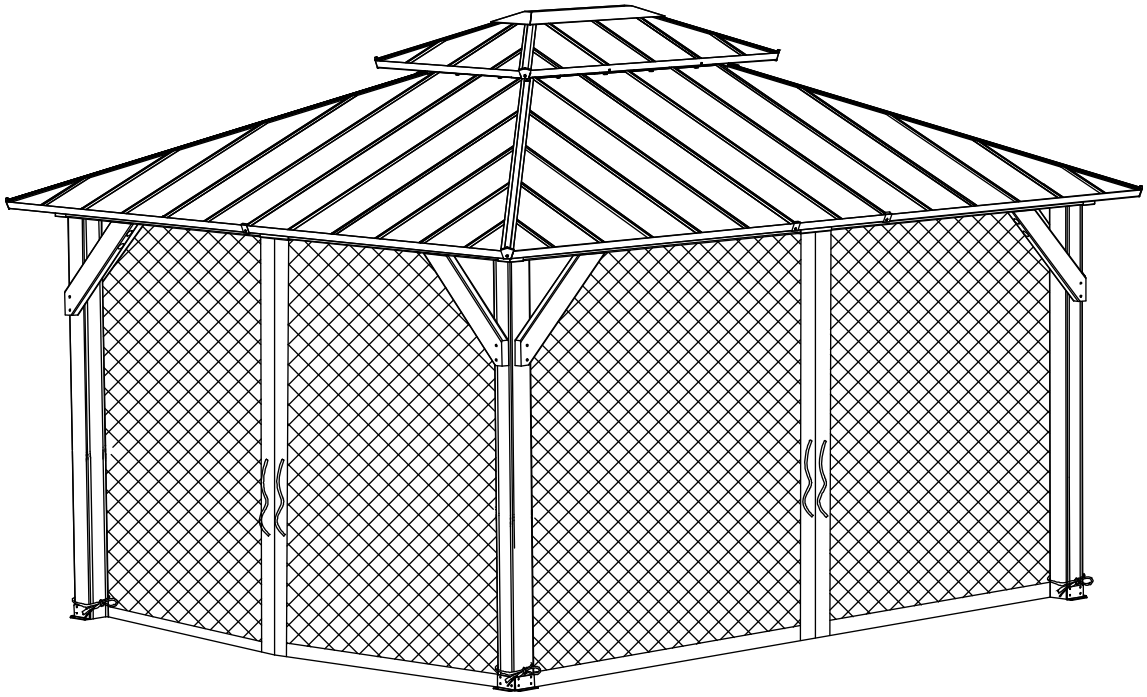
ASSEMBLY INSTRUCTION

12×14FT Patio Gazebo (D14-CH)



[Scan for Installation Video]

- The product comes in five packages.
- Please install after receiving all packages.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Assemble this product on a flat, level ground. Uneven ground may make assembly difficult;

-Assembly is easier with three or more people;

-After assembly, check that all screws are fully tightened to prevent parts from loosening or coming apart.

⚠Use bolts to secure the frame to the ground to against the strong wind.


BOX1





A		4

BOX2



B1		2
B2		2
B3		2
B4		2
C		8
R2		1




BOX3



E1		4
E2		4
J1		2
J2		2
J3		4
J4		4
J5		2
Free Gift		1



K1		4
K2		4
K3		6
K4		4
N1		8
N2		2
Q1		2
Q2		2

BOX4









F1		4
F2		8
F3		6
F4		4
G1		4
G2		6
G3		6
G4		4

G5		4
G6		2
G7		4
L1		1
L2		1
M		4
S		8


Label	Part Image	Description	Qty	Spare
H1		M6X15	190	10
H2		M6X25	14	1
H3		M6X40	10	1
H4			2	
H5		M6X40	16	1
H6		M8X60	40	2
H7		M8X120	8	
H8		M6X16	198	10
H9		M8X18	84	4
H10		RUBBER	2	
Free Gift			4	

Label	Part Image	Description	Qty	Spare
H11		M4X16	32	2
H12		M4X25	68	4
H13		M4X40	32	2
H14			44	3
H15			16	1
H16			34	2
HQ1			8	
HQ2		M6X70	8	
HW1		4MM-100	2	
HW3		10-14	1	

BOX5


P1		4
P2		4
P3		4
P4		4
P5		4
P6		4
P7		4
P8		4
P9		2
P10		2
		2

B1		2
B2		2
B3		2
B4		2
F4		4


H1		M6X15	16
H5		M6X40	16
H9		M8X18	32
H13		M4X40	32

Step 1：

Phillips screwdriver (not included in the package) required for screws H11, H12, H13.

G2		6	H12		M4X25	12

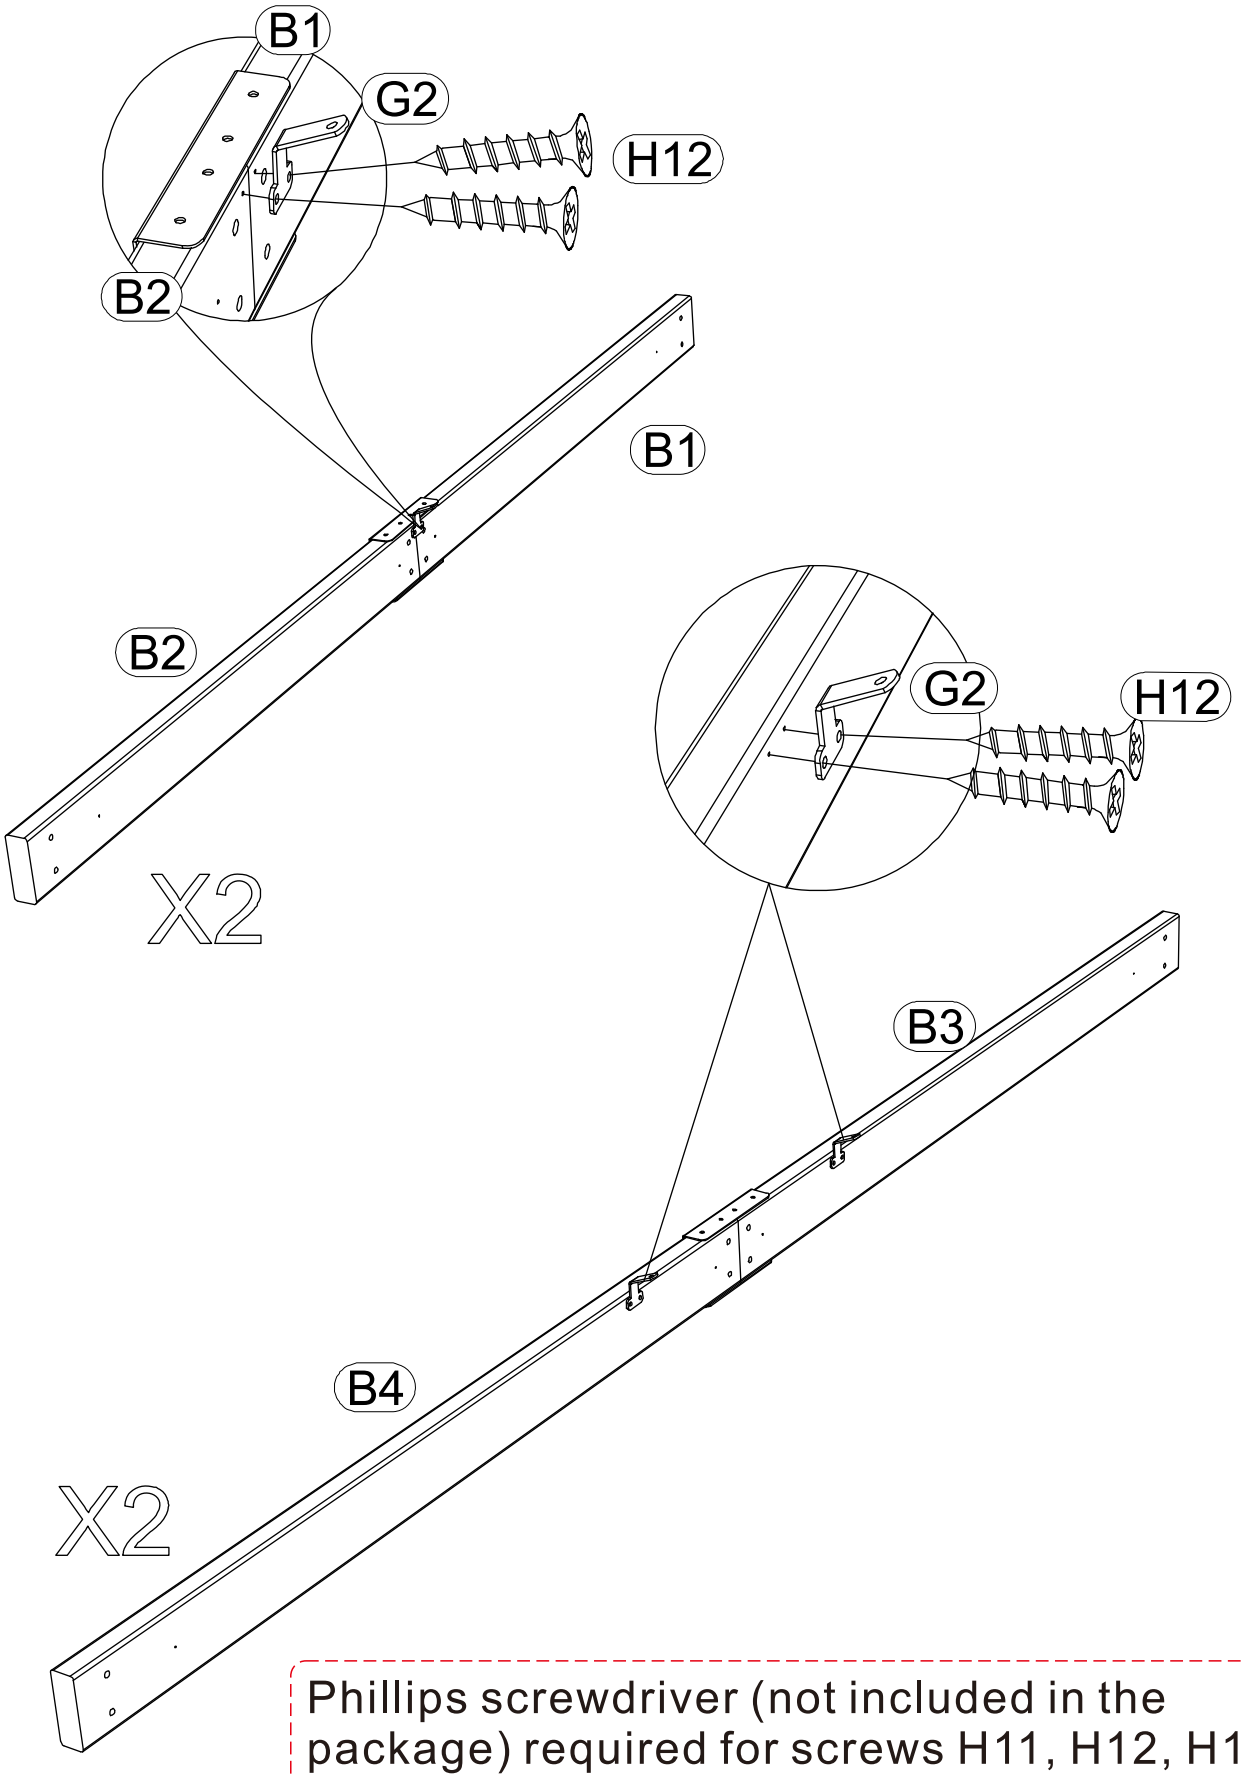Step 2：





Phillips screwdriver (not included in the package) required for screws H11, H12, H13.

E1		4
E2		4

H14		44
H15		16

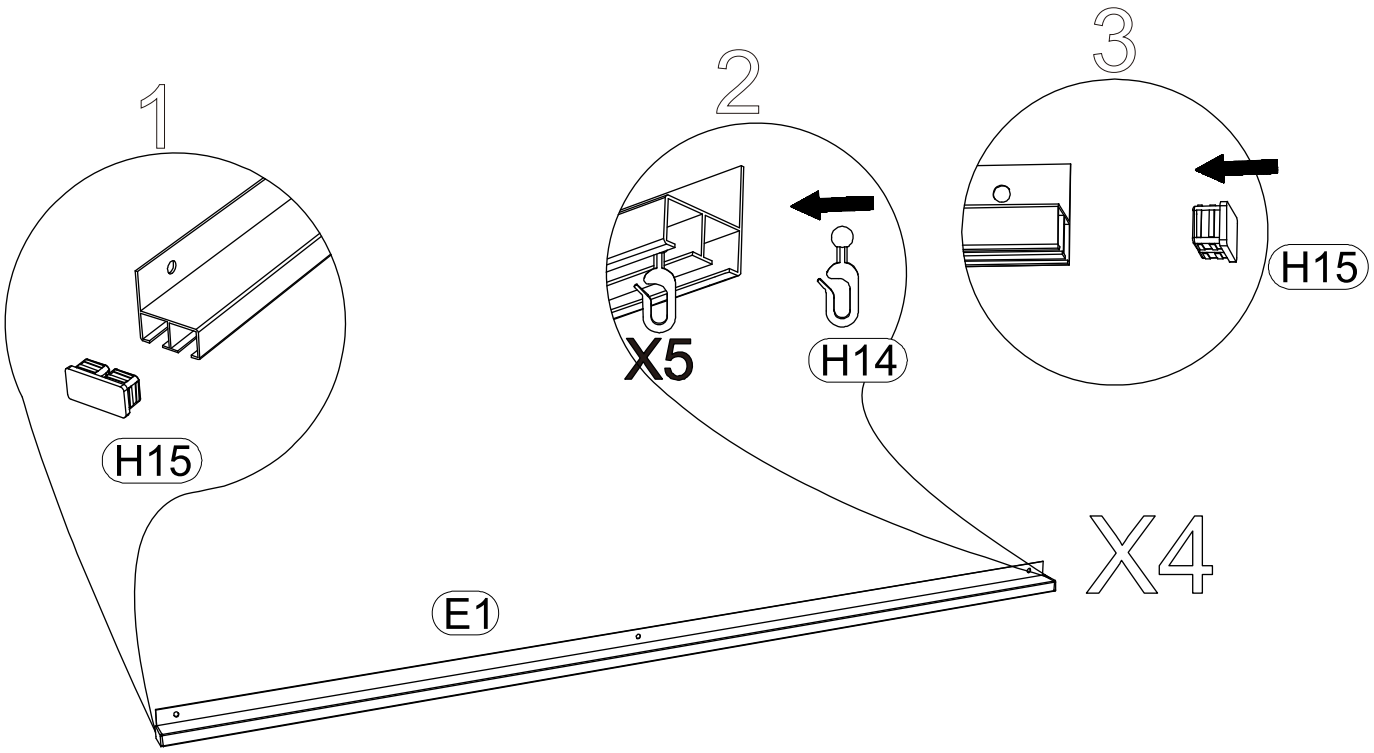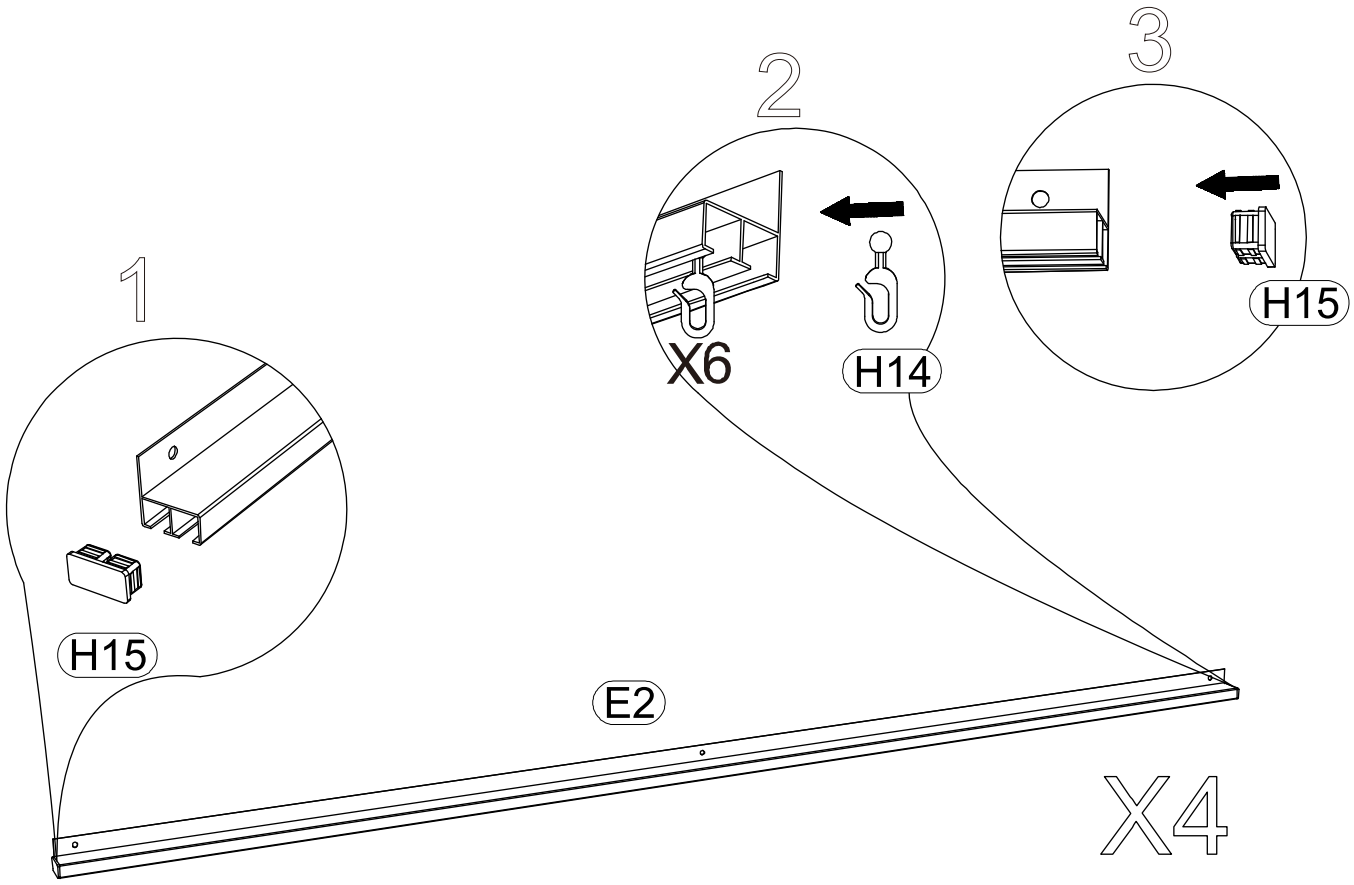
Step 3：







H11		M4X16	24

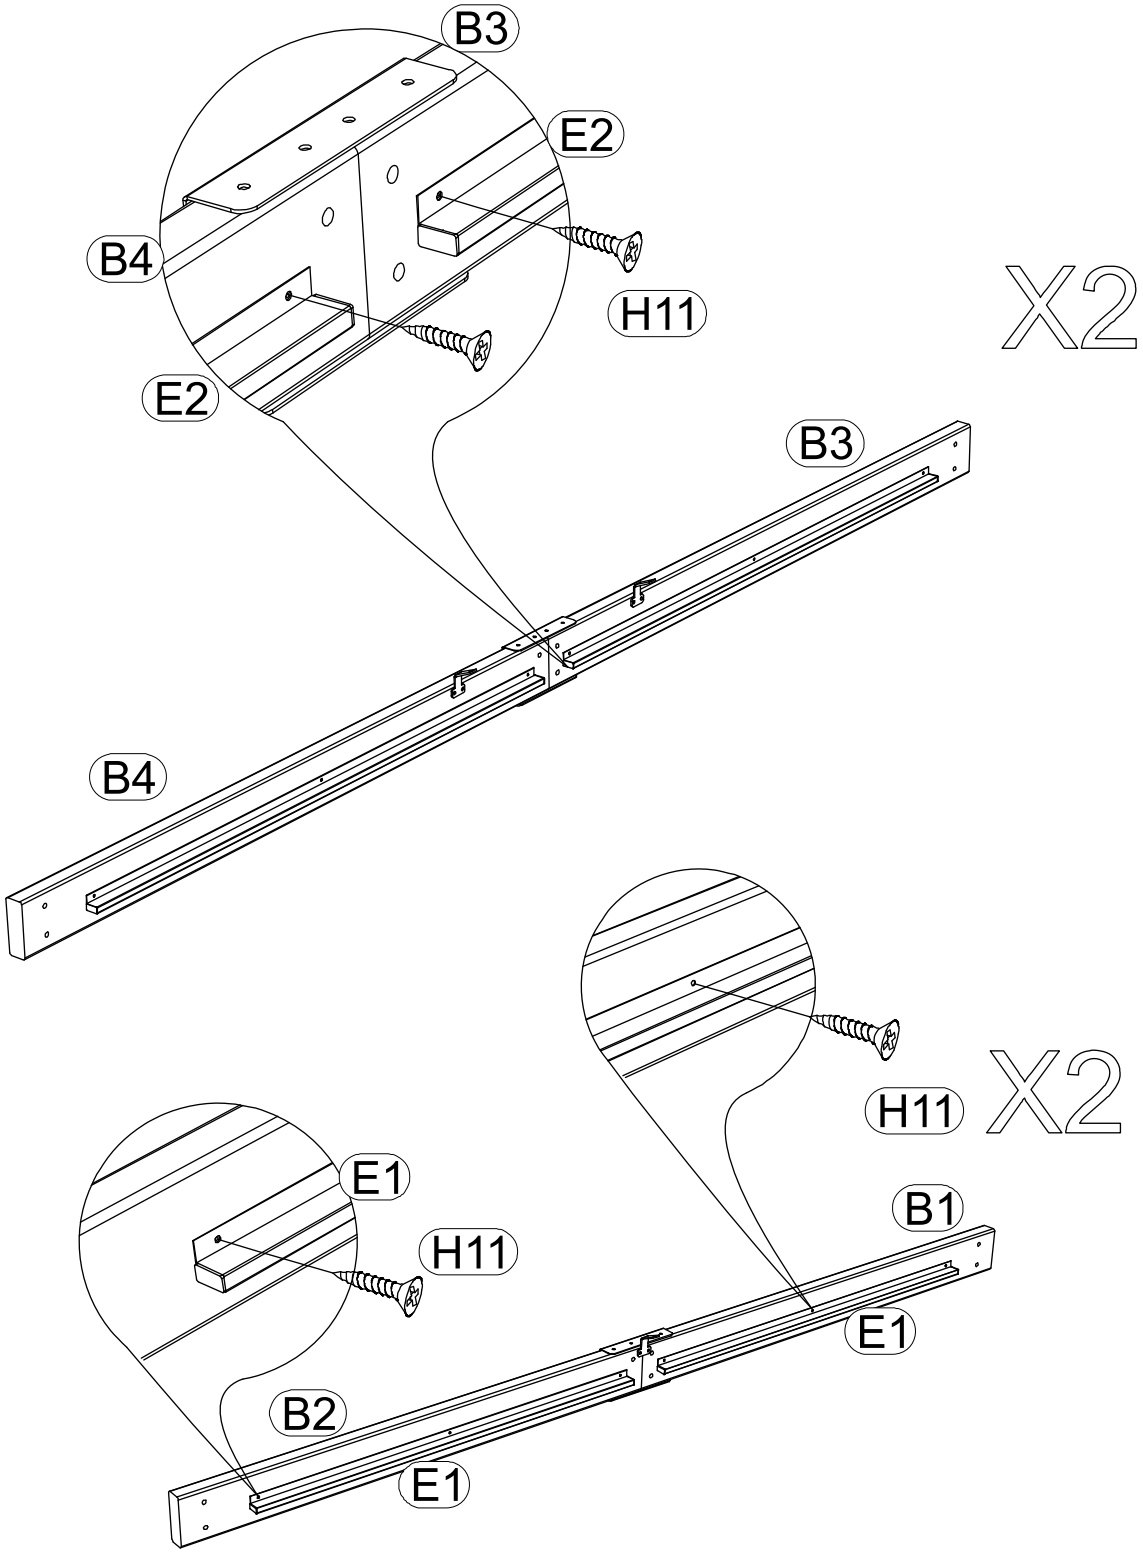Step 4：





Phillips screwdriver (not included in the package) required for screws H11, H12, H13.

A		4
C		4

H6		M8X60	20
H7		M8X120	4
H9		M8X18	24

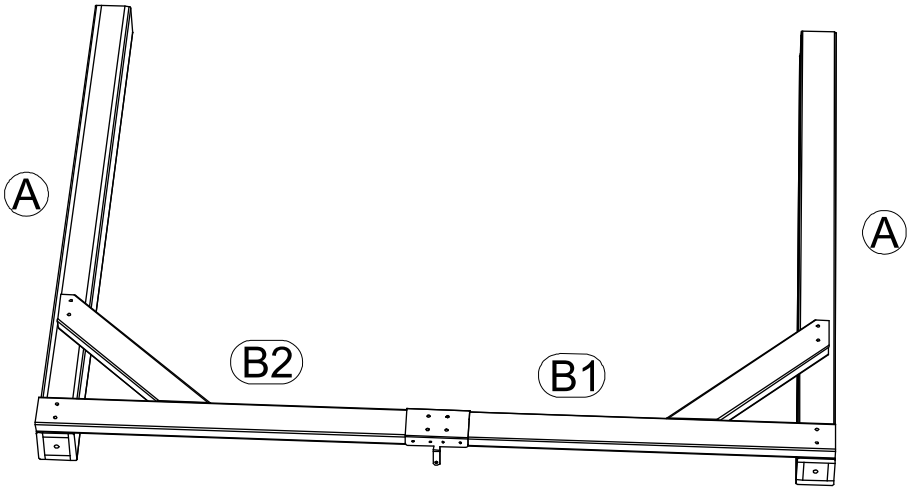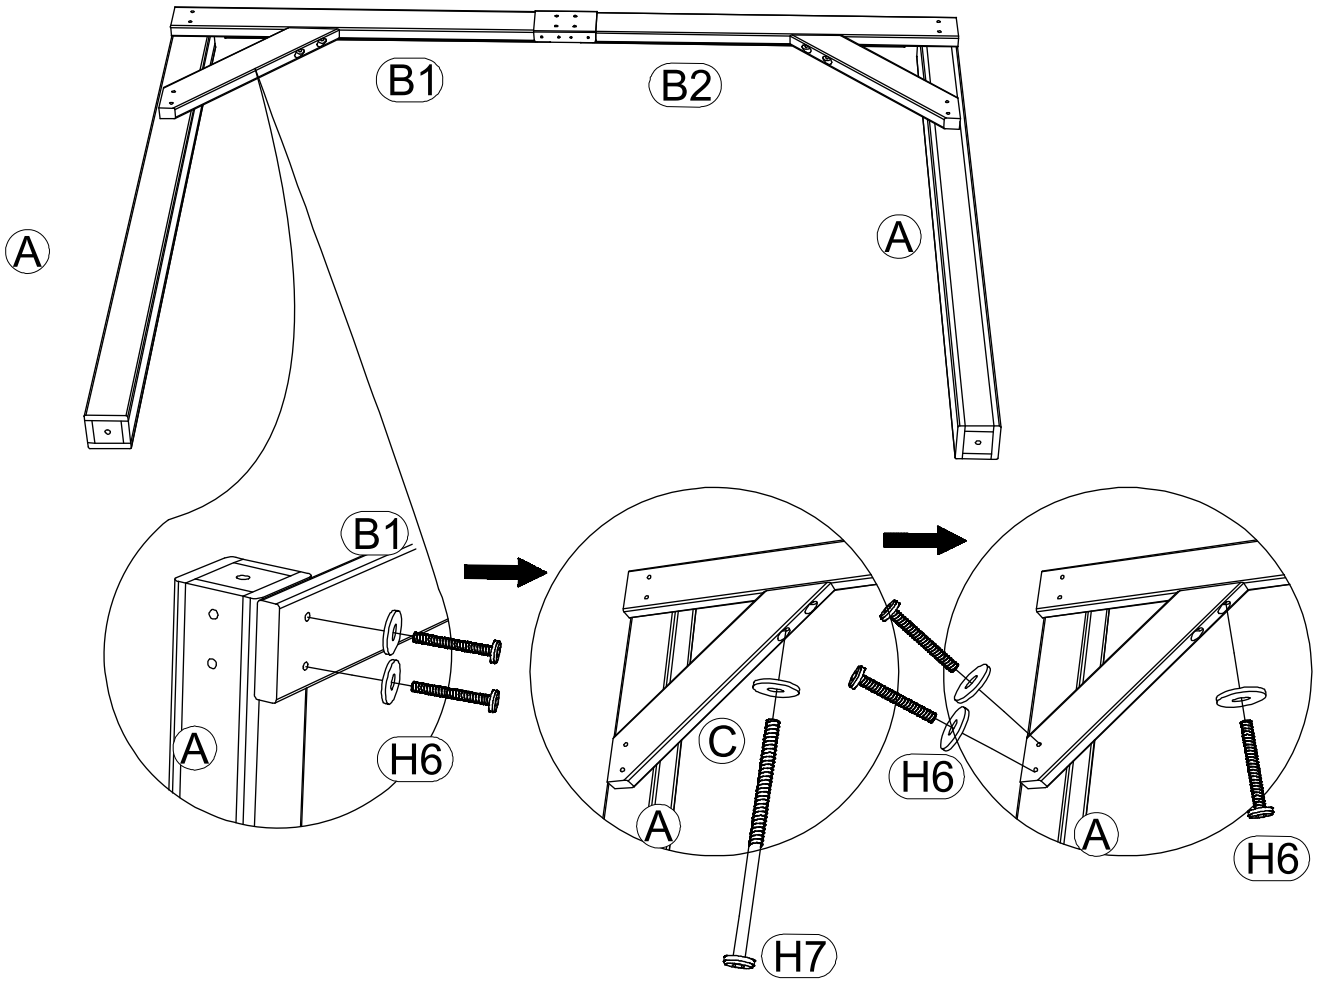
Step 5：






H6		M8X60	8
H9		M8X18	8

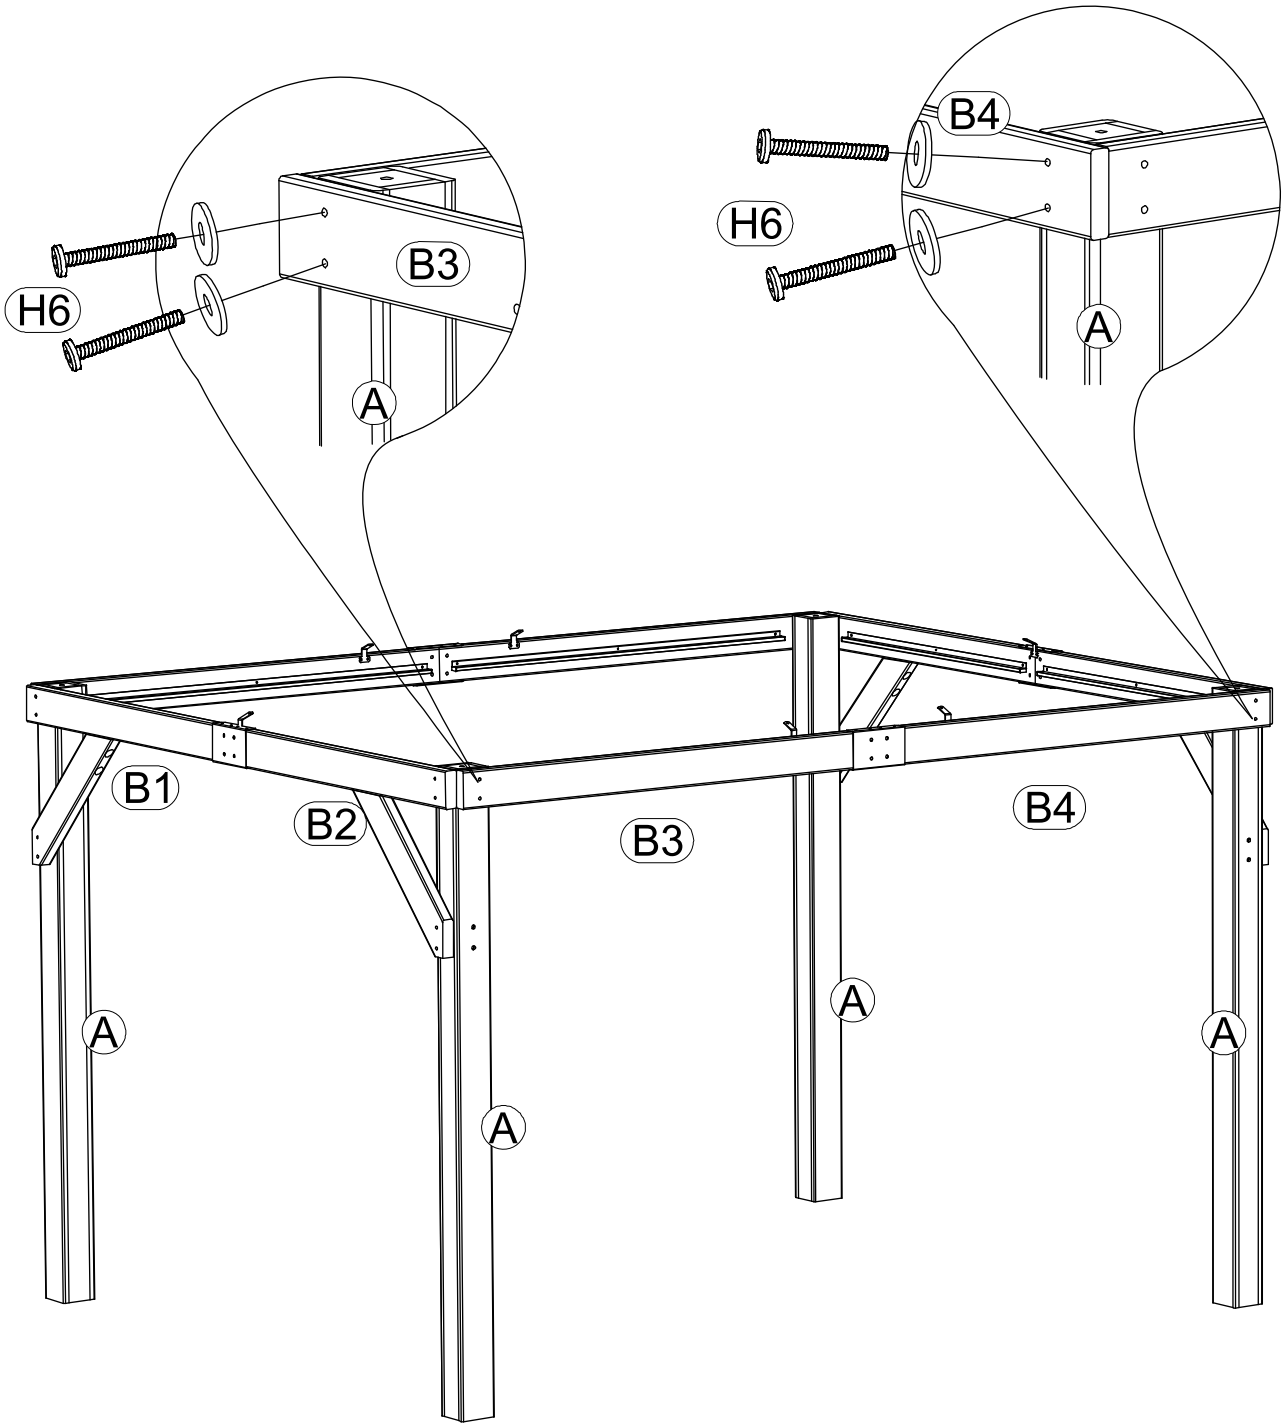
Step 6：




C			4
H6		M8X60	12


H7		M8X120	4
H9		M8X18	16

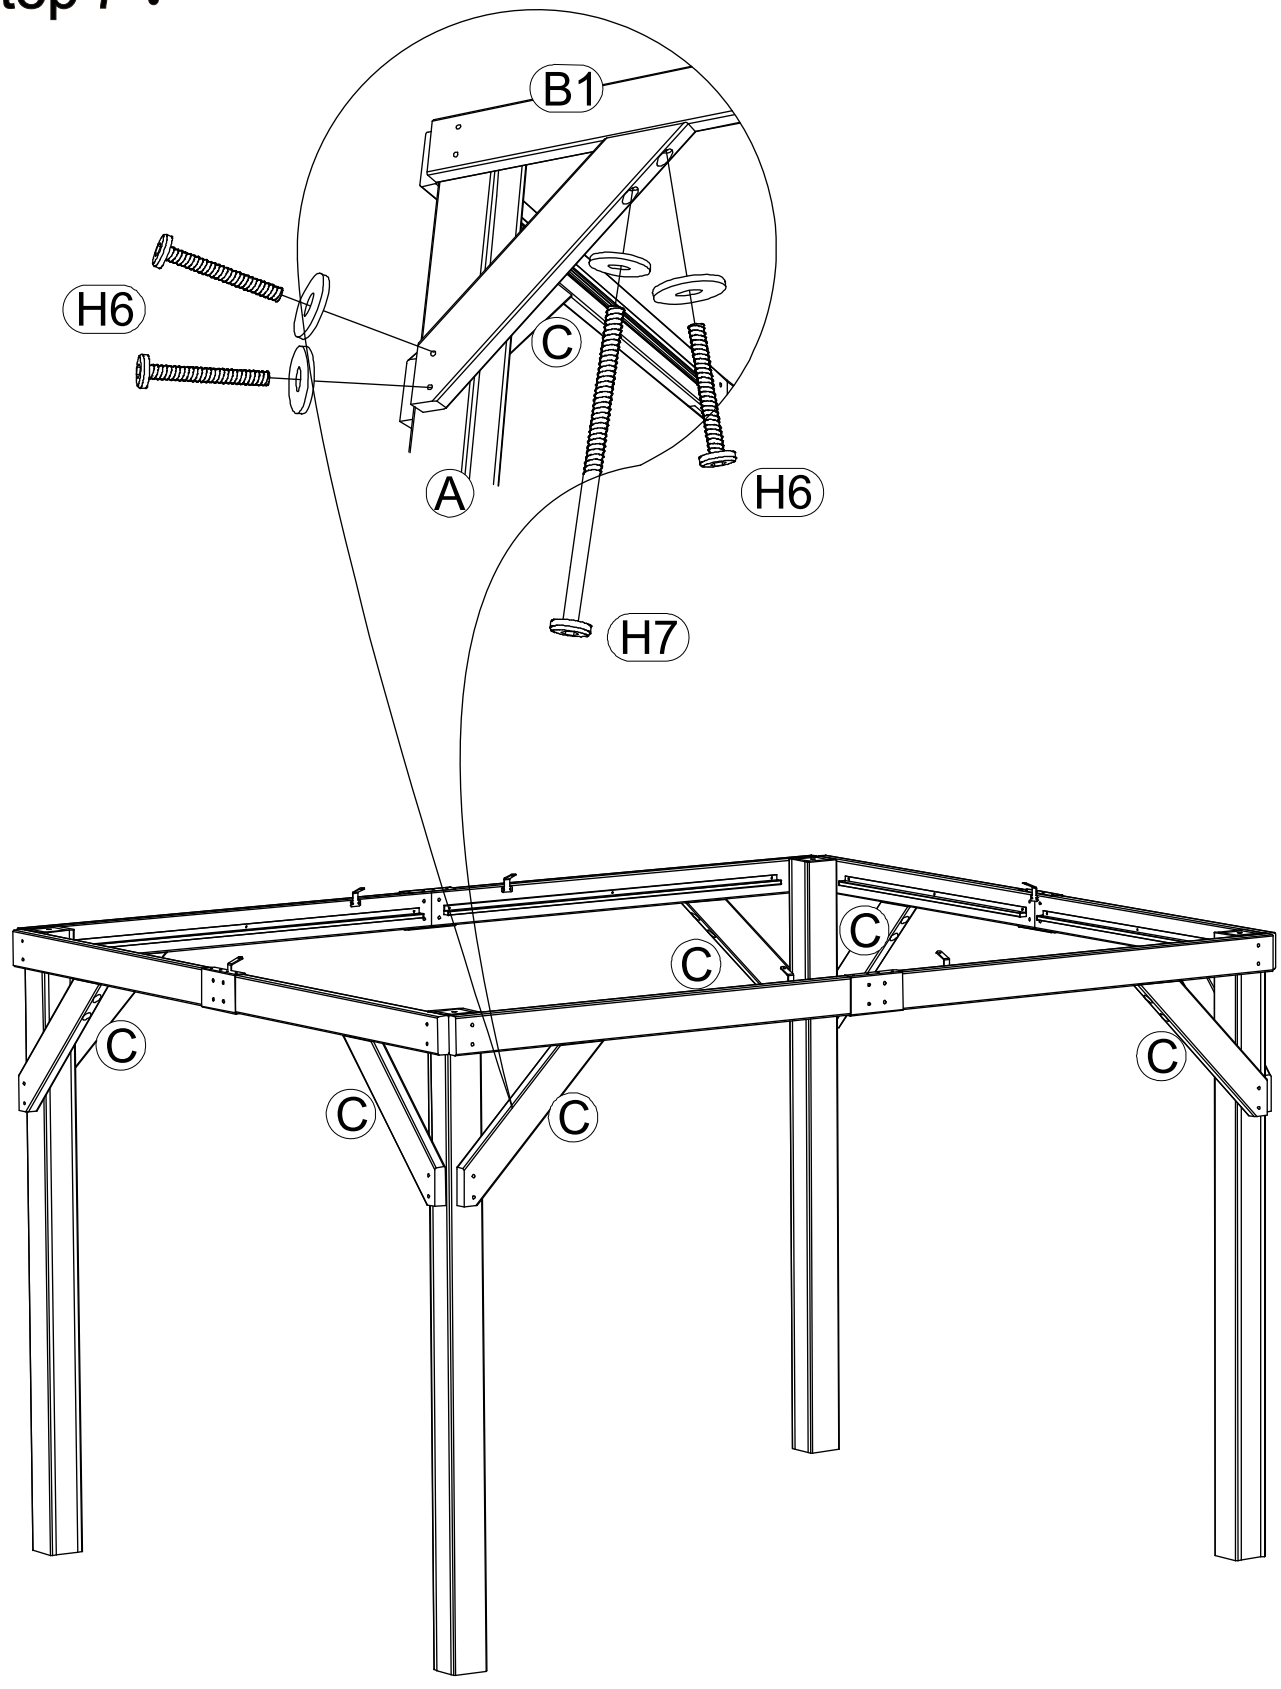
Step 7：



F1			4
H11		M4X16	8

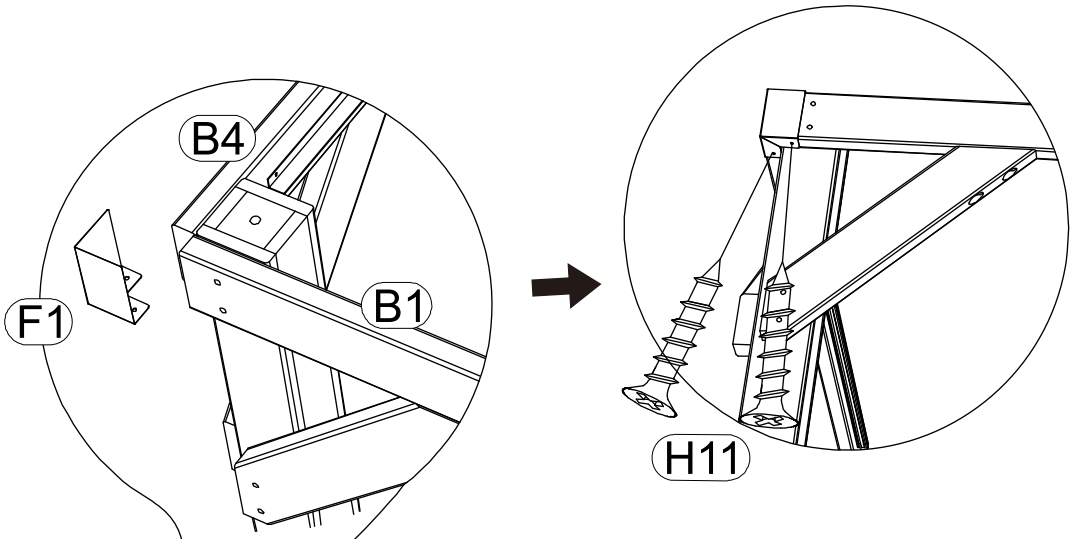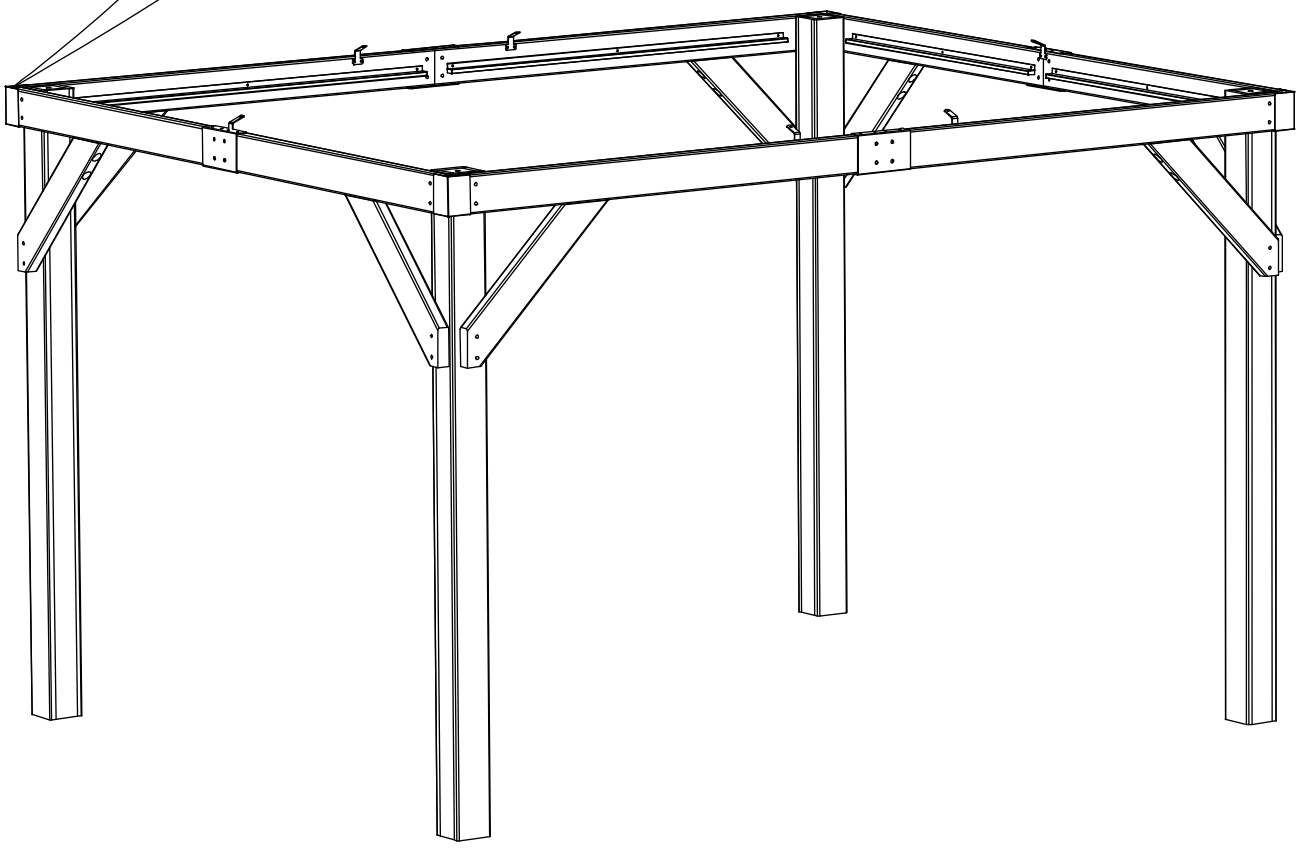Step 8：







K1		4
K2		4
G1		4
G5		4



H1		M6X15	24
H8		M6X16	24

Step 9：

H12		M4X25	24

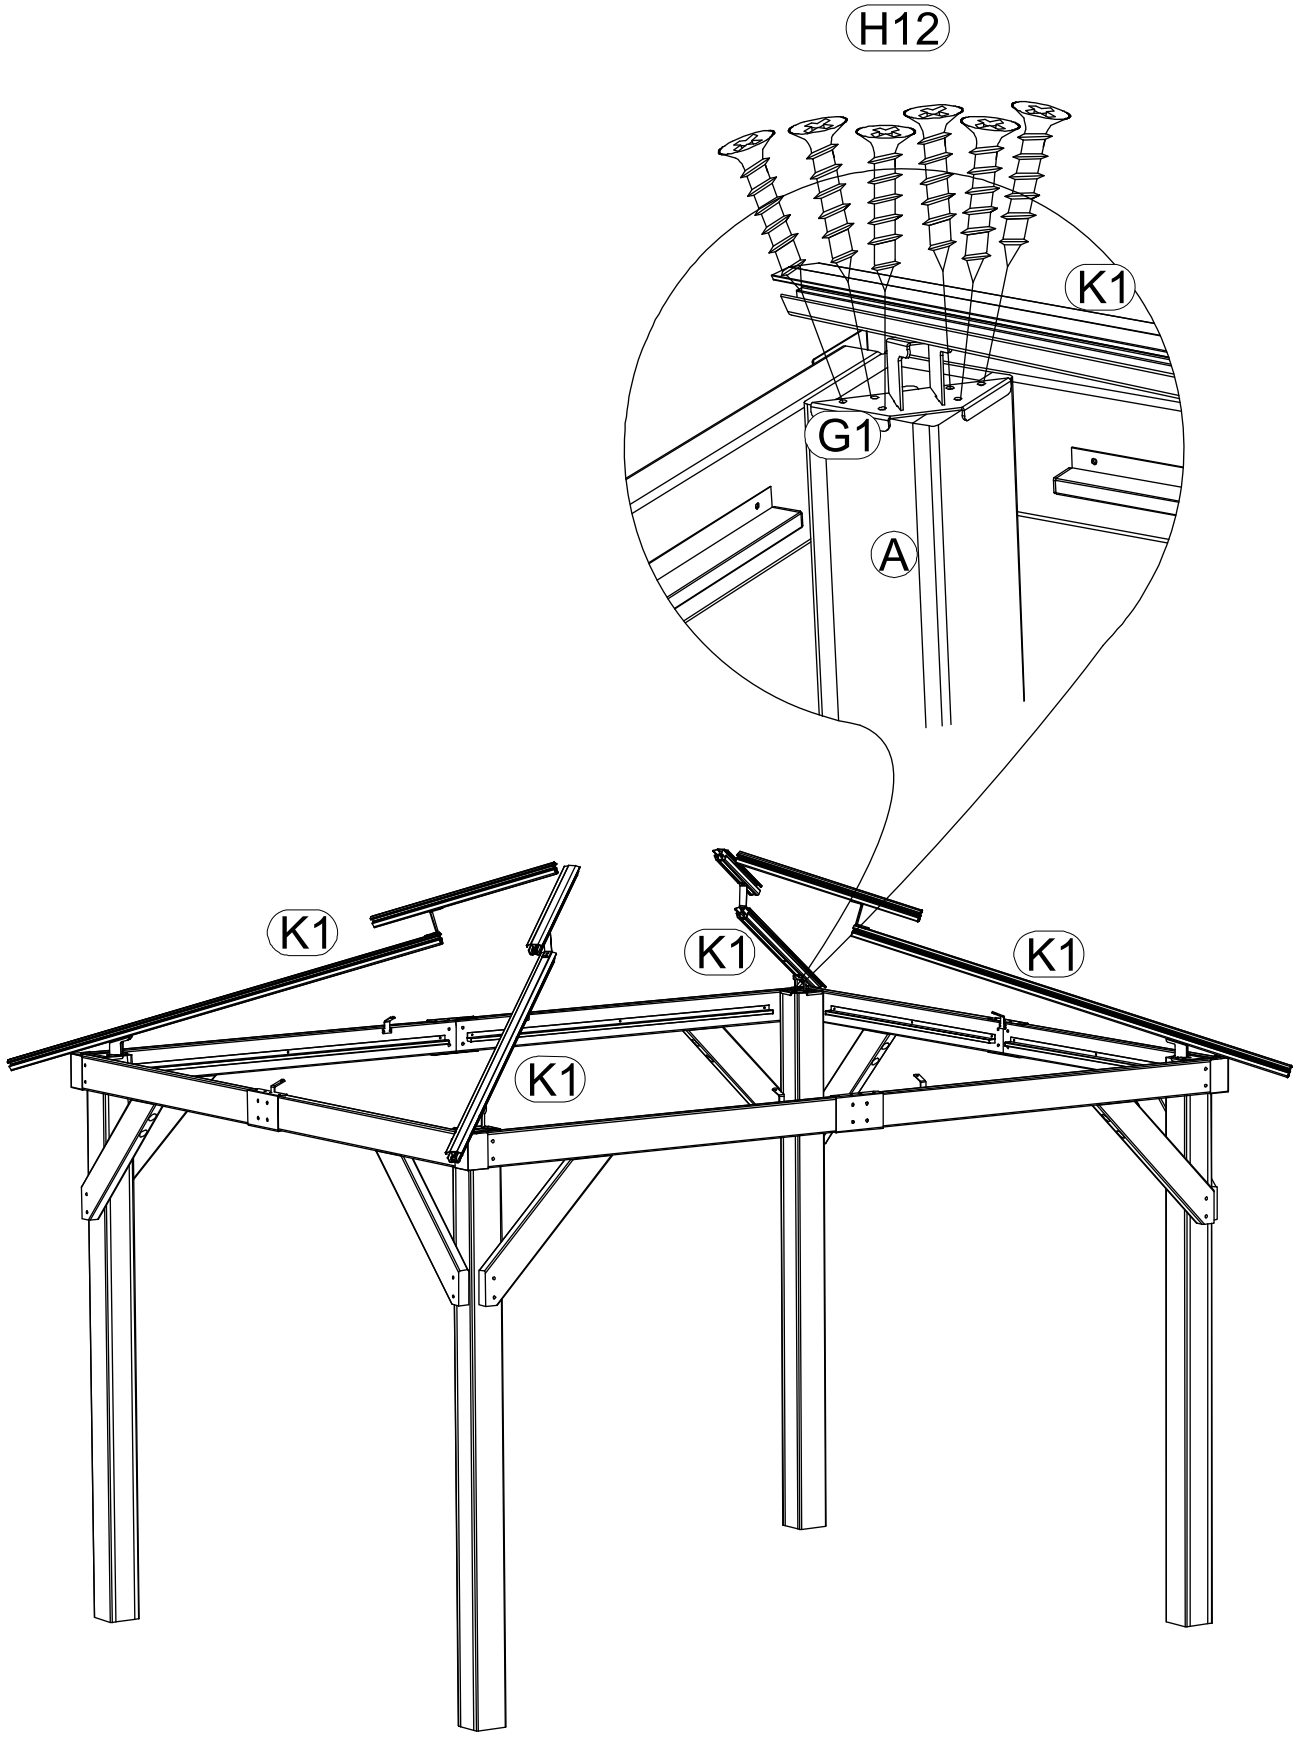
Step 10：




Q1		2
Q2		2
M		4


H1		M6X15	8
H8		M6X16	8

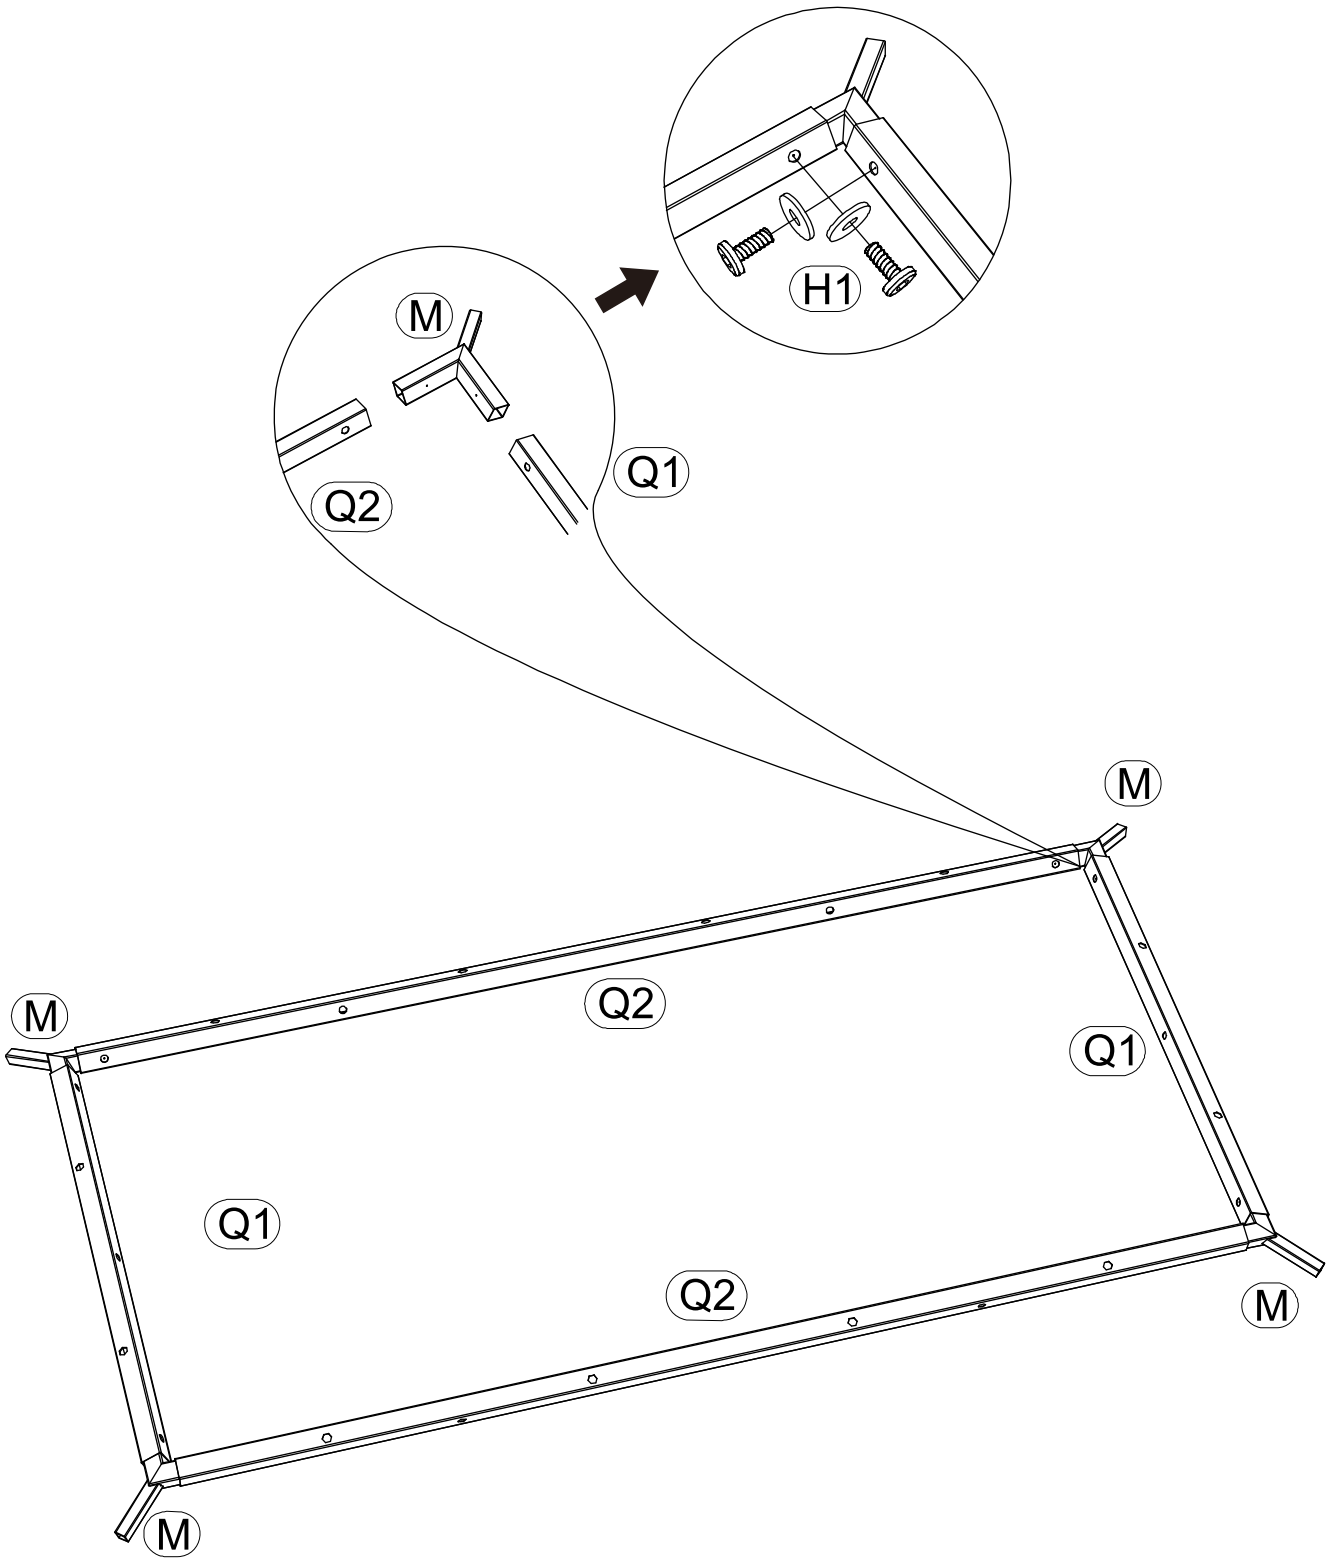Step 11：




H1		M6X15	8
H8		M6X16	8

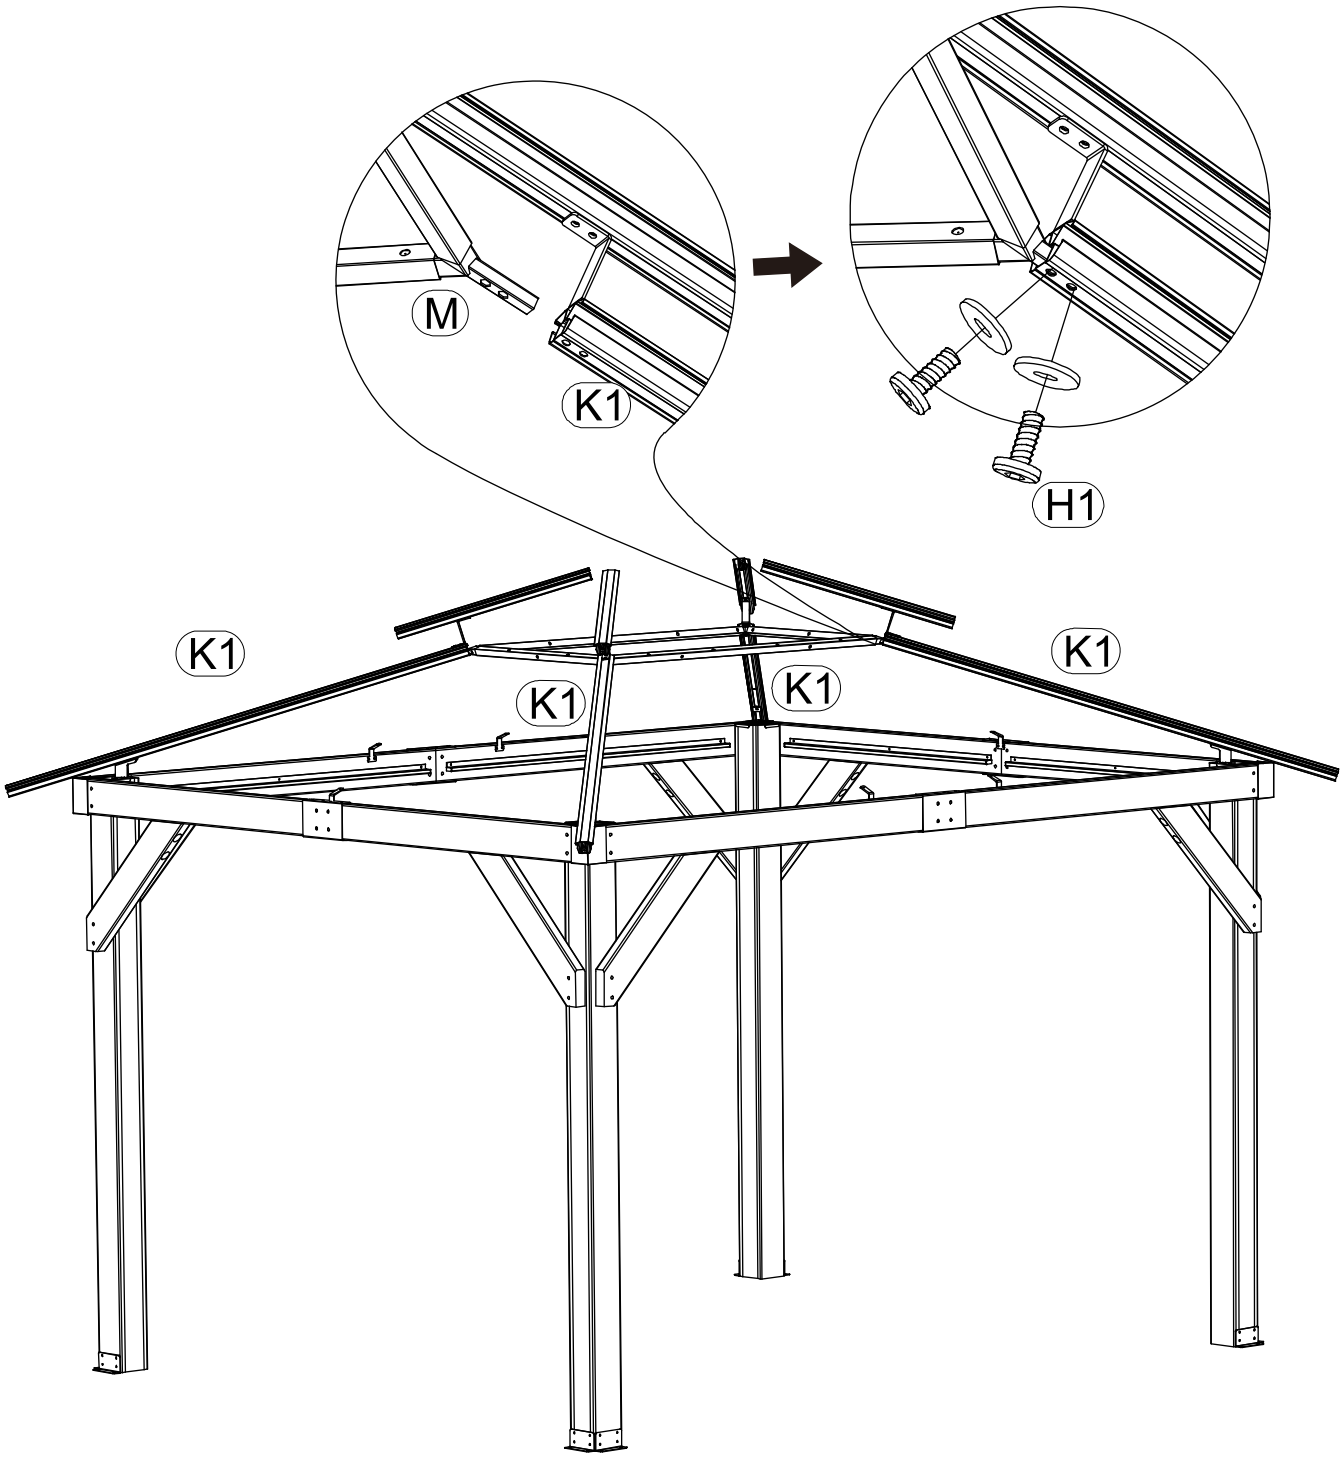
Step 12：



K3		6
G7		4

H1		M6X15	6
H8		M6X16	12
H3		M6X40	6

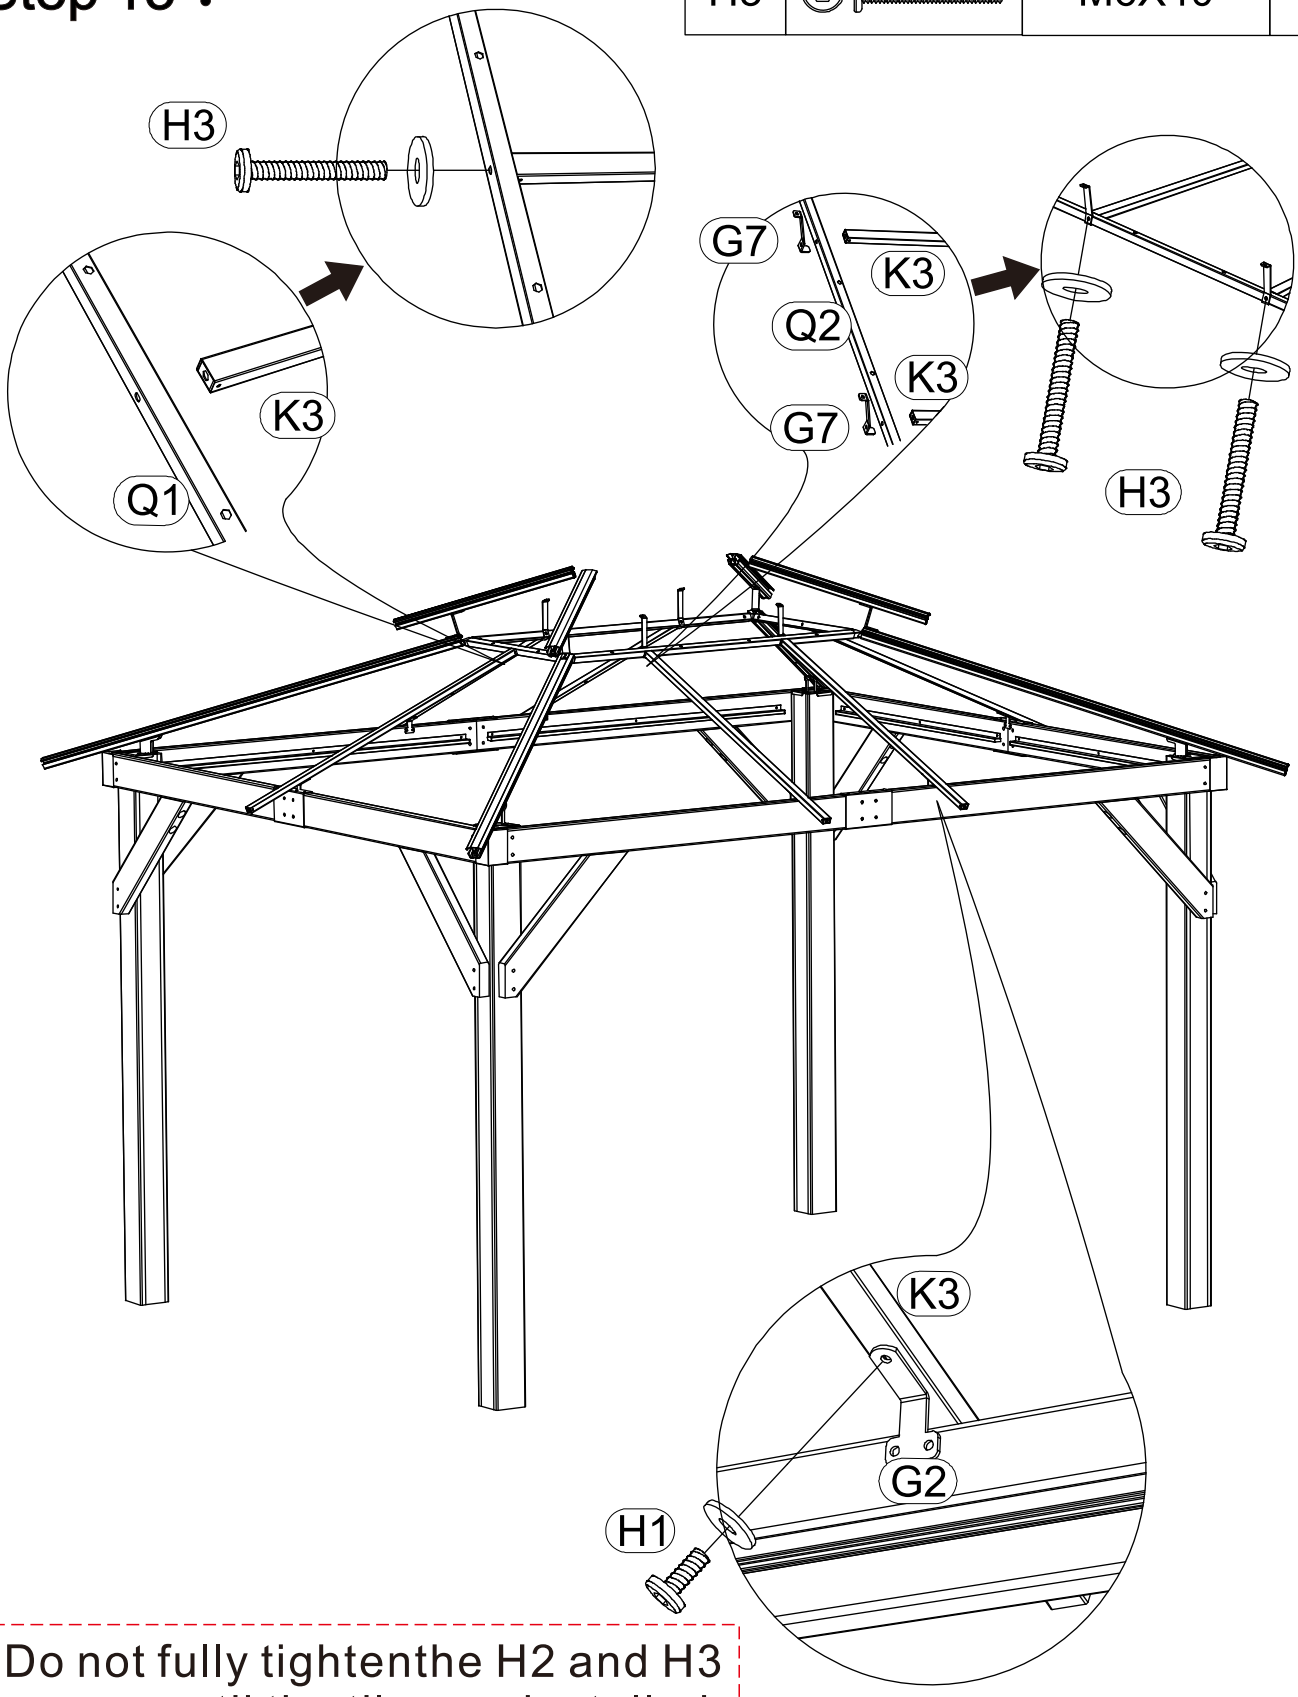Step 13：





Do not fully tightenthe H2 and H3 screwsuntil the tiles areinstalled

L1		1

H1		M6X15	4
H8		M6X16	4

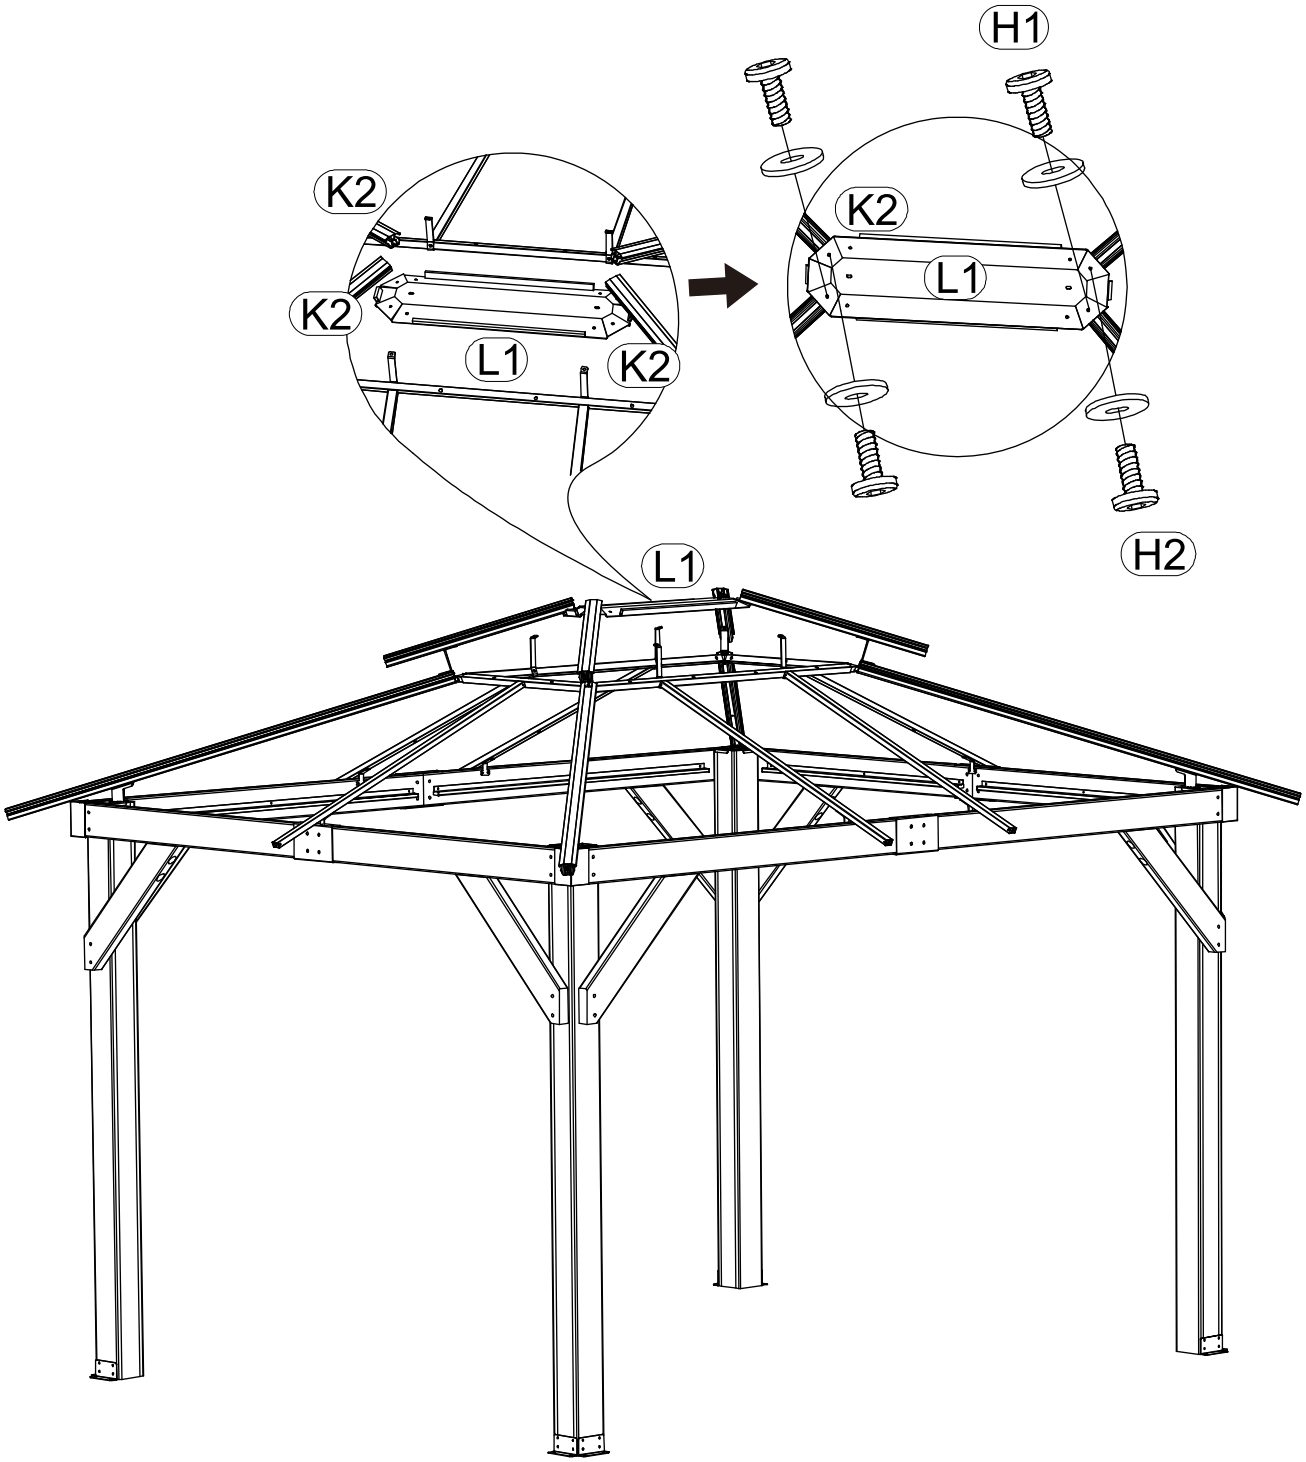
Step 14：




K4		4

H1		M6X15	8
H8		M6X16	8

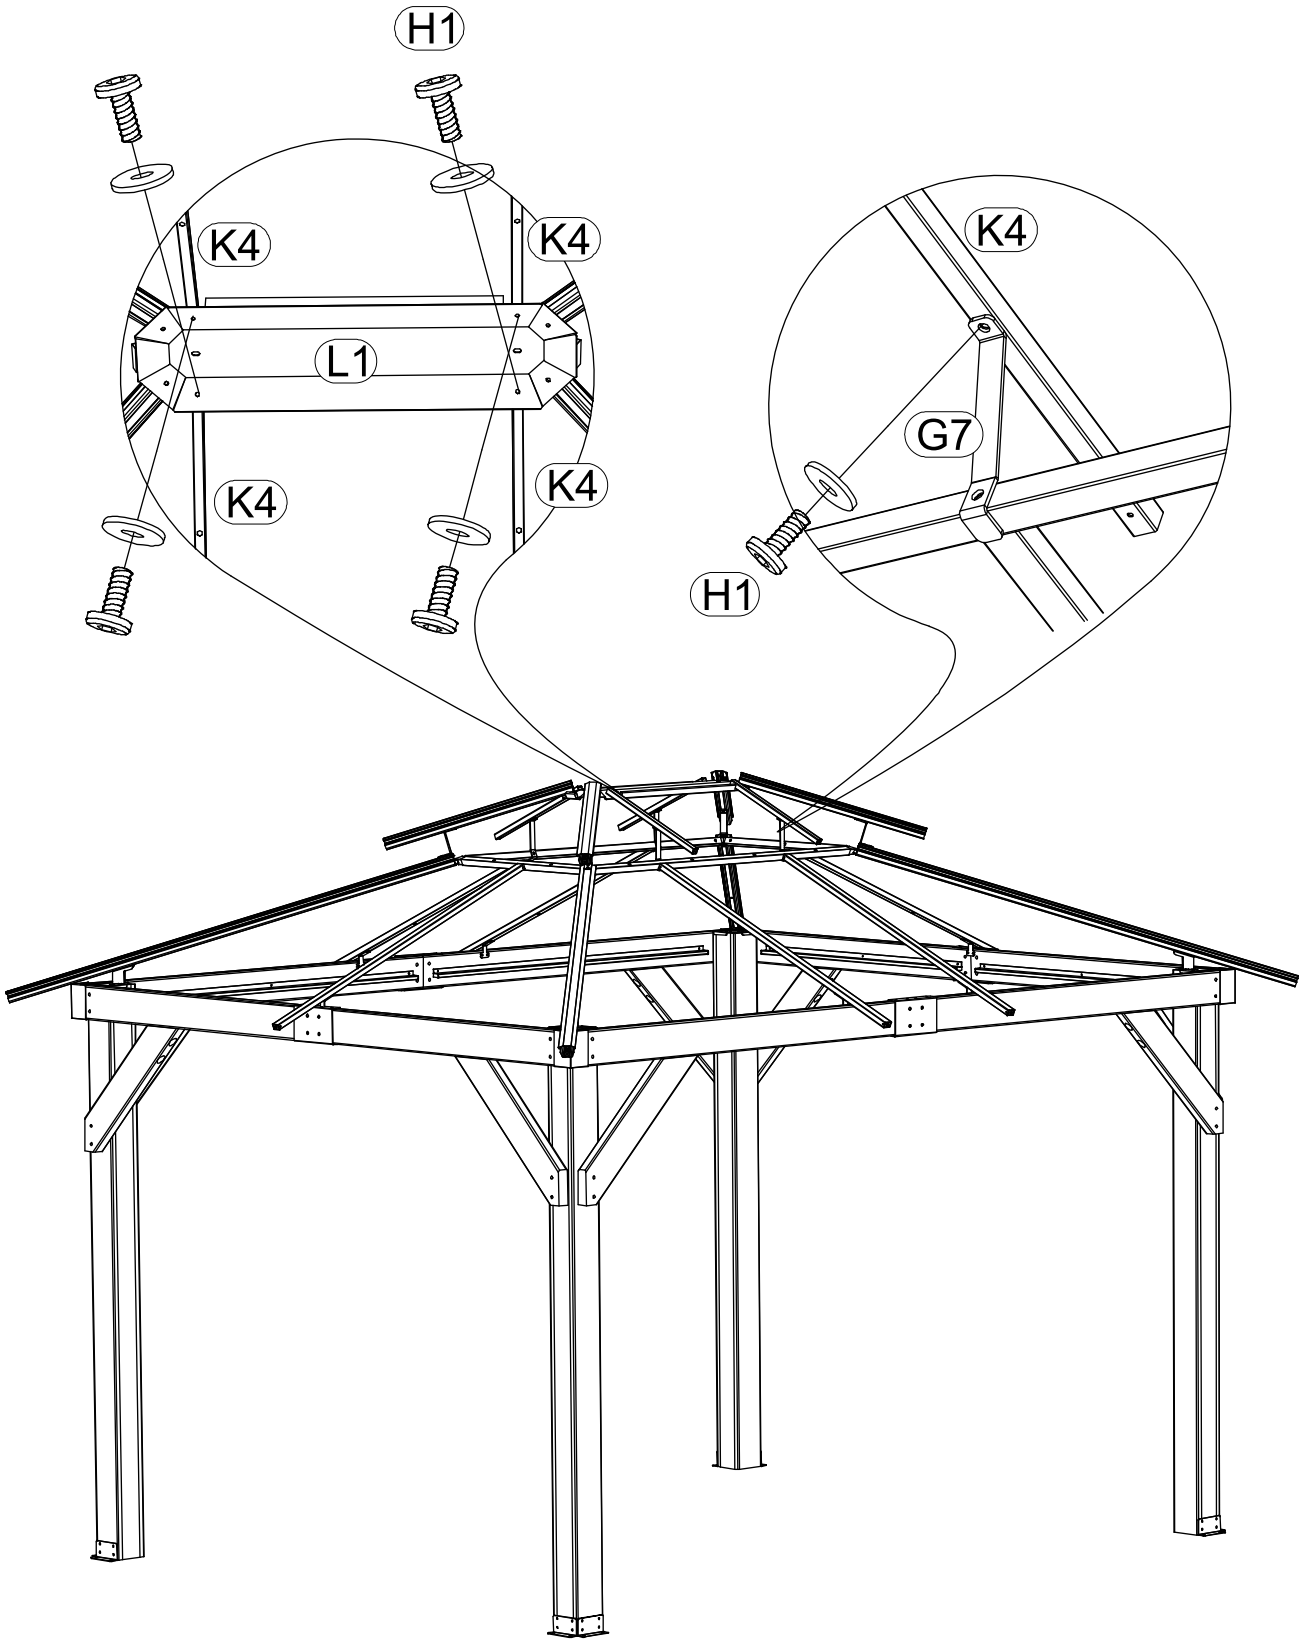
Step 15：





J1		2
J2		2
F2		4


H2		M6X25	4
H8		M6X16	8
H3		M6X40	4

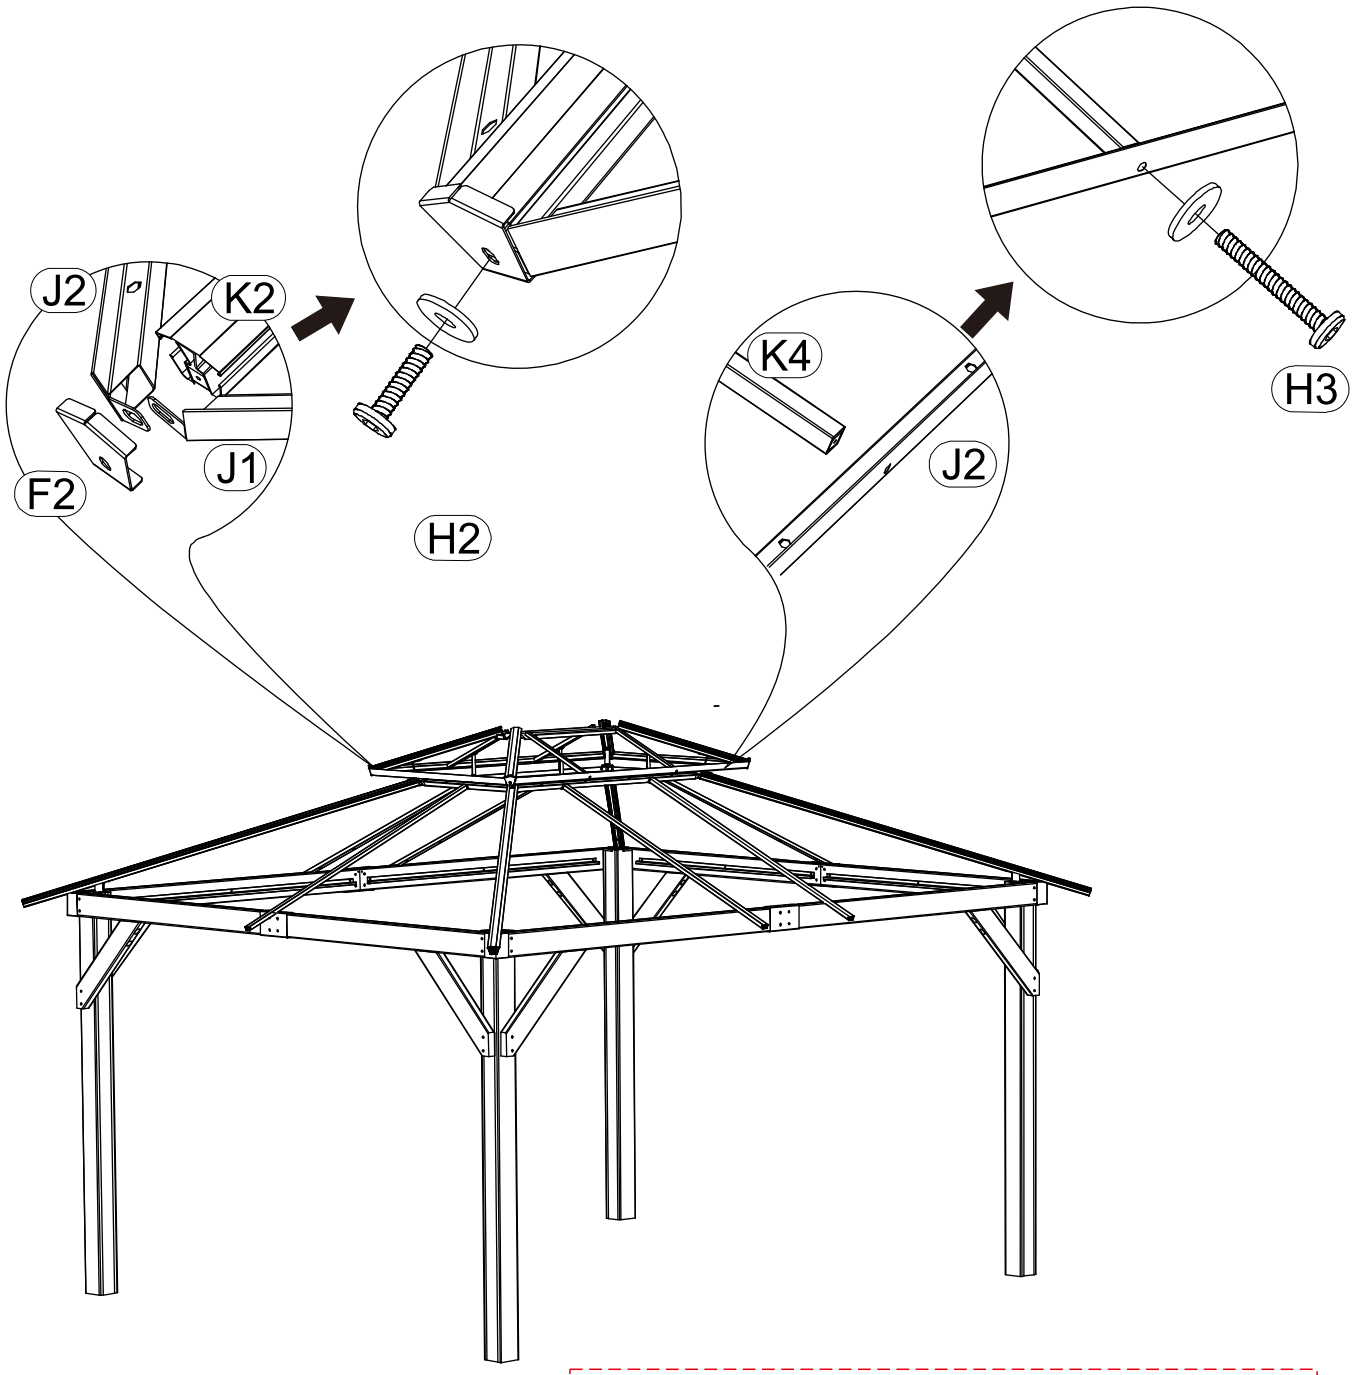Step 16：





Do not fully tightenthe H2 and H3 screwsuntil the tiles areinstalled

P1		4
P10		2

P2		4

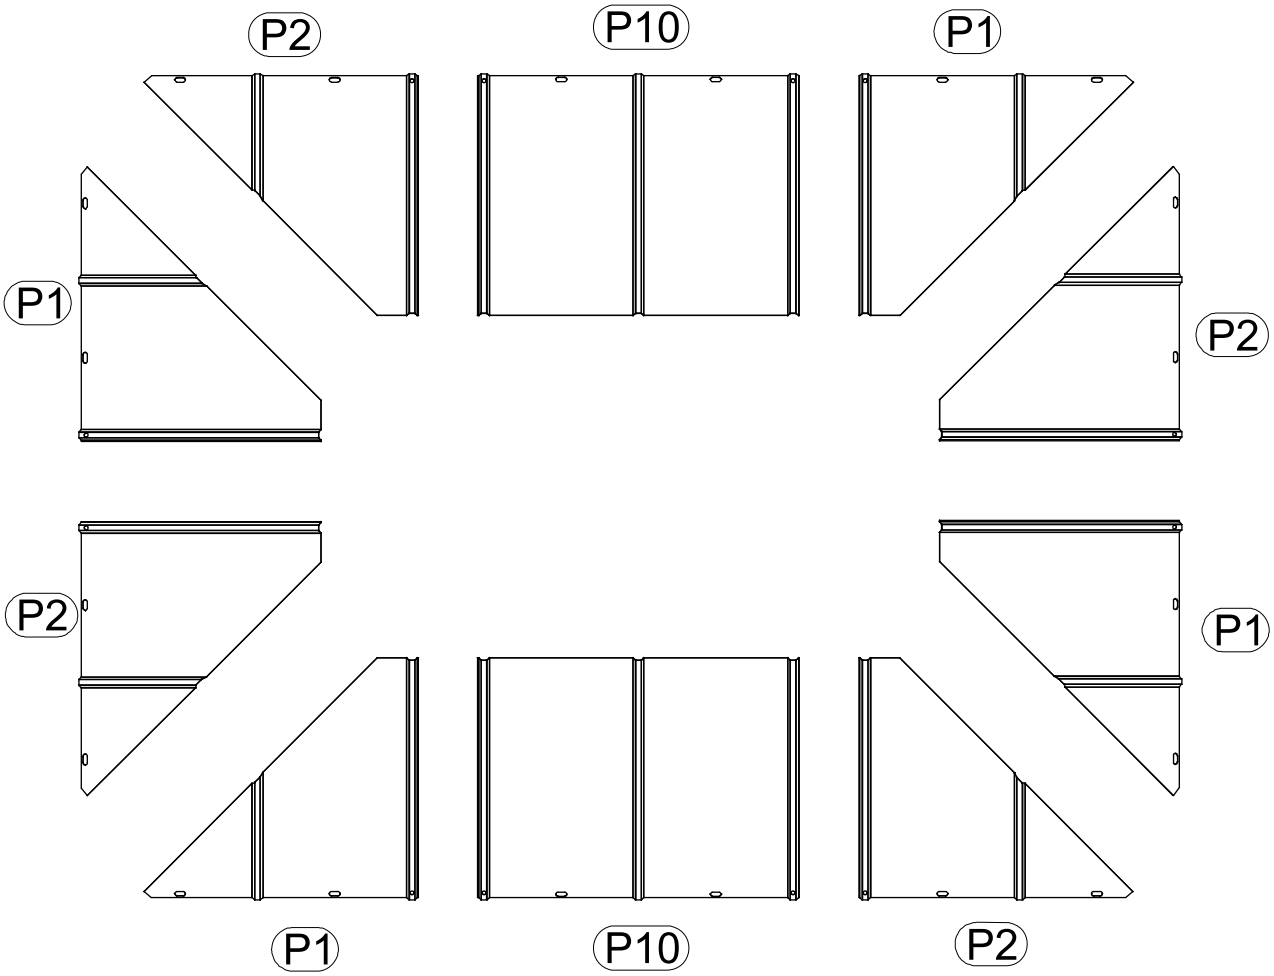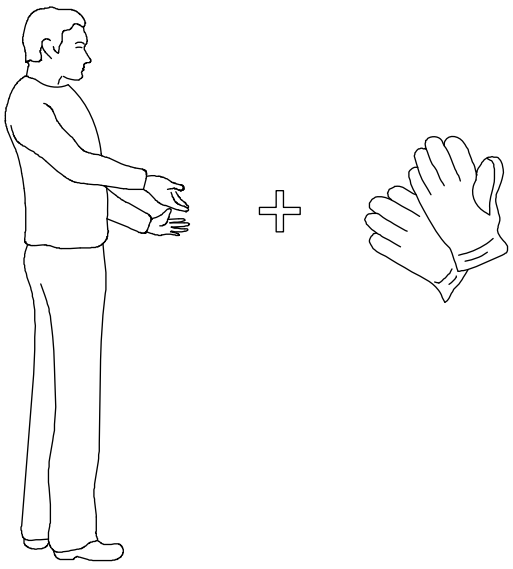Step17：







When instructions forinstalling the roof panels,Please wear gloves!


H16			6

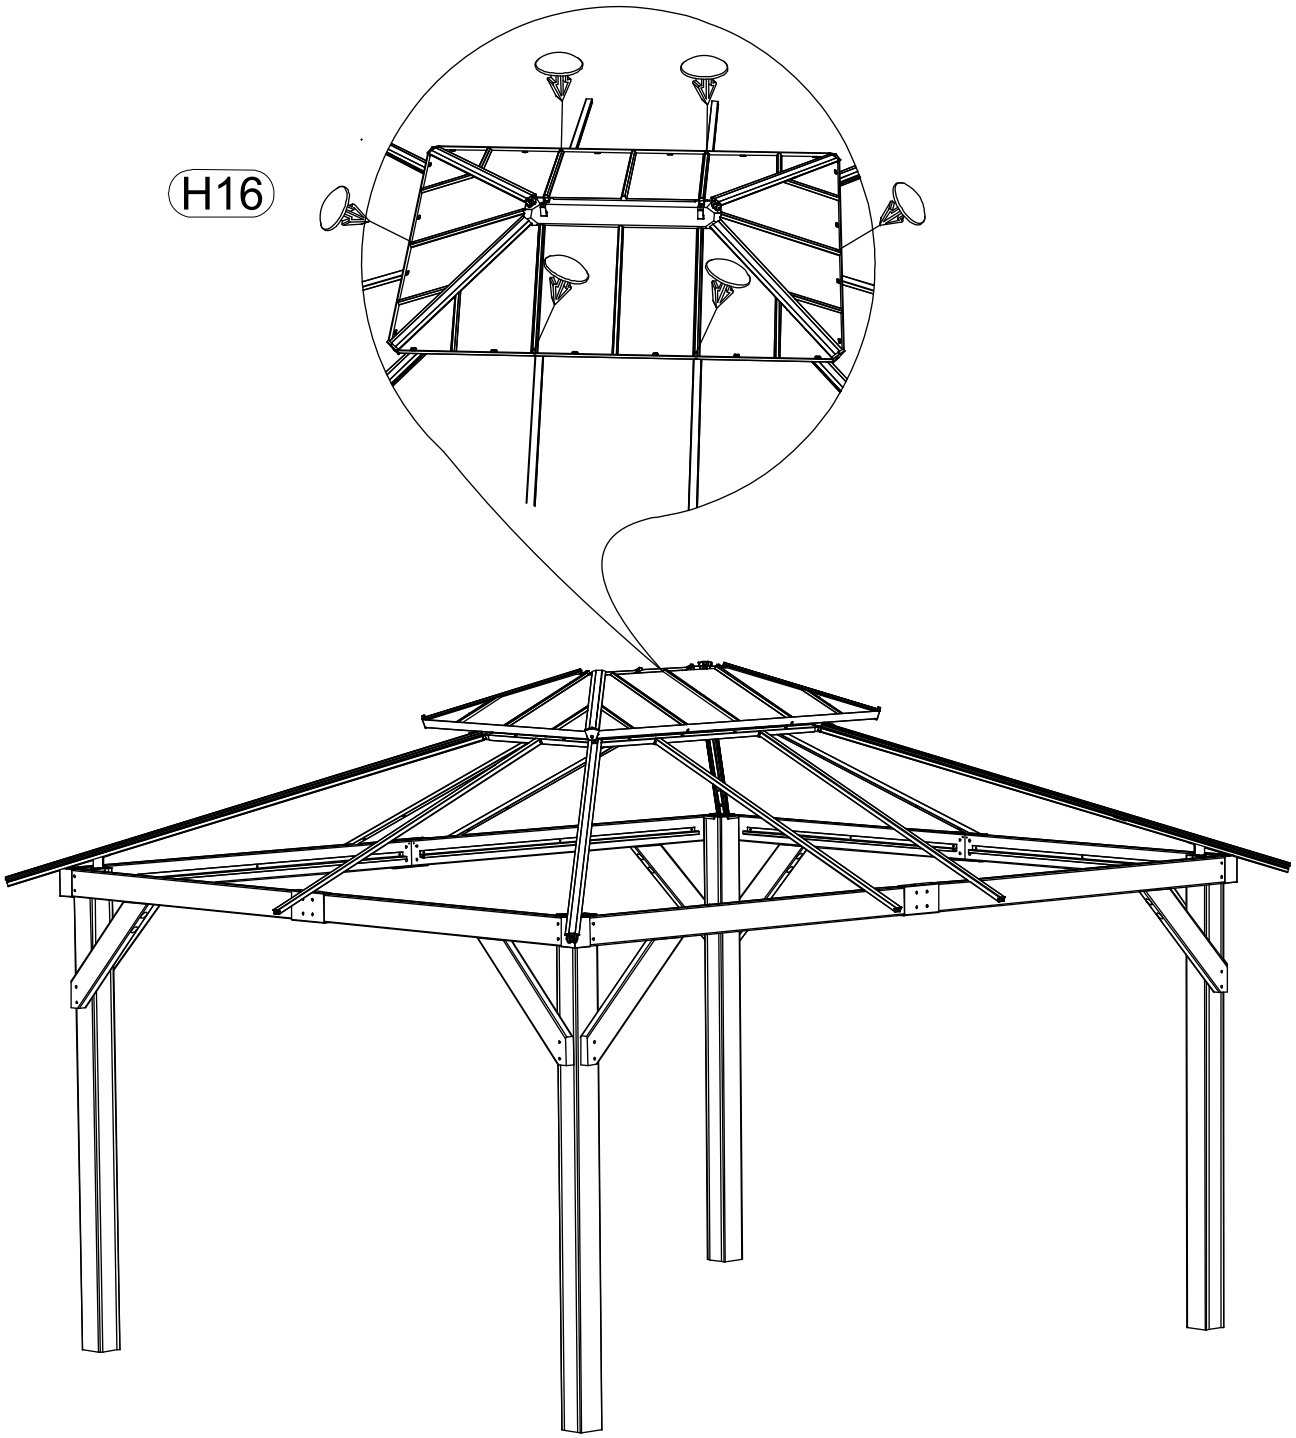
Step 18：



H1		M6X15	20
H8		M6X16	20

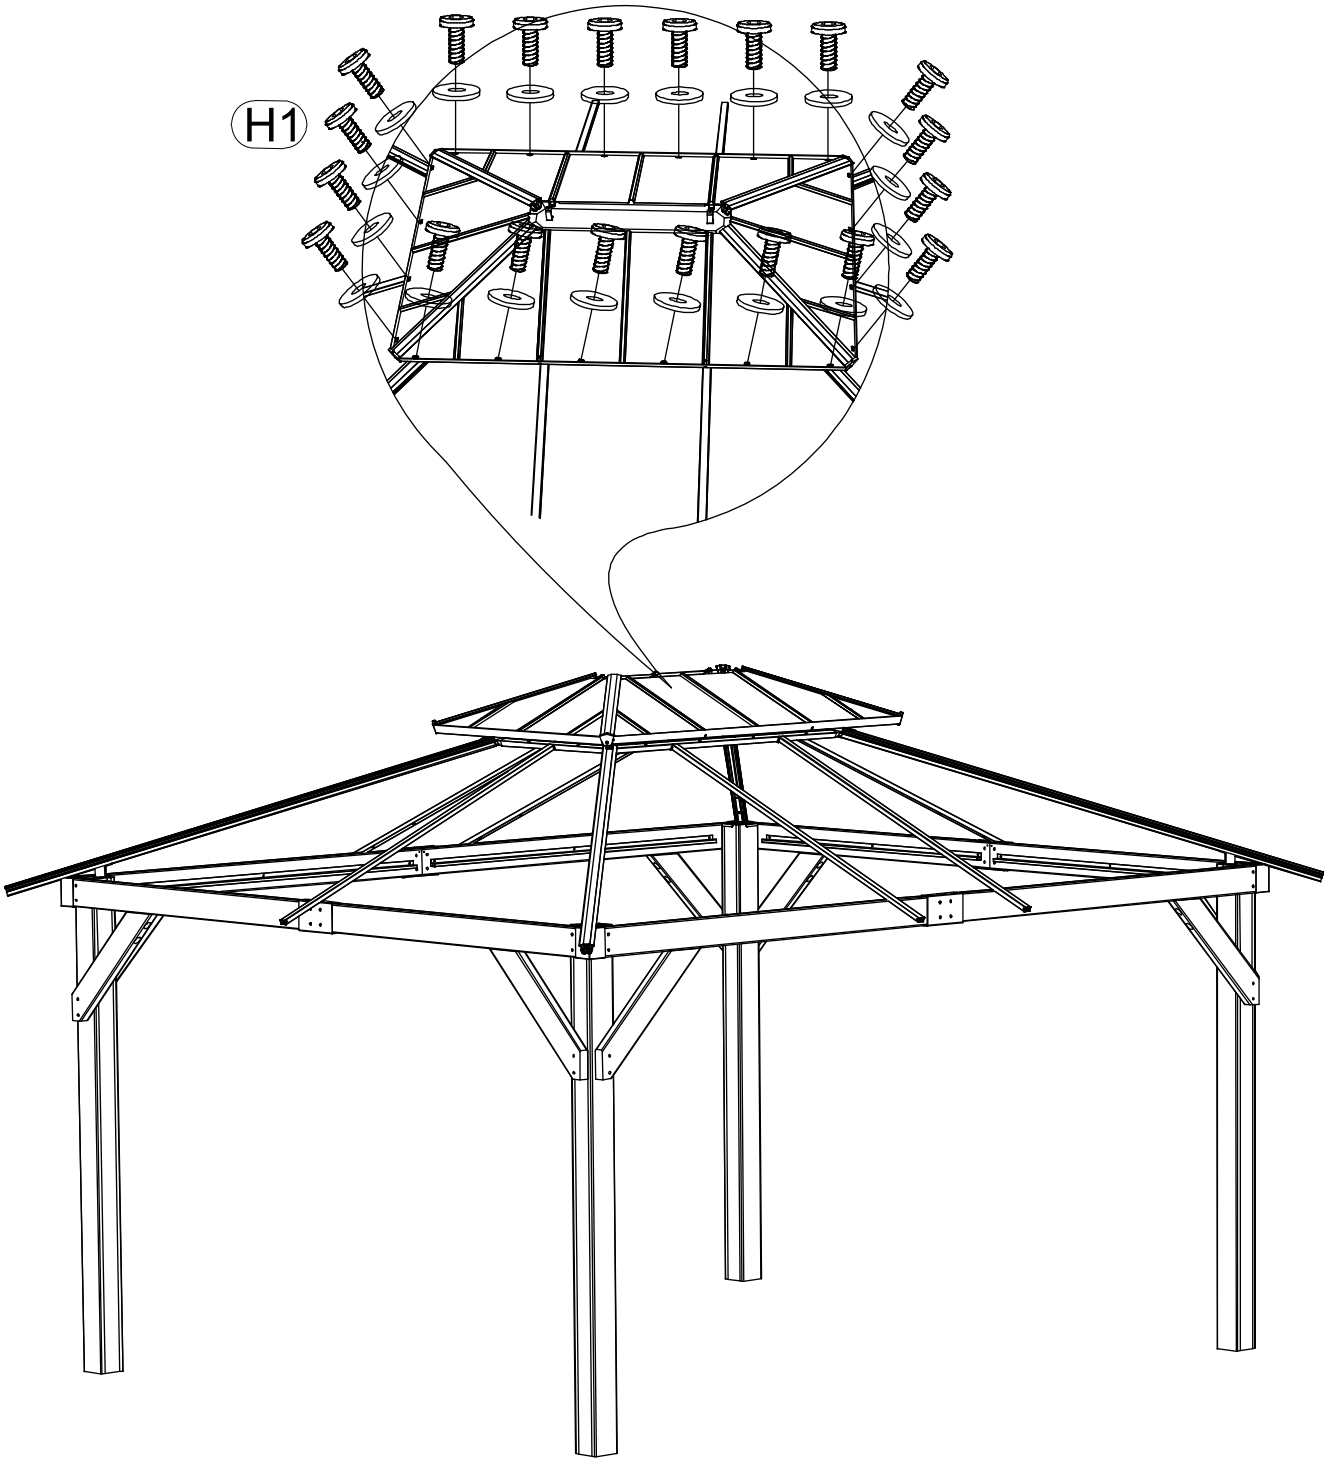
Step 19：




G6		2
L2		1


H1		M6X15	2
H10		RUBBER	2
H8		M6X16	2

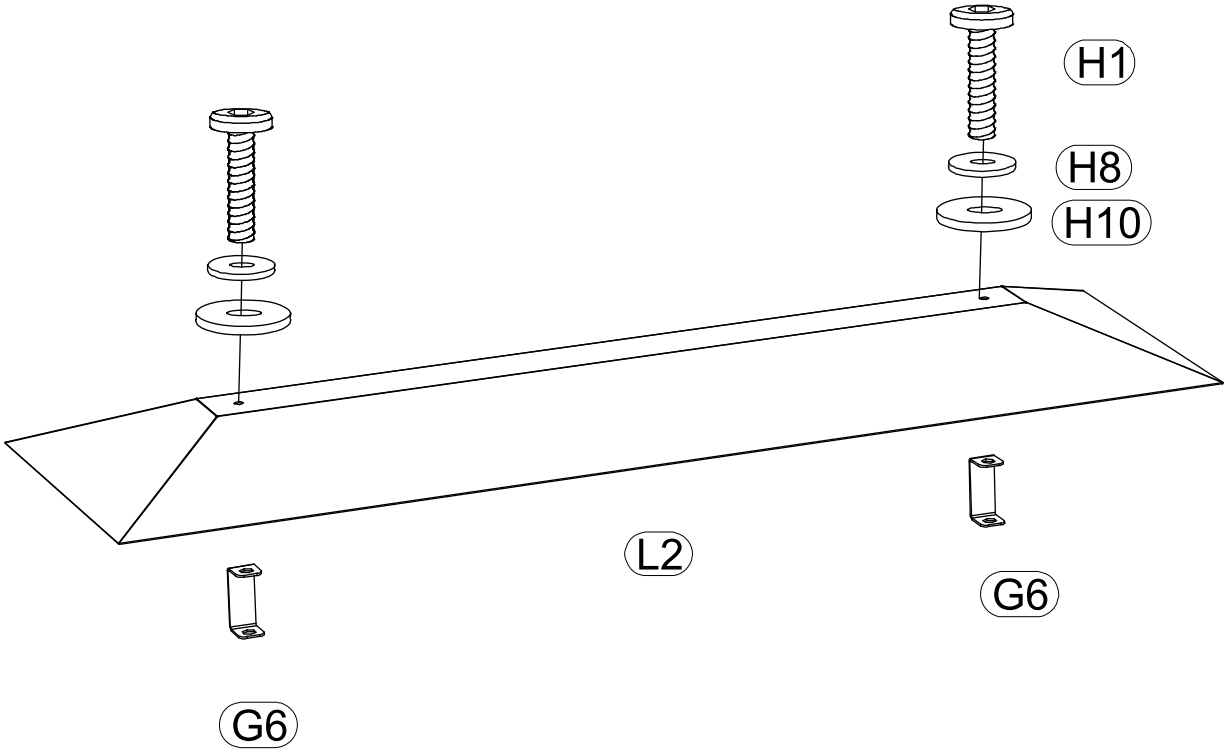
Step 20：



H4		2

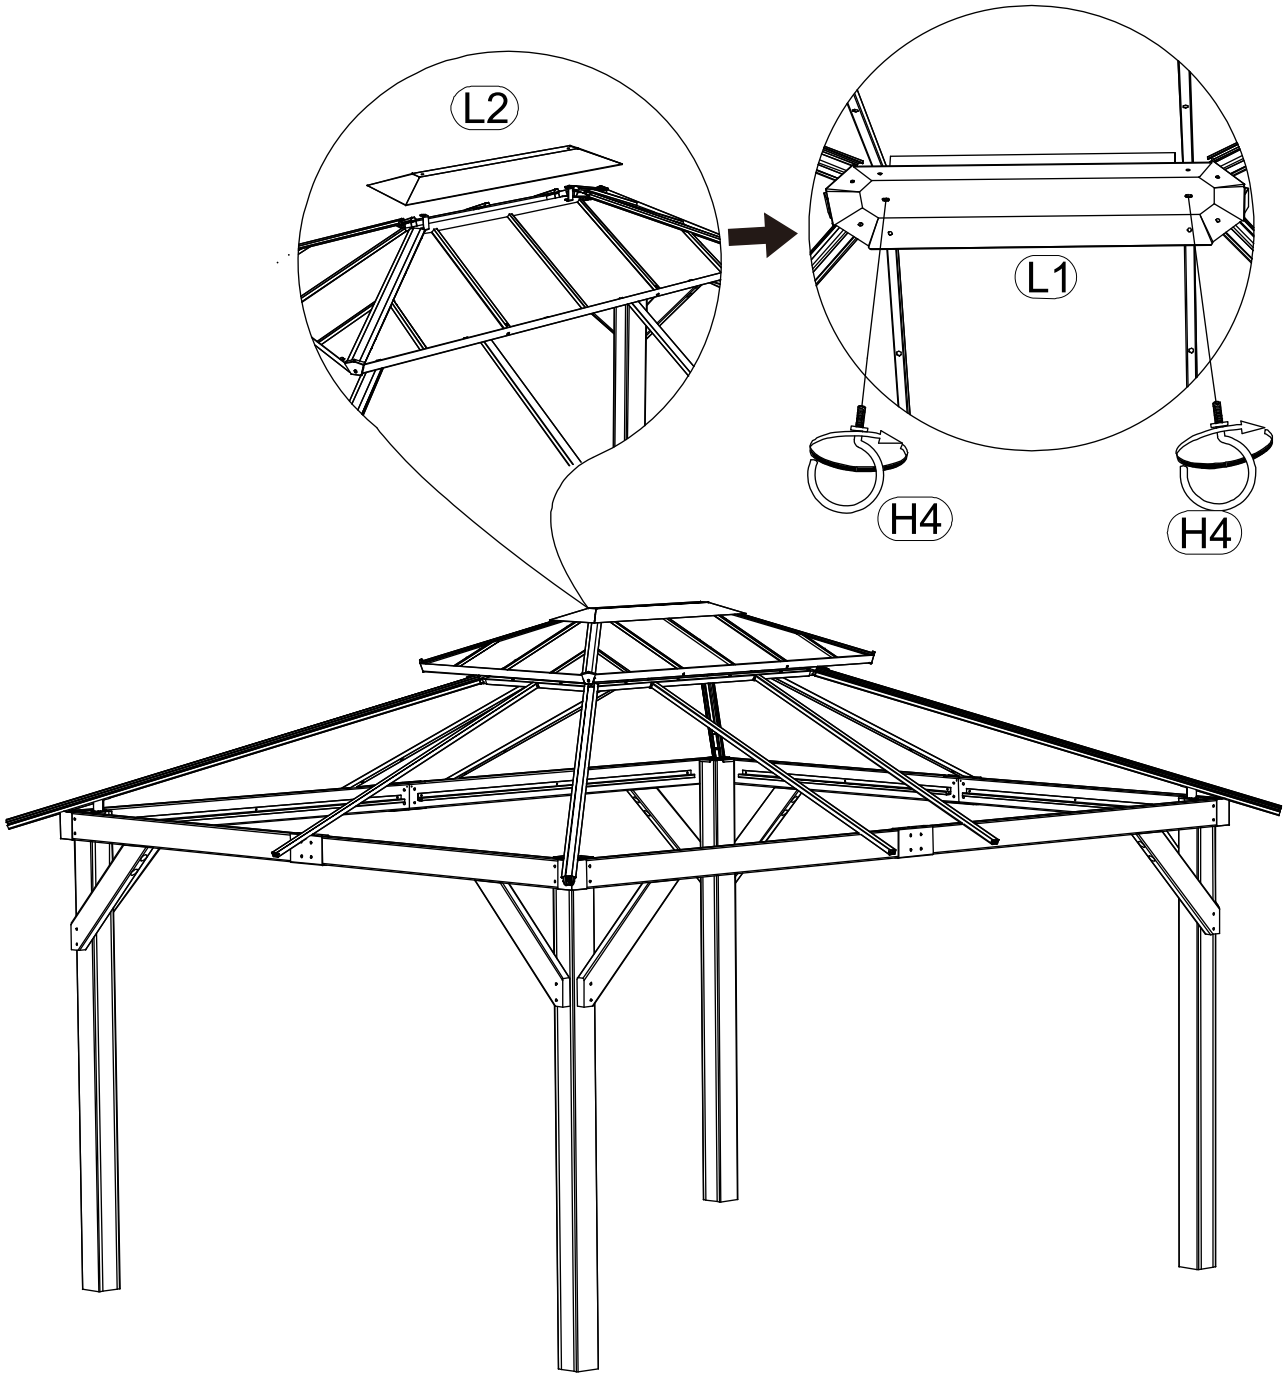
Step 21：




G3		6

H1		M6X15	6
H8		M6X16	6

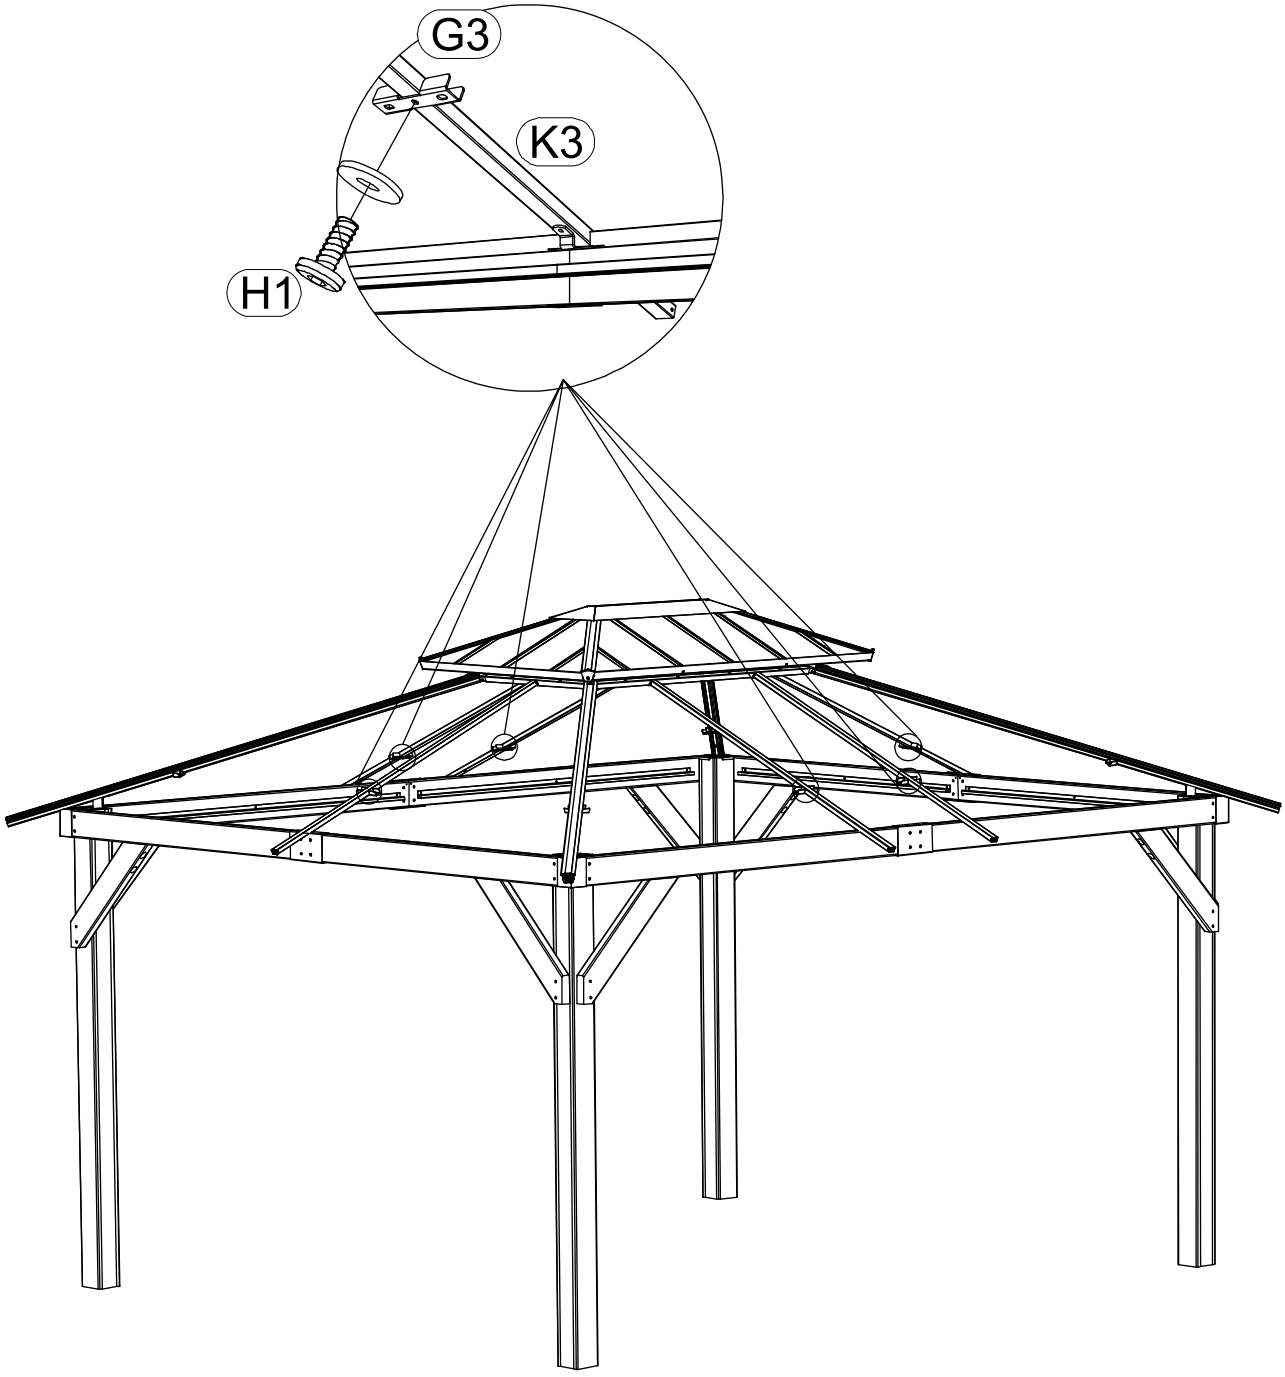
Step 22：





G4		4

H1		M6X15	4
H8		M6X16	4

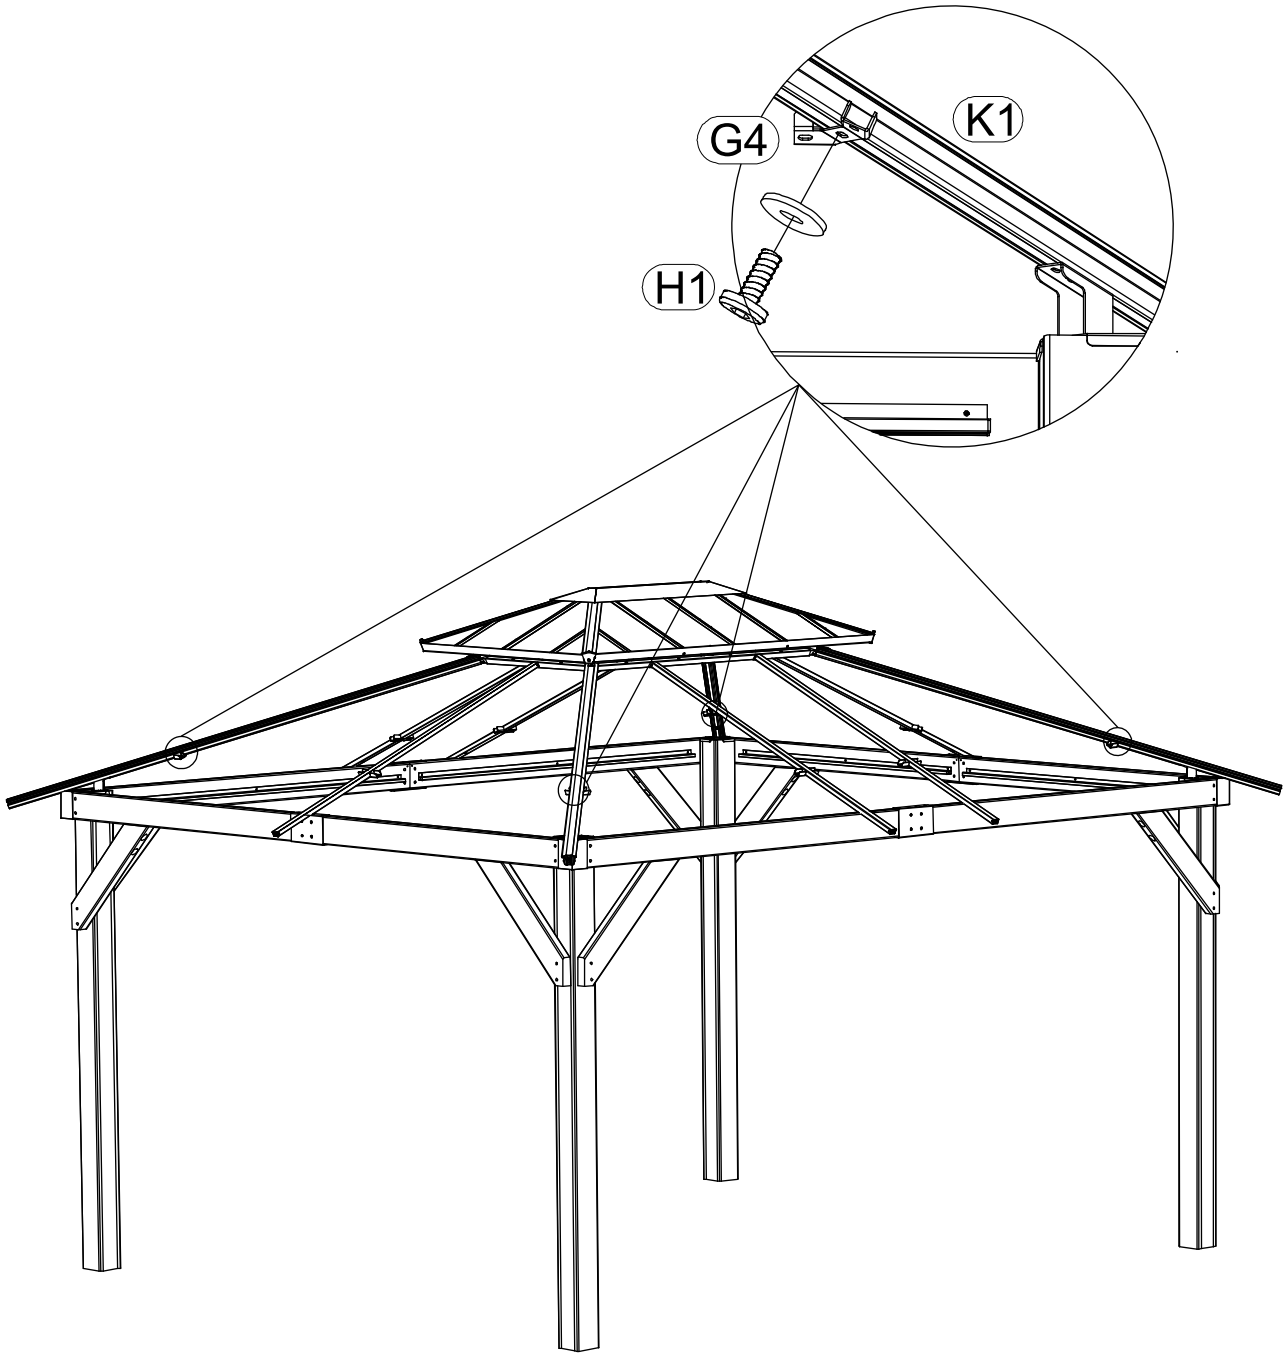
Step 23：




N1		8
N2		2


H1		M6X15	20
H8		M6X16	20

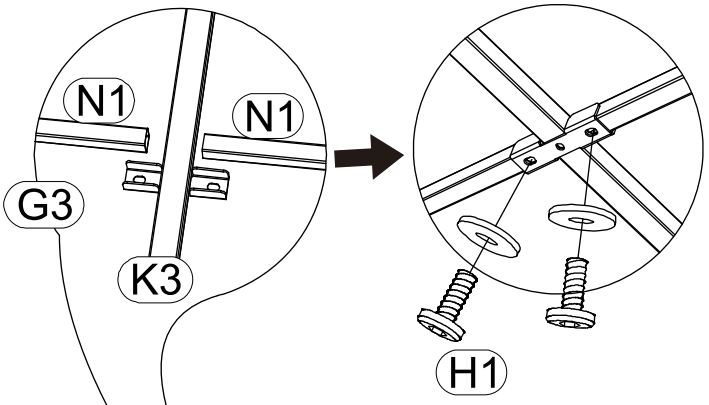
Step 24：



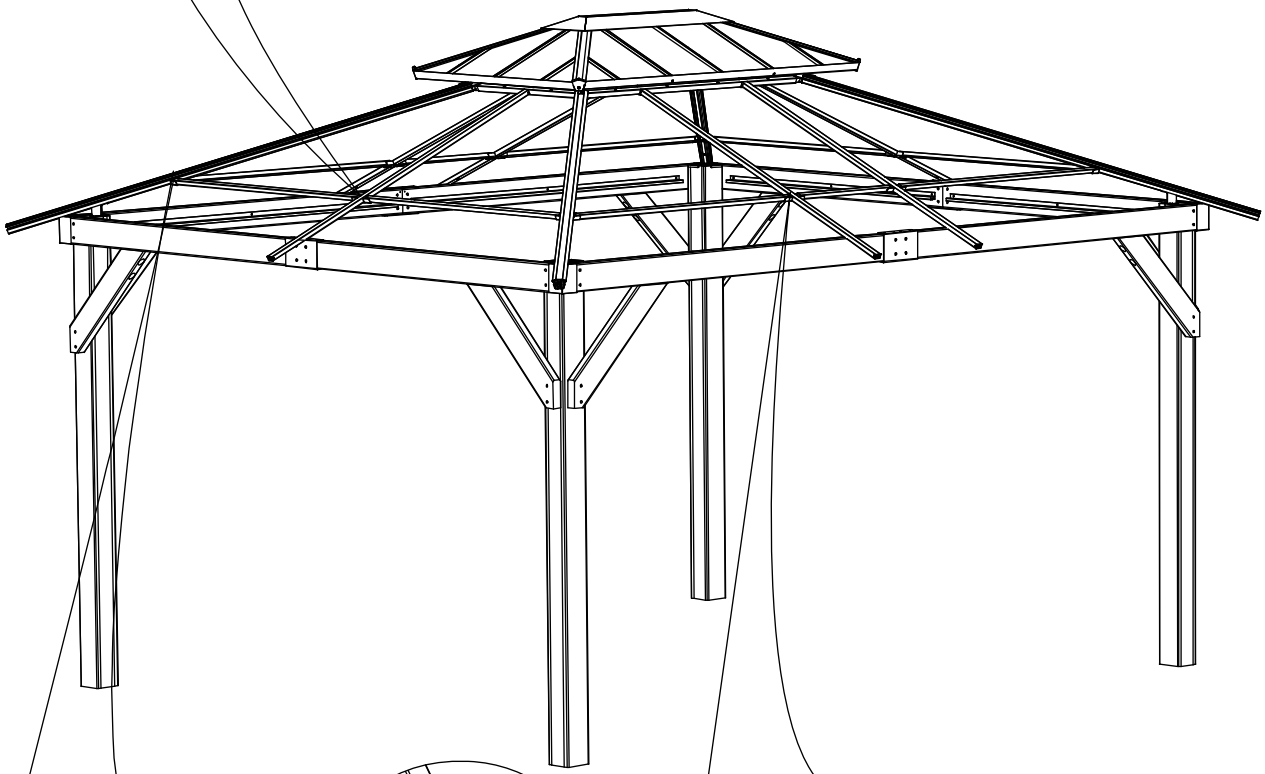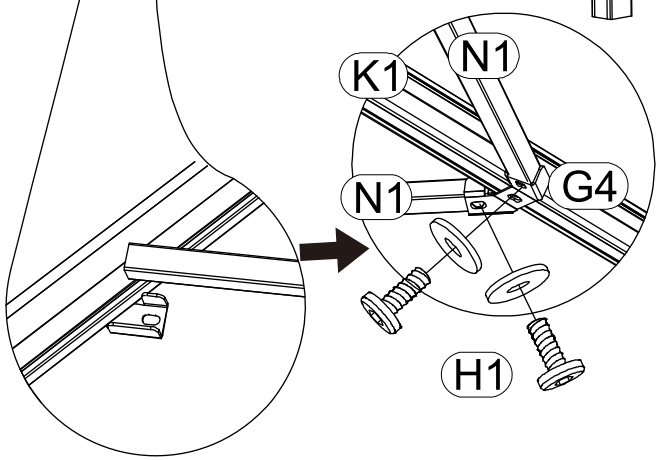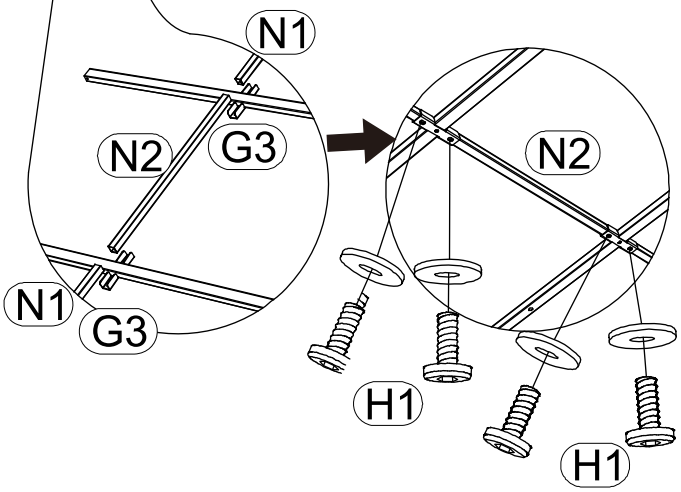When installing part N1, do not fully tighten the screws on the opposite side. Pull the part firmly into place, then install the screws on both sides before tightening them completely.











J3		4
J4		4
J5		2



H2		M6X25	10
H8		M6X16	10
F2			4
F3			6

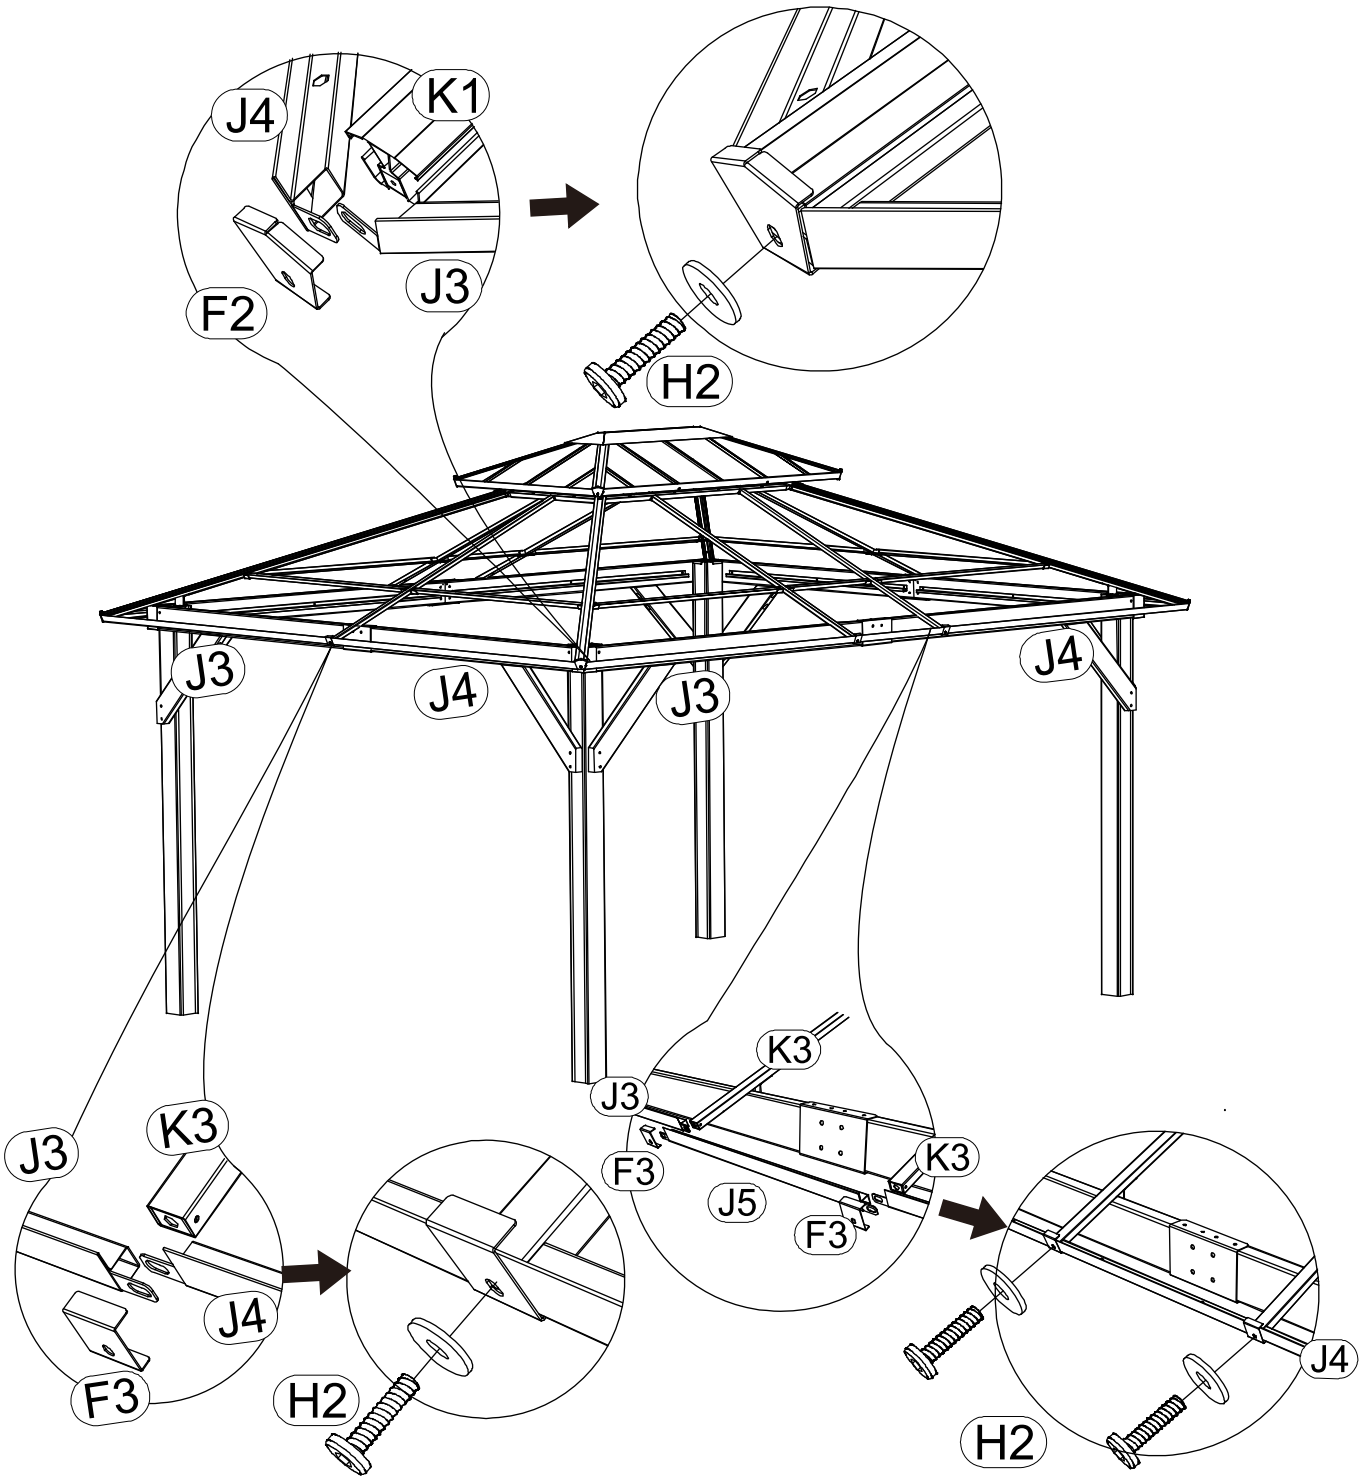Step 25：





Do not fully tightenthe H2 and H3 screwsuntil the tiles areinstalled


P3		4
P5		4
P7		4
P9		2

P4		4
P6		4
P8		4

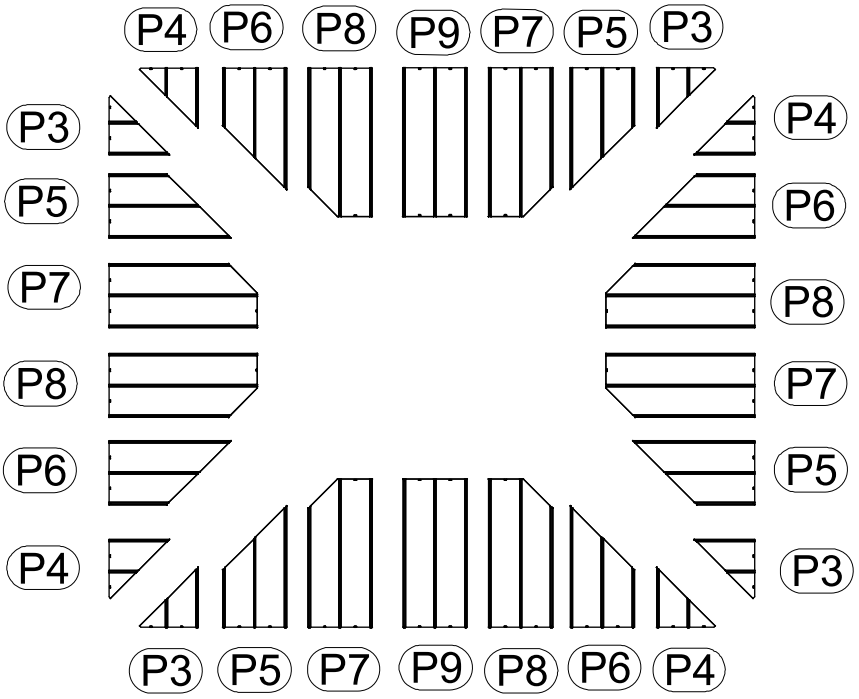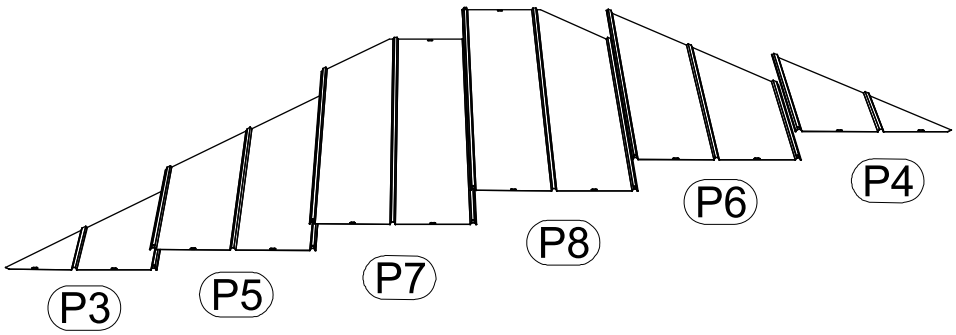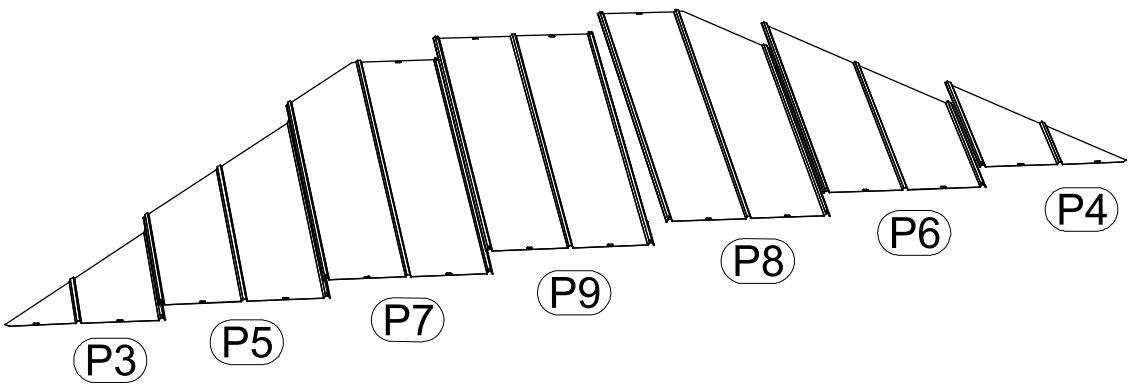Step 26：









H16			28

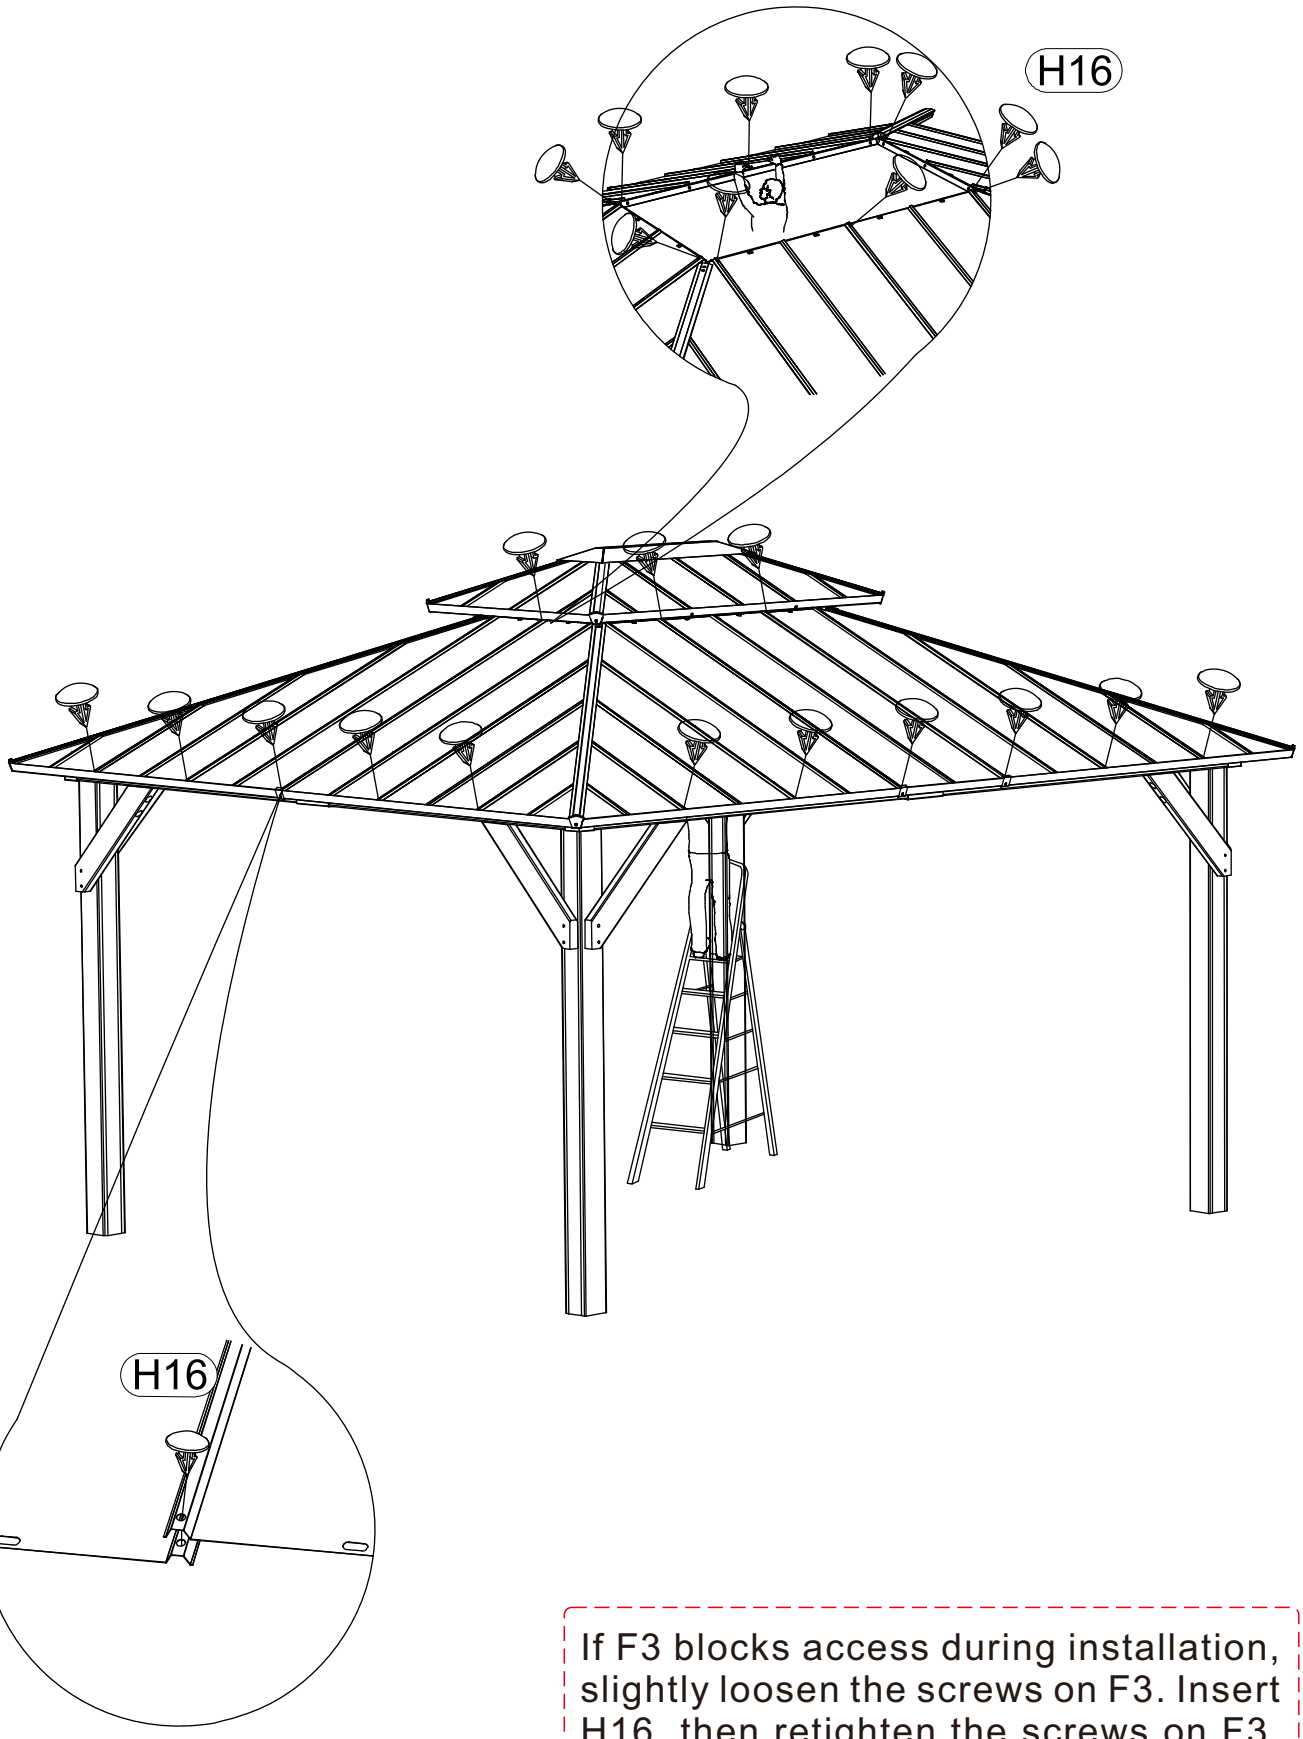
Step 27：



If F3 blocks access during installation, slightly loosen the screws on F3. Insert H16, then retighten the screws on F3.

H1		M6X15	64
H8		M6X16	64

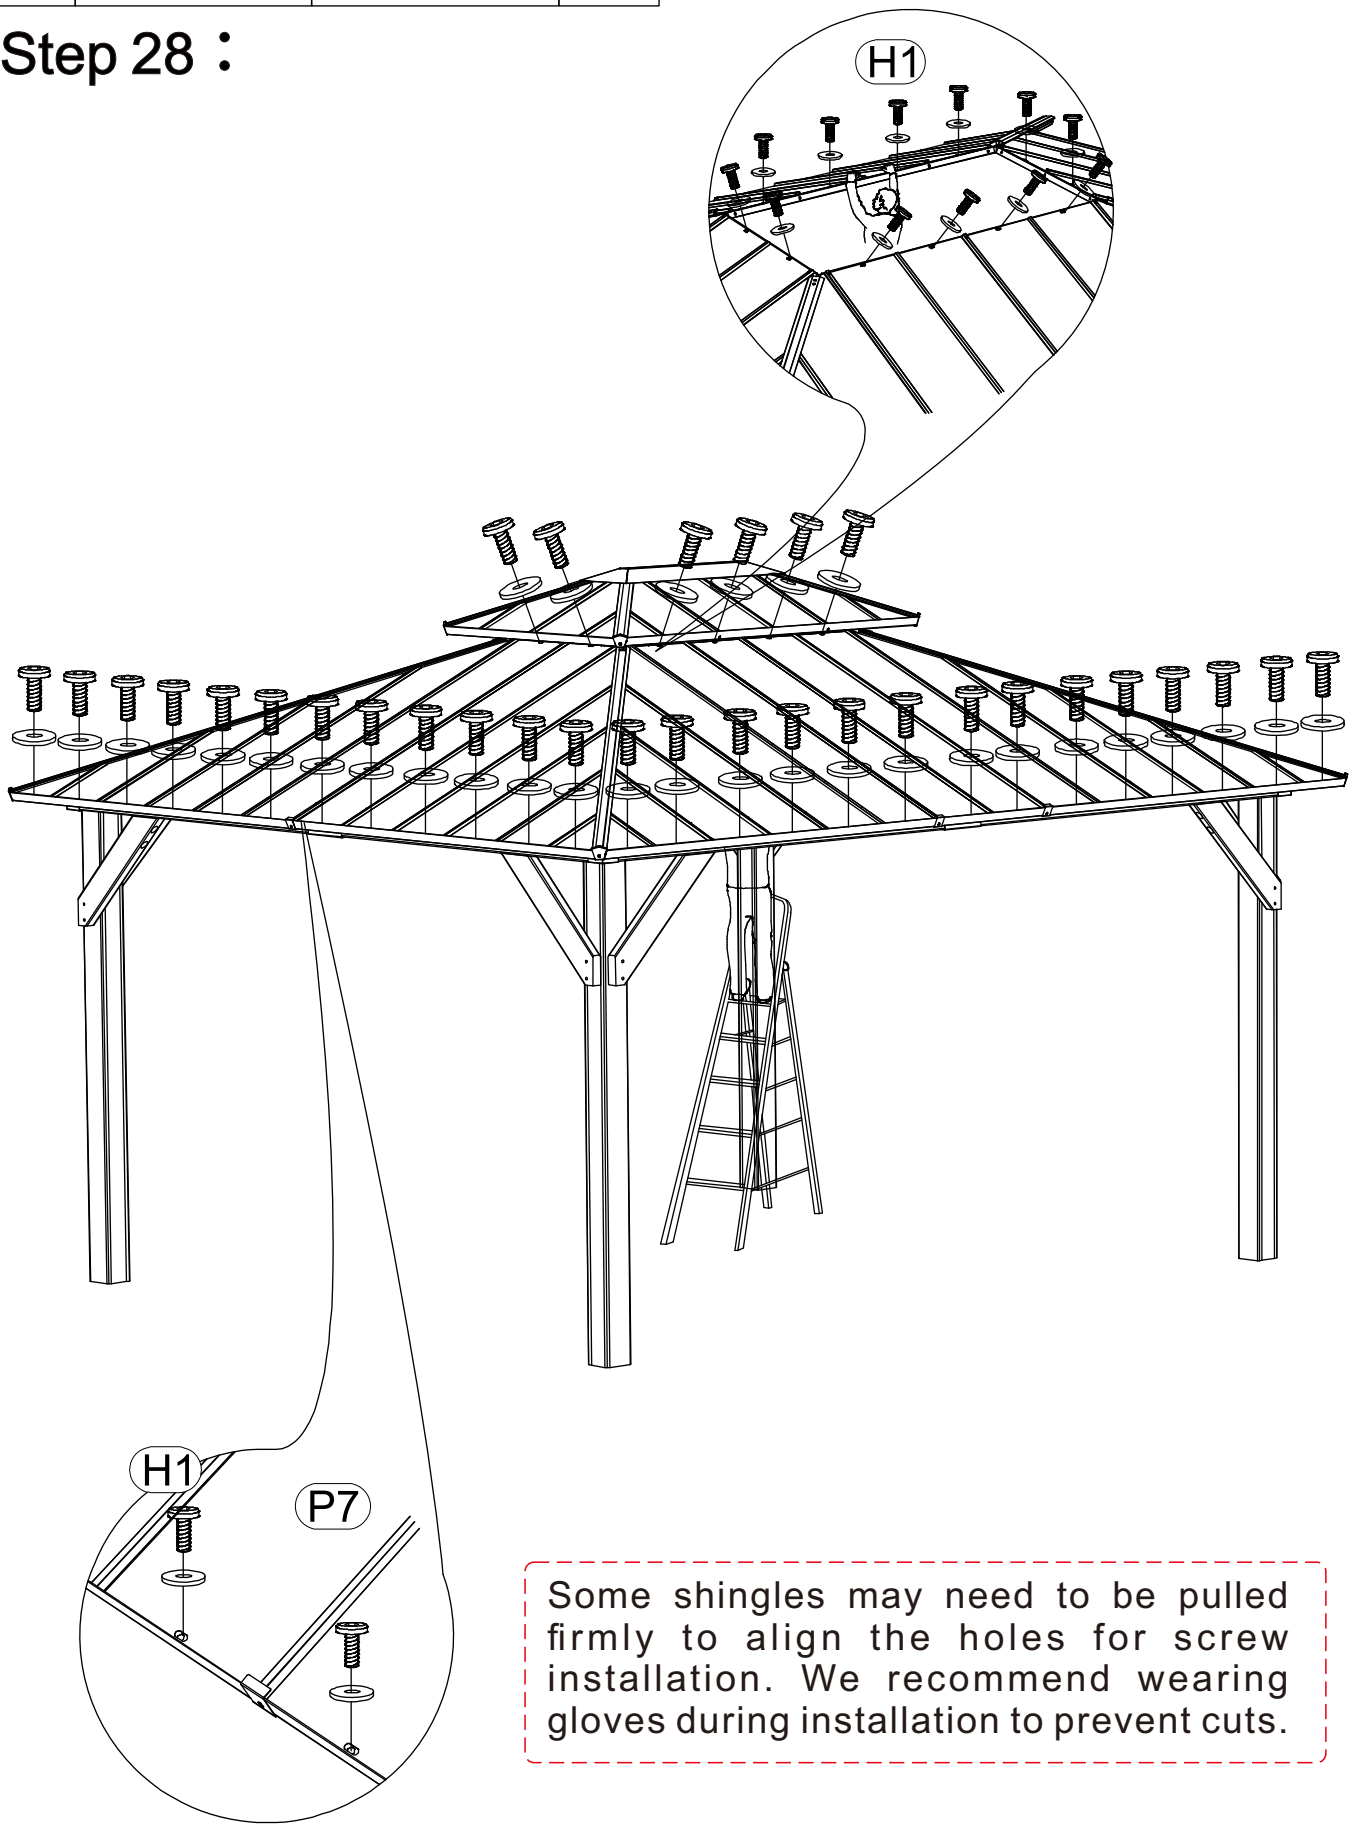
Step 28：



Some shingles may need to be pulled firmly to align the holes for screw installation. We recommend wearing gloves during installation to prevent cuts.


S		8	H12		M4X25	32

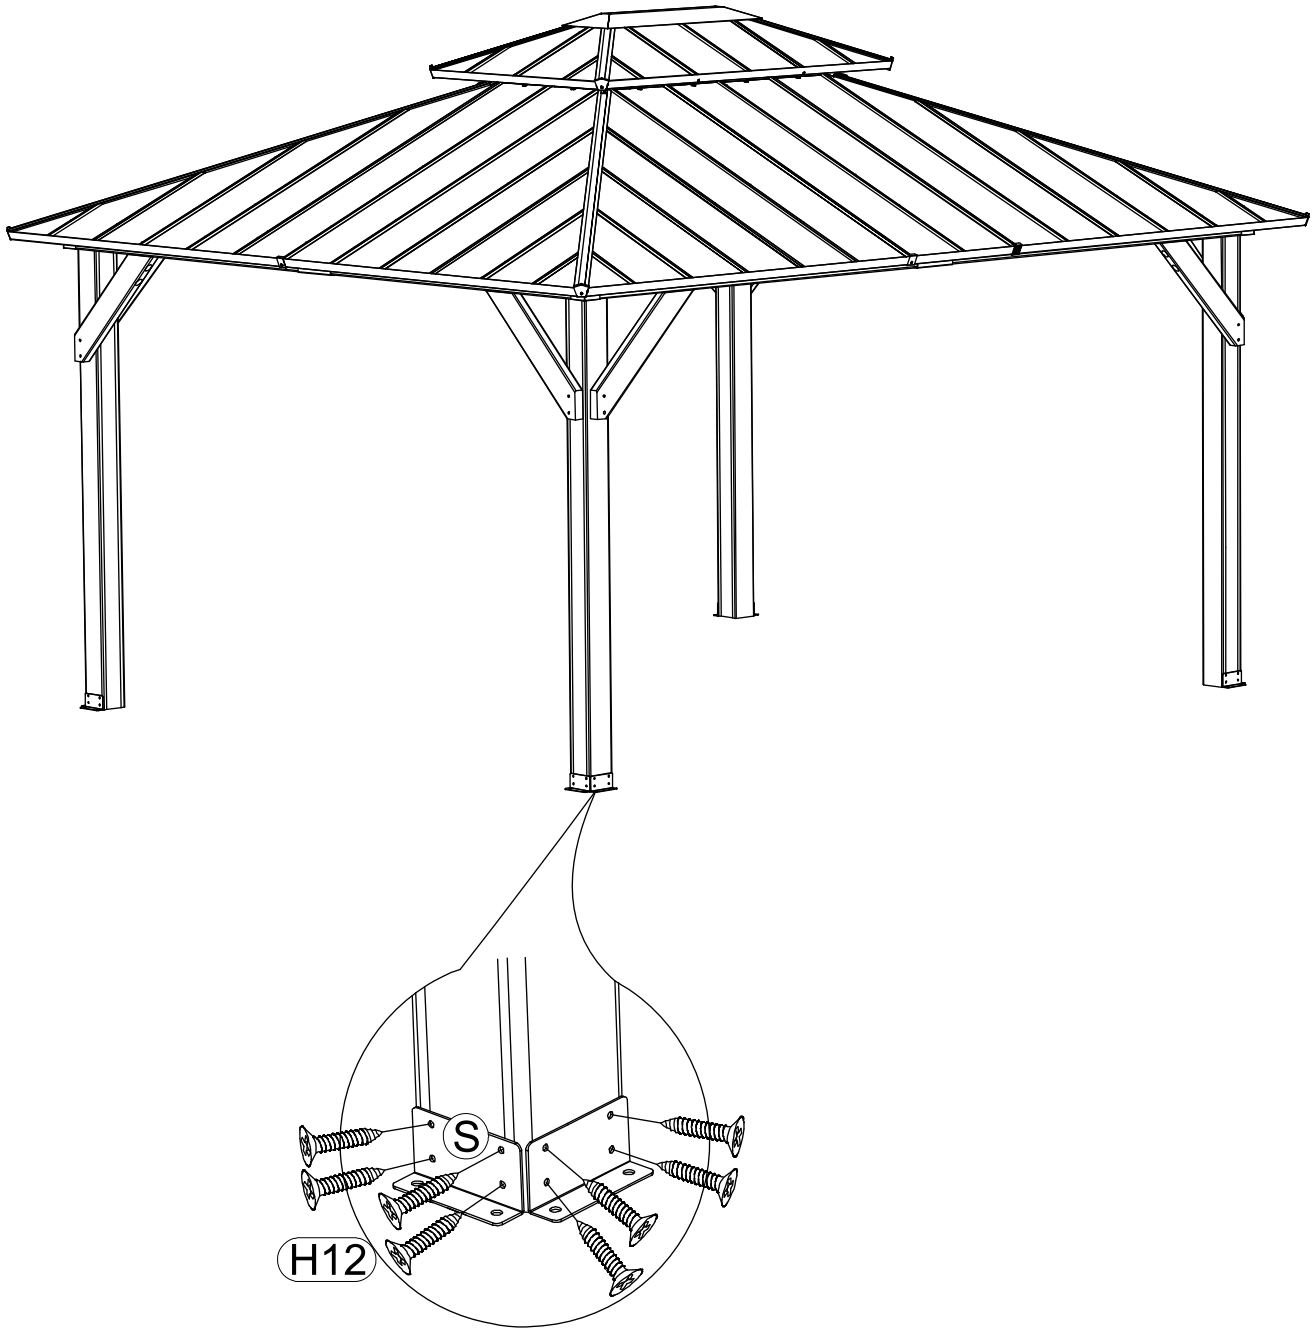Step 29：




R2		1

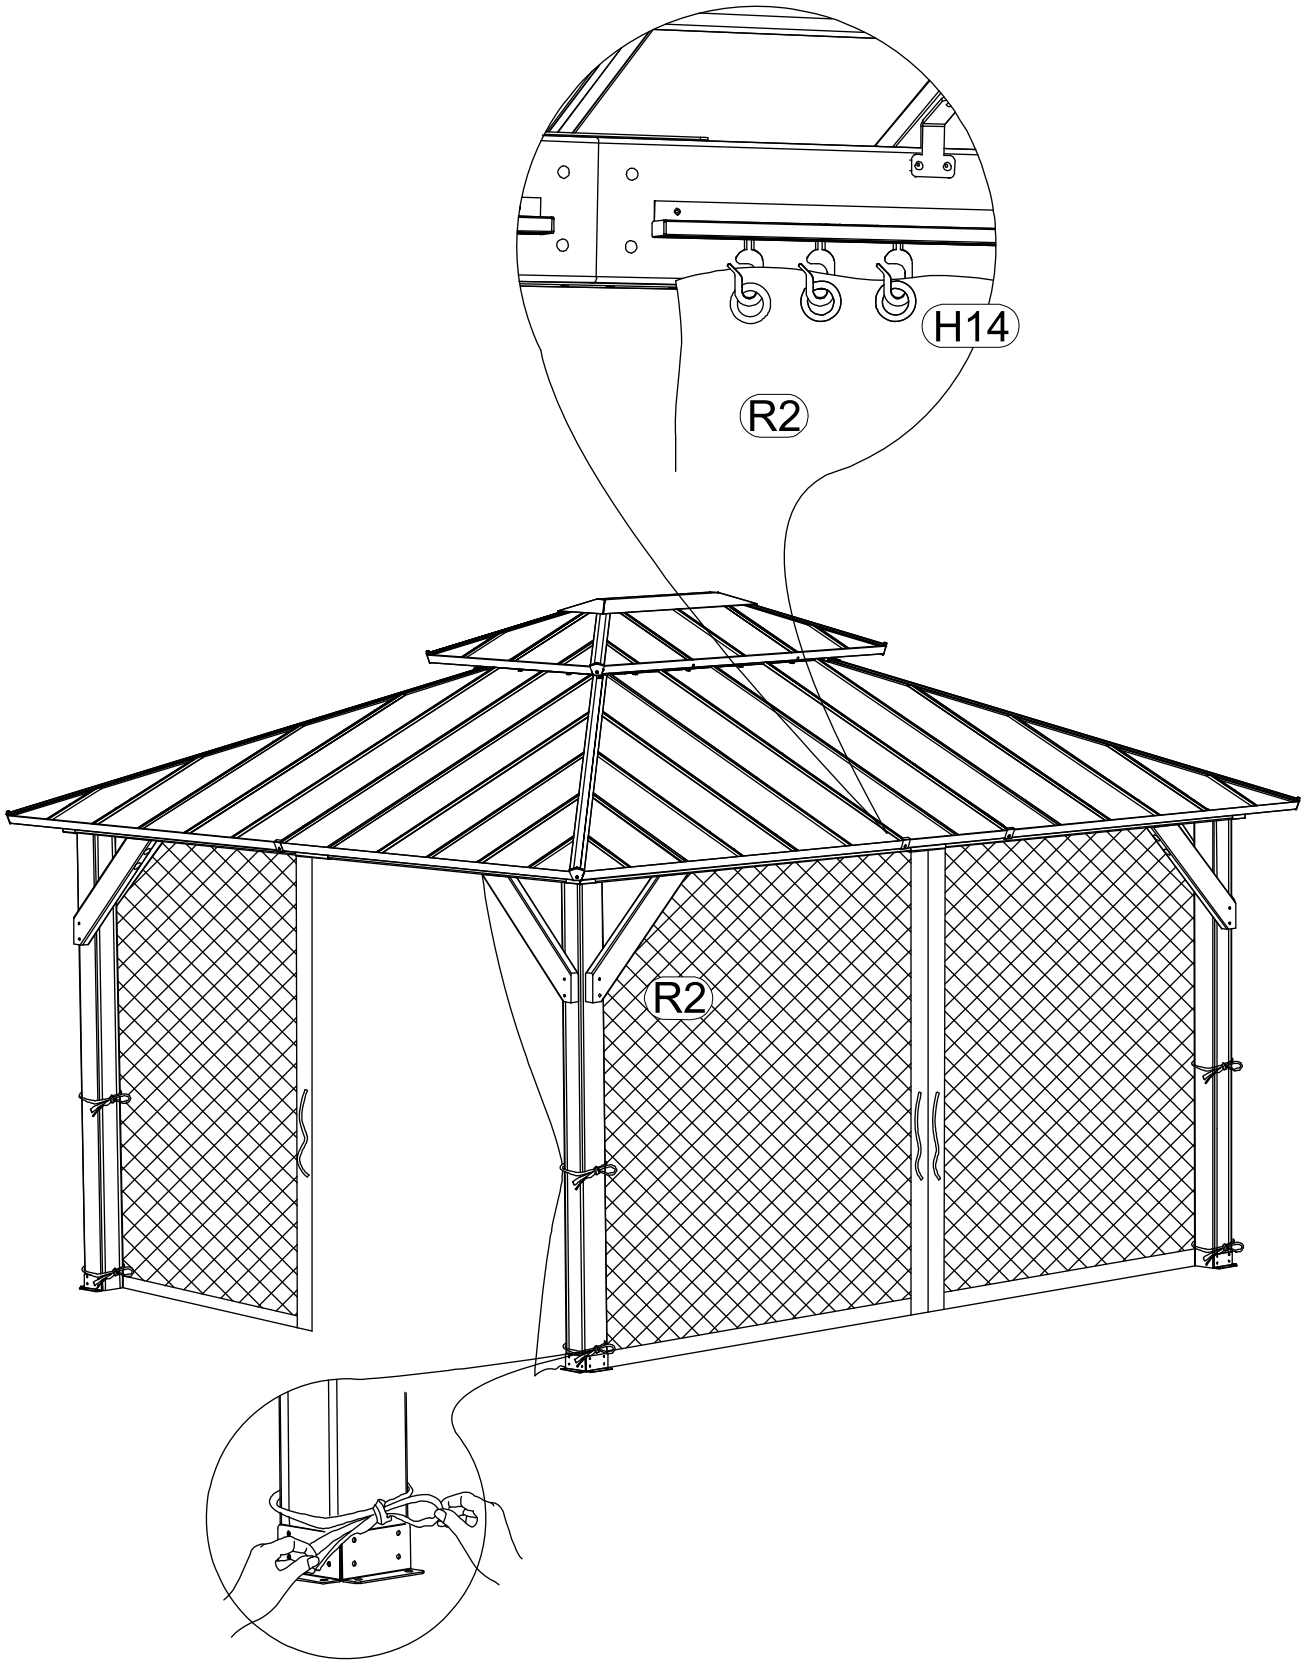
Step 30：




HQ1			8
HQ2		M6X70	8

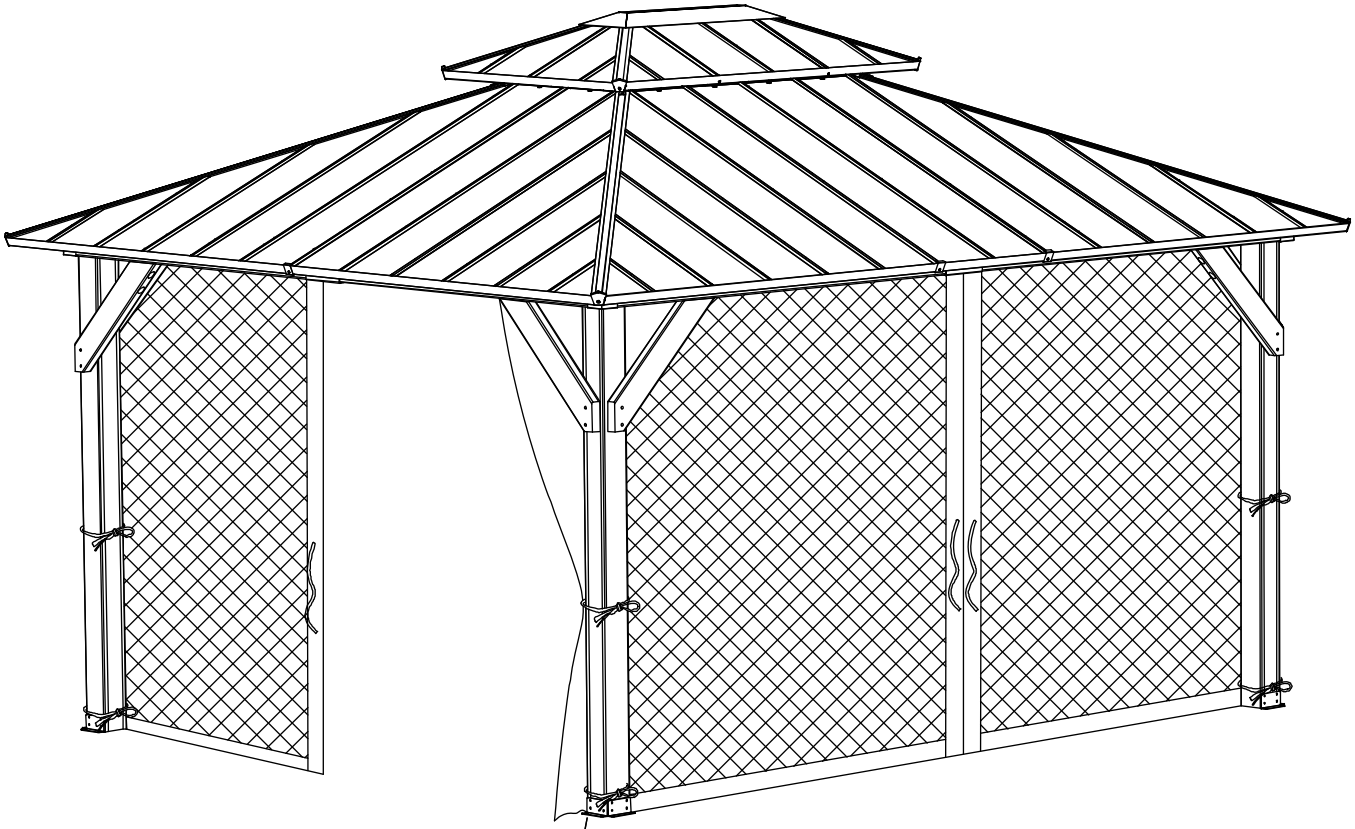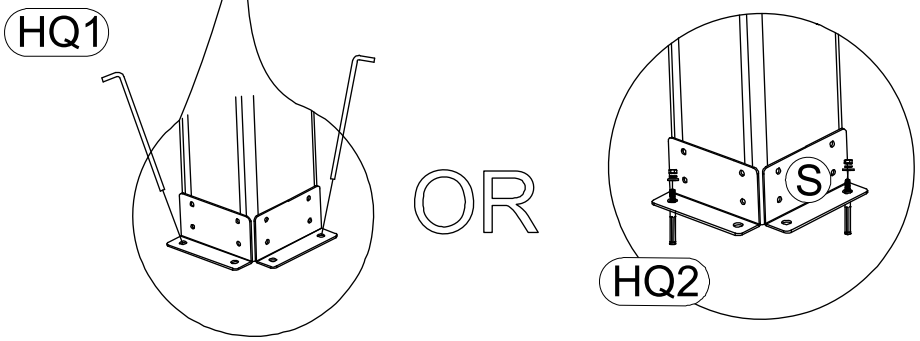
Step 31：






Free Gift		4

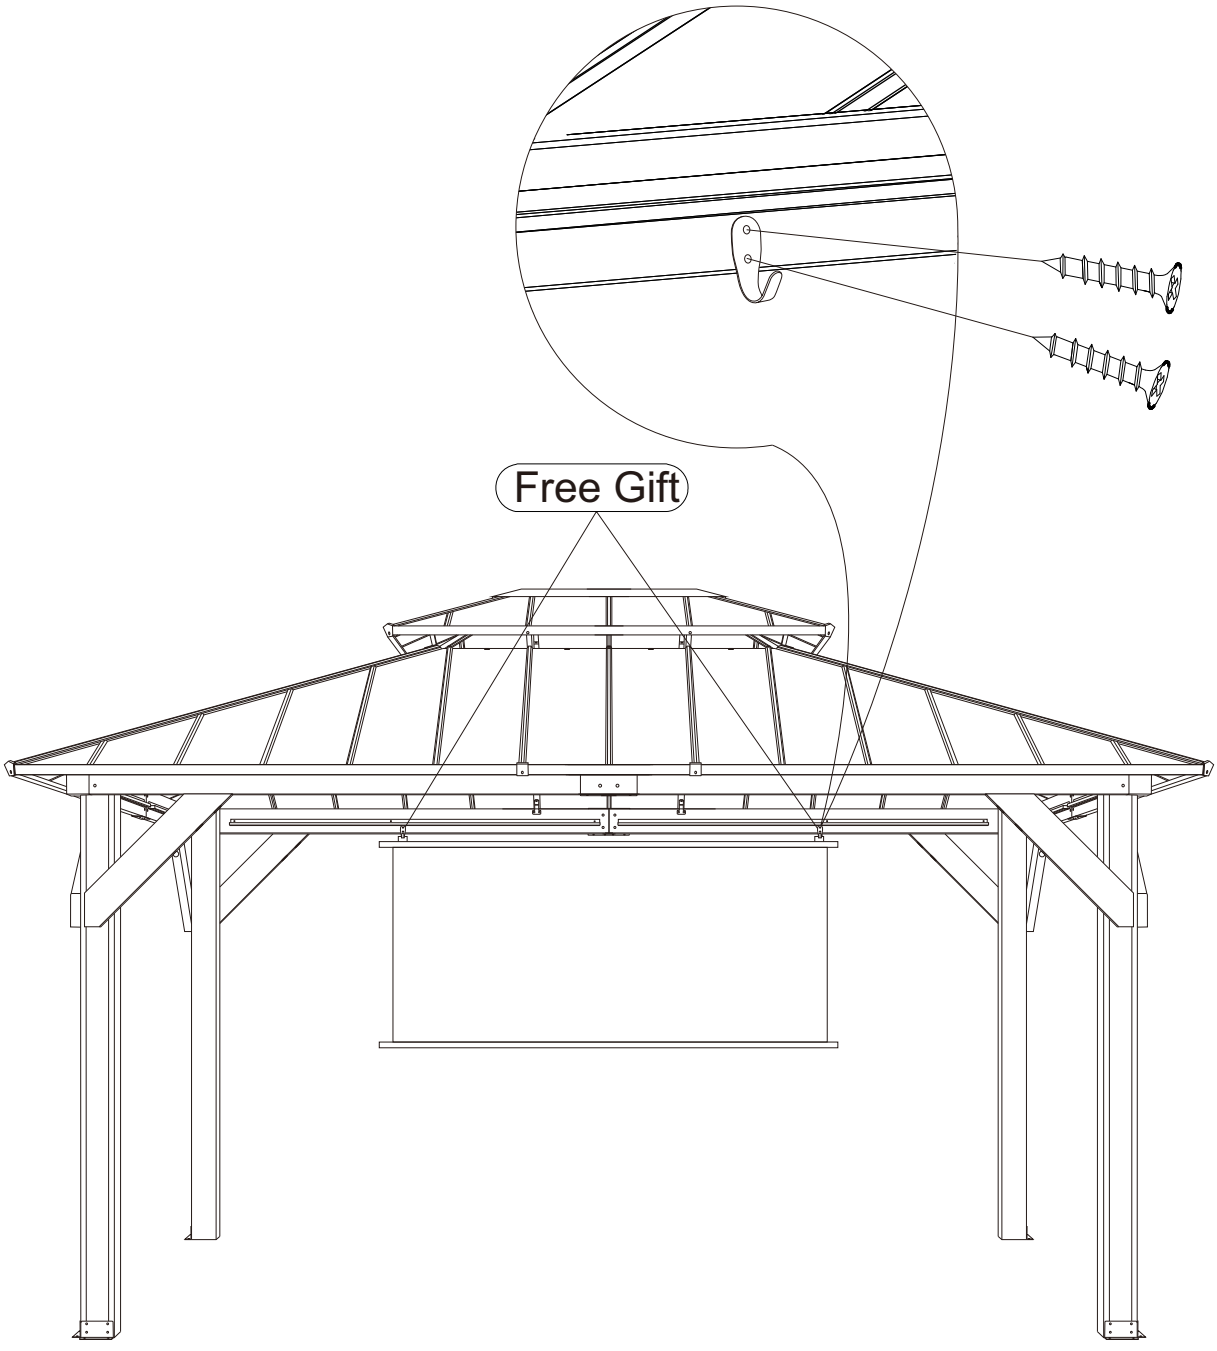
Step 32:



Includes 4 hooks (each supports up to 11 lbs) for hanging a projector screen. Screen is not included.

Free Gift		1

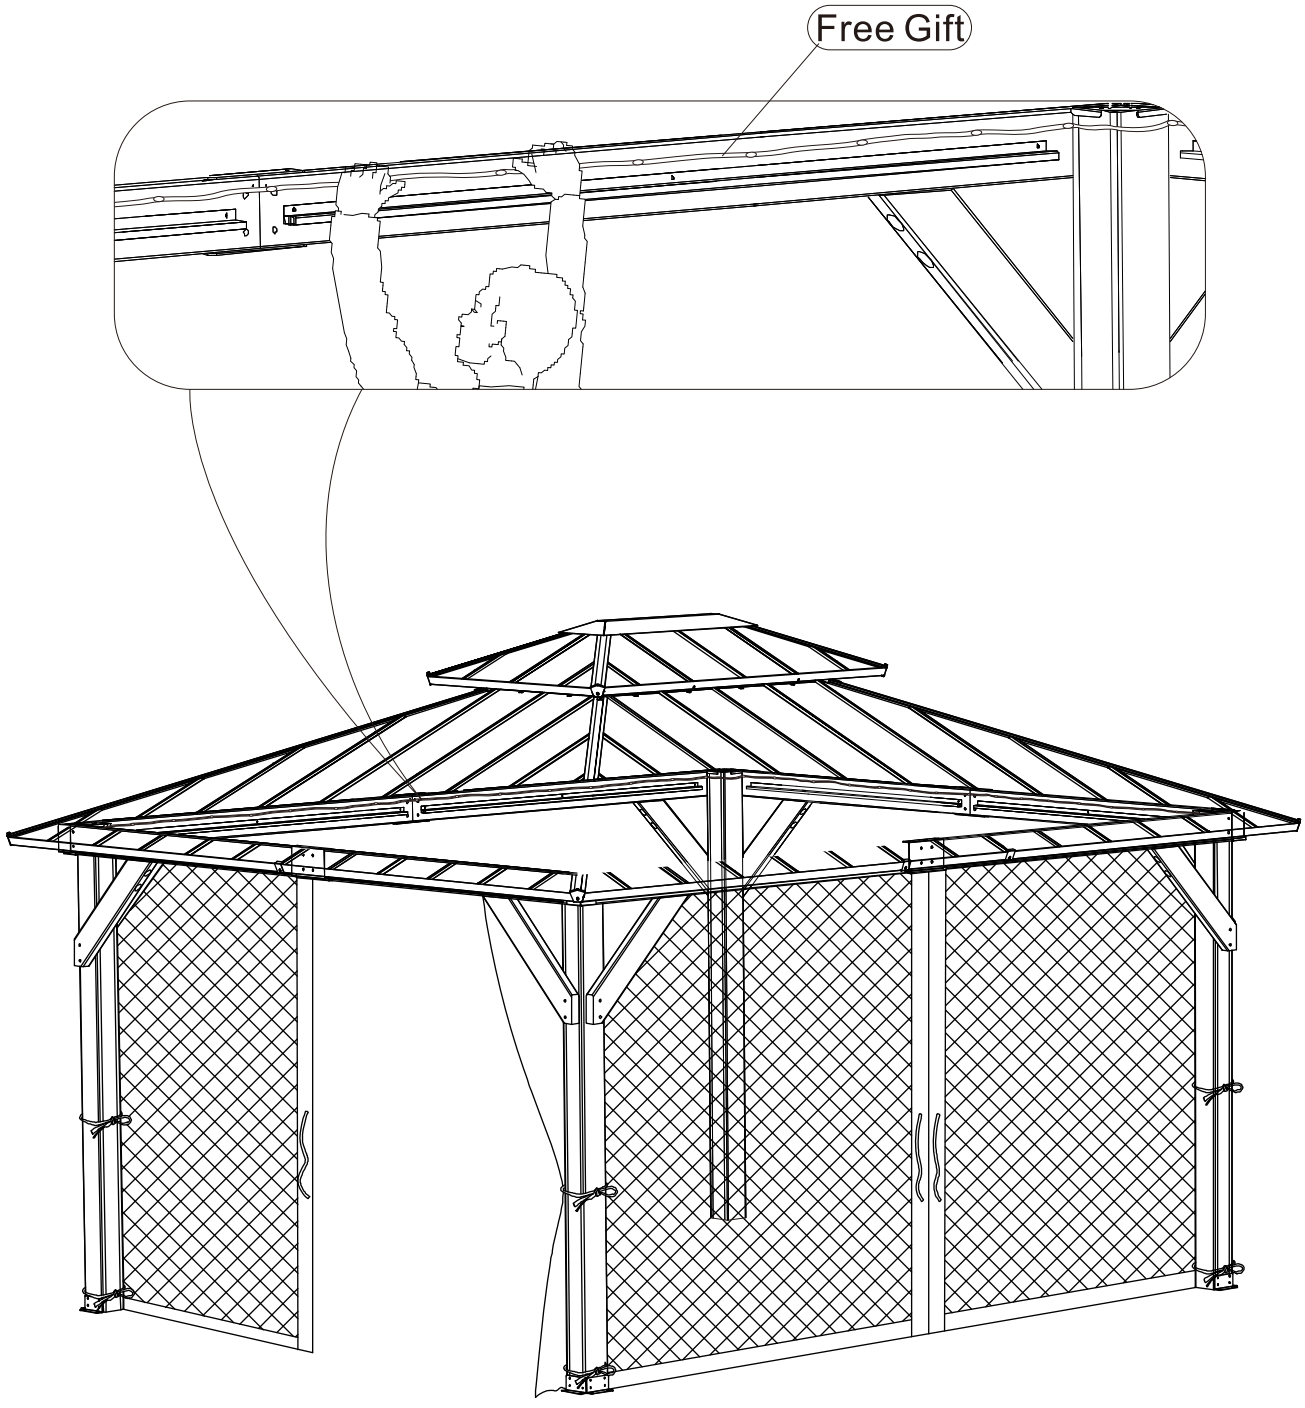Step 33:



Wrap the light string around the beams, ensuring it is installed on the inside of the wooden shed.(Note:Battery and adhesive hooks are not included and must be provided by the customer)