

ASSEMBLY INSTRUCTION

13908 ALISE HEADBOARD KING

Read instructions carefully. See furniture and hardware part list on the right for guidance.

Have all parts ready before assembly. Place all wooden furniture parts on a clean and flat soft surface to prevent scratching.

Before you start, here are some words of caution:

1. Do not FULLY – TIGHTEN nuts and bolts until all nuts and bolts are partially tightened.
2. Do not FULLY – TIGHTEN nuts and bolts to avoid causing damage to the threading.


Keep all hardware parts out of reach of children

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

FURNITURE PART LIST		
ITEM	DESCRIPTION	QTY
A	HEADBOARD	1
B	SUPPORT BOARD	1

HARDWARE PART LIST		
ITEM	DESCRIPTION	QTY
1	M8 FLAT WASHER	8 PCS
2	JCBB BOLT M8 x 40mm	8 PCS
3	M8 FLAT WASHER	2 PCS
4	JCBB BOLT M8 x 60mm	2 PCS
5	M5 ALLEN KEY (BALL SHAPE)	1 PC


STEP 1

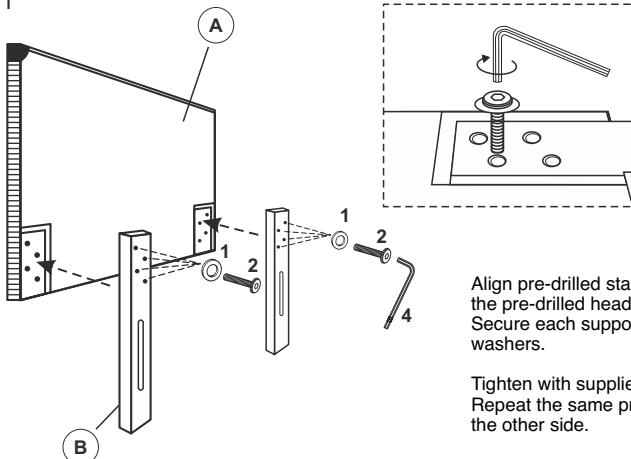

Align pre-drilled stand upper holes over the pre-drilled headboard holes
Secure each support stand by using 4x JCBB bolts and 4x washers.


Tighten with supplied Allen key.
Repeat the same procedure for the other side.

STEP 2

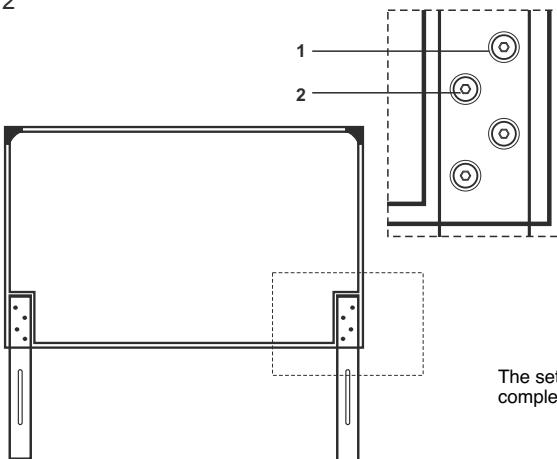


The set up of upper holes with stand upper holes is complete by securing all 8 bolts and 8 washers.

STEP 3

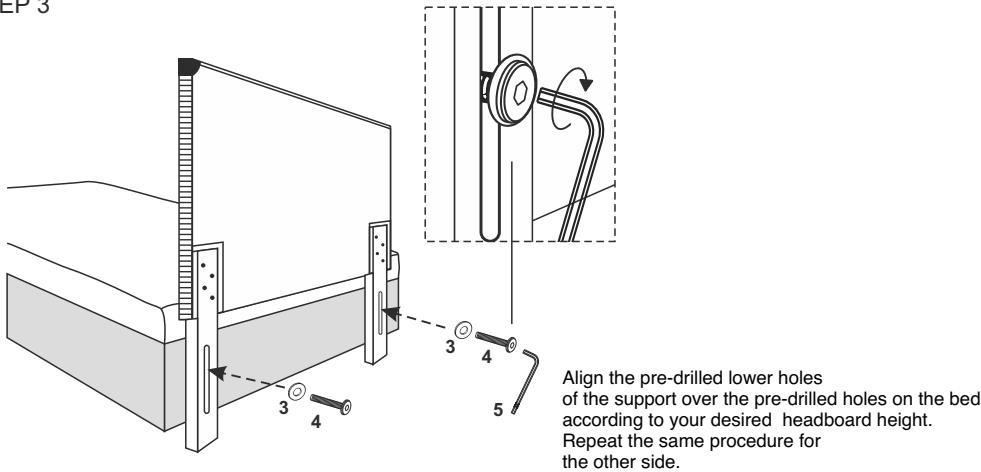

Align the pre-drilled lower holes of the support over the pre-drilled holes on the bed according to your desired headboard height.
Repeat the same procedure for the other side.

STEP 4

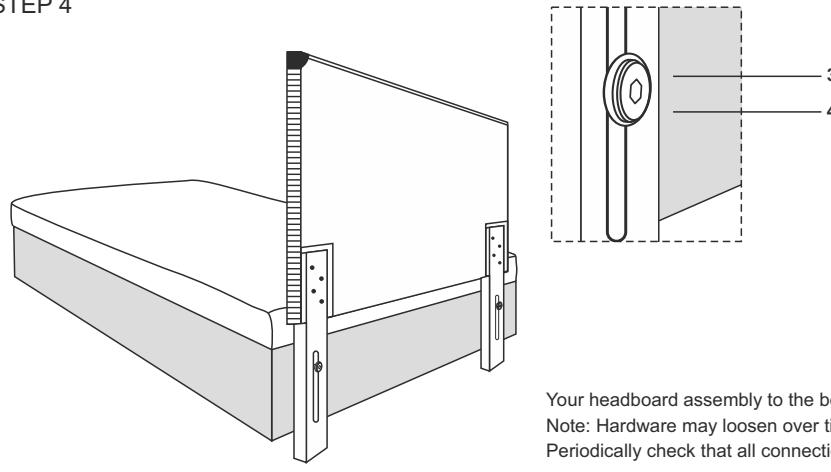

Your headboard assembly to the bed is complete.
Note: Hardware may loosen over time.
Periodically check that all connections are tight.