





Welcome

Welcome to the Speed Queen® family. Thank you for your support of our truly commercial quality products. Our washers and dryers are expertly engineered to deliver commercial performance, tested to ensure ultimate durability and built with American Pride. For more than 110 years, Speed Queen consumer laundry products have been manufactured in Ripon, Wisconsin, a place where pride of workmanship is not just alive, but thriving and embodied by each individual who designs, tests, assembles or in some way touches a Speed Queen product. A special thing happens when that pride is combined with the highest quality commercial materials and components...it leads to the ultimate reliability... reliability measured in decades, not years. That's legendary Speed Queen Quality.

Installation - Washer

Parts included:











Two (2) filter screen washers

Two (2) plain rubber washers

Four (4) rubber feet

Beaded strap Standpipe adapter

- 1. Remove shipping brace and shipping plug.
- 2. Wipe out inside of washtub.
- 3. Connect fill hoses water pressure = 20-120 psi [138-827 kPa].
 - Two required, sold separately
 - Flush water supply lines
 - Use two filter screen washers with screen facing faucet
 - Use two rubber washers in end of hose connecting to the machine
- **4.** Connect drain hose to drain receptacle 36 in. [91 cm] recommended height.
 - Use beaded strap to secure drain hose to drain receptacle
 - Use standpipe adapter only if standpipe diameter is 2 in. [51mm] or less

- **5.** Position and level washer adjust front two legs. Tilt washer forward and back to set rear legs.
 - · Place four rubber feet on leveling legs
- **6.** Connect washer to electrical power on individual branch circuit. Refer to serial plate for electrical ratings.
- 7. Run washer through one complete cycle to make sure it is operating properly.
- 8. Check for leaks



Installation - Dryer

Parts included:



Three (3) Screws
(Electric Models)

- 1. Position and level the dryer.
 - Recommended rear clearance minimum is 2 in (51 mm) for utility connections and 6 in (152 mm) when venting through rear of unit
- 2. Connect exhaust system.
 - Dryer must be exhausted to the outdoors
 - Use 4 in (102 mm) rigid duct
 - Maximum straight duct length = 65 ft (19.8 m). Each elbow deduct 10 ft (3 m)
 - Sufficient make-up air must be supplied. The free area of any opening for outside air must be at least 40 in² (25806 mm²) per unit


- Gas models connect gas supply pipe.
 Gas service to a gas dryer must conform with the local codes and ordinances.
 Refer to installation instructions, which can be found at speedqueendoc.net
 - Tighten all connections securely but do not overtighten to avoid breaking or bending the gas valve bracket.

Turn on gas and check all pipe connections (internal and external) for gas leaks by applying a non-corrosive leak detection fluid to the fittings. If bubbles are present then a leak is likely.

Retighten connections and recheck for leaks

- **4.** Electric models connect electrical cord with three-wire or four-wire plug.

 Refer to installation instructions,
 - which can be found at speedqueendoc.net
- **5.** Wipe out inside of dryer.
- **6.** Plug in the dryer.
- 7. Start dryer and check that dryer is heating.

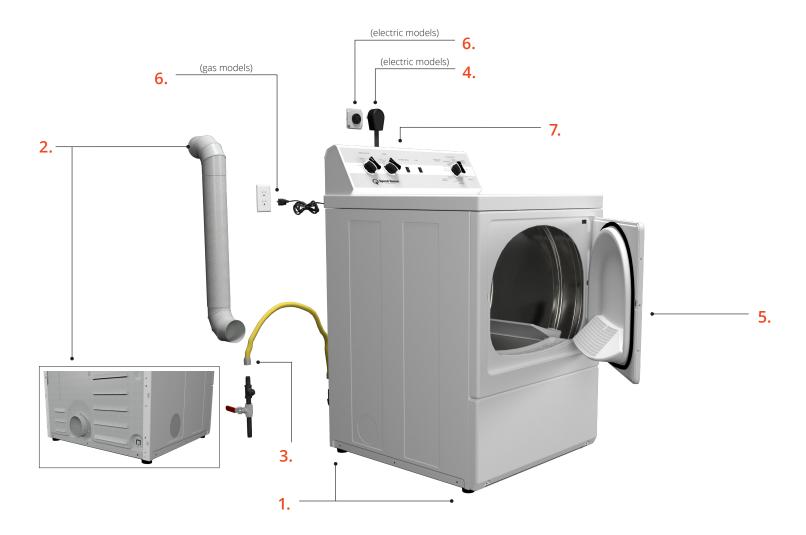

Operating - Washer



1. Prepare laundry



3. Load laundry



- **5.** Set cycle
- **7.** Set options

2. Add laundry supplies Fabric Softener



4. Close lid



- **6.** Set temperature
- 8. Press start/pause

NOTE: The Normal Eco Cycle is designed for providing an eco-friendly solution for washing everyday cottons and linens. You will notice that this cycle uses less water and less hot water than other cycles. These functions are unique to the Normal Eco Cycle. All other cycles and options have no temperature restriction and use a full tub rinse.

Operating - Dryer



1. Prepare laundry



3. Load dryer half full with laundry



- **5.** Set cycle
- **7.** Set extended tumble, if desired
- **9.** Remove laundry from dryer once cycle has ended

2. Clean lint filter by wiping lint out of screen area (if using lint filter cover, remove first)



4. Close door



- **6**. Set fabric selector
- Press start button to start

NOTE: To Sanitize your laundry load and kill 99.9% of common household bacteria*, set the Fabric Selector to Regular, set the Cycle Selection to Max Dry, and allow the dryer to complete the cycle uninterrupted.

^{*} Bacteria tested by an independent lab were Staphylococcus aureus, Pseudomonas aeruginosa, Klebsiella pneumoniae. Individual results may vary.

Register

1. Register your product at www.speedqueen.com to take full advantage of the limited warranty.



3 Year Warranty. Covers all parts and in-home labor.

Note: This unit includes a limited warranty. Refer to Speedgueendoc.net to download the full warranty bond.

Download full documentation and view installation and operating videos for an immersive experience at Speedgueendoc.net or scan the QR code below.





If you wish to receive printed documents at no cost, please complete the order form and return by mail to the address on the form, or email your request to technical communications@alliancels.com.

rder Form for Printed Documentation Please send me a printed Installation Manual, User's Guide, and Warranty Bond.

I understand this card does not register my product. I must go to www.speedqueen.com to register.

Model No.

Serial No.

Address


State

City

Phone No.

Email Address

Allow 1-2 weeks for delivery. NOTE: Orders will be fulfilled for models with serial numbers from 190300000 through 2312999999.

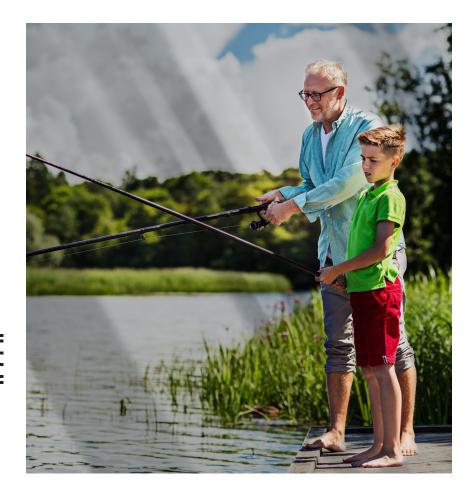

FIRST CLASS MAIL BUSINE S PERMIT NO. 489 REP MAIL

POSTAGE WILL BE PAID BY ADDRESSEE

SPEED QUEEN RIPON WI 54971-9967 P O BOX 990 SHEPARD STREET TECHNICAL DOCUMENTATION

> MAILED IN THE NECESSARY IF NO POSTAGE



Part No. D518284R2 March 2025 © Published by permission of the copyright owner – DO NOT COPY or TRANSMIT Speed Queen by Alliance Laundry Systems