



BROC X3 UTV USERS MANUAL

With Assembly Instructions



IMPORTANT	 WARNING
Age: 3 + Years Maximum User Weight: 66 lbs.	1. This toy is unsuitable for children under 3 years due to its maximum speed. 2. Choking hazard due to small parts. 3. For family and domestic use only. 4. Protective equipment should be worn. 5. Not to be used in traffic. 6. Adult assembly required. 7. Protective equipment should be worn. 8. Do not allow more than one rider.

Please keep this manual for future reference as it contains important information

Thank you for choosing the BROC X3 UTV.

Please read the manual before using this product, it will tell you the correct operation method and installation steps to avoid incorrect operation of the product and damage or injury to your baby. This manual shall be properly kept and kept in an accessible place,

Specifications


Storage battery	12V4.5AH
Motor	12V390*2
Applicable Age	For children aged 37–96 months
Maximum load	66 LBS
Dimensions	111x70x63CM
Speed	2-4 mph
Charger	Input: 100V–240V Output: 12V800mA
Usage time	Charge for 10-12 hours. Use for 45 mins

Charging points

1. When using an electric car for the first time, the battery must be fully charged for 16 hours! Otherwise the battery will be permanently damaged and beyond repair. The charging time should not exceed 12 hours.
2. When charging, first plug the charger DC into the charging socket, and then plug the charger into the power socket.
3. Each continuous use of 45 mins, you must be timely charging, normal charging time is for 10-12 hours.
4. Charging process charger or battery heating phenomenon (below 60°C) is normal.
5. When the electric baby carriage is not in use for a long time, it must be recharged at least once a month.

Battery instruction for Remote Control

1. When installing the battery, first open the battery cover, then install the battery according to the polarity, lock the battery cover. In the same way, take out the battery.
2. The remote control uses 2 # 7 batteries.
3. The non-rechargeable battery can not be charged.
4. rechargeable batteries can only be charged under adult supervision.
5. The rechargeable battery should be removed from the toy before recharging.
6. Different types of batteries or old and new batteries should not be mixed. .
7. Batteries should be placed at the correct polarity.
8. The depleted battery should be removed from the toy.
9. The power terminal must not be short-circuited.

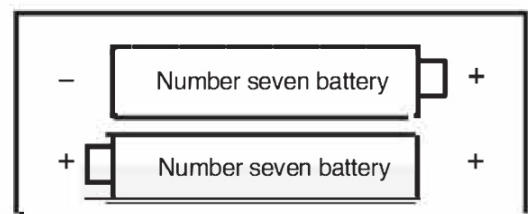


Precautions for use

1. Don't drive in the streets, roads, slopes and other hazardous areas.
2. Please be on a well-level ground, please do not use on the smooth surface (such as marble, floor tiles) and other surfaces.
3. This product is to limited one person and can not be overloaded. The maximum load is 66 lbs
4. Children must ride under adult guidance and caretakers must not leave during cycling.
5. Do not modify the vehicle wiring or additional charging device.
6. Do not use in water, do not pour water and other liquids in the car.
7. The car should not be blocked in the process of moving the car, so as to avoid damage to the device, such as blocked phenomenon, please immediately release Foot switch, remove the obstacles before riding,
8. The car should be timely charging slow cycling speed, cycling for too long will cause shortened battery life.
9. Do not use, please turn off the power switch, unplug the battery connector when not in use for a long time.
10. Do not drive in rainy weather.
11. The main use of PP car material, non-toxic, non-radiation, safe to use for a period of three years.

Packing Instruction

● Product specification	1	● The front wheel	2
● Car body	1	● The rear wheel	2
● The saddle	1	● The steering wheel	1
● The remote control	1	● Wheel cover	4
● The charger	1		
● Accessories package	1		

Schematic

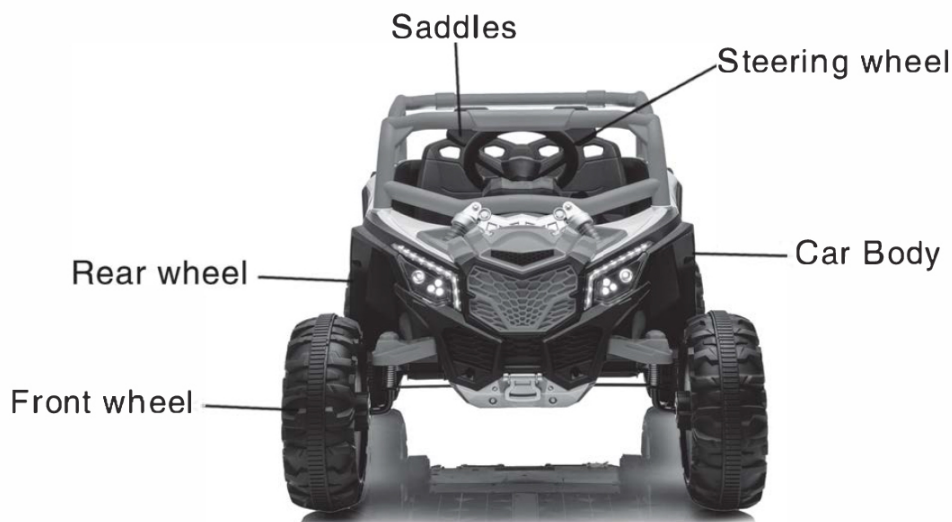

Instructions



1. Install tires

Fix the Shim, the front wheel, the Shim in turn, and then fix it with the nut. Install the wheel cover to fix the rear wheel, the Shim in turn, and then fix it with the nut. Install the wheel cover and install the front and rear wheels on the other side in the same way.



2. Install the steering wheel

Connect the steering wheel and body wiring, the steering wheel can be stuck into the body




3. Install the front Bracket

Clip the front bracket into the vehicle body




4. Installing Rear Tailstock

Connect the rear tailstock, and then clip it into the vehicle body

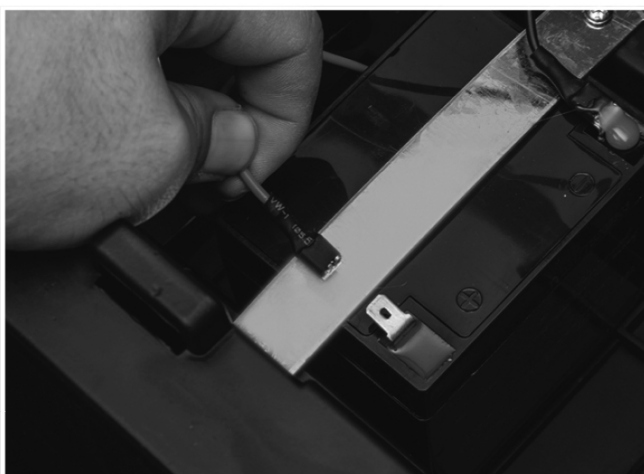


5. Connect the power cord

The positive and negative pole wiring can be connected

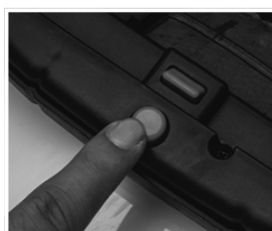

6. Install the seat

Fasten the seat and backrest into the car body with two screws

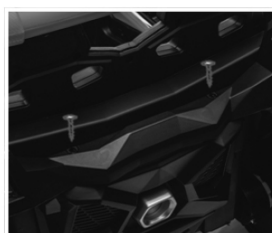

Instructions for use




① Trumpet

Remote control functions and instructions

- Do not switch the forward and backward buttons during vehicle movement to avoid damaging the gearbox and motor.
- The remote control needs a battery to work properly.
- The remote control requires the use of a guardian.
- Remote control is preferred.


★ Code method:

Press and hold the code button, indicator flashing, turn the UTV power supply on, code success

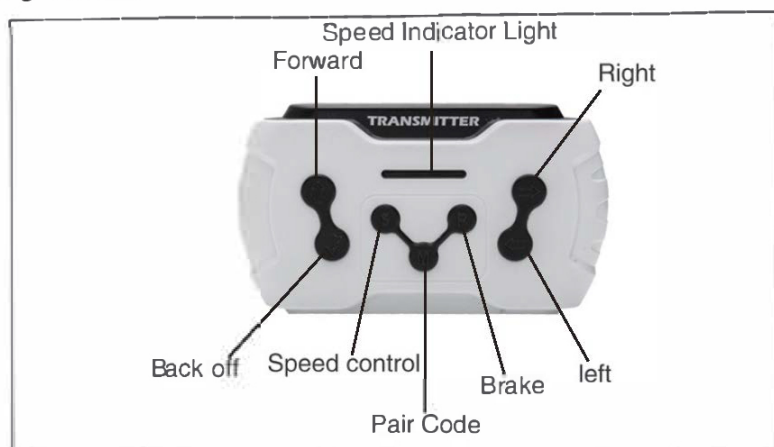

Fault type	Detection site	Method of elimination
The Motor won't run	1. Is the foot switch in good contact? 2. Is the welding wire on the motor terminal in good condition? 3. Is the connector of the motor lead plugged in well? 4. Will the motor plug-in disconnect, directly, connected to the battery rotation?	No, fix the foot switch; yes, next. No, weld the terminals to the wire; yes, next. No, plug the connector in; yes, next. Do not turn, change the motor; turn, Drive Circuit Board failure, send professional repair point repair.
To go only forward without going back, or to go only backward without going forward	1. Detect reverse switch, with a three-meter test, good contact? 2. Drive line to reverse switch wiring, is it good?	No, change the reversing switch; yes, next. No, the line connected; yes, Drive Circuit Board failure, send professional repair point repair.
It's slow	1. Check if the BATTERY VOLTAGE IS ABOVE 12V? 2. Will the motor (with gearbox) directly connected to the battery, speed up or not? 3. Unload the gear box, check the gear rotation, move well or not?	No, charge.–yes, next. No, next item; yes, Drive Circuit Board failure, send professional repair point repair. No, change the gear box; yes, change the motor.
It's not charging	1. Does the charger output terminal have 12V voltage? 2. Will charger input, output plug good, will the battery end two plug springs pull out, test has 12V voltage? 3. Check that the charging seat fastener is loose and the solder joint is free?	No, change the charger; yes, next. Yes, change the battery. No, next. Yeah, plug in the charger.

Circuit Diagram

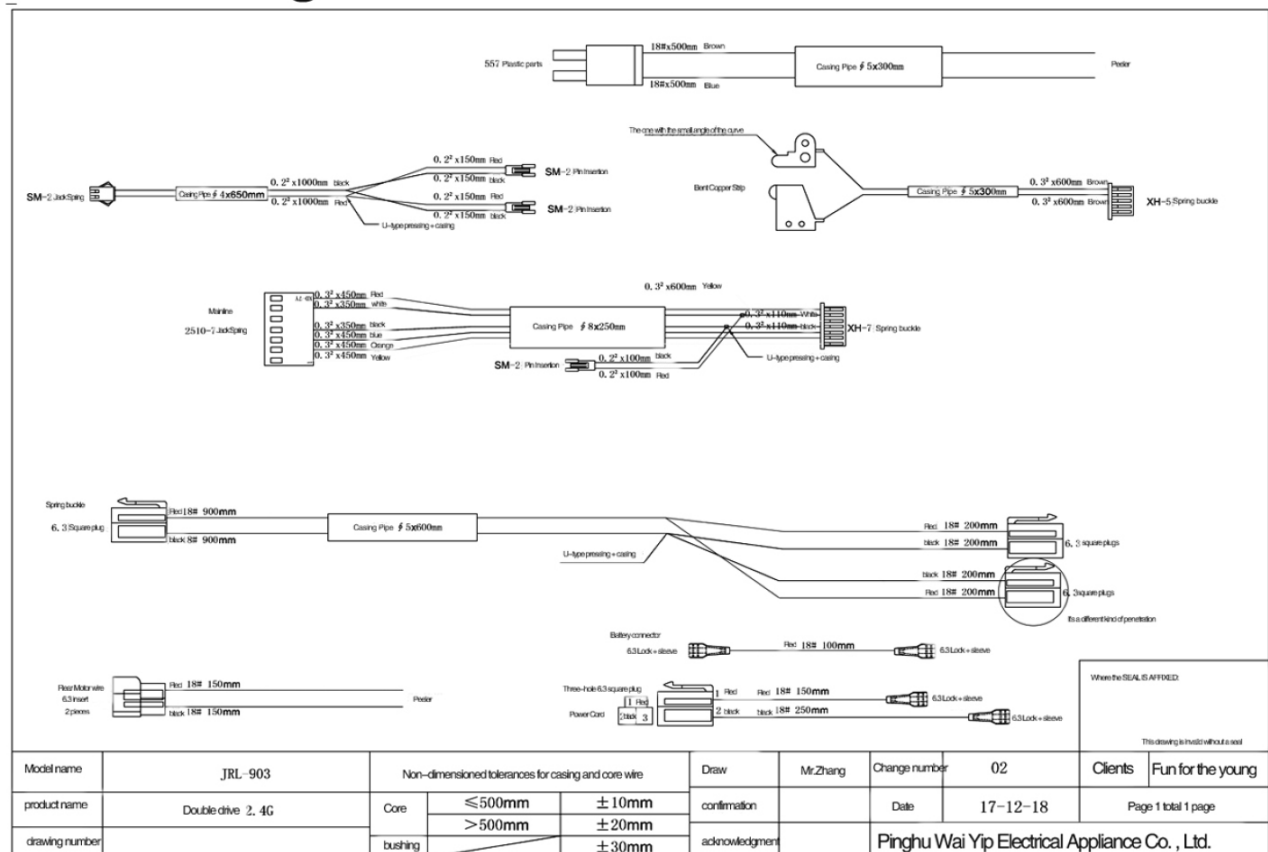

Electric four-wheeler for children

Installation and operation manual

Applicable Age: 37-96 Months

- remote control for priority control
- remote control for forward, backward, and steering operation
- manual shift for forward and backward operation
- steering wheel with music function
- equipped with volume adjustment and MP3 amplifier
- equipped with battery power display



Please take good care of the important information in it

Warning

1. The toy may have potentially sharp edges or sharp points or small parts prior to assembly, so it must be assembled by an adult.
2. Use The car properly under adult supervision or risk injury to yourself or a third party.
3. Do not drive or play in dangerous places such as public streets, roads, slopes, swimming pools, etc. Otherwise, it may cause traffic accident and drowning.
4. This toy car may have small parts falling off during use, so it is not suitable for children up to 36 months of age.
5. This product is only suitable for children aged 37-96 months. Please put on protective equipment before use, such as helmet, hand protective cover, kneepad, etc.
6. The car can not be overloaded with a maximum load of 66 lbs
7. chargers and batteries, wires, plugs and other components must be checked regularly for damage and should be stopped from being used until they are repaired.
8. Stay away from fire.
9. It is important to read the product instructions carefully before doing so and keep them for future reference.
10. The remote control uses two cells of No. 7 battery, which must be placed in the correct polarity position.



Please contact **Best Ride on Cars** before returning this product to the retailer!!!

If you find that you have any trouble with assembly, missing or damaged parts, please contact us at:

Toll-Free: 1888-411-1786

Ph: 469-209-8741

Or via EMAIL at:

sales@bestrideoncars.com