


Model no:
RF135BDLX4

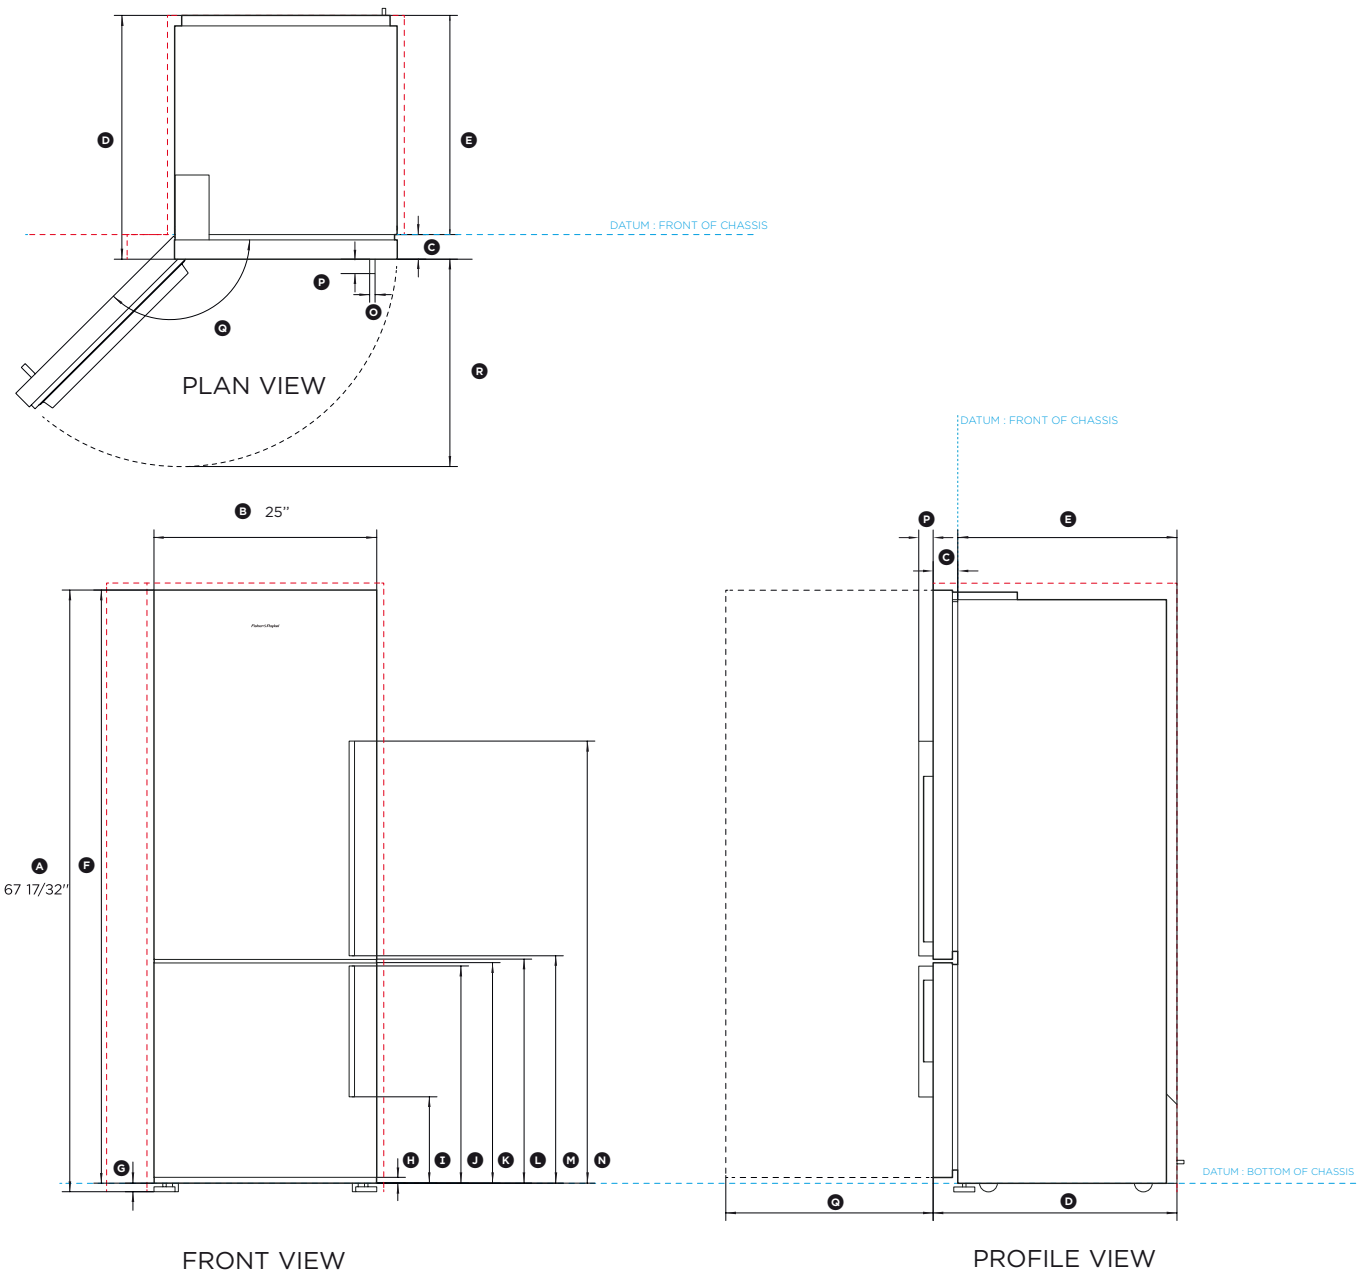

Product Dimensions	in
① Overall height* of fridge	67 17/32"
② Overall width of fridge	25"
③ Depth of fridge door and gasket (excludes handle)	2 3/4"
④ Depth of fridge door and chassis (excludes handle)	27 3/8"
⑤ Depth of fridge chassis (does not include fridge door)	24 19/32"
⑥ Height from bottom datum to top of fridge door	66 9/16"
⑦ Height of feet (adjustable)	15/16"
⑧ Height from bottom datum to bottom of bottom door	21/32"
⑨ Height from bottom datum to top of bottom handle	9 11/16"
⑩ Height from bottom datum to top of bottom door	24 3/8"
⑪ Height from bottom datum to top of bottom handle	24 3/4"
⑫ Height from bottom datum to bottom of top door	25 5/32"
⑬ Height from bottom datum to bottom of top handle	25 1/2"
⑭ Height from bottom datum to top of top handle	49 19/32"
⑮ Width of handle	19/32"
⑯ Depth of handle (measured from front of door)	1 5/8"
⑰ Depth of door (open at 90°) (measured from front of door)	23 9/32"
⑱ Rotation of door (open) (measured from front of door)	135°

* Includes mounted feet

Minimum Clearances	in
Minimum height of cavity	68 5/16"
Minimum side clearance installed flush with chassis	25/32"
Side clearance (hinge side) - installed flush with door - full rotation	5 5/16"
Rear clearance (including evaporator tray)	1 3/16"

INDICATES PRODUCT DATUM
INDICATES MINIMUM CABINETRY CLEARANCES

DATE: 24.11.2014

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com