
ASSEMBLY INSTRUCTION

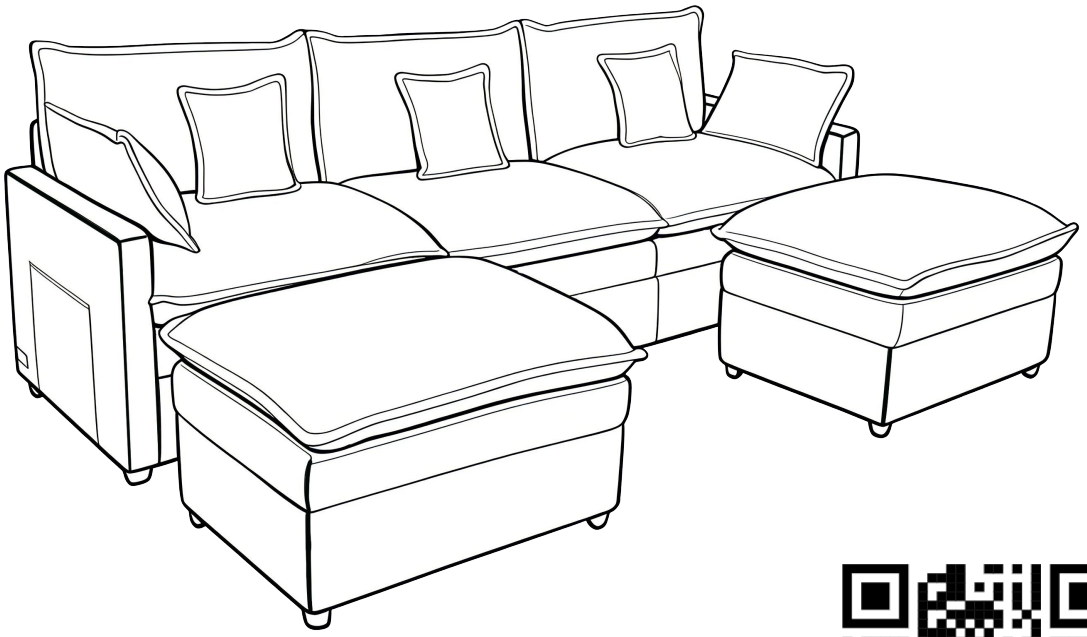

[Scan for Installation Video]

Cushion Recovery Notice

For convenient packaging, the seat cushions, back cushions, and ottoman pads have been vacuum-compressed. After unpacking, please allow 5 to 7 days for them to fully expand and regain their original shape. Gently patting or fluffing the cushions can help speed up the recovery process. which typically takes between 72 hours and one week.



Packaging 1



Seat Cushion x3



Back Cushion x3



Cushion 1 x3



Packaging 2



Cushion 2 x2













Backrest Cover Cloth x1











Ottoman Cushion x2



Packaging 1 in BOX2
Packaging 2 in BOX2


Parts List

Part Number	Picture	Description	QTY
①		Ottoman Panel 1	4
②		Ottoman Panel 2	4
③		Hollow Iron Tube 1	4
④		Hollow Iron Tube 2	8
⑤		Slat	30
⑥		Sofa Leg	12
⑦		Ottoman Cushion	2
⑧		Right Armrest	1
⑨		Left Armrest	1
⑩		Backrest 1	2
⑪		Backrest 2	1

Part Number	Picture	Description	QTY
⑫		Seat Frame 1	1
⑬		Seat Frame 2	1
⑭		Seat Frame 3	1
⑮		Middle Sofa Leg	4
⑯		Front Sofa Panel	3
⑰		Sofa Back Supported Leg	2
⑱		Backrest Cover Cloth	1
⑲		Seat Cushion	3
⑳		Back Cushion	3
㉑		Cushion 1	3
㉒		Cushion 2	2

A		Screw(M6*16)	16
B		Screw(M6*35)	38
C		Screw(M6*55)	46
D		Gasket	128
E		Allen Key	1
F		Hexagon Nut	28

G		Nut Wrench	1
H			12
I		Foot Pad	12
J			60
K		L-Shaped Iron Sheet	2
L		Iron Sheet	2

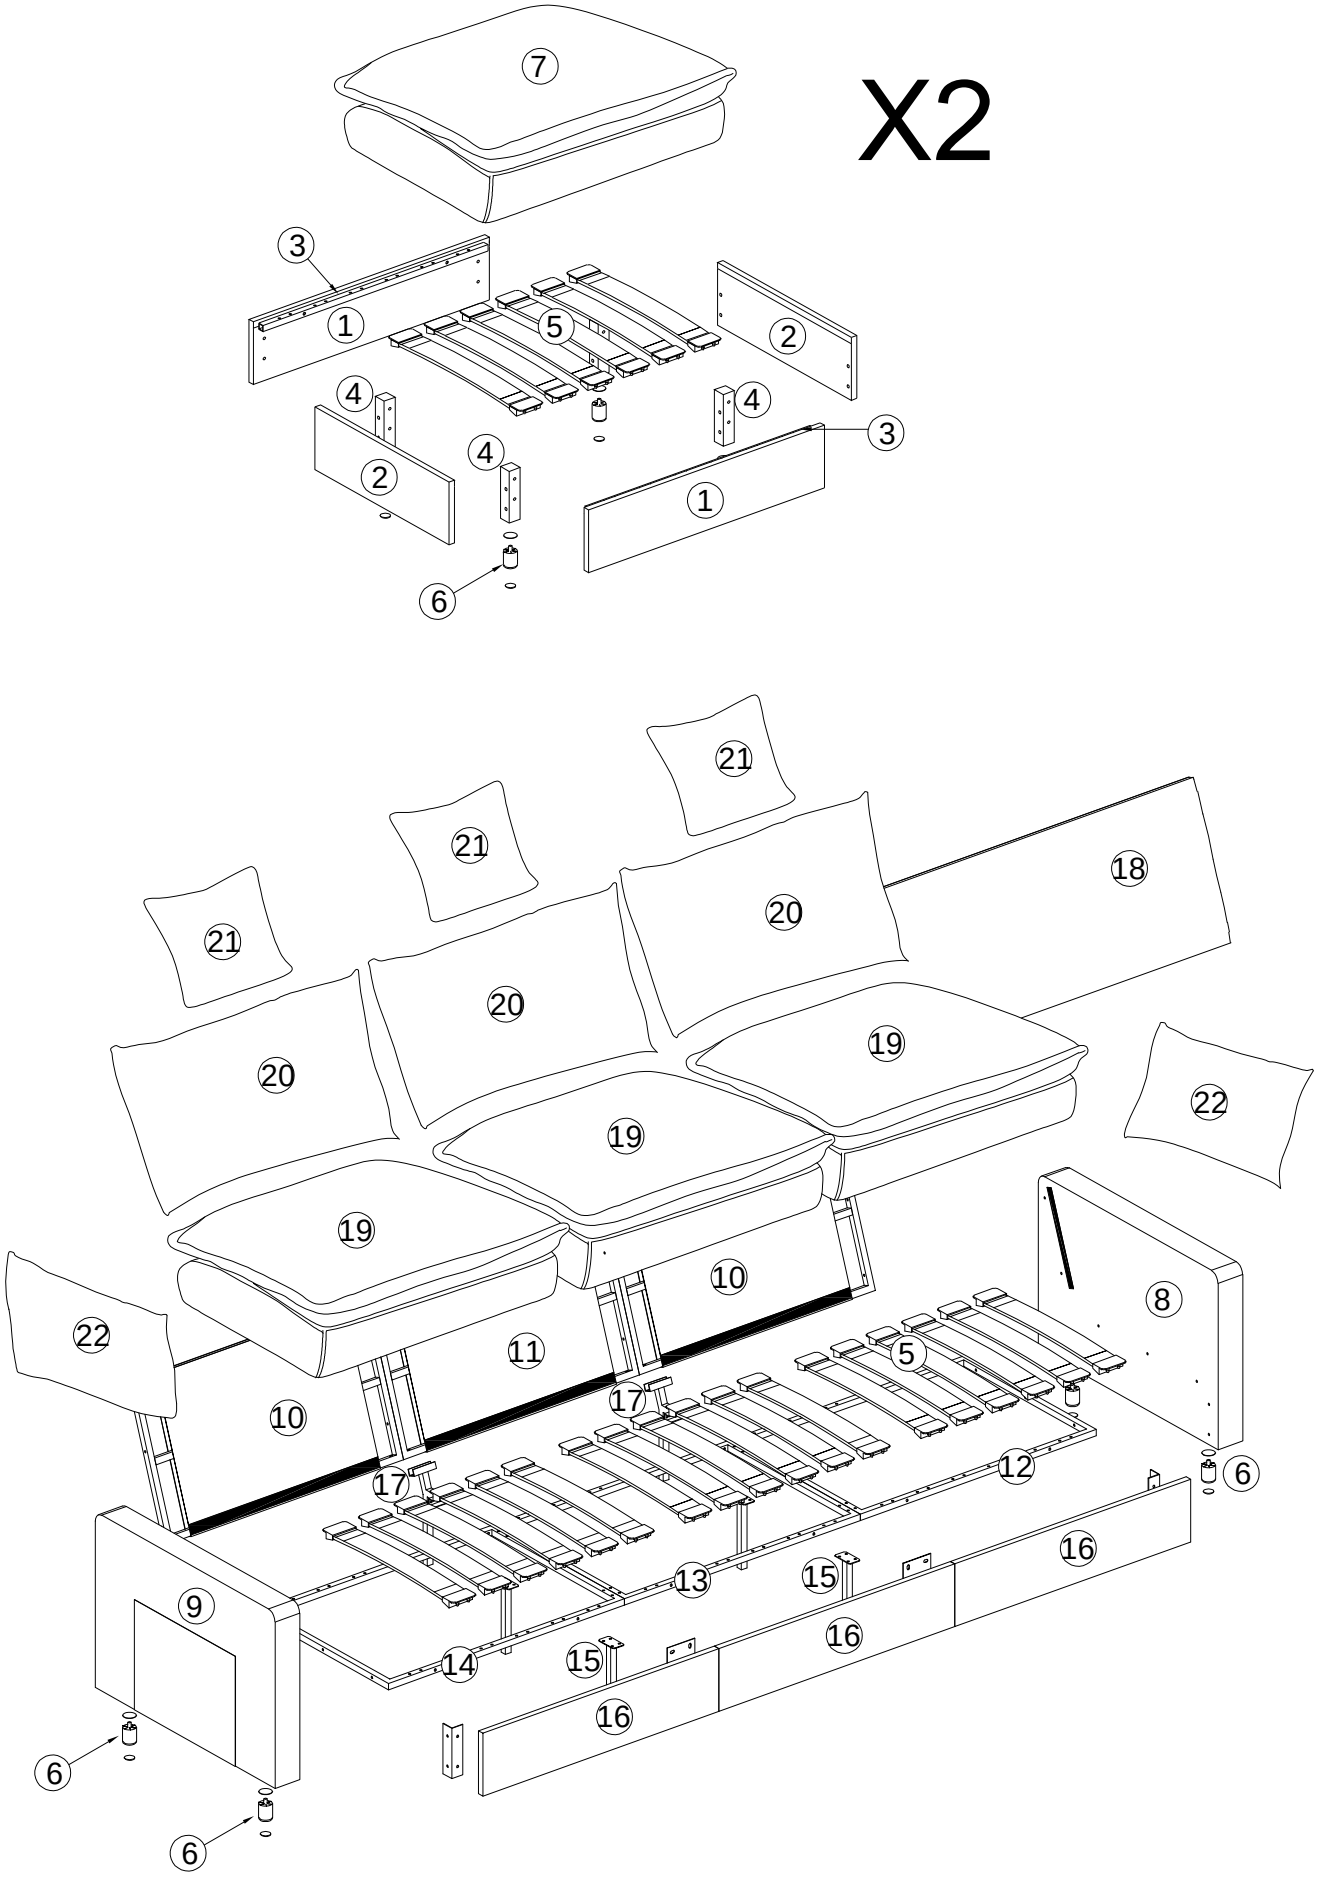

X2
7
3
1
5
2
4
4
4
3
2
1
6
21
21
21
18
20
20
20
19
19
22
19
10
22
8
11
5
10
17
12
6
17
16
13
15
9
16
14
15
16
6
6

Step 1：

①	③	④
4pcs	4pcs	8pcs
B 6*35	C 6*55	D
8pcs	16pcs	24pcs

80%	80%	√
	100%	×

X4

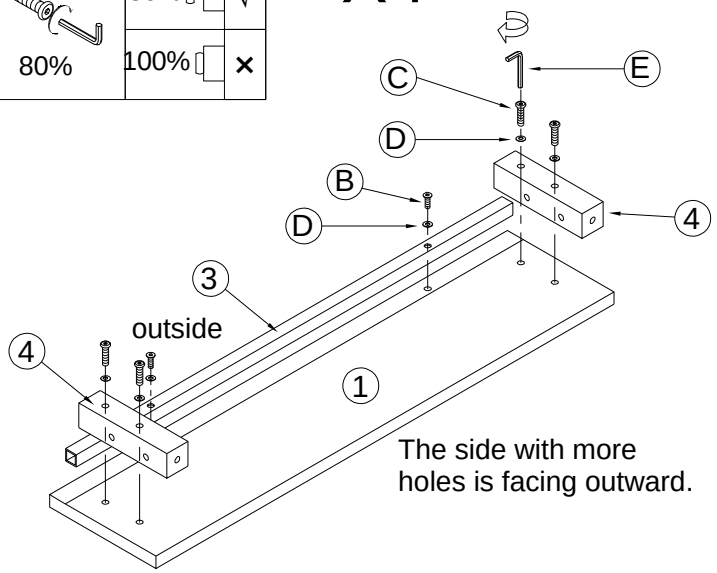


The side with more holes is facing outward.

Insert part B and C through component D, then attach parts 3 and 4 to part 1.
Do not fully tighten B and C—tighten them to approximately 80% of final torque.


Step 2：

②	C 6*55	D
4pcs	16pcs	16pcs

100%	80%	×
	100%	√

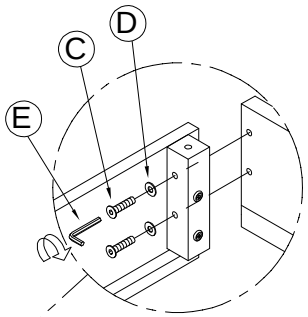

X2

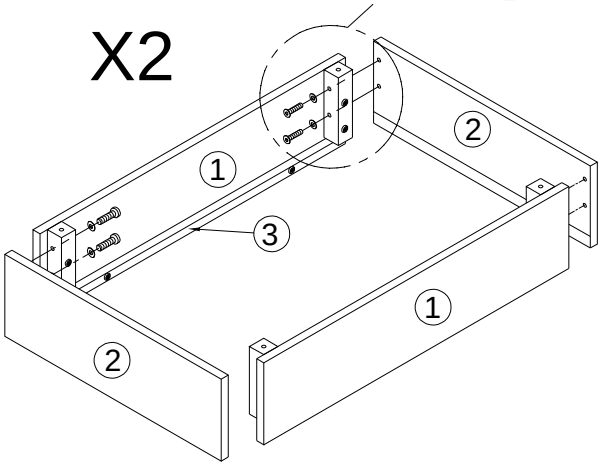


Insert C through D and connect the pre-assembled components.
Tighten all screws completely.

Step 3：

⑥	H	I
8pcs	8pcs	8pcs

X2

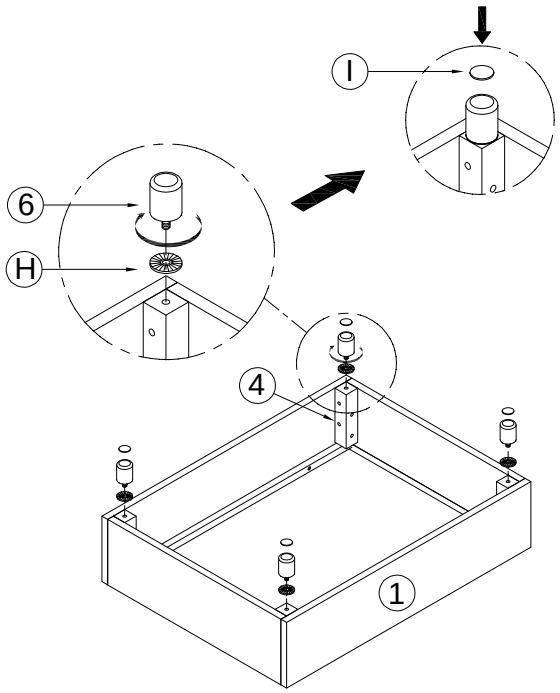


Insert part 6 into H, then mount the assembly onto part 4.
Finally, attach component I to part 6.

Step 4：


⑤	J
30pcs	60pcs

X30

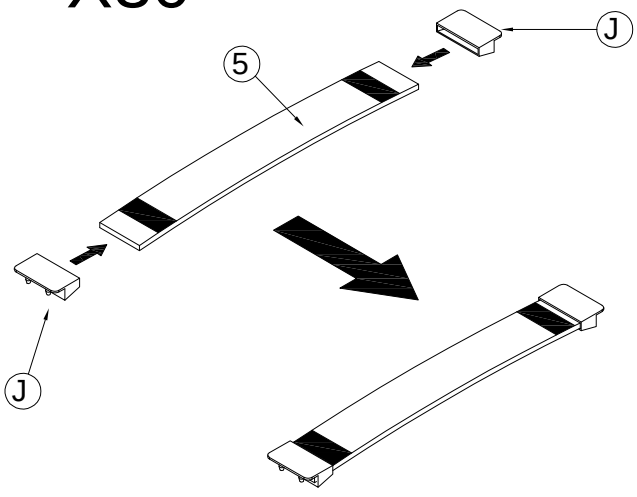


Place part 5 into the designated slot on component J, ensuring the Velcro-faced side is oriented upward.

Step 5：

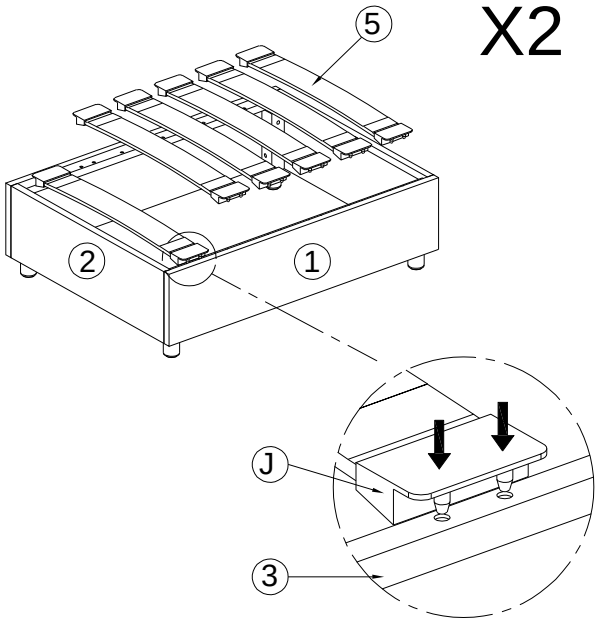

Align J with the mounting hole, then insert and secure it in place.


Step 6：

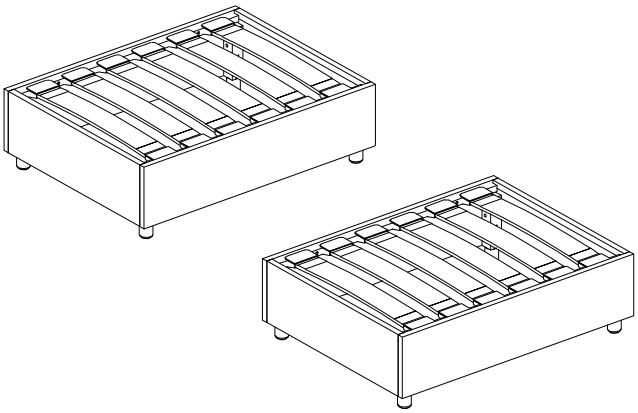

Finish

Step 7：


6	8	9	A 6*16	D	K	H	I
4pcs	1pcs	1pcs	4pcs	4pcs	2pcs	4pcs	4pcs

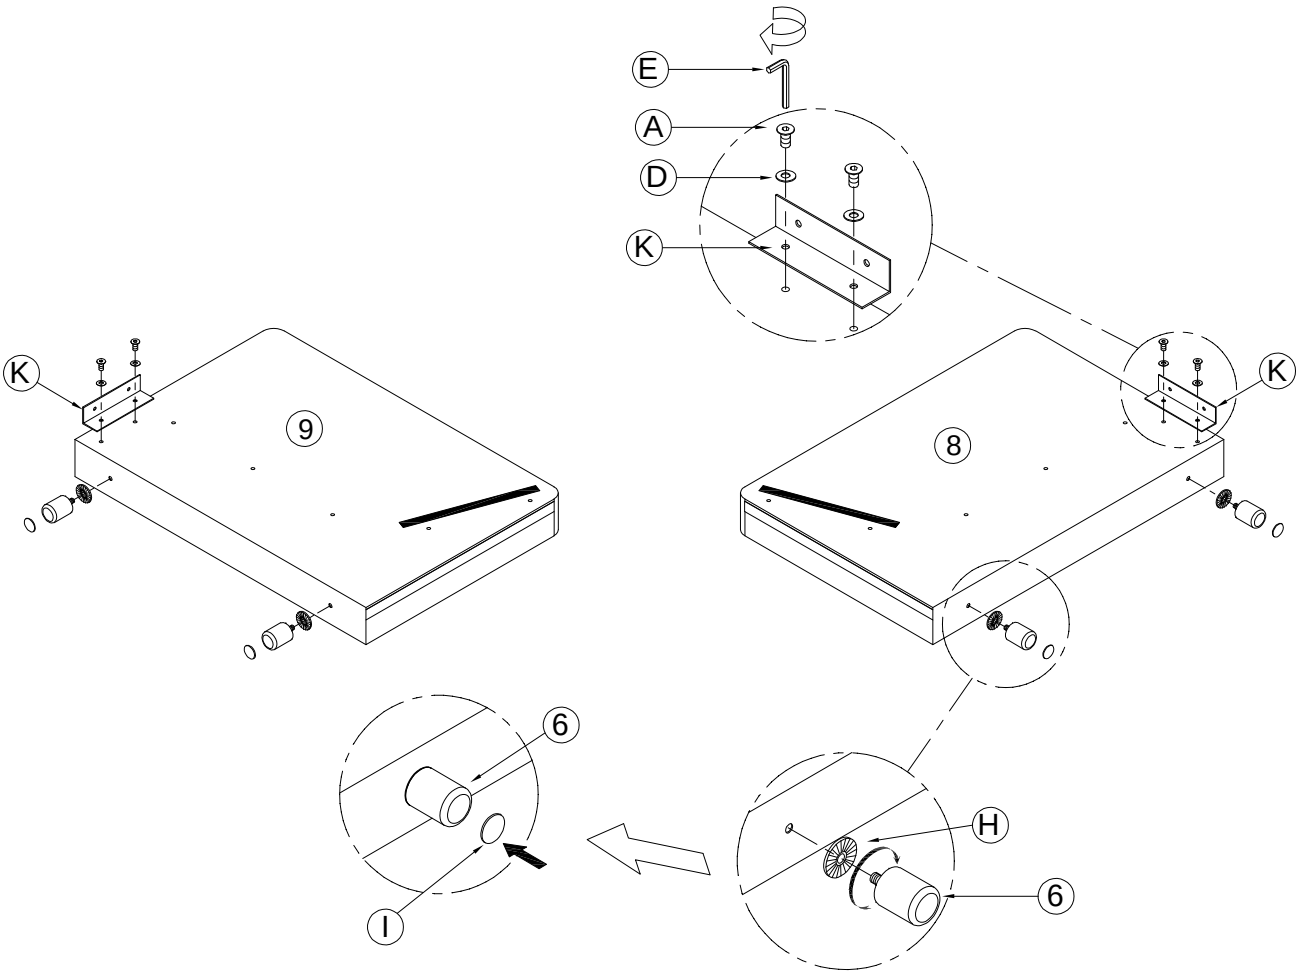

Insert screw A through D, then secure component K to parts 8 and 9. Do not fully tighten A—tighten it to approximately 80% of final torque. Next, insert part 6 into H and mount the assembly onto parts 8 and 9. Finally, attach component I to part 6.

Step 8：


10	11	C 6*55	D	F
2pcs	1pcs	4pcs	8pcs	4pcs

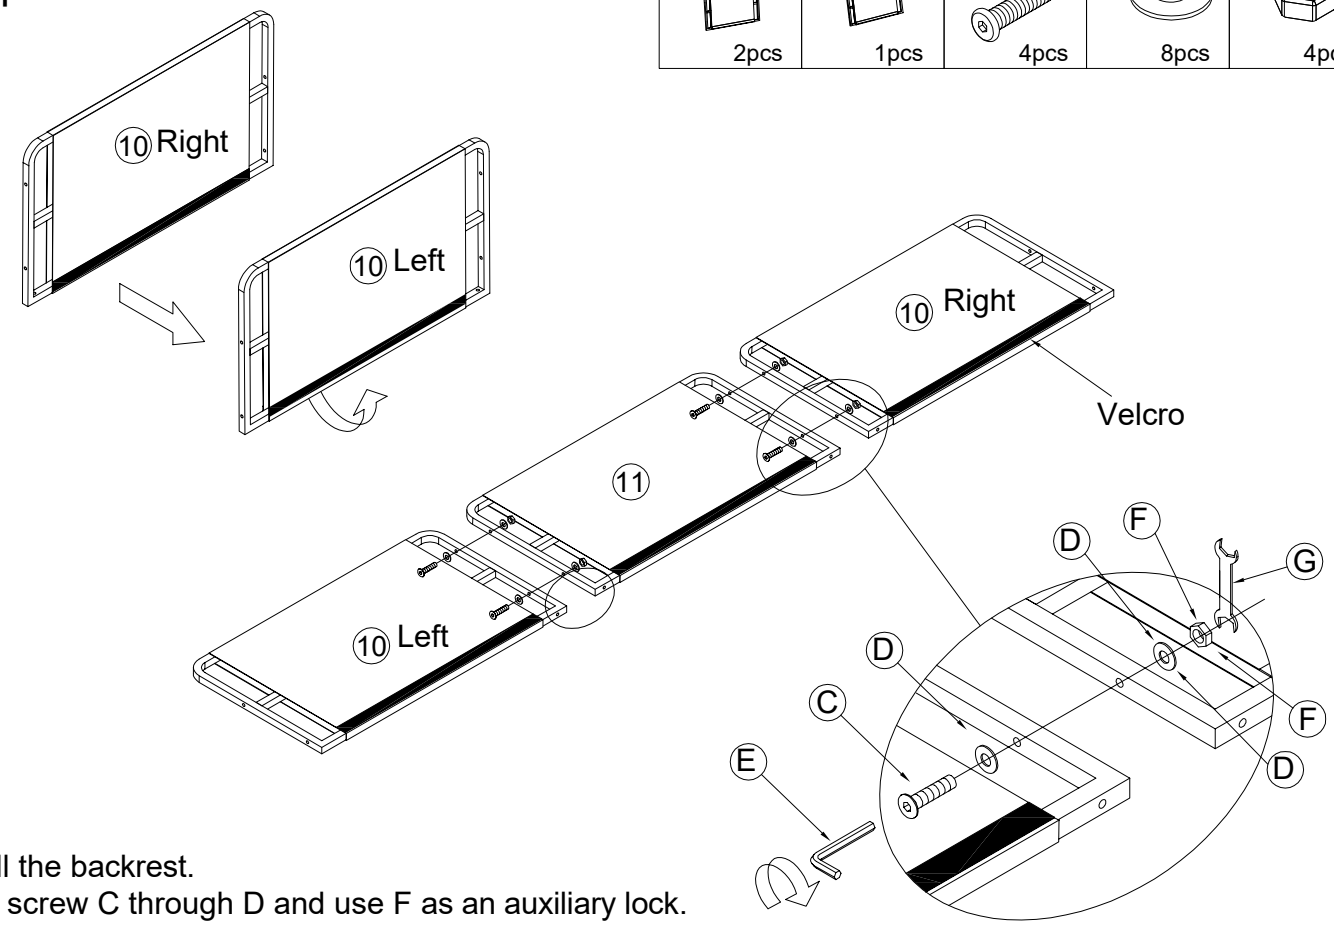

Install the backrest.
Pass screw C through D and use F as an auxiliary lock.
Ensure the Velcro side faces forward—note that the backrest fabric is rotatable for proper orientation.

Step 9：


12	13	14	15	17	B 6*35	D	F
1pcs	1pcs	1pcs	4pcs	2pcs	20pcs	40pcs	20pcs

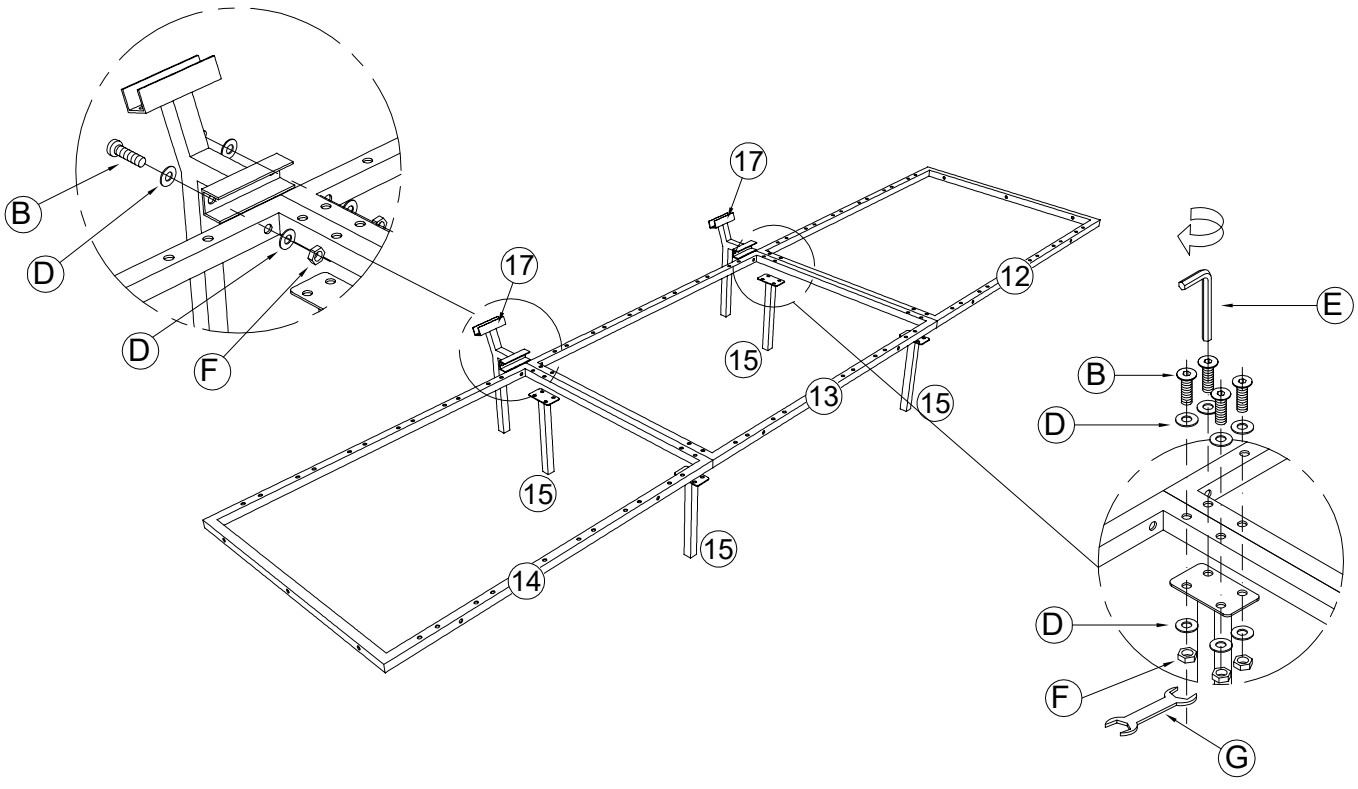

Pass screw B through D and engage F as an auxiliary lock.
Secure the sofa’s leg to the seat frame.

Step 10：


C 6*55	D
10pcs	10pcs

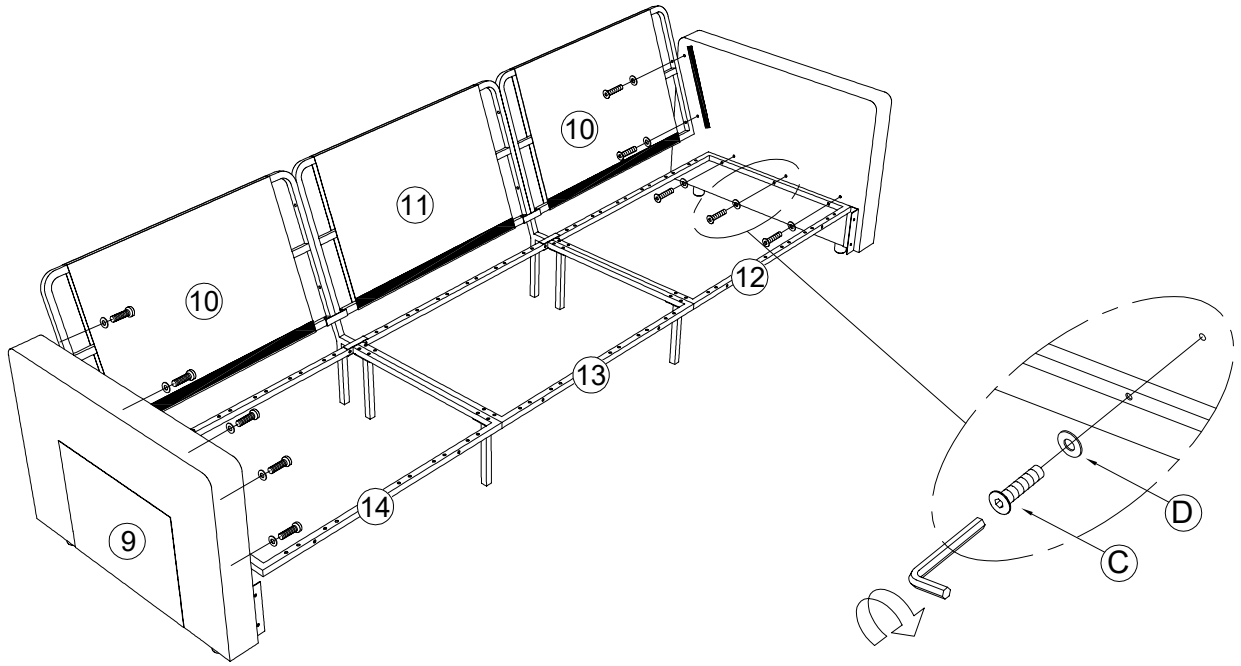

Insert screw C through D, then secure the seat frame and backrest to parts 8 and 9.
Do not fully tighten C—tighten it to approximately 80% of final torque.

Step 11：


B 6*35	D	F
4pcs	8pcs	4pcs

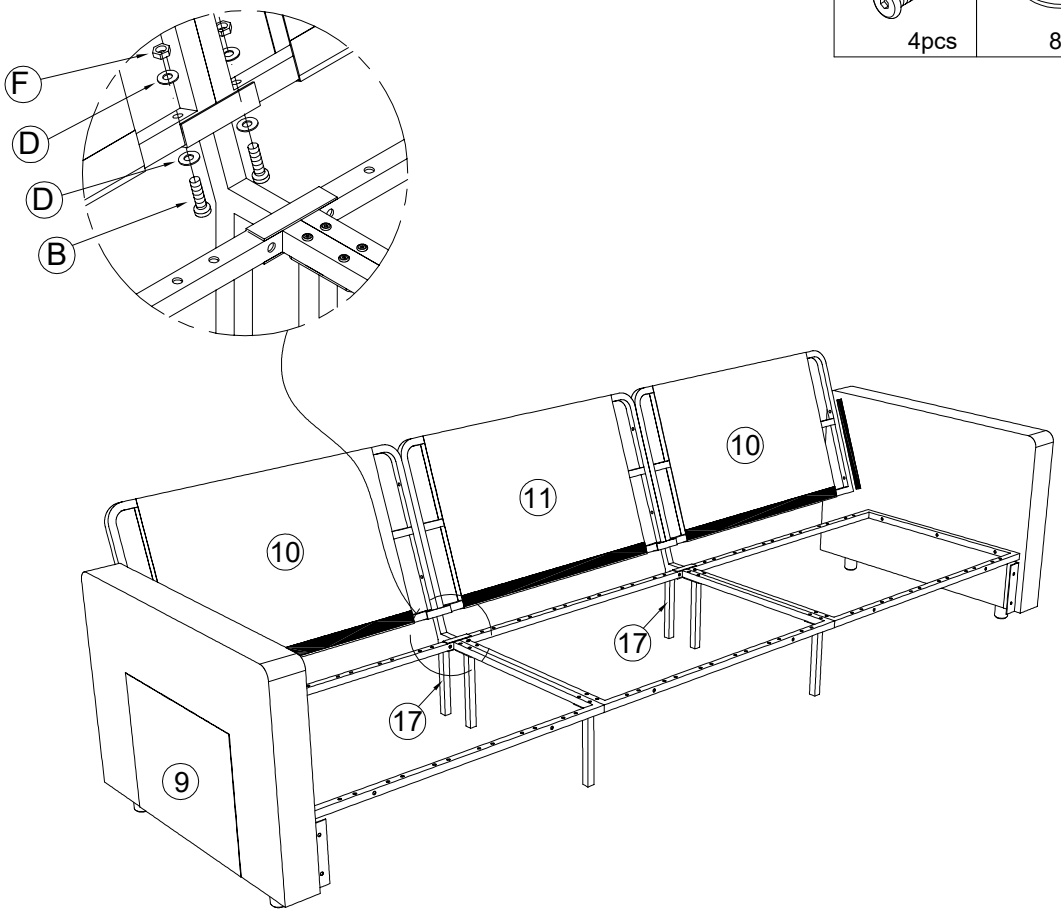

Pass screw B through D and engage F as an auxiliary lock.
Secure the sofa’s back leg to both the seat frame and the backrest.


Step 12：

16	A 6*16	B 6*35	D	L
3pcs	12pcs	6pcs	18pcs	2pcs

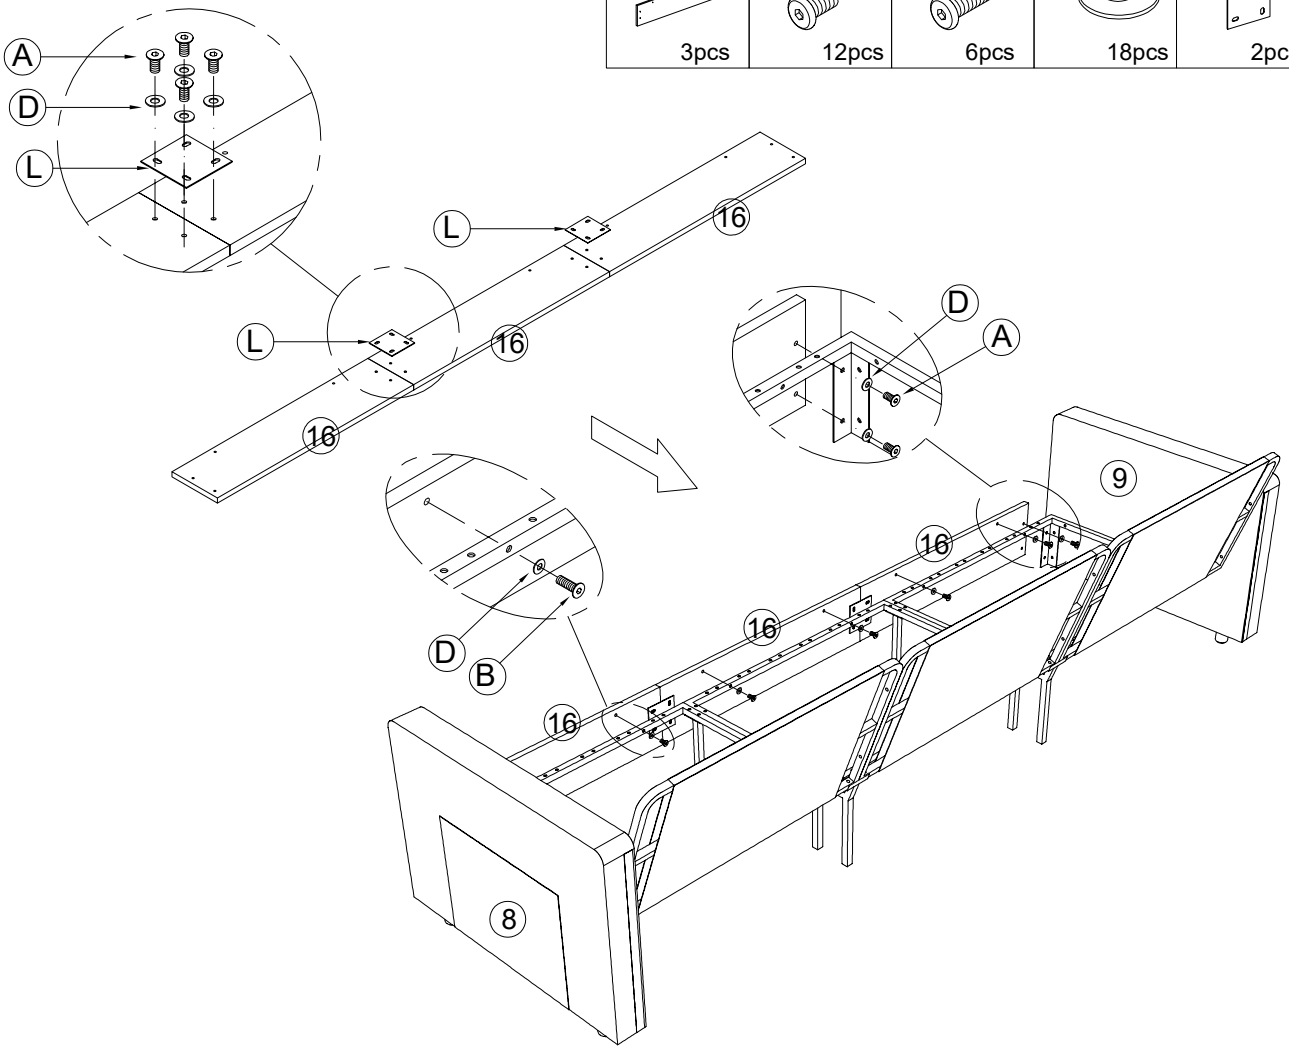


Insert A into D; attach L to 16.
Then pass A and B through D to connect pre-assembled parts.
Fully tighten all screws.

Step 13：

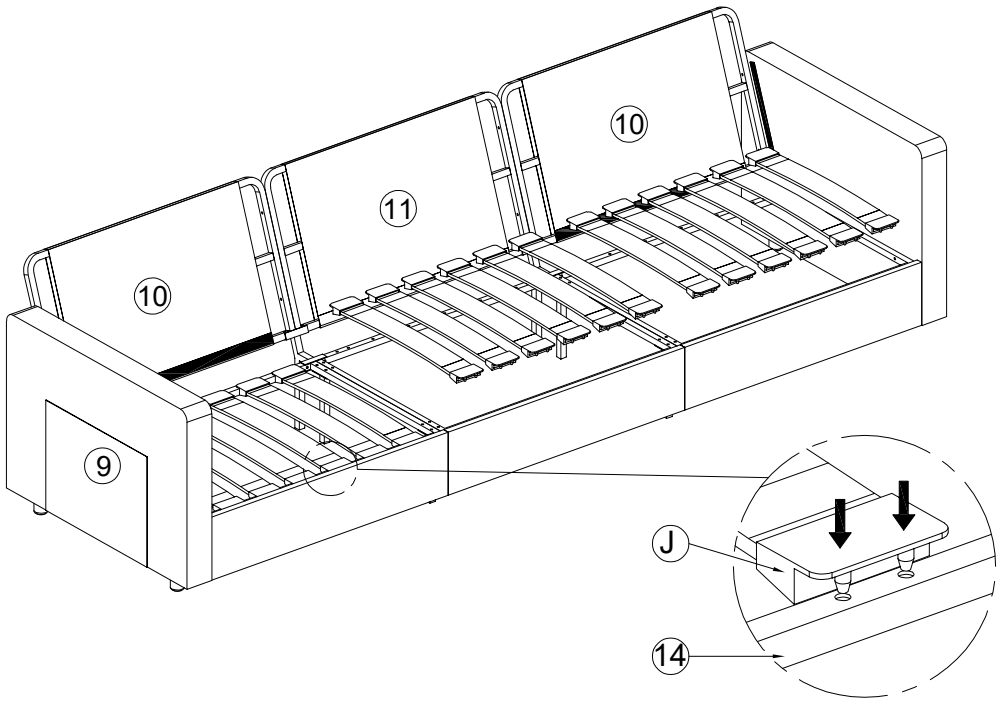


Align J with the mounting hole, then insert and secure it in place.

Step 14：

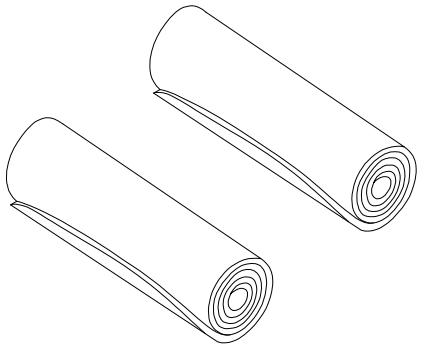


Take out the compressed package from the box.


Step 15：

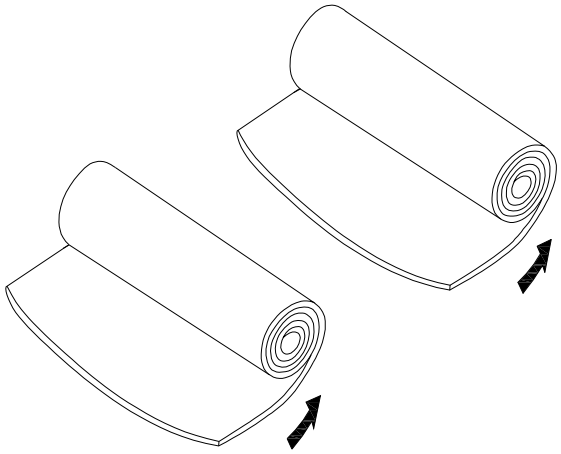

Tear off the outer film and unroll the package until flat.


Step 16：

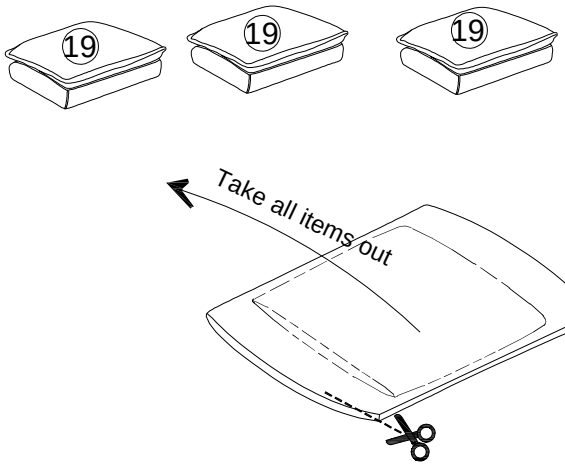

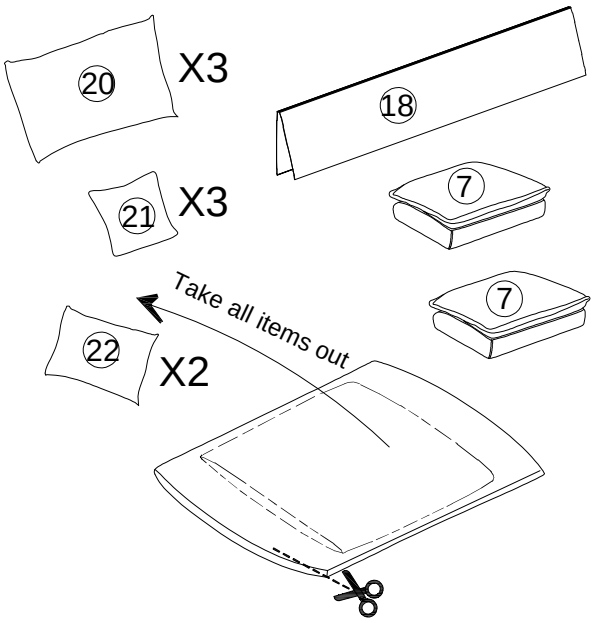


Carefully cut open the plastic bag with scissors.

Step 17：

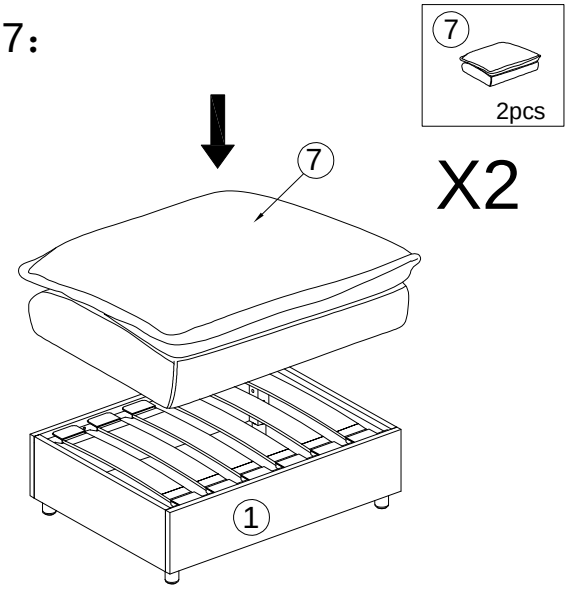



Place the cushion 7 on the Ottoman.

Step 18：

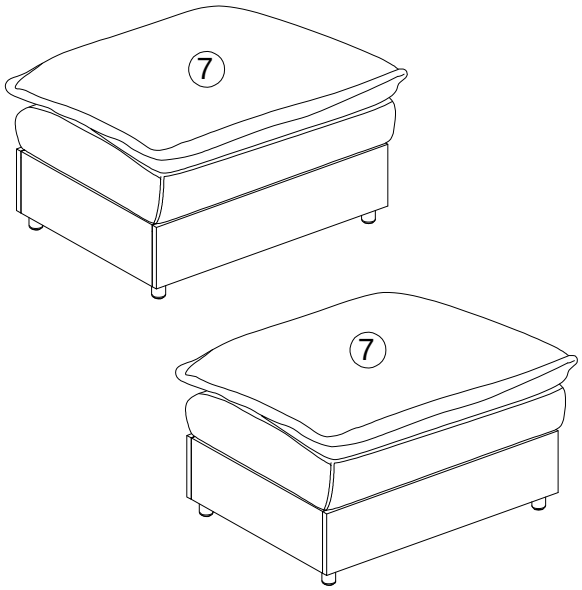


Step 19：

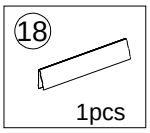


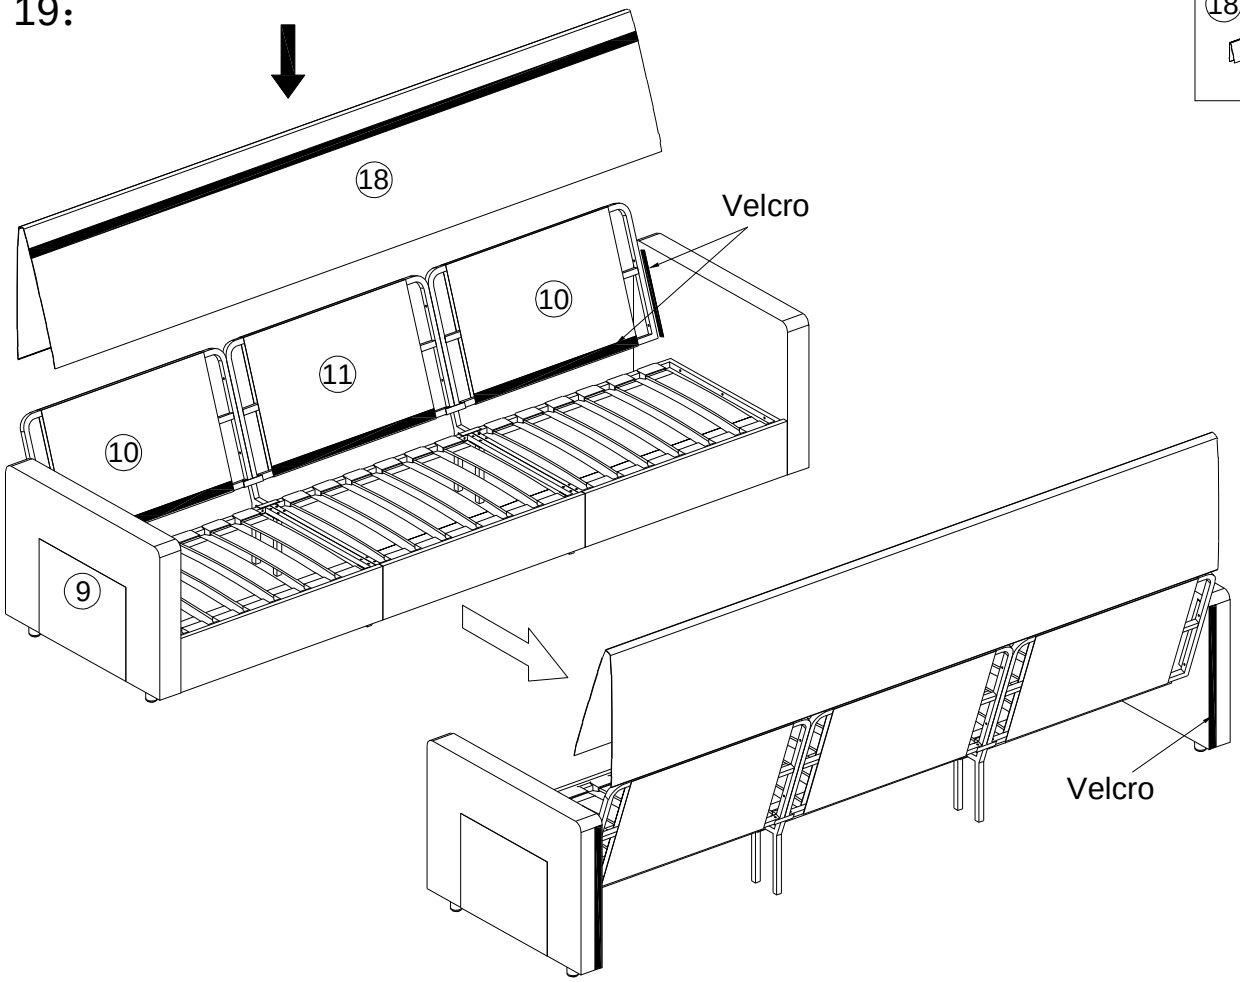

Cover components 10 and 11 with part 18, securing it in place with Velcro


Step 20：

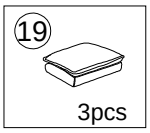


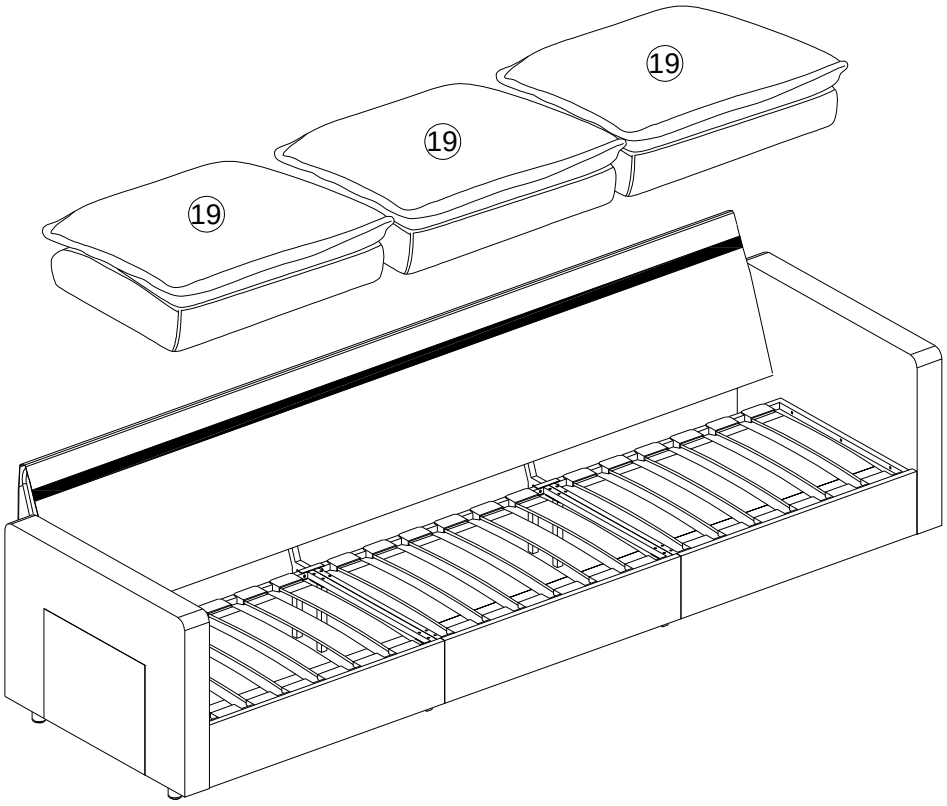

Place the cushion on the sofa with the zipper (located on the bottom) facing the rear.

Step 21：

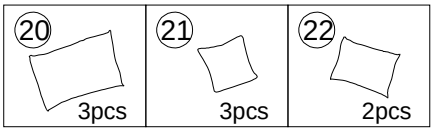

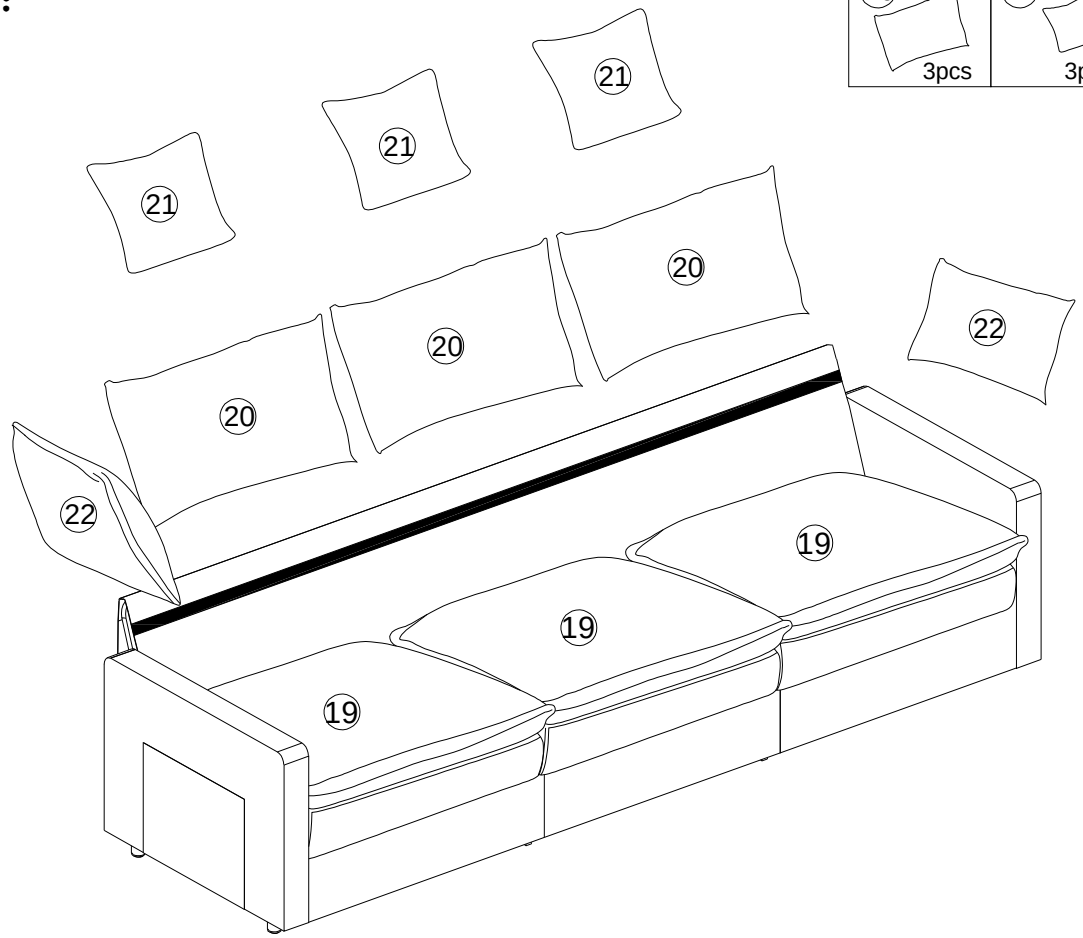

Place the back cushions on the sofa

Step 22：



Finish