


FREEMOTION[®]

LEG PRESS

Model No. ES804.0

Serial No. _____


Write the serial number in the space above for reference.

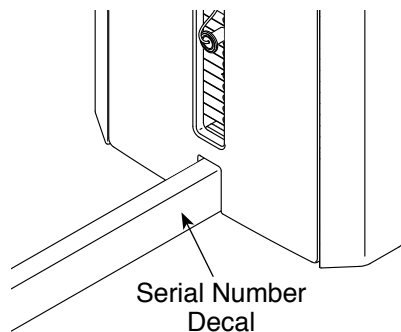

OWNER'S MANUAL

QUESTIONS?

If you have questions, or if parts are damaged or missing, please see **HOW TO CONTACT CUSTOMER CARE** on the back cover of this manual.

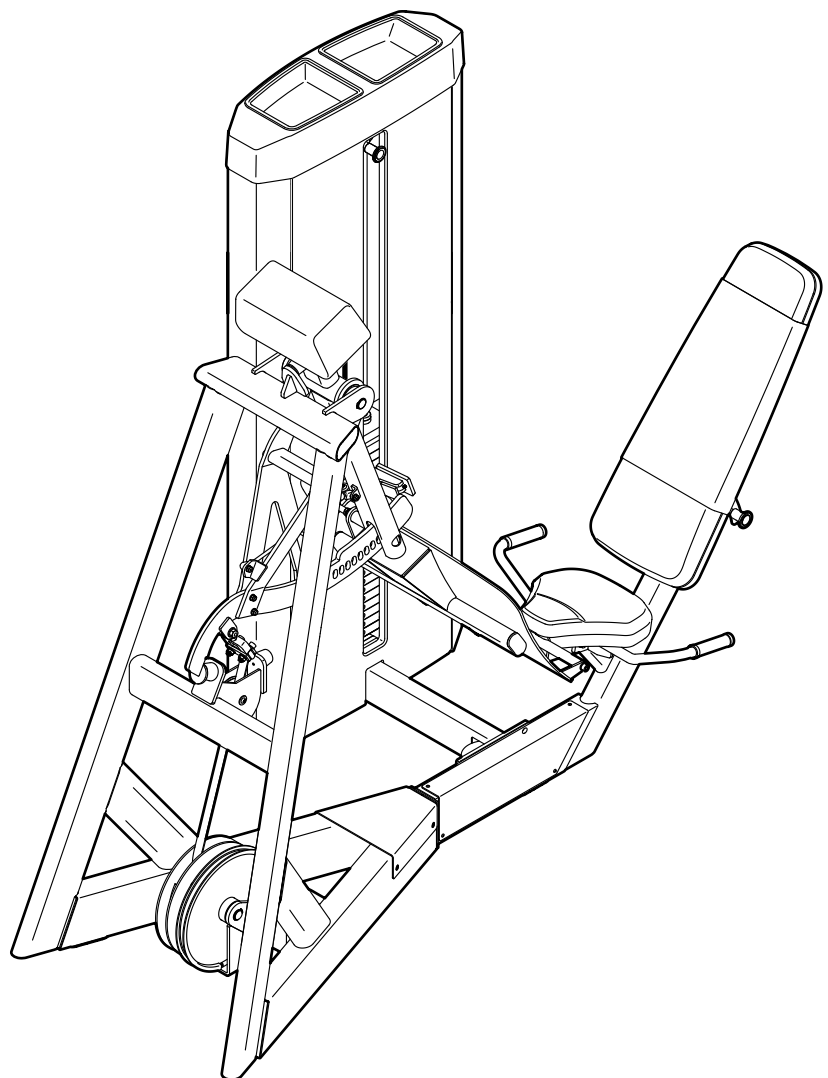

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS.....	3
WARNING DECAL PLACEMENT.....	4
BEFORE YOU BEGIN.....	5
PART IDENTIFICATION CHART.....	6
ASSEMBLY.....	7
ADJUSTMENT.....	18
MAINTENANCE AND TROUBLESHOOTING.....	20
CABLE DIAGRAM.....	22
PART LIST.....	23
EXPLODED DRAWING.....	25
HOW TO CONTACT CUSTOMER CARE.....	Back Cover
LIMITED WARRANTY.....	Back Cover

FREEMOTION is a registered trademark of ICON Health & Fitness, Inc.
FORMULA 409 is a registered trademark of The Clorox Company.
SIMPLE GREEN is a registered trademark of Sunshine Makers, Inc.
Teflon is a registered trademark of E. I. du Pont de Nemours and Company.

IMPORTANT PRECAUTIONS


⚠ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your strength equipment before using your strength equipment. Freemotion Fitness assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. It is the responsibility of the owner to ensure that all users of the strength equipment are adequately informed of all precautions, have read and understood all warning and caution labels, and are informed of how to use the strength equipment properly.
2. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
3. Use the strength equipment only as described in this manual.
4. It is the responsibility of the owner to ensure that there is enough space around the strength equipment for the intended exercise.
5. Use the strength equipment only on a level surface. Cover the floor beneath the strength equipment to protect the floor.
6. Anchor the strength equipment to the floor with the anchor strap where required or where possible to provide maximum stability.
7. All users of the strength equipment should be instructed to report any injury or strength equipment irregularity to facility staff immediately.
8. Keep children under age 16 and pets away from the strength equipment at all times.
9. The strength equipment is designed to support a maximum user weight of 350 lbs. (159 kg).
10. Always wear athletic shoes for foot protection while exercising.
11. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength equipment while it is in use.
12. Make sure that the weight pin is completely inserted into one of the weights.
13. Make sure that the handles are attached securely before each use of the strength equipment.
14. Check each cable, cable connection, and pulley before each use of the strength equipment. Make sure that all parts are properly tightened. Replace any worn parts immediately.
15. Make sure that each cable remains on the pulleys at all times. If a cable binds while you are exercising, stop immediately and make sure that the cable is on the pulleys and that nothing is interfering with the cable or the pulleys.
16. Over exercising may result in serious injury or death. If you feel faint, if you become short of breath, or if you experience pain while exercising, stop immediately and cool down.

WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). If a decal is missing or illegible, see the back cover of this manual and request a free replacement decal. Apply the decal in the location shown. Note: The decal(s) may not be shown at actual size.

<p>⚠ WARNING</p> <ul style="list-style-type: none">• Read and follow all warnings and instructions and obtain proper instruction prior to use.• Before beginning an exercise program, consult your physician.• Inspect the machine, cables, straps, and their connections before use. Do not use machine if any component appears to be worn or damaged.• Back panel must be in place before machine use.• Keep body and clothing clear of all moving parts.• Do not use dumbbells or other means to increase the weight resistance, other than those provided by the manufacturer.• Do not allow children on machine. Machine use by teenagers and adults must be supervised by a qualified adult.• Do not remove this label; replace if damaged.• Max user weight: 350 lbs/159kg.	<p>⚠ WARNING</p> <ul style="list-style-type: none">• Keep hands and clothing clear of all moving parts.• Selector pin must be fully inserted into the weight plate.• Never insert selector pin between weight plates. Never use the machine if found in this condition.• Failure to heed these warnings could result in personal injury.
--	--

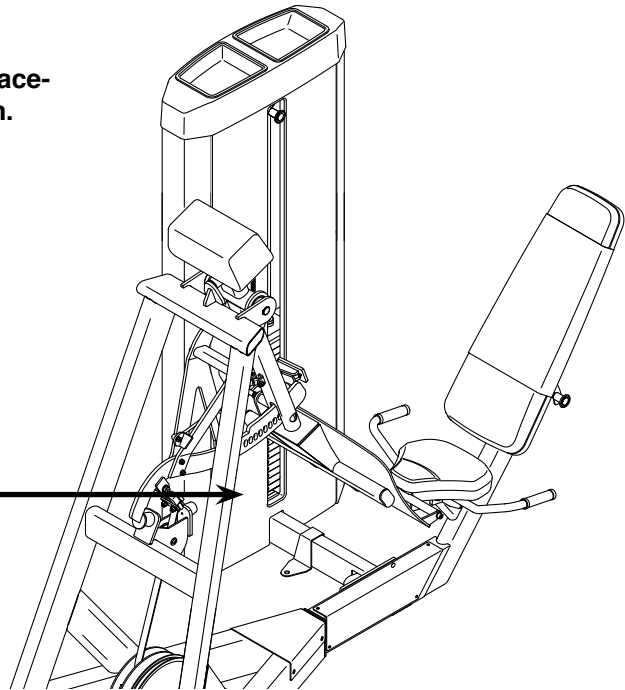


BEFORE YOU BEGIN

Thank you for selecting the FREEMOTION® LEG PRESS strength equipment. With natural motion, the LEG PRESS strength equipment enables you to work your body's muscle groups more effectively and efficiently.

For your benefit, read this manual carefully before using the strength equipment. If you have questions after reading this manual, please see the back cover


of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

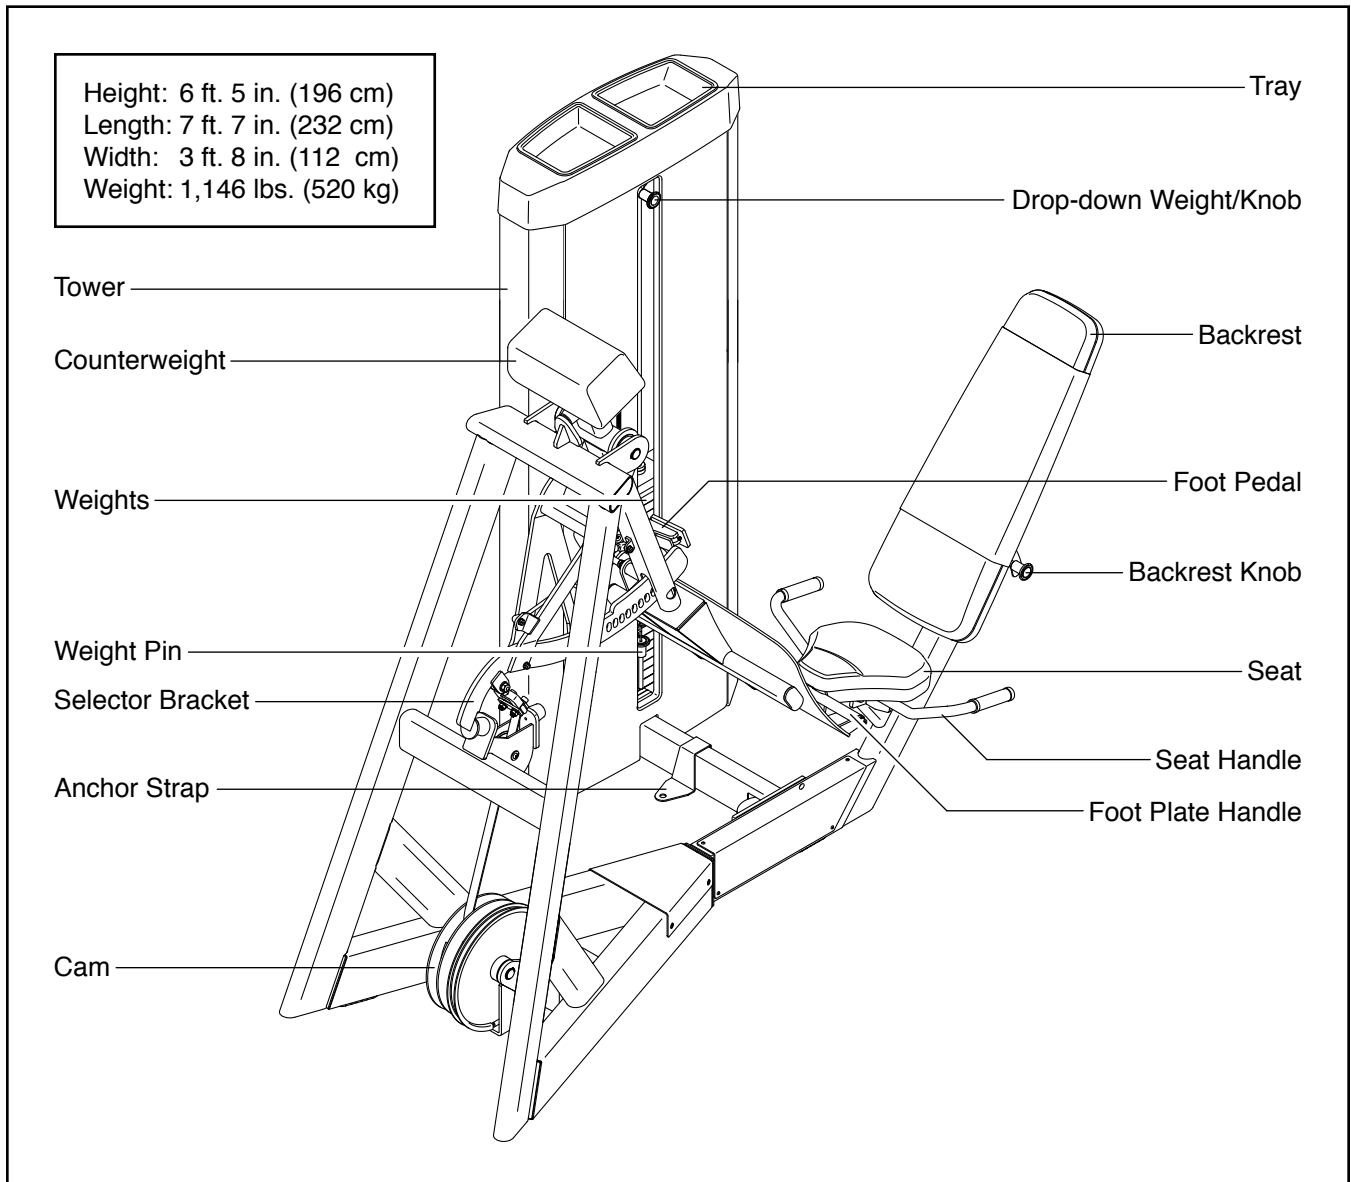

PART IDENTIFICATION CHART

Use the drawings below to identify small parts used for assembly. The number in parentheses by each drawing is the key number of the part, from the PART LIST near the end of this manual. The number following the parentheses is the quantity needed for assembly. **Note: If a part is not in the hardware kit, check to see whether it has been preattached.**

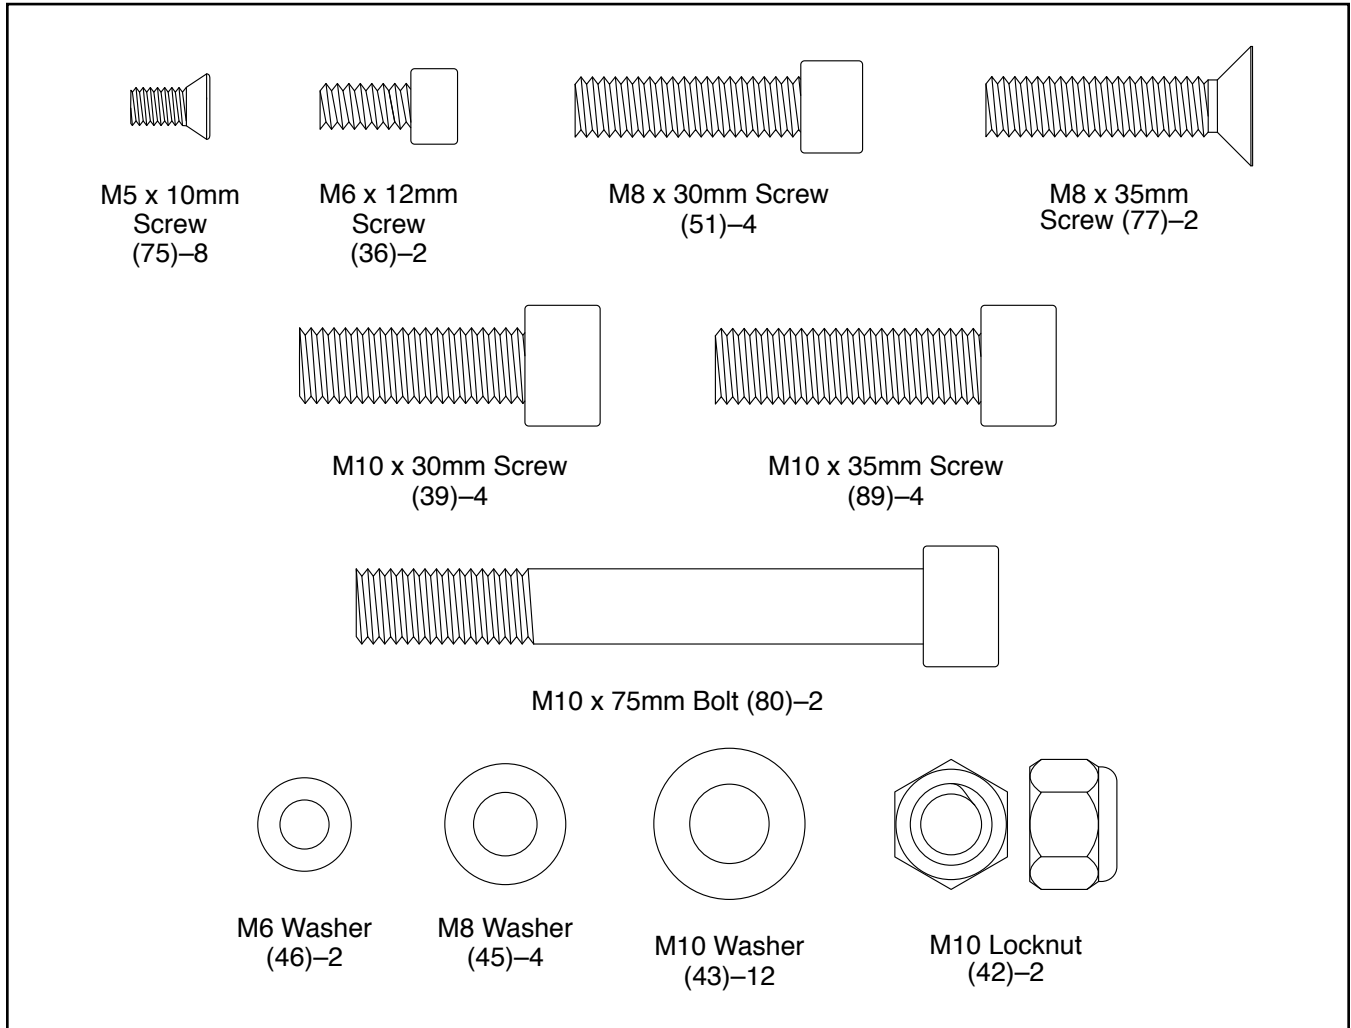

ASSEMBLY


- Assembly requires two persons.
- Because of its weight and size, assemble the strength equipment in the location where it will be used. Make sure that there is enough clearance around the strength equipment.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.
- For help identifying small parts, see page 6.

- The following tools (not included) are required for assembly:

one adjustable wrench



one Phillips screwdriver



a set of metric hex keys




Assembly may be more convenient if you have a set of wrenches. To avoid damaging parts, do not use power tools.

1. Remove all parts (42, 52, 43, 98, and 28) from the Connecting Frame (7).


Next, insert the Cable (31) through the Connecting Frame (7); **make sure that the threaded end (A) of the Cable is extending from the indicated end (B) of the Connecting Frame.**

Next, route the Cable (31) around the V-pulley (28). Attach the V-pulley and the Cable Trap (98) to the Connecting Frame (7) with the M10 x 70mm Bolt (52), the two M10 Washers (43), and the M10 Locknut (42) that you just removed. **Make sure that the Cable is between the V-pulley and the Cable Trap and that the Cable Trap is oriented as shown.**

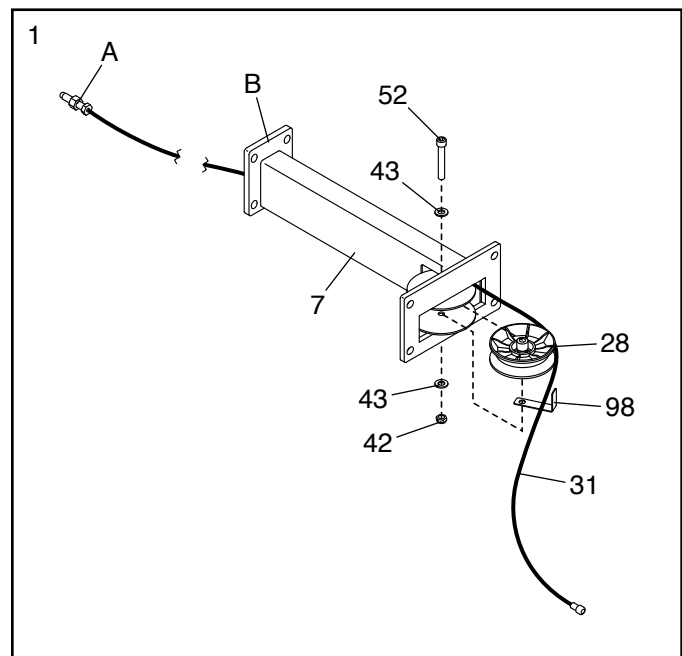


2. Set the Connecting Frame (7) on the indicated side of the Main Frame (67).

Route the Cable (31) into the Main Frame (67), out of the indicated slot (C), and through the indicated hole (D).

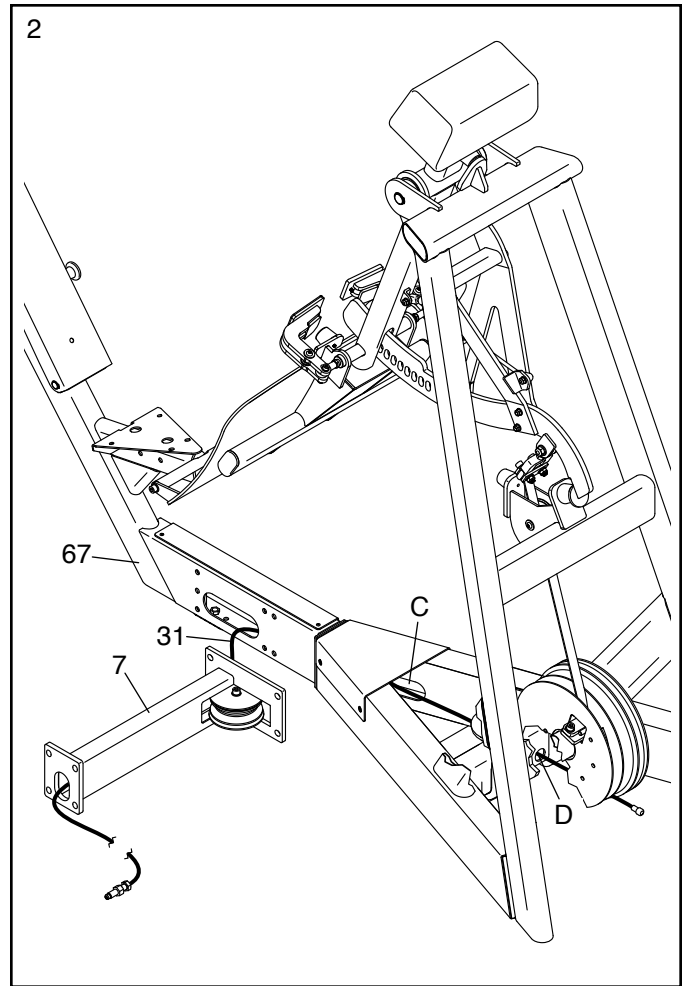


3. Attach the Connecting Frame (7) to the Main Frame (67) with four M10 x 35mm Screws (89) and four M10 Washers (43); **do not tighten the Screws yet.**

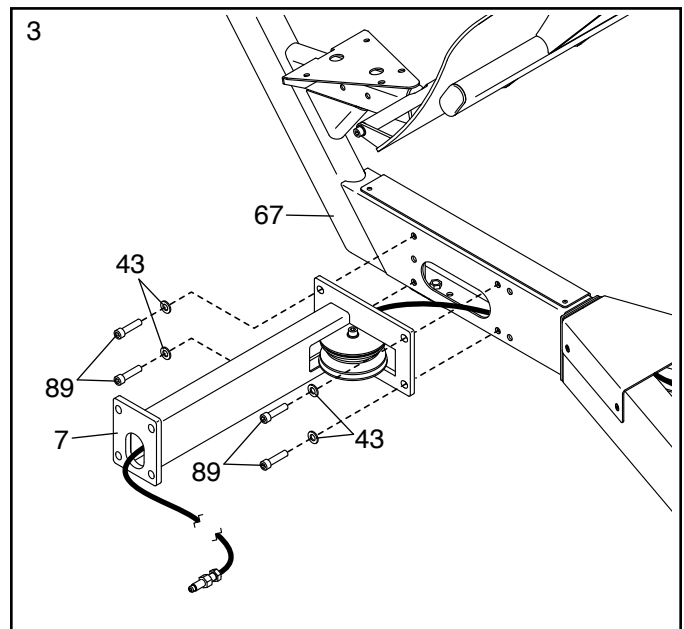


4. Remove all parts (42, 38, 43, 98, and 24) from the indicated bracket (E) on the Main Frame (67).

Next, route the Cable (31) around the Large Pulley (24). Attach the Large Pulley and the Cable Trap (98) to the bracket (E) on the Main Frame (67) with the M10 x 50mm Bolt (38), the two M10 Washers (43), and the M10 Locknut (42) that you just removed. **Make sure that the Cable is between the Large Pulley and the Cable Trap and that the Cable Trap is oriented as shown.**

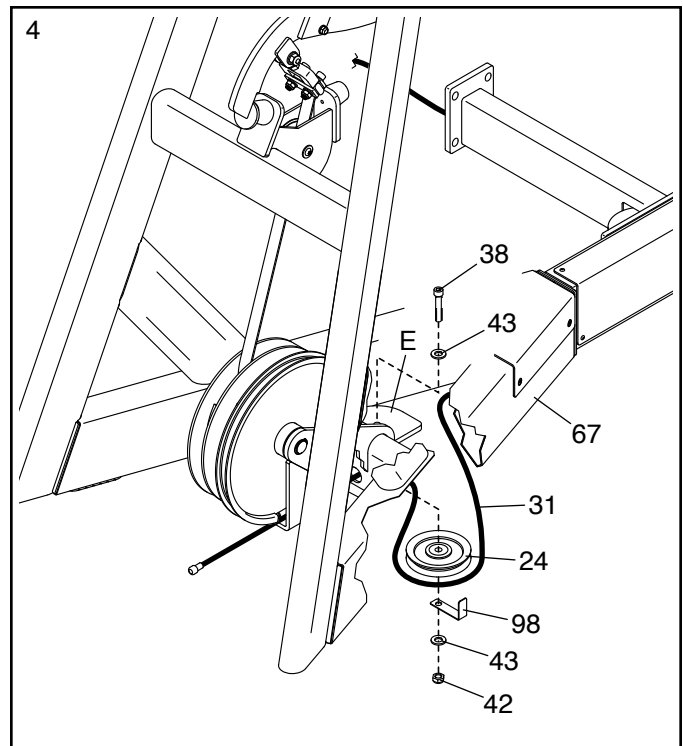


5. **See the inset drawing.** Insert the end of the Cable (31) between the Cam (58) and the cable trap (F) on the Main Frame (67). Then, insert the end of the Cable into the socket on the Cam.

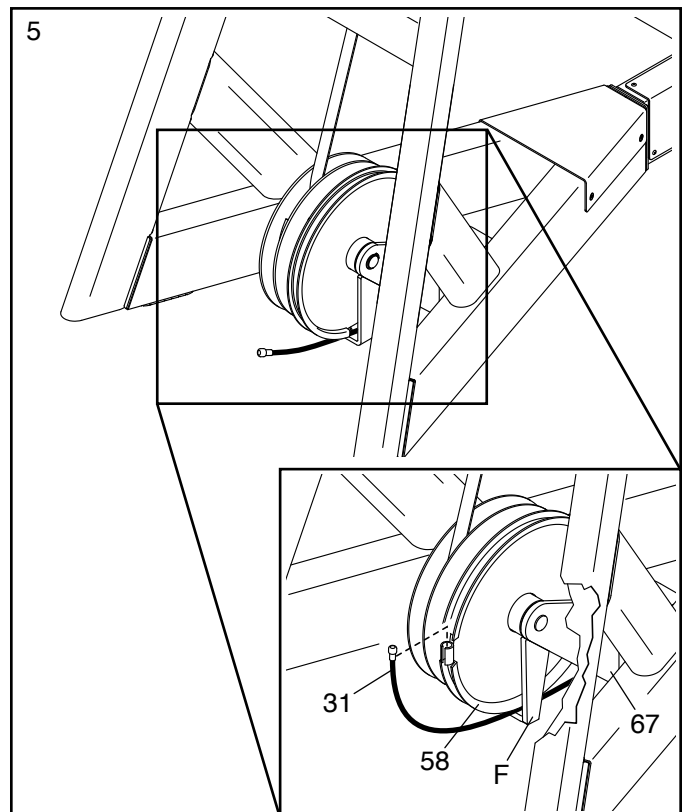

6. Orient the Tower Frame (1) as shown. **Have a second person hold the Tower Frame to prevent it from falling until you complete step 7.**

Remove the two M10 x 30mm Screws (39), the two M10 Washers (43), and the Pulley Bracket (27) from the back of the Tower Frame (1).


Then, remove the M10 Locknut (42), the M10 x 50mm Bolt (38), the two M10 Washers (43), and the Large Pulley (24) from the Pulley Bracket (27).

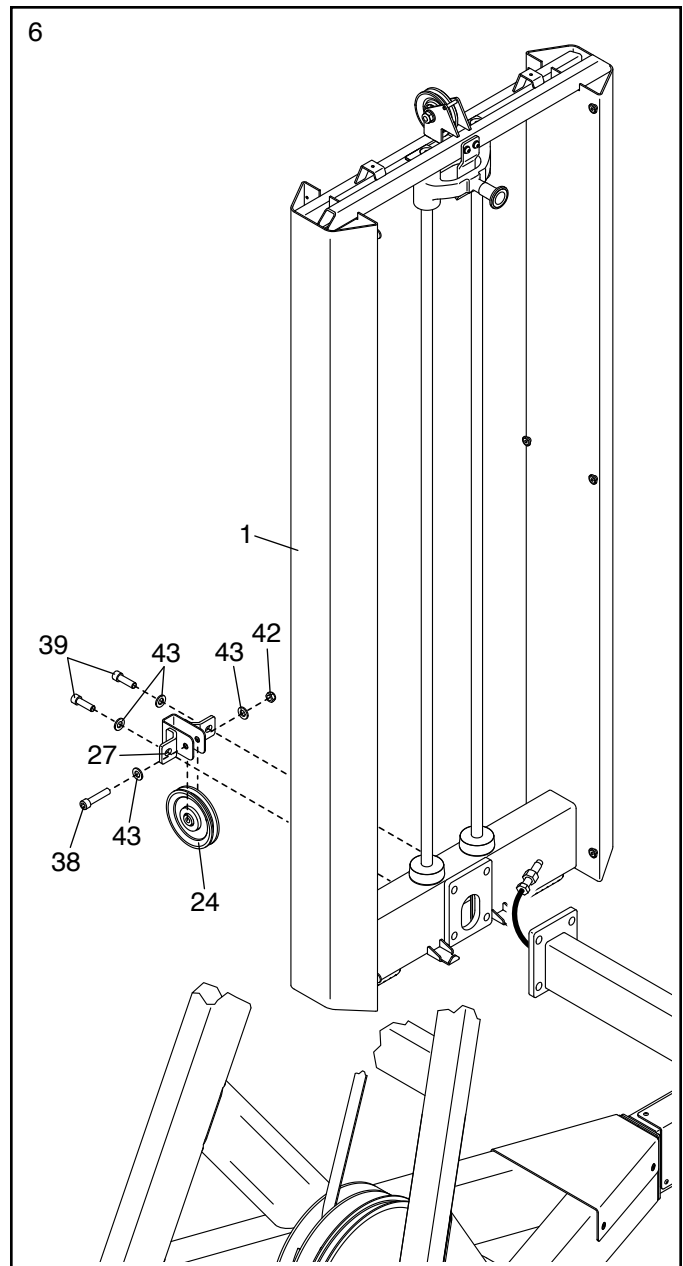

7. Insert the Cable (31) through the Tower Frame (1) as shown.

Then, attach the Connecting Frame (7) to the Tower Frame (1) with four M10 x 30mm Screws (39) and four M10 Washers (43); **start all of the Screws, and then tighten them.**


See step 3. Tighten the four M10 x 35mm Screws (89).

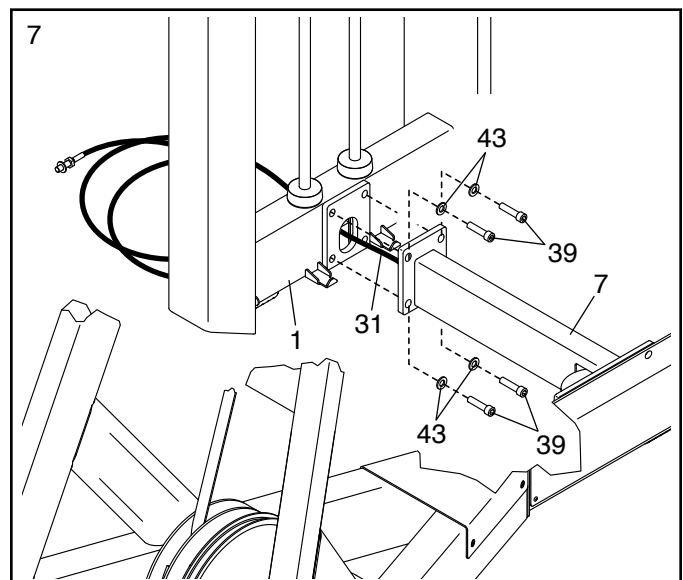

8. Route the Cable (31) upward through the Pulley Bracket (27).

Attach the Large Pulley (24) inside the Pulley Bracket (27) with the M10 x 50mm Bolt (38), the two M10 Washers (43), and the M10 Locknut (42) that you removed in step 6.

Then, attach the Pulley Bracket (27) to the Tower Frame (1) with the two M10 x 30mm Screws (39) and the two M10 Washers (43) that you removed in step 6.

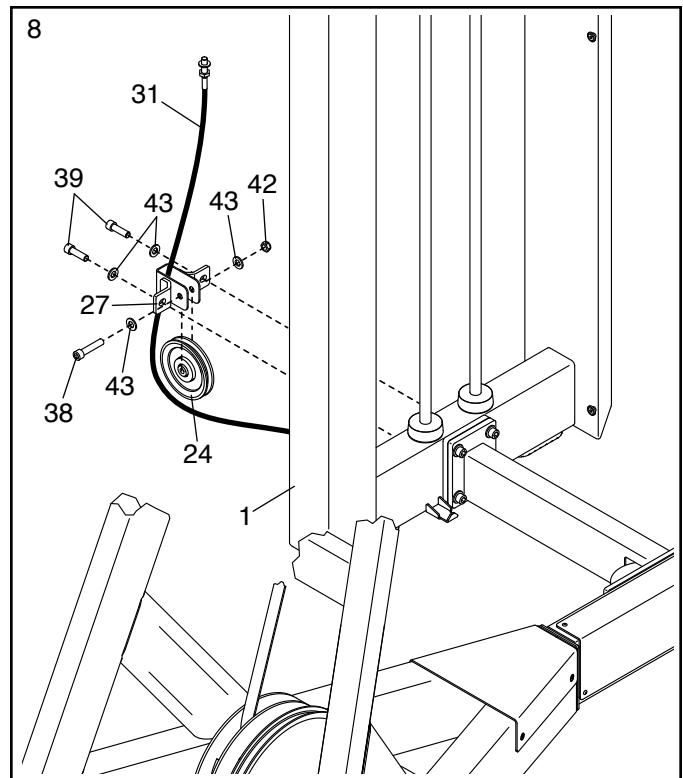


9. Pull the Drop-down Weight Knob (20) and slide the Drop-down Weight (10) downward on the Weight Guides (30).

Next, loosen the two M8 x 20mm Set Screws (19) a few complete turns; **it is not necessary to remove the Set Screws.**

Look under the top of the Tower Frame (1) and remove the two E-clips (73) from the two Weight Guide Bushings (18).


Next, have a second person hold the Weight Guides (30). Lift the Weight Guide Bushings (18) out of the Tower Frame (1).

Then, tip the upper ends of the Weight Guides (30) toward the Main Frame (67), and slide the Drop-down Weight (10) upward off the Weight Guides.

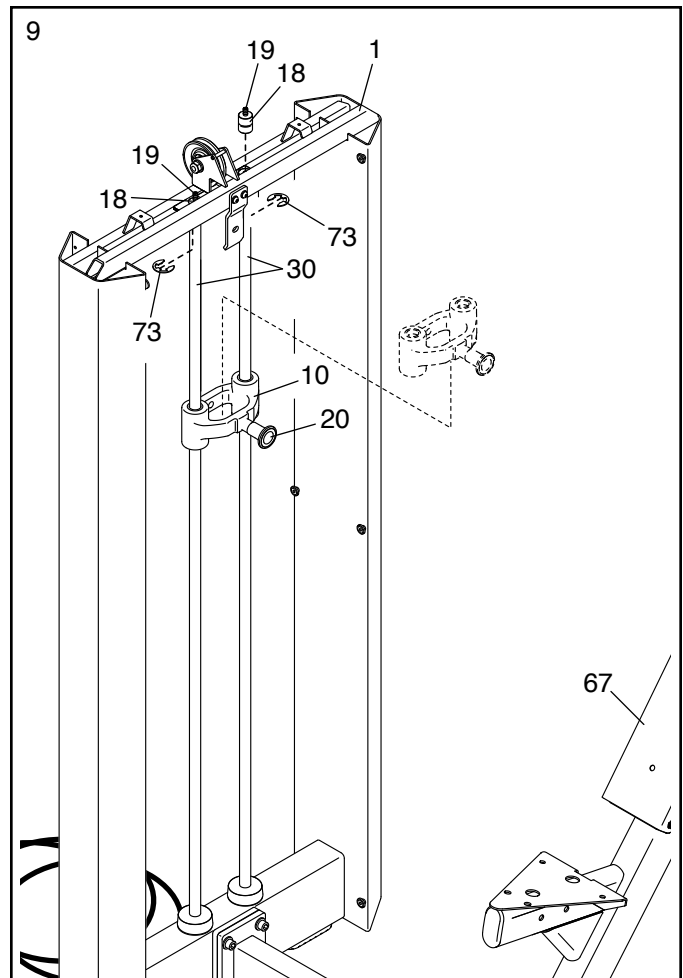

10. Look at the decals (G) on the twenty-two 20-pound Weights (8). Find the decal that has the **largest** number. Orient that Weight so that the decal is facing the Connecting Frame (7), and slide the Weight onto the Weight Guides (30).

Repeat this step until all twenty-two 20-pound Weights (8) are on the Weight Guides (30).

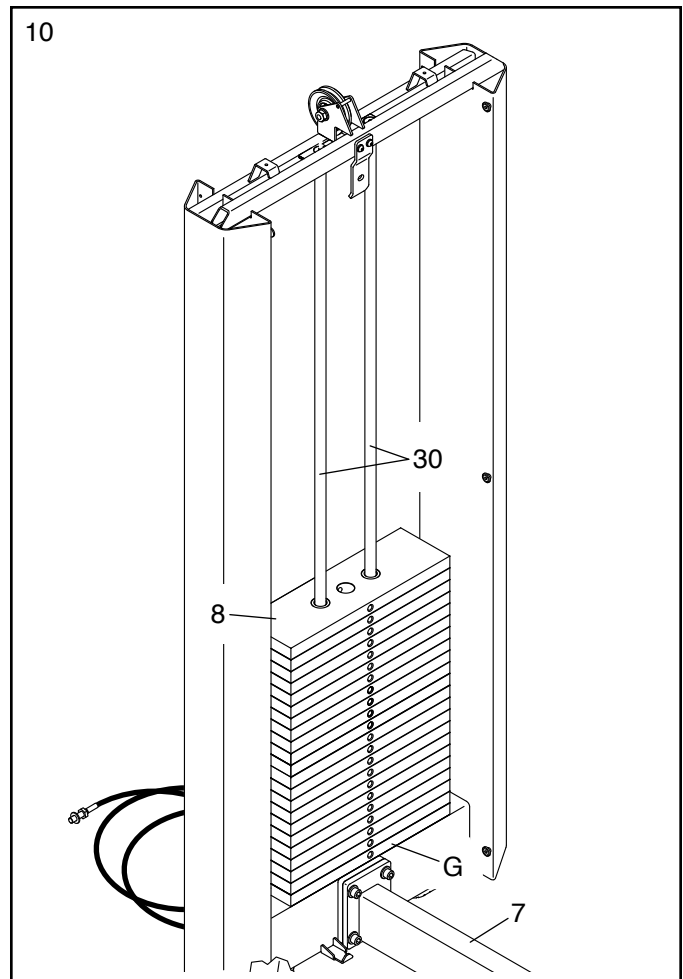


11. Orient the Top Weight (95) and the Drop-down Weight (10) as shown; **make sure that the Weight Pin (12) is on the indicated side.** Note: The Small Weight (9) is attached to the Top Weight.

Slide the Top Weight (95), the two Upper Weight Bumpers (16), and the Drop-down Weight (10) onto the Weight Guides (30).

Next, insert the two Weight Guide Bushings (18) into the Tower Frame (1), and slide them onto the upper ends of the Weight Guides (30).

Next, attach the two E-clips (73) to the Weight Guide Bushings (18).

Then, tighten the two M8 x 20mm Set Screws (19) into the Weight Guide Bushings (18).

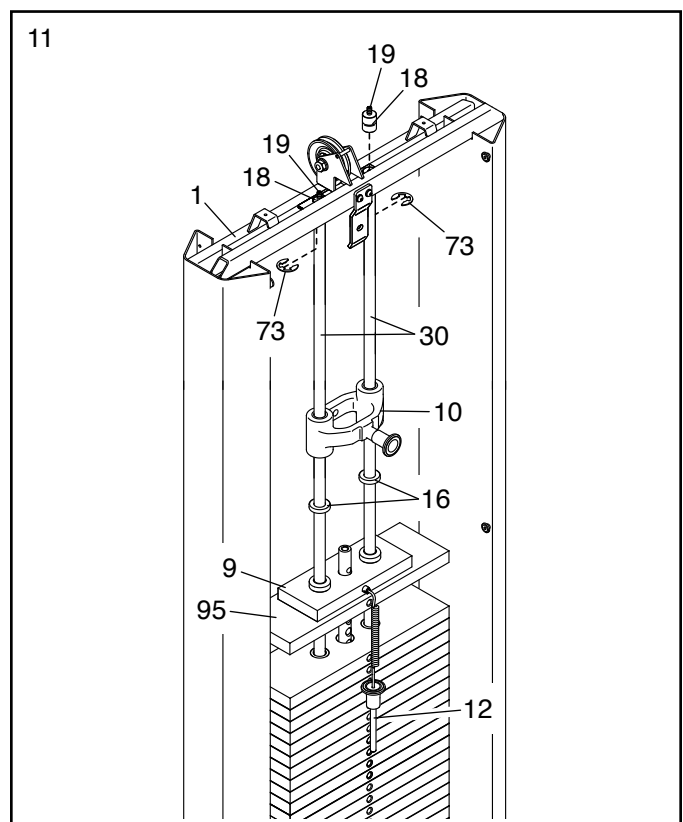


12. Remove all parts (42, 38, 43, and 23) from the pulley bracket on the Tower Frame (1).

Next, route the Cable (31) through the pulley bracket and downward through the opening in the center of the Tower Frame (1).

Next, attach the Small Pulley (23) inside the pulley bracket with the M10 x 50mm Bolt (38), the two M10 Washers (43), and the M10 Locknut (42) that you just removed. **Make sure that the Cable (31) is between the Small Pulley and the rod (H) on the pulley bracket.**


Next, slide the Drop-down Weight (10) upward until the Drop-down Weight Knob (20) snaps into the hole in the Latch Bracket (26). Make sure that the Drop-down Weight Pin (not shown) is engaged in the hole.

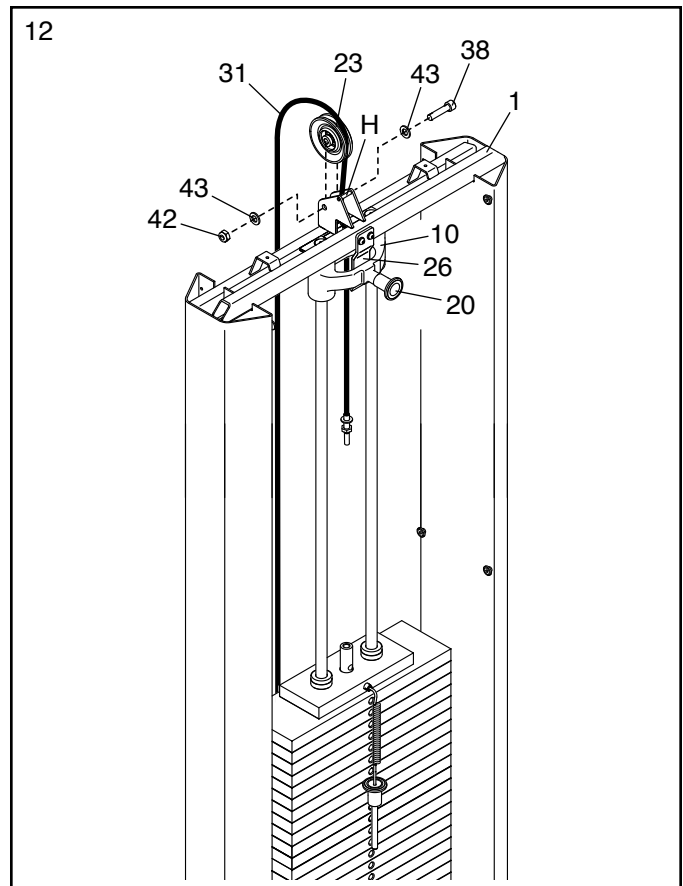


13. Finger tighten the jam nut (I) as far as possible onto the end of the Cable (31).

Next, tighten the end of the Cable (31) into the Weight Selector (11) until the Top Weight (95) is lifted off the 20-pound Weights (8). Then, loosen the end of the Cable until the Top Weight just rests on the 20-pound Weights.

Then, tighten the jam nut (I) on the Cable (31) against the Weight Selector (11).

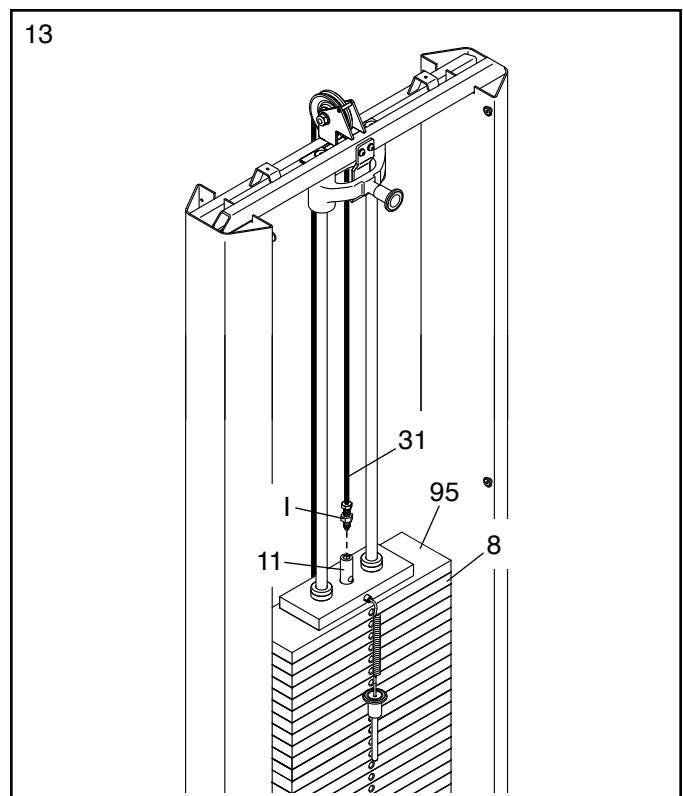


14. Attach the Seat (62) to the Main Frame (67) with four M8 x 30mm Screws (51) and four M8 Washers (45); **start all of the Screws, and then tighten them.**

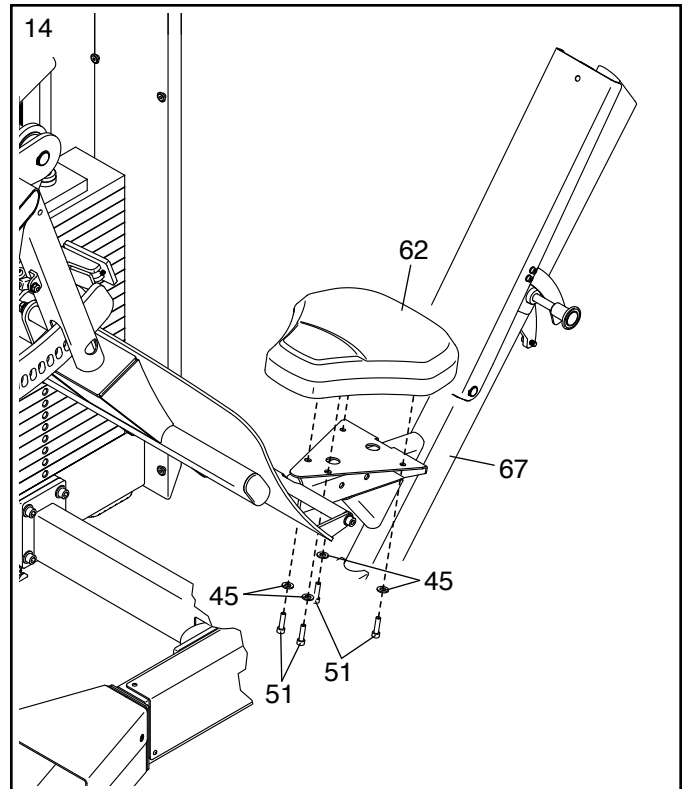


15. Identify the Left and Right Handlebars (50, 53), and orient them as shown.

Attach the Left and Right Handlebars (50, 53) to the Main Frame (67) with two M10 x 75mm Bolts (80), four M10 Washers (43), and two M10 Locknuts (42).

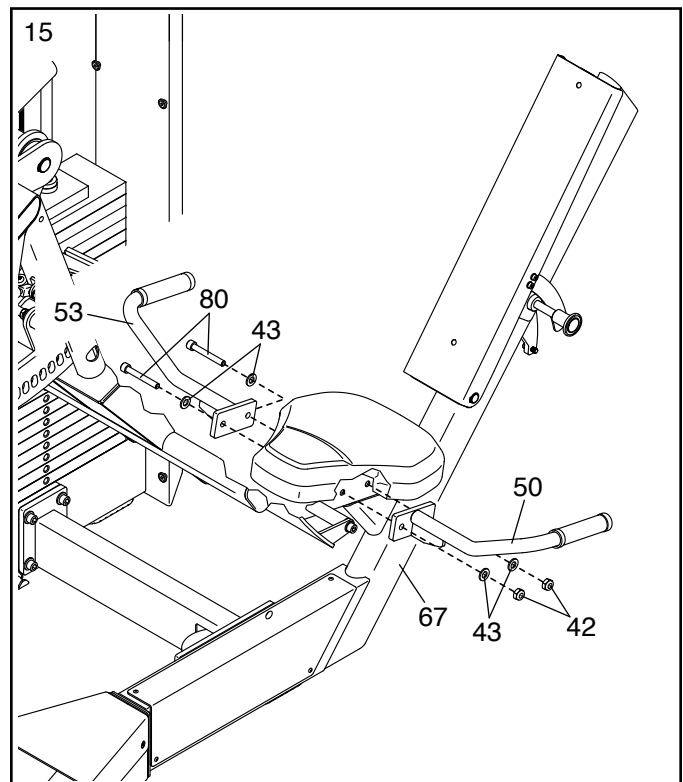


16. Attach the Backrest (61) to the Backrest Frame (47) with two M8 x 35mm Screws (77).

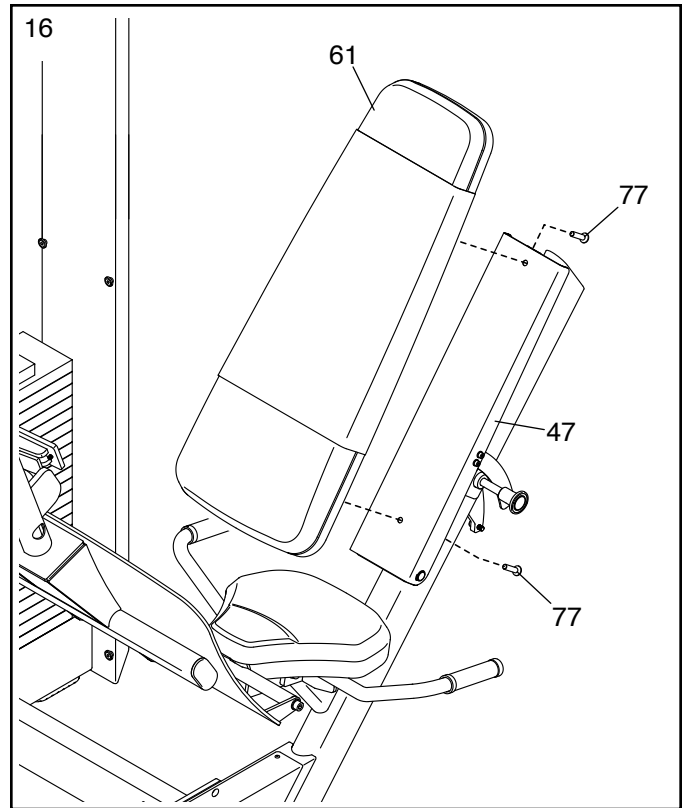

17. Identify the Rear Cover (6).


Attach a Cover Bracket (66) to each side of the Rear Cover (6) with two M5 x 10mm Screws (75) as shown.

Attach the other two Cover Brackets (66) to the Front Cover (5) in the same way.

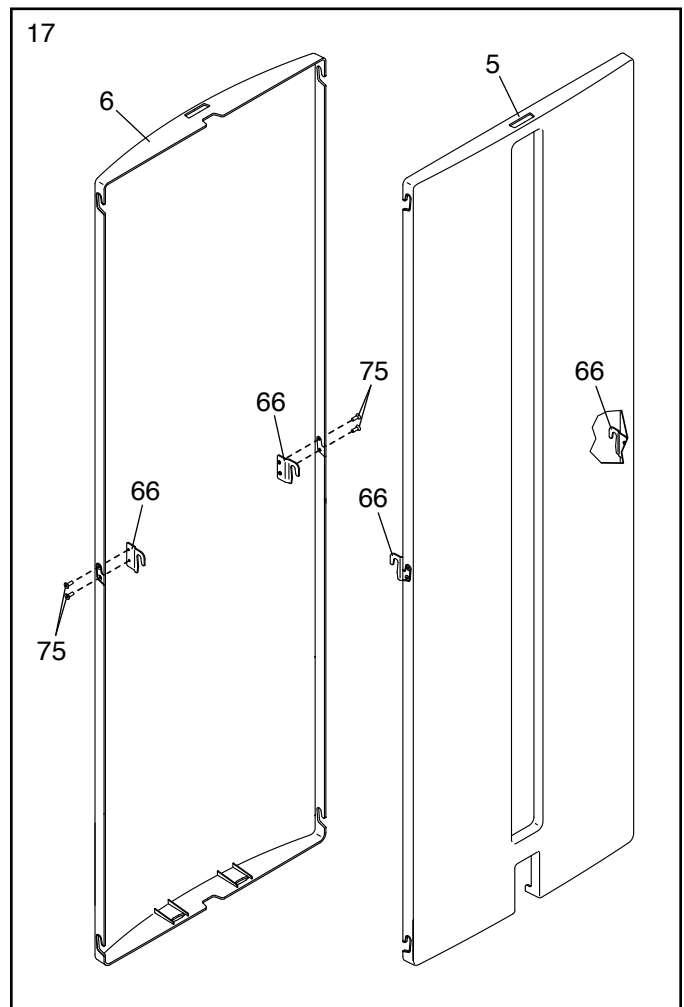

18. Hook the Front Cover (5) onto the indicated six Cover Mounts (32) on the Tower Frame (1).


Attach the Rear Cover (6) to the Tower Frame (1) in the same way.

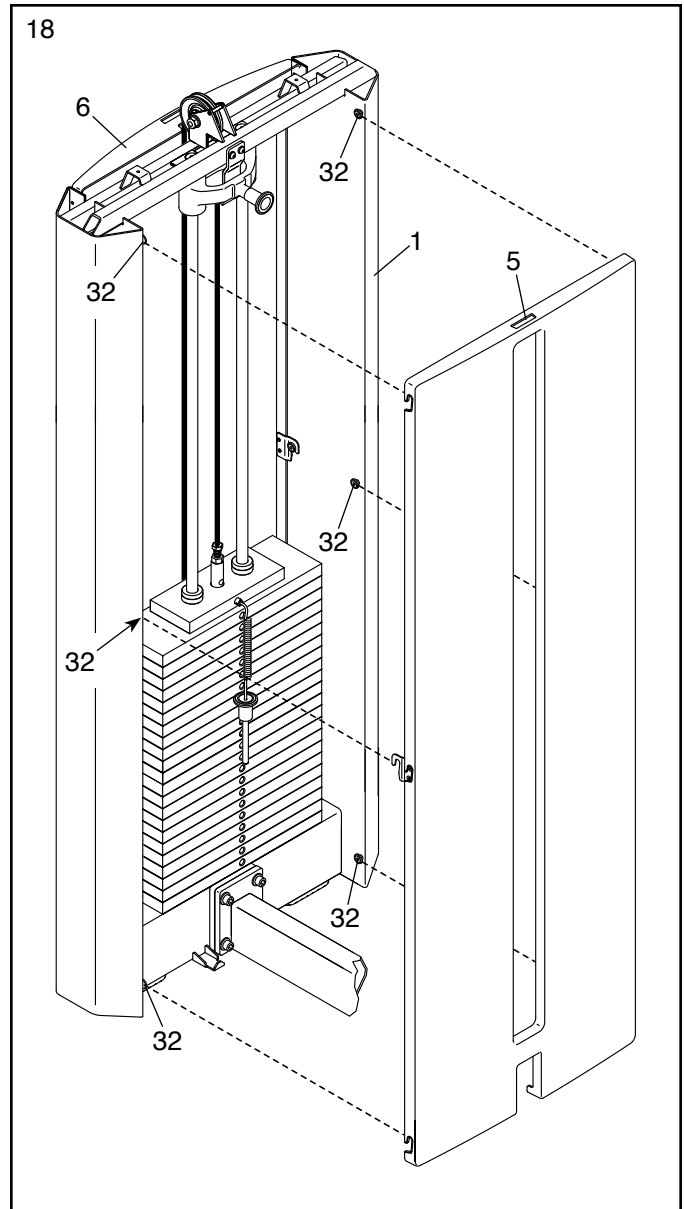

19. Remove the Right and Left Trays (3, 4) from the Tower Cap (2).

Next, orient the Tower Cap (2) as shown and attach it to the Tower Frame (1) with two M6 x 12mm Screws (36) and two M6 Washers (46).

Then, Insert the Right and Left Trays (3, 4) into the Tower Cap (2).

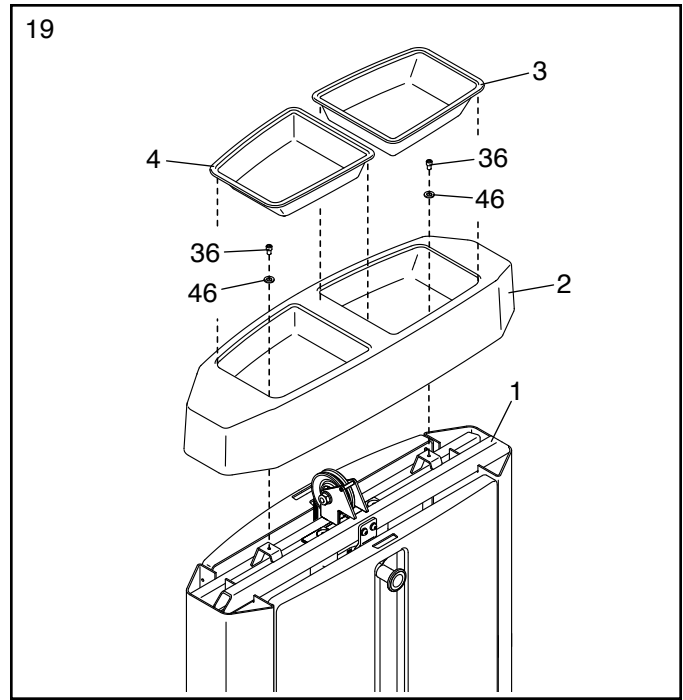

20. **Make sure that all parts of the strength equipment are properly tightened.** To protect the floor or carpet from damage, place a mat under the strength equipment.

ADJUSTMENT


This section explains how to adjust the strength equipment. **Make sure that all parts are properly tightened each time the strength equipment is used.** Replace any worn parts immediately.

ADJUSTING THE RESISTANCE

To change the amount of resistance, insert the weight pin (A) into the desired weight (B). **Make sure that the weight pin is fully inserted.** Note: To use only the top weight, insert the weight pin into the hole in the weight selector (C) above the small weight.

To add 5 lbs. (2.25 kg) of resistance, pull the indicated knob (D) and lower the drop-down weight (E) onto the weight stack.


When you are not using the drop-down weight (E), slide it upward and engage the knob (D) into the latch bracket (F). **Move the drop-down weight upward and downward slightly to make sure that the knob is engaged in the latch bracket.**

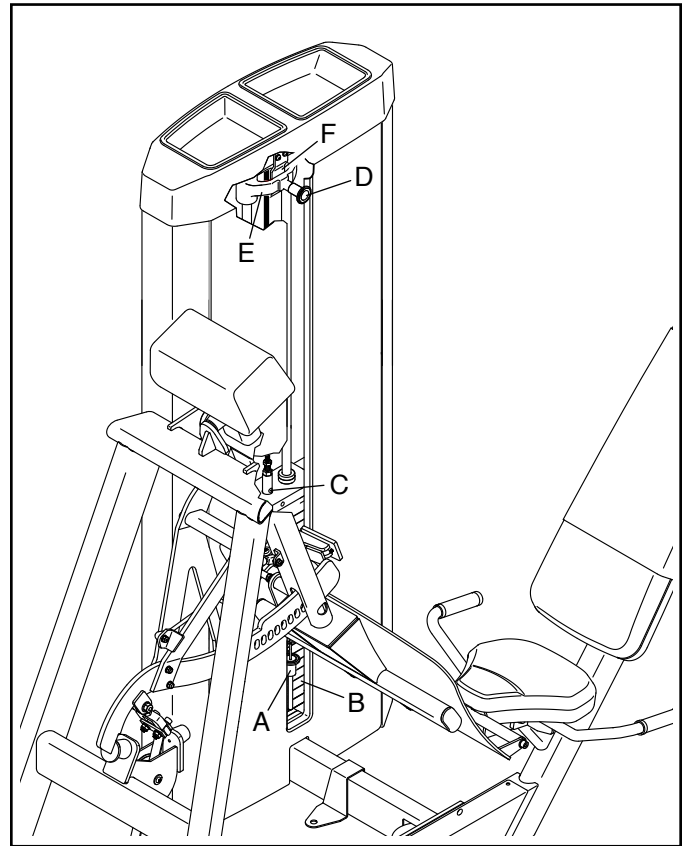

ADJUSTING THE FOOT PLATE

To move the starting position of the foot plate (G) toward the seat, simply pull the handle (H) on the bottom of the foot plate.


To move the starting position of the foot plate (G) away from the seat, press the foot pedal (I), push the foot plate to the desired position, and then release the foot pedal.

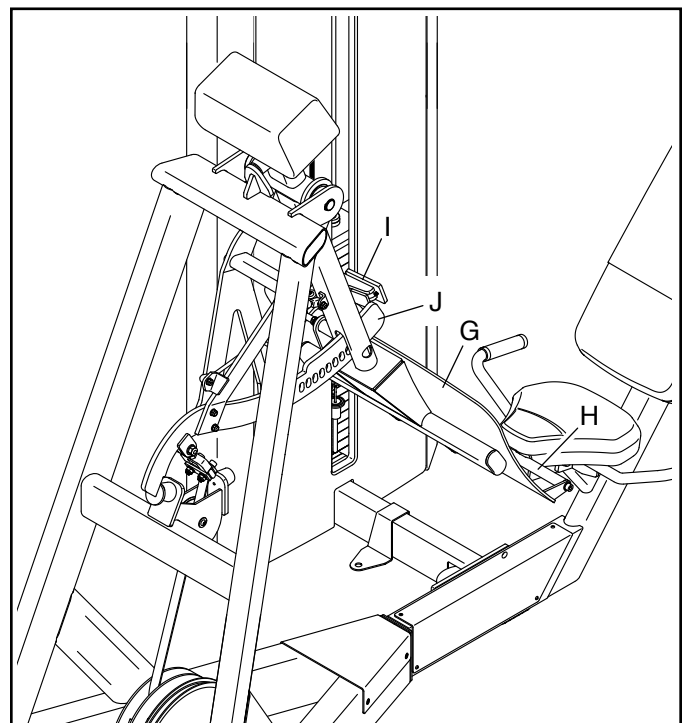

⚠ WARNING: Make sure that the foot plate pin (not shown) is fully engaged in the selector bracket (J) before you use the foot plate (G).

ADJUSTING THE BACKREST

To adjust the angle of the backrest (K), pull the backrest knob (L) and pivot the top of the backrest to the desired position. Then, reengage the backrest knob. **Move the backrest forward and backward slightly to make sure that the knob is engaged in the backrest adjustment bracket (not shown).**

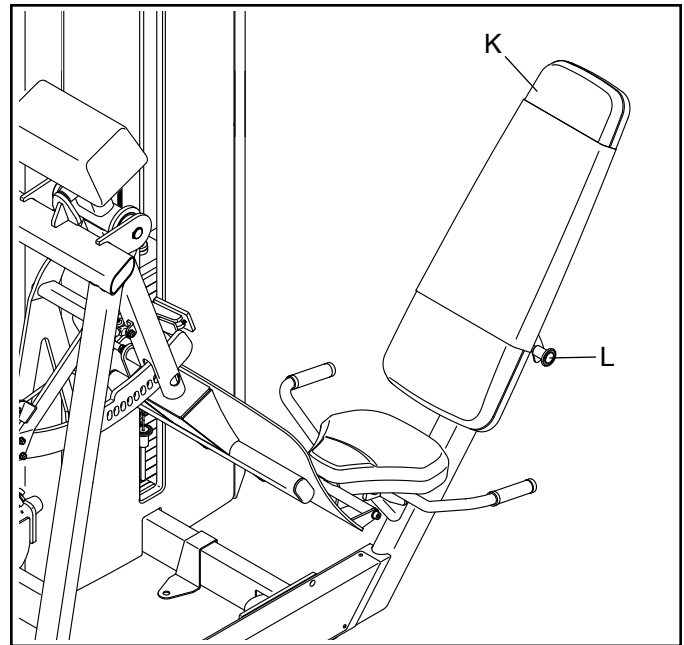

MAINTENANCE AND TROUBLESHOOTING

For optimal performance of the strength equipment and to reduce the chances of injury to users, you must perform preventive maintenance on a regular basis. Instruct all personnel to perform the procedures described in this section. Personnel must also record and report any accident. To maintain the strength equipment's warranty, use only FREEMOTION parts for repair or replacement. If there are any questions or concerns, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

DAILY MAINTENANCE

General Cleaning

Clean the strength equipment using a soft cloth dampened with mild soap and warm water. If necessary, use a soft bristle brush with the cleaning solution.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

Difficult Stains

Spray the stain with a non-abrasive household cleaner such as FORMULA 409®, SIMPLE GREEN®, or a similar product. Rub the stained area gently, and then let the cleaning solution sit for a few minutes.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

If necessary, repeat these steps using a soft bristle brush.

Optional Method for Difficult Stains

Rub the stained area gently using a soft cloth dampened with rubbing alcohol.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

CAUTION: Follow the directions and the safety precautions of the manufacturer of each cleaning product used. Freemotion Fitness and its vendors cannot be held liable for injuries or damage resulting from the use or misuse of cleaning products. **IMPORTANT:** When using any cleaning product, try it first in an unnoticeable place to ensure that there is no damage to the material. Do not use abrasive cleaners; strong cleaners; or solvents such as lacquer thinner, kerosene, gasoline, or similar liquids. Such substances may scratch the strength equipment, damage plastic parts and decals, or cause other damage.

WEEKLY MAINTENANCE


Hardware

Check all nuts, bolts, and screws, and tighten them if necessary. **IMPORTANT:** All cushions have dense plywood supports with tee-nuts that are used to attach the cushions to the strength equipment. Because the tee-nuts are held by the plywood, they will not withstand the torque that standard nuts will. When tightening the bolts or screws securing a cushion, turn them only until they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future. Note: Your strength equipment may not have cushions.

Cable Inspection

Check the entire length of the cable by slowly performing one repetition on the strength equipment. Inspect the cable on the exterior of the strength equipment and the cable on the interior. Run your fingers along the cable, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn cable that should be replaced.

- A. a torn or split sheath that exposes the cable
- B. a kinked or severely bent cable
- C. a curled or twisted sheath
- D. a stretched sheath with a thinning cross-section

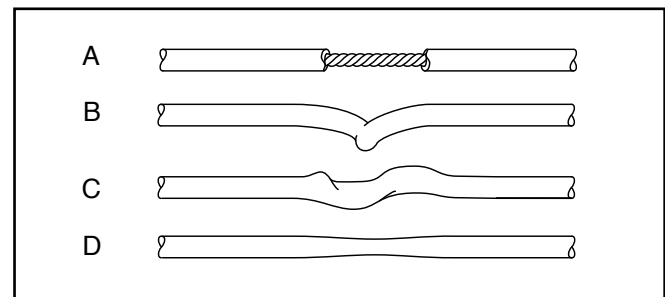


Cable Adjustment

To determine whether the cable is properly adjusted, slowly raise and lower the top weight by performing one repetition.

If the cable is loose, the top weight will not be lifted immediately when you begin the repetition.


If the cable is too tight, the top weight will not rest on the weight beneath it when you complete the repetition. It may also be difficult to insert the weight pin into the weights.

If the cable (A) is too loose or too tight, loosen the jam nut (B) on the end of the cable attached to the weight selector (C). Next, tighten the end of the cable into the weight selector until the top weight (D) is lifted off the weight beneath it. Next, loosen the end of the cable until the top weight just rests on the weight selector. Then, tighten the jam nut against the weight selector.

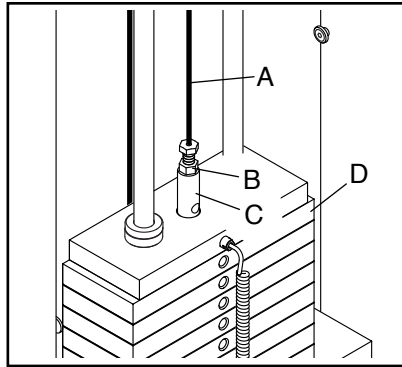

Cable Trap Inspection


Check the cable traps (E) to make sure that they are not rubbing (F) against the cable and that they are holding the cable in the grooves of the pulleys. If a cable trap is not correctly aligned, loosen the nut, readjust the cable trap as necessary, and retighten the nut.

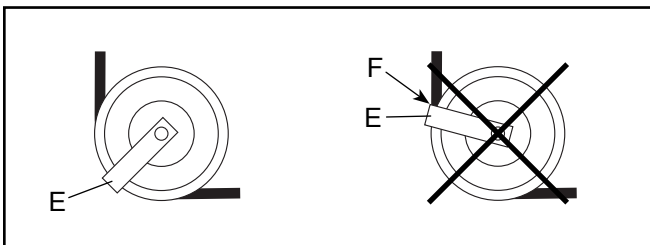

Belt Inspection

Run your fingers along the belt, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn belt in need of replacement.

- A. peeling surface
- B. stretched areas, showing a thinning cross-section
- C. waves
- D. cracks or splits
- E. strands hanging out or significant fraying

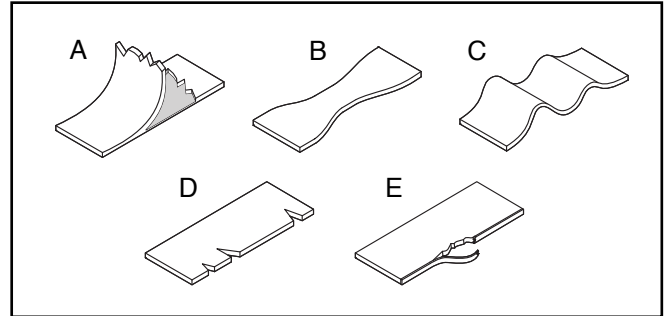

MONTHLY MAINTENANCE

Grips


Check the grips and replace them if needed.

Weight Guide Lubrication

Clean and lubricate each weight guide by wiping it with a soft cloth containing 10W-40 or 10W-30 lightweight motor oil. Apply only a light coating over the entire length of the weight guide. **Do not use TEFLON®-based lubricants.**


BELT REPLACEMENT

If it becomes necessary to replace the belt (G), torque the indicated bolts (H) to 40 ft-lbs. (54.2 N-m).

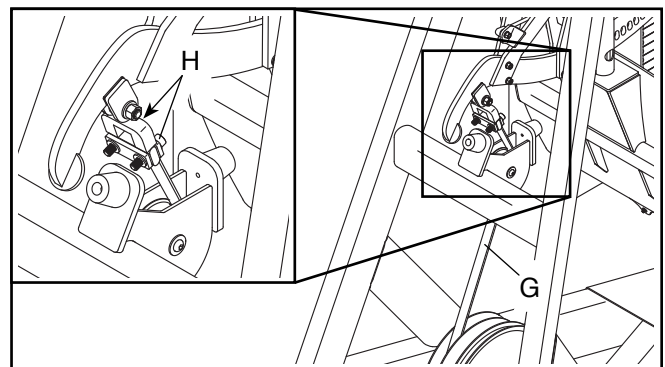

CABLE DIAGRAM

The numbered diagram at the right shows the correct route of the cable. Use the diagram to make sure that the cable is correctly routed. **If the cable is not correctly routed, the strength equipment will not function properly and damage may occur.**

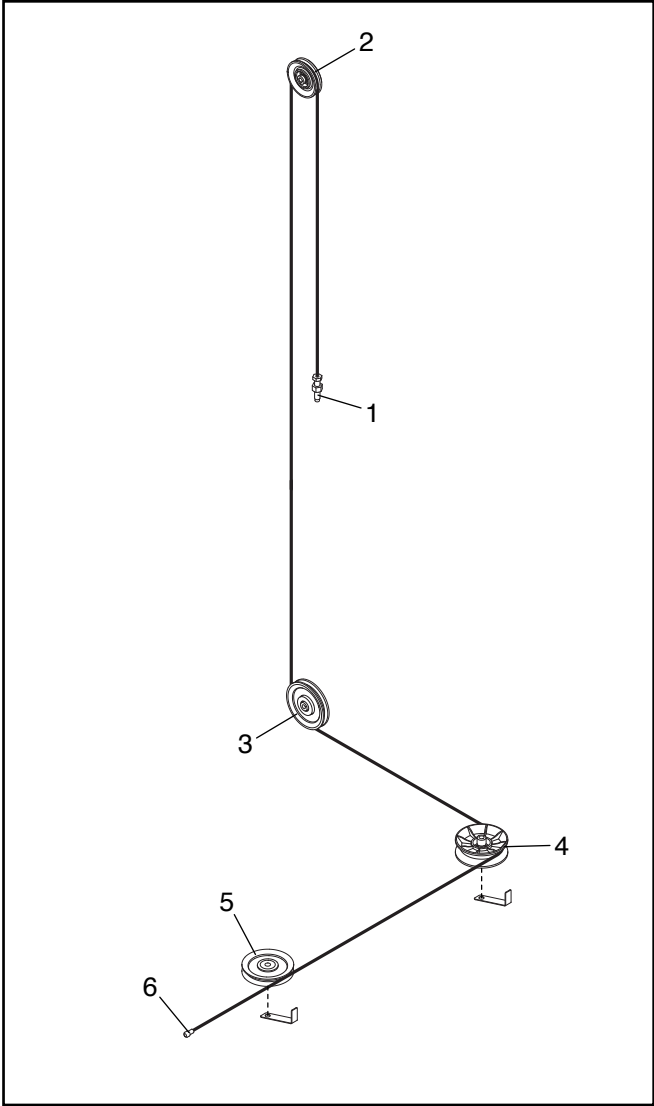

PART LIST

Model No. ES804.0 R1019A


Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Tower Frame	51	4	M8 x 30mm Screw
2	1	Tower Cap	52	1	M10 x 70mm Bolt
3	1	Right Tray	53	1	Right Handlebar
4	1	Left Tray	54	2	Handgrip Collar
5	1	Front Cover	55	2	Handgrip Cap
6	1	Rear Cover	56	4	Plastic Washer
7	1	Connecting Frame	57	2	Handgrip
8	22	20-pound Weight	58	1	Cam
9	1	Small Weight	59	4	Large Bumper
10	1	Drop-down Weight	60	1	Belt Pulley
11	1	Weight Selector	61	1	Backrest
12	1	Weight Pin	62	1	Seat
13	2	Lower Weight Bumper	63	5	M6 x 25mm Screw
14	2	Weight Guide Cap	64	4	Bearing
15	1	Large Roll Pin	65	4	M4 x 3mm Set Screw
16	2	Upper Weight Bumper	66	4	Cover Bracket
17	4	Copper Bushing	67	1	Main Frame
18	2	Weight Guide Bushing	68	1	Backrest Axle
19	2	M8 x 20mm Set Screw	69	3	Oval Cap
20	1	Drop-down Weight Knob	70	1	Backrest Adjustment Bracket
21	1	Drop-down Weight Spring	71	1	Indicator
22	1	Drop-down Weight Pin	72	1	Foot Plate
23	1	Small Pulley	73	2	E-clip
24	2	Large Pulley	74	1	Anchor Strap
25	5	Foot	75	8	M5 x 10mm Screw
26	1	Latch Bracket	76	–	(Not Used)
27	1	Pulley Bracket	77	2	M8 x 35mm Screw
28	1	V-pulley	78	1	M12 x 45mm Bolt
29	4	Medium Snap Ring	79	1	Selector Bracket
30	2	Weight Guide	80	2	M10 x 75mm Bolt
31	1	Cable	81	6	M6 x 20mm Bolt
32	12	Cover Mount	82	2	M8 x 35mm Bolt
33	2	Small Snap Ring	83	1	M8 x 20mm Screw
34	20	M6 x 16mm Flat Head Screw	84	2	M10 x 45mm Bolt
35	2	M6 x 16mm Screw	85	1	Backrest Pin Spring
36	2	M6 x 12mm Screw	86	1	Foot Plate Pin Spring
37	4	Large Snap Ring	87	1	Backrest Adjustment Pin
38	3	M10 x 50mm Bolt	88	1	Foot Plate Adjustment Pin
39	16	M10 x 30mm Screw	89	4	M10 x 35mm Screw
40	1	Backrest Knob	90	1	Backrest Bumper
41	1	Wear Cover	91	1	Pulley Axle
42	8	M10 Locknut	92	4	M8 x 16mm Screw
43	38	M10 Washer	93	4	M8 Large Washer
44	10	M8 x 25mm Screw	94	1	Pulley Bushing
45	30	M8 Washer	95	1	Top Weight
46	14	M6 Washer	96	9	M8 Locknut
47	1	Backrest Frame	97	3	M6 Nut
48	1	Cam Axle	98	2	Cable Trap
49	1	Foot Plate Axle	99	2	Backrest Bracket Bushing
50	1	Left Handlebar	100	1	Backrest Cover

Key No.	Qty.	Description	Key No.	Qty.	Description
101	2	Small Roll Pin	115	2	Foot Pedal Bushing
102	1	Belt Bracket Ball Joint	116	1	Left Brace
103	2	M12 Washer	117	1	Right Brace
104	1	M12 Locknut	118	2	M10 x 20mm Screw
105	1	M12 Nut	119	1	Foot Plate Handle
106	1	Belt Bracket	120	1	Handle Spacer
107	2	Small Belt Clamp	121	1	M6 x 65mm Bolt
108	1	Large Belt Clamp	122	1	Gas Spring
109	1	Belt	123	1	Brace Tube
110	1	Belt Pin	124	1	Foot Pedal Plate
111	1	Counterweight	125	1	Foot Pedal Axle
112	1	Foot Pedal Ball Joint	126	1	Small Bumper
113	1	Foot Pedal	*	–	Owner's Manual
114	5	M8 x 45mm Bolt			

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. *These parts are not illustrated.


EXPLODED DRAWING A

Model No. ES804.0 R1019A

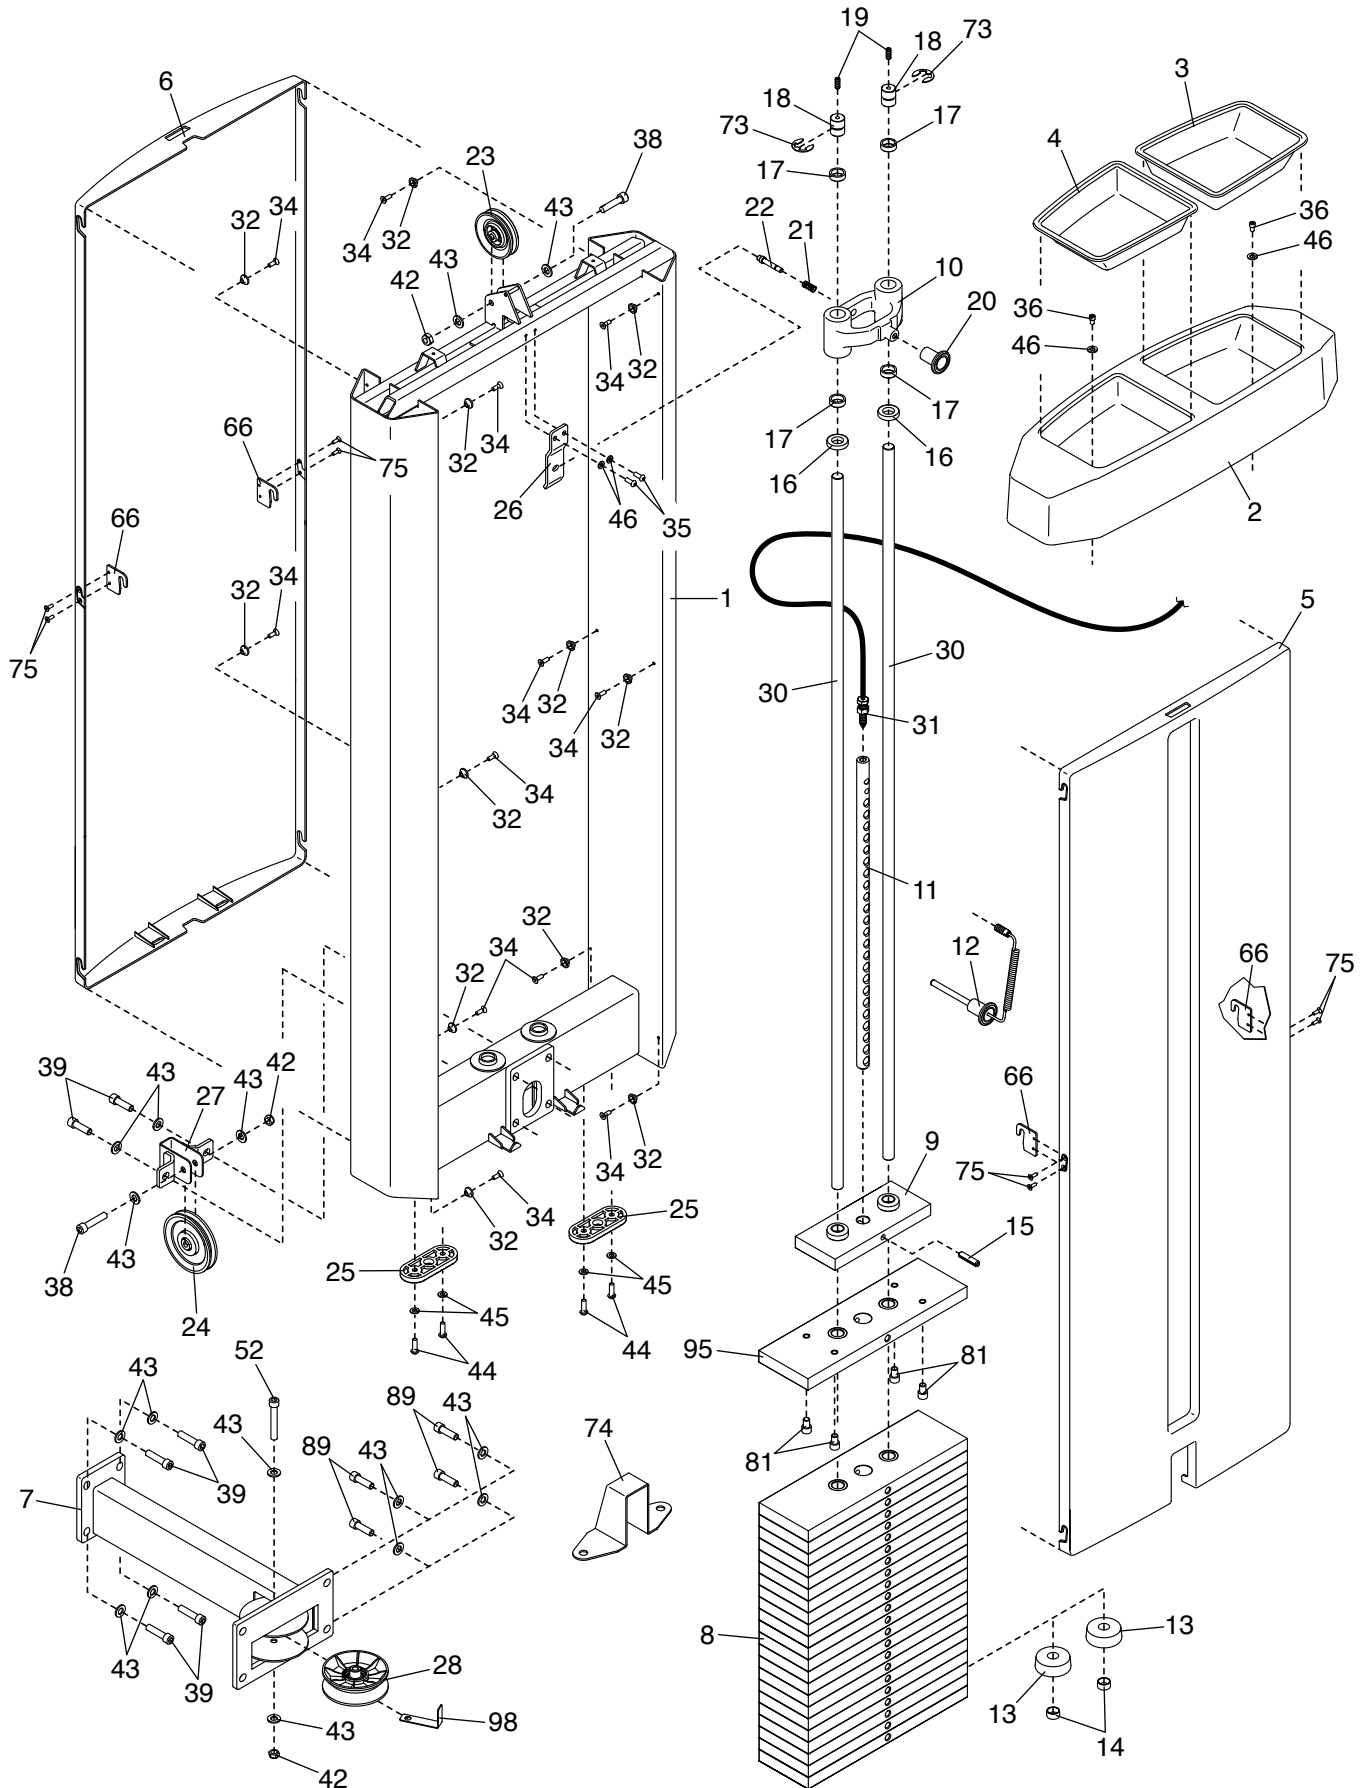


EXPLODED DRAWING B

Model No. ES804.0 R1019A

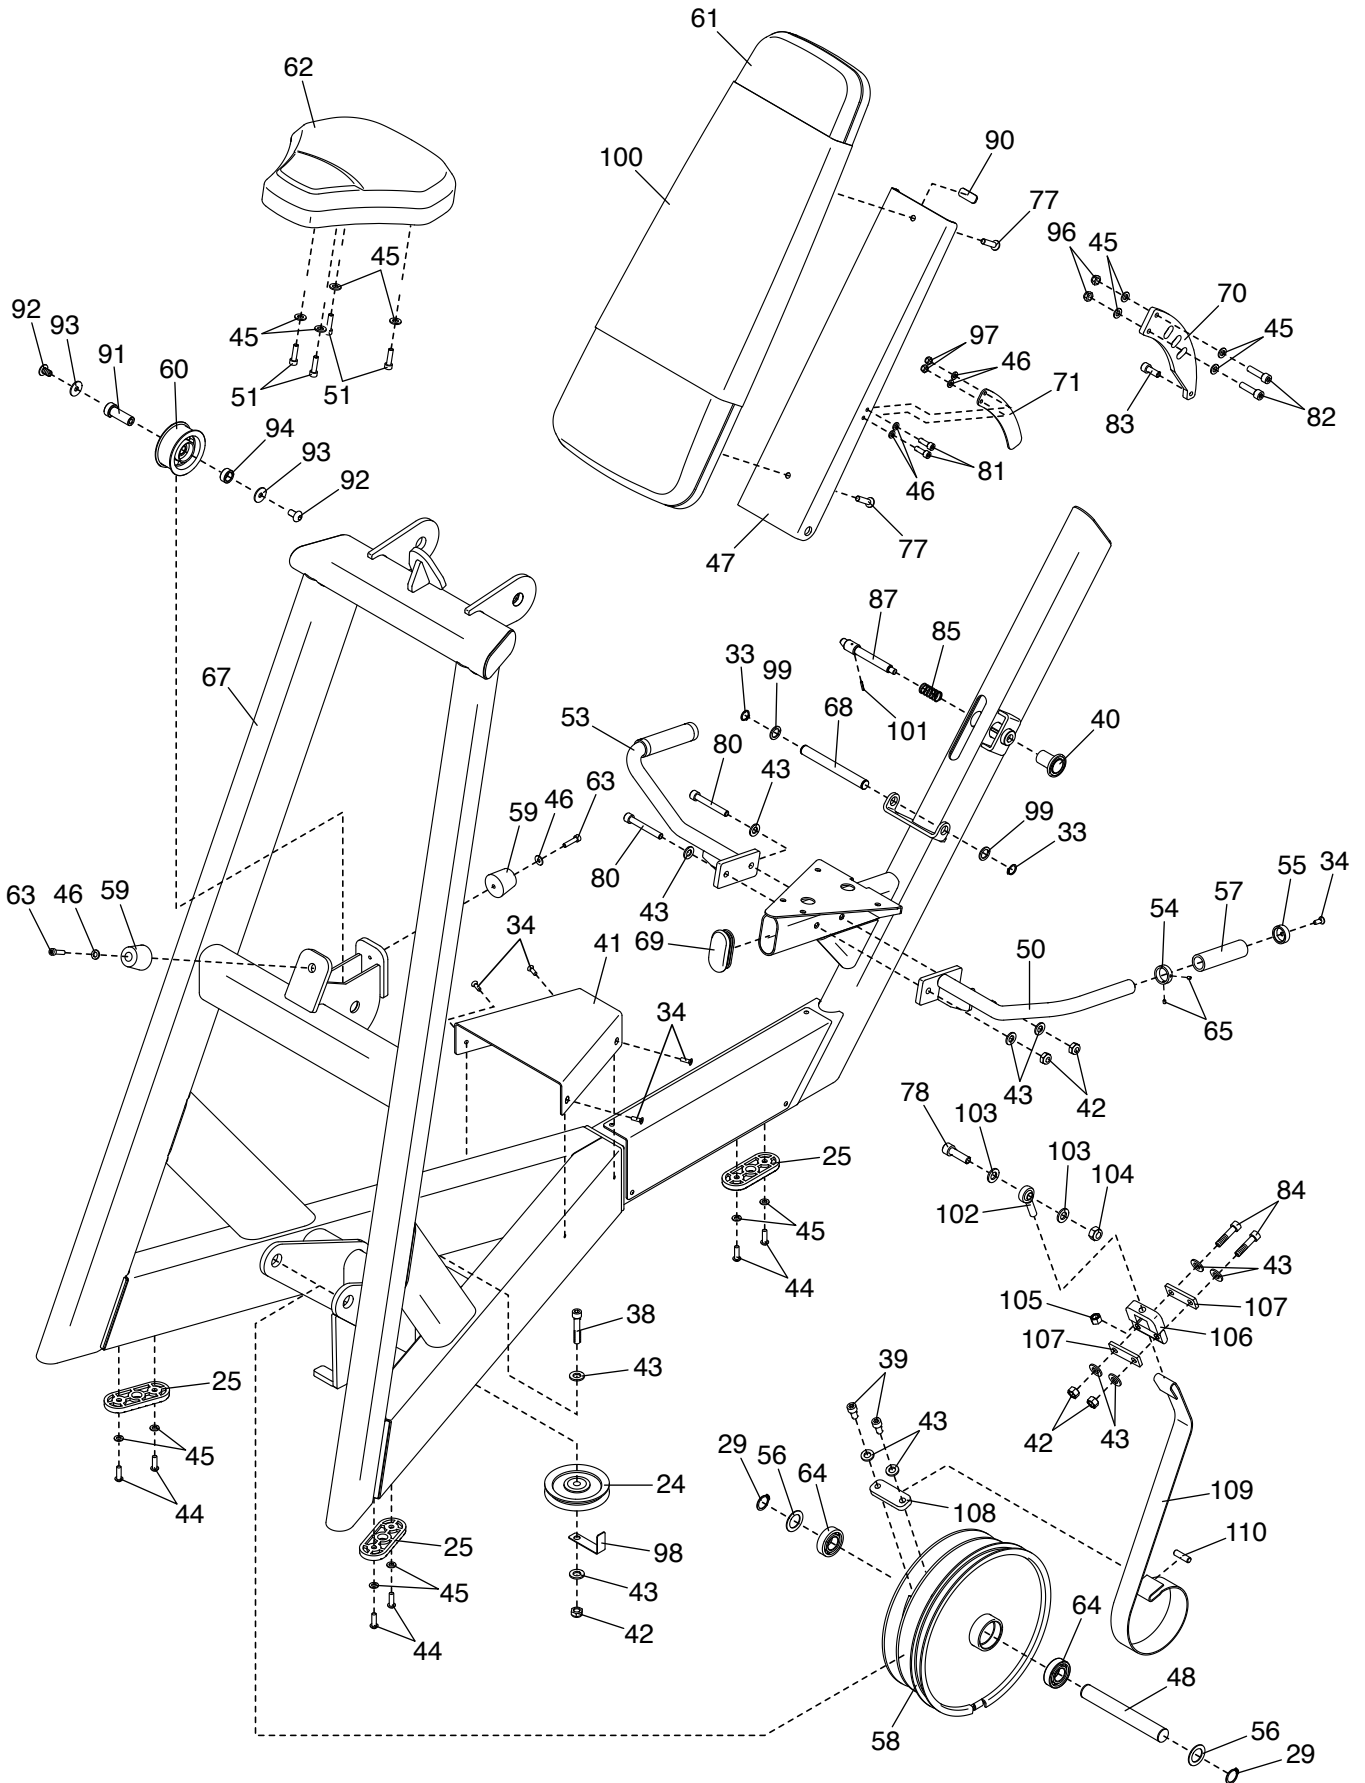

EXPLODED DRAWING C

Model No. ES804.0 R1019A

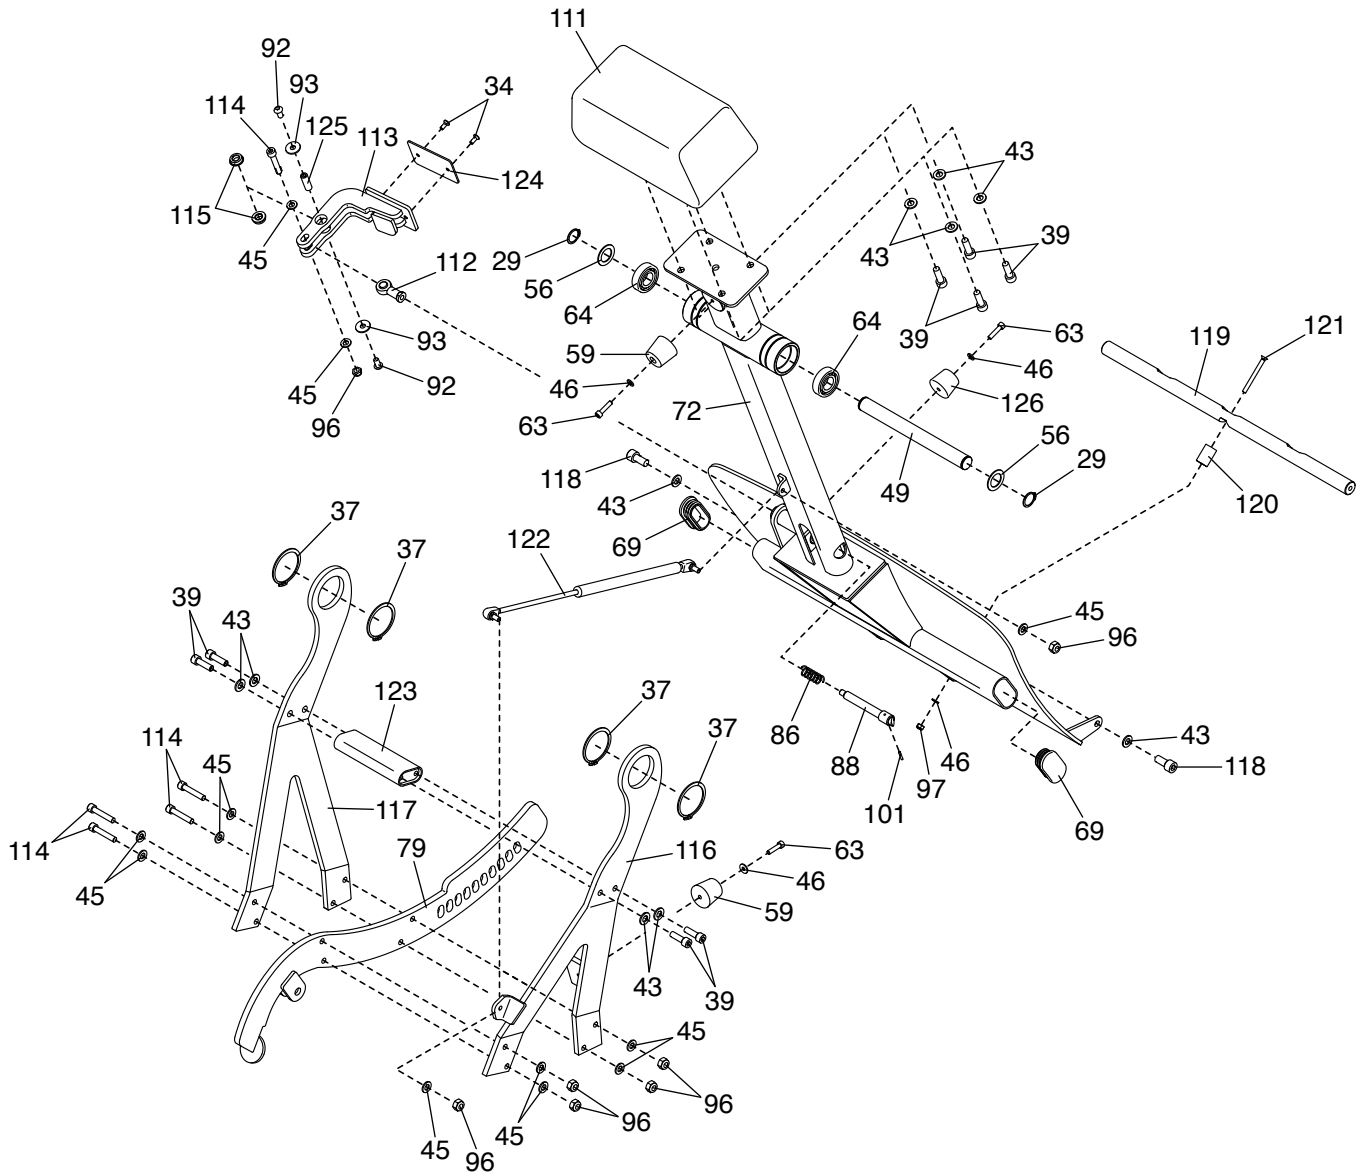

HOW TO CONTACT CUSTOMER CARE

If you have questions after reading this manual, or if parts are damaged or missing, please contact Customer Care at one of the phone numbers or addresses listed below. **Please note the model number, serial number, and name of the product (see the front cover of this manual) before contacting Customer Care. If you are ordering replacement parts, please also note the key number and description of each part (see the PART LIST and the EXPLODED DRAWING near the end of this manual).**

In the United States

Call: 1-800-201-2109, Mon.–Fri. 6 a.m.–6 p.m. MT

Email: customercare@freemotionfitness.com

Write:

Freemotion Fitness
1500 South 1000 West
Logan, UT 84321-9813
United States

Outside the United States

Call: 001-800-527-5417 or 001-435-786-3521,

Mon.–Fri. 6 a.m.–3 p.m. USA Mountain Time

Email: intlcustomercare@freemotionfitness.com

LIMITED WARRANTY

WARRANTY PERIODS AND COVERAGE

Freemotion Fitness warrants this product to be free from defects in workmanship and material under normal use and service conditions. Parts and labor are warranted for one (1) year, unless otherwise specified on the invoice.

The warranty period commences on the invoice date of purchase. Any parts repaired or replaced during this warranty period will be warranted for the remainder of the original warranty period.

CONDITIONS AND LIMITATIONS

The following will void the warranty on this product:

1. This warranty applies only to the original owner and is non-transferable.
2. The labor warranty applies only to products sold in the US and Canada. Contact your authorized Freemotion Fitness dealer for details on labor coverage in your country.
3. Any misuse, abuse, or improper service.
4. Users in excess of the maximum user weight listed in this manual. Note: This product may not have a maximum user weight.
5. Damage caused by moving the product or improper storage including moving or storing the product on its side.
6. Use or storage of the product outdoors or in high-humidity environments including spa and pool areas.
7. Damage caused by improper wiring or insufficient electrical current. Note: This product may not have wiring.

This warranty shall not apply to the following:

1. Cosmetic items including grips, decals, and labels.

2. Pick-up and delivery or freight charges involved with a repair.
3. Any problem as a result of improper assembly or delivery.

WHAT TO DO IF SERVICE IS REQUIRED

Freemotion Fitness warranty service may be obtained by contacting the authorized dealer from which you purchased this product. Make sure to retain your original invoice and serial number information. If this product experiences a failure under the warranty terms set forth, Freemotion Fitness shall provide at their option either repair, replacement, or refund of the purchase price. Freemotion Fitness compensates service providers for warranty trips within their service area. You may be charged additionally for service calls beyond this service area.

Freemotion Fitness is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or cost of removal or installation; or other consequential damages. Some regions do not allow the exclusion or limitation of consequential damages. Accordingly, the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights that vary from region to region.

TO CONTACT FREEMOTION FITNESS

See HOW TO CONTACT CUSTOMER CARE above.