




# User Manual

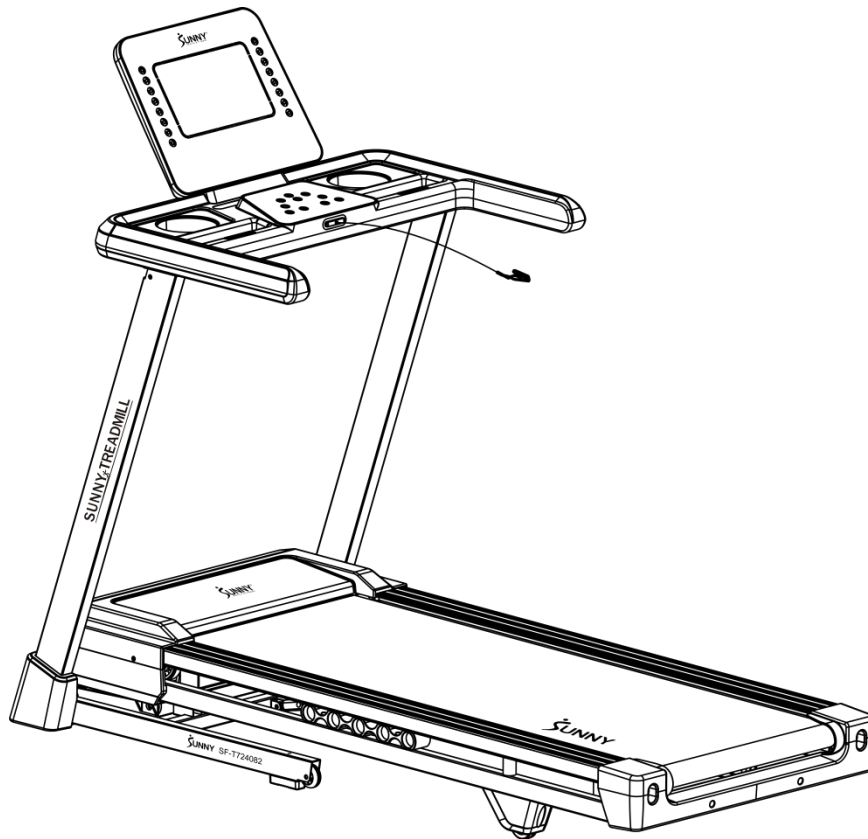

## Ultra T10 Smart Treadmill

**SF-T724082**

**EN**

**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US.**

## **Important Safety Information**

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance).

**DANGER** –To reduce the risk of electric shock:

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Please contact Customer Service at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com).
5. Do not carry this appliance by supply cord or use cord as a handle.
6. Keep the cord away from heated surfaces.
7. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
8. Never drop or insert any object into any opening.
9. Do not use outdoors. Household use only.
10. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
11. To disconnect, turn all controls to the off position, then remove plug from outlet.
12. CAUTION: Risk of Injury to Persons – To Avoid Injury, use extreme caution when stepping onto or off of a moving belt. Read Instruction Manual Before Using.
13. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
14. REMOVE CONTROL BOX (OR KEY, OR SAFETY PIN, AS APPLICABLE) WHEN NOT IN USE, AND STORE OUT OF REACH OF CHILDREN.
15. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

**SAVE THESE INSTRUCTIONS**

**Caution:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s) and Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **Important Safety Information**

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical condition that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure, or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 240cm (8 feet) of free space behind it and 60cm (2 feet) on each side. Do not place the treadmill on any surface that blocks air openings. To protect the floor or carpet from damage, place a mat under the treadmill.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 300 lbs (135 kg).
10. This equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving are required.
12. Your product is intended for use in cool and dry conditions. You should avoid storage in extreme cold, hot, or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only; it is not intended for commercial use!

## **Important Operating Information**

1. Insert the power plug directly into the socket.
2. Read the manual before operating the equipment.
3. Changes in speed do not occur immediately. Set your desired speed using the adjustment keys on the main console. The speed will increase gradually.
4. While on the treadmill, move with caution as distractions may cause you to lose balance and stray from walking in the center of the belt. This may result in serious injury.
5. This unit starts at a very low speed. To begin use, hold onto the handrails, and stand on the side rails while it starts up, then step onto the belt once it is in motion.
6. Always hold the handrail when making changes in the settings.
7. A safety key is provided for emergency use. The machine will function only if the safety key is inserted into the computer console. In case of emergency, remove the safety key to immediately stop the belt and shut off the treadmill. The display screen will reset once the safety key is reinserted.
8. The console control keys are precisely set and require very little finger pressure to use. To avoid damaging these keys, do not use excessive pressure when operating these controls.
9. This equipment is designed for adult use only! Children should not be allowed to use or play near this equipment. When present, children should always be supervised by an adult.
10. Women who are pregnant or nursing should consult a physician before attempting to begin any exercise program.
11. Always stay hydrated during and after exercise.



### **IMPORTANT NOTE:**

The running belt must be lubricated before the first use! Please see *Page 16* for instructions on how to properly apply lubricant.

## **Statement of Purpose**

The treadmill is a cardio workout machine that provides indoor running at various speeds.

## **Waste Disposal**



Sunny Health & Fitness products are recyclable. At the end of its useful life please dispose of this article correctly and safely (local refuse sites).

## **EU Declaration of Conformity**








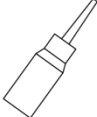
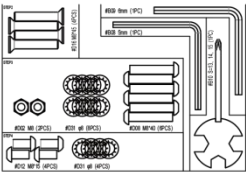

You can find the declaration of conformity at the following link:  
<https://sunnyhealthfitness.com/pages/declaration-of-conformity>

## **Technical Data**

Connectivity: Bluetooth LE  
Frequency Range: 2400-2483.5Mhz  
Transmitting Power: 0dBm

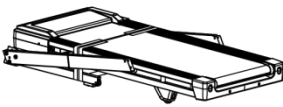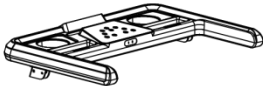
# Pre-Assembly Check List

When you open the carton, you will find the following parts:

 <p>A</p>	 <p>B</p>	 <p>C</p>	 <p>C04</p>
 <p>C05</p>	 <p>C17</p>	 <p>E19</p>	 <p>T01</p>
 <p>HP</p>	 <p>E</p>		

No.	Description	Spec.	Qty
A	Main Frame		1
B	Panel Connecting Bracket		1
C	Console Assembly		1
C04	Left Upright Tube Cover		1
C05	Right Upright Tube Cover		1
C17	Safety Key		1
E19	Power Wire		1
T01	Lubricant Oil		1
HP	Hardware Package		1
E	Manual		1

## Hardware Package

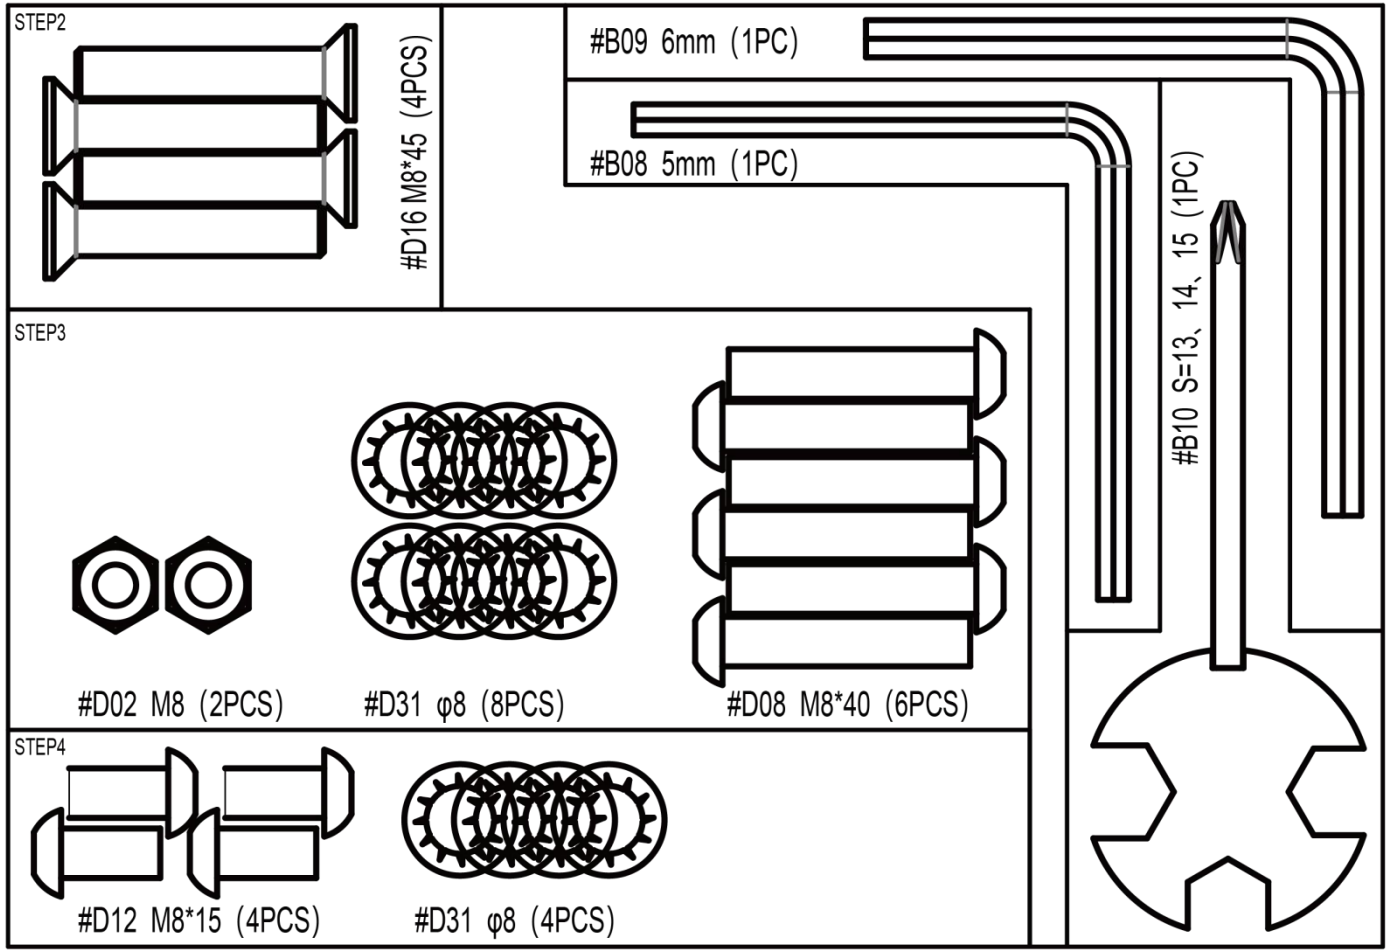

## Ordering Replacement Parts

Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number
- ✓ The product name
- ✓ The part number


Please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

# Warning Labels

## ⚠ CAUTION

Risk of injury to persons: To avoid injury, use extreme caution when stepping onto or off of a moving belt. Read instruction manual before using.  
To reduce risk of injury from moving parts-unplug before servicing.

Do not pinch the console cable during assembly!

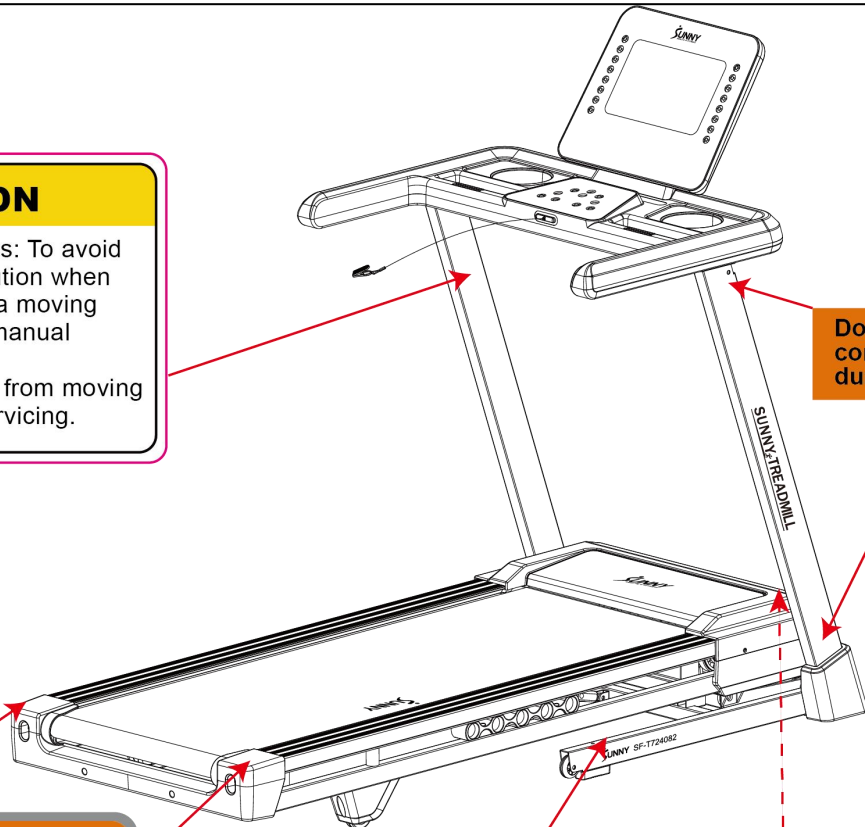

DO NOT PLACE YOUR HAND NEAR OR BETWEEN THE REAR END CAPS & REAR ROLLER!



DO NOT STAND ON THE REAR END CAPS! ALWAYS WEAR SHOES WHEN USING THE EQUIPMENT.

### RUNNING BELT ADJUSTMENT

← LOOSEN

TIGHTEN →

TO ADJUST RUNNING BELT USE ALLEN WRENCH

## ⚠ CAUTION

Keep hands and feet away from this area while treadmill is running.

## ⚠ WARNING

In order to ensure the safety of using the treadmill, please use the power cord with the appropriate socket.



## ⚠ WARNING

In order to ensure the safety of using the treadmill, please use the power cord with the appropriate socket.

## ⚠ CAUTION

Keep hands and feet away from this area while treadmill is running.

## ⚠ WARNING

Please read all warnings and instructions before using the machine.

Risk of personal injury-Keep children under the age 13 and pets away from the machine.

Remove control box (or key, or safety pin, as applicable) when not in use, and store out of reach of children.

To reduce the risk of electric shock-unplug before cleaning or servicing.

**300LBS/135KG Weight Capacity**

Failure to comply with these warnings could result in serious injury or death.

Make sure all nuts and bolts are securely tightened before each use.


Remove the safety wirerope before use



1. Open the carton to remove the equipment and place it on the ground. Do NOT lay the unit on its side!


2. Assemble the treadmill by following the manual instructions.

3. Remove the 2 Flat Round Head Bolt (No. D12), 2 Plastic Gasket (No. C19), and Safety Wirerope (No. 1) from the Base Assembly (No. A02) & the Main Frame (No. A01) using the Allen Wrench (No. B08).




# Assembly Instructions




## STEP 1

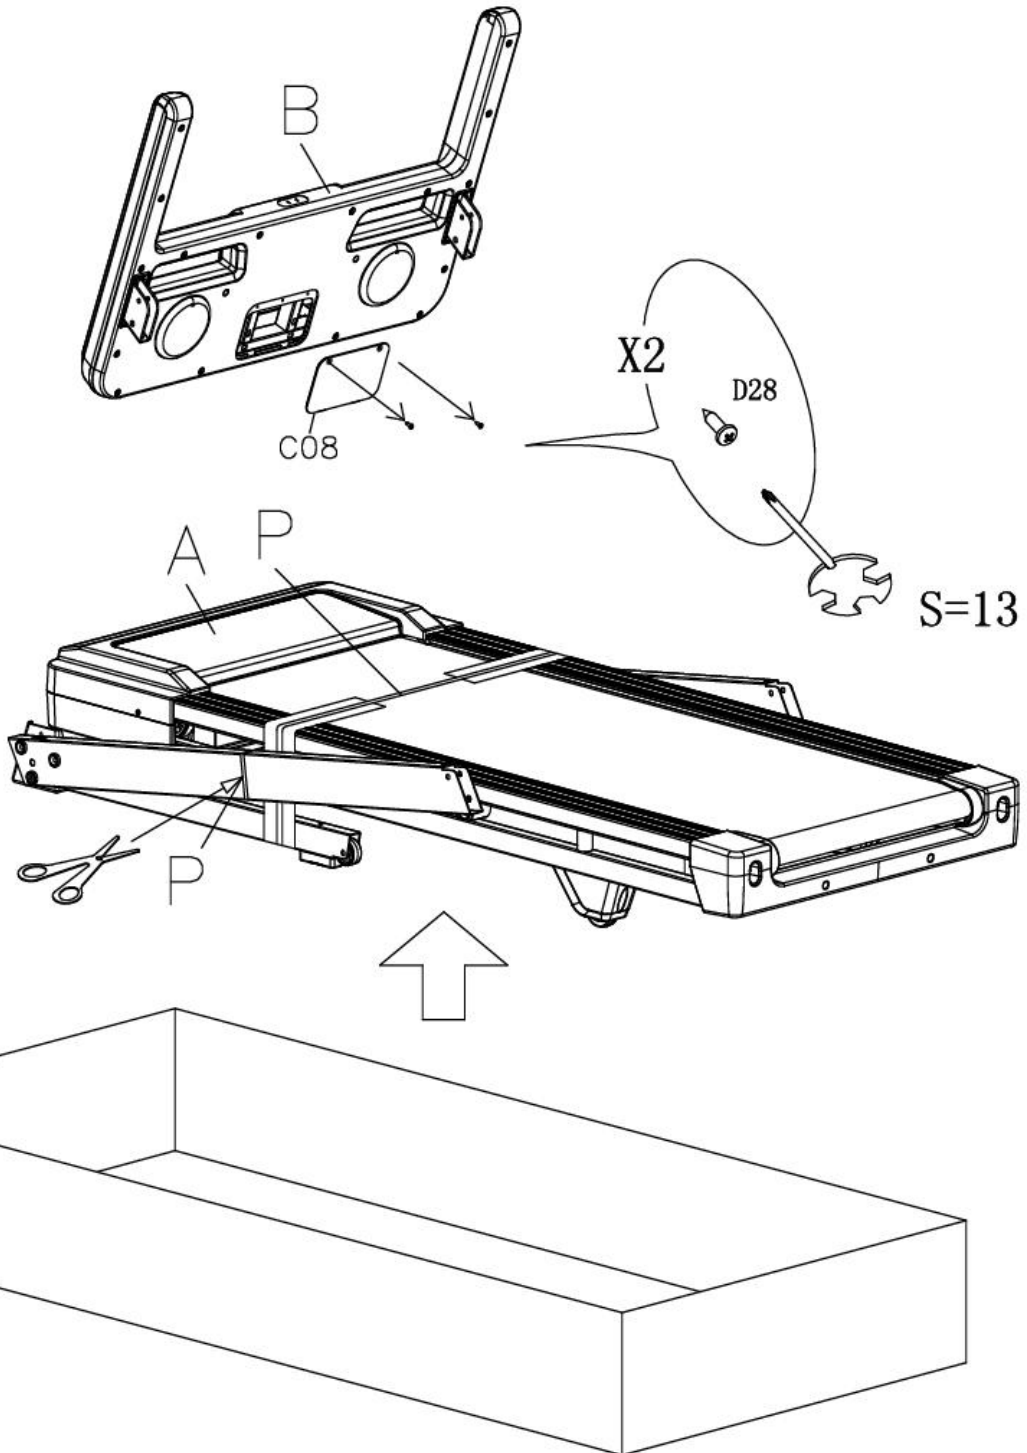


# STEP2

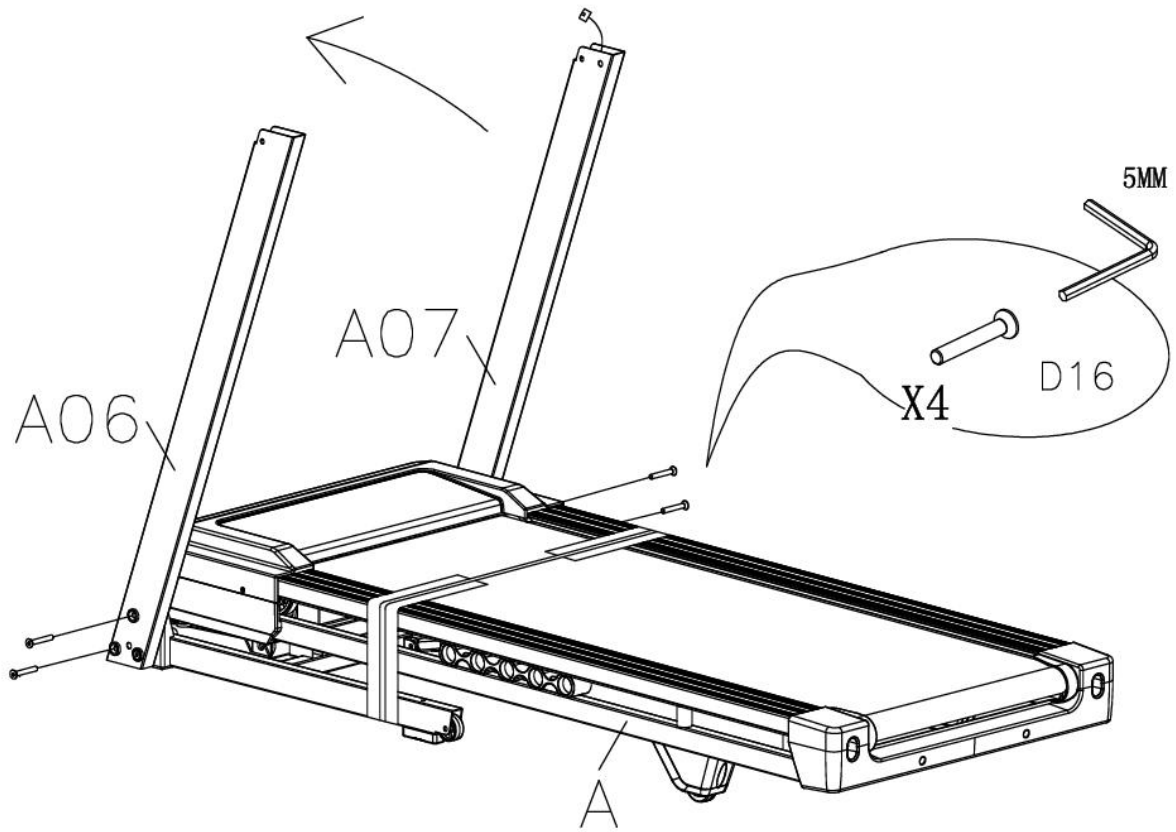



# STEP3

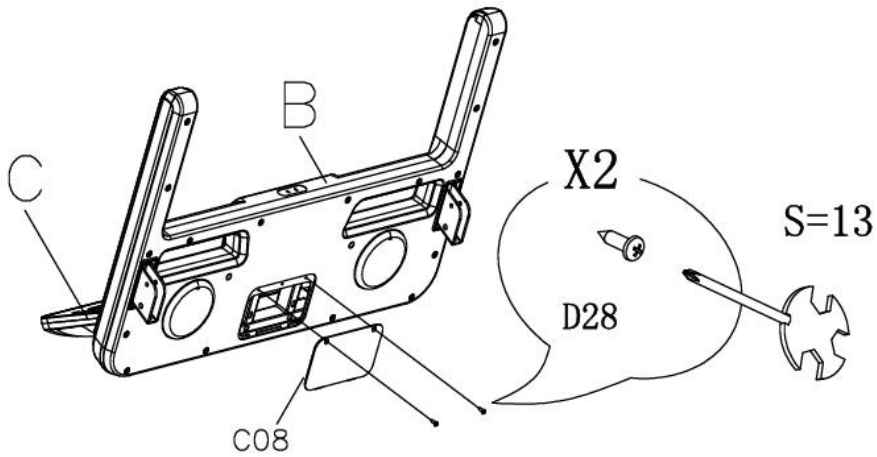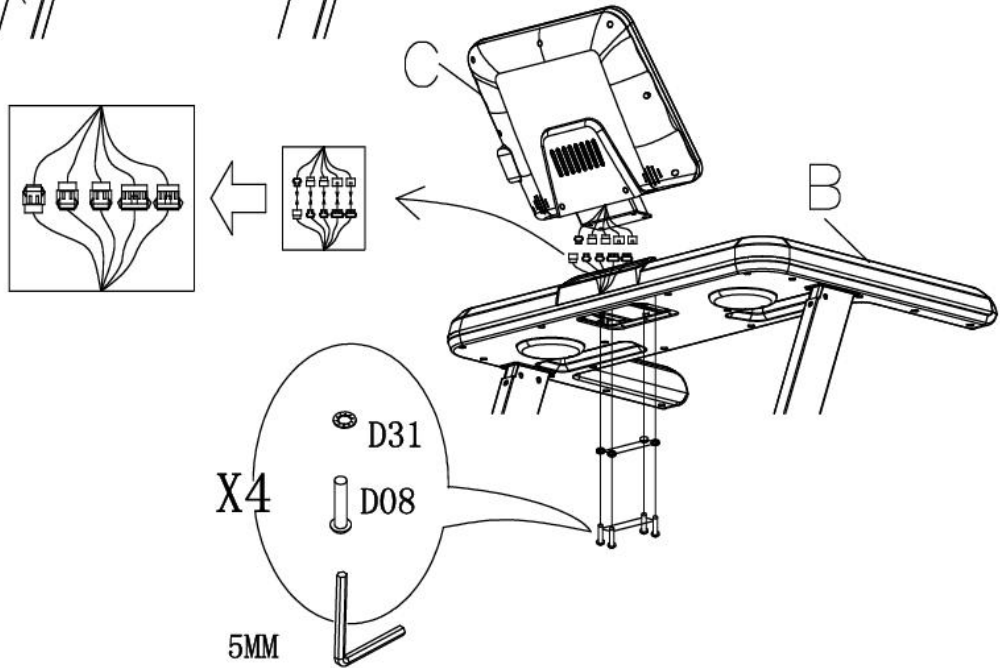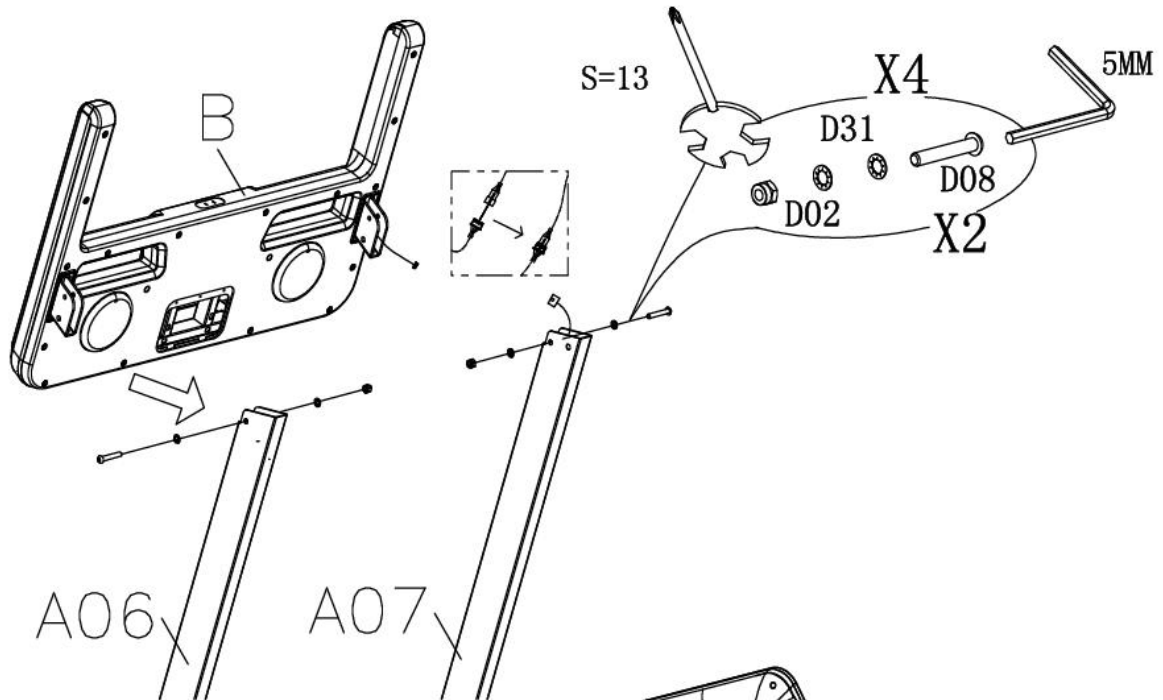

# STEP4

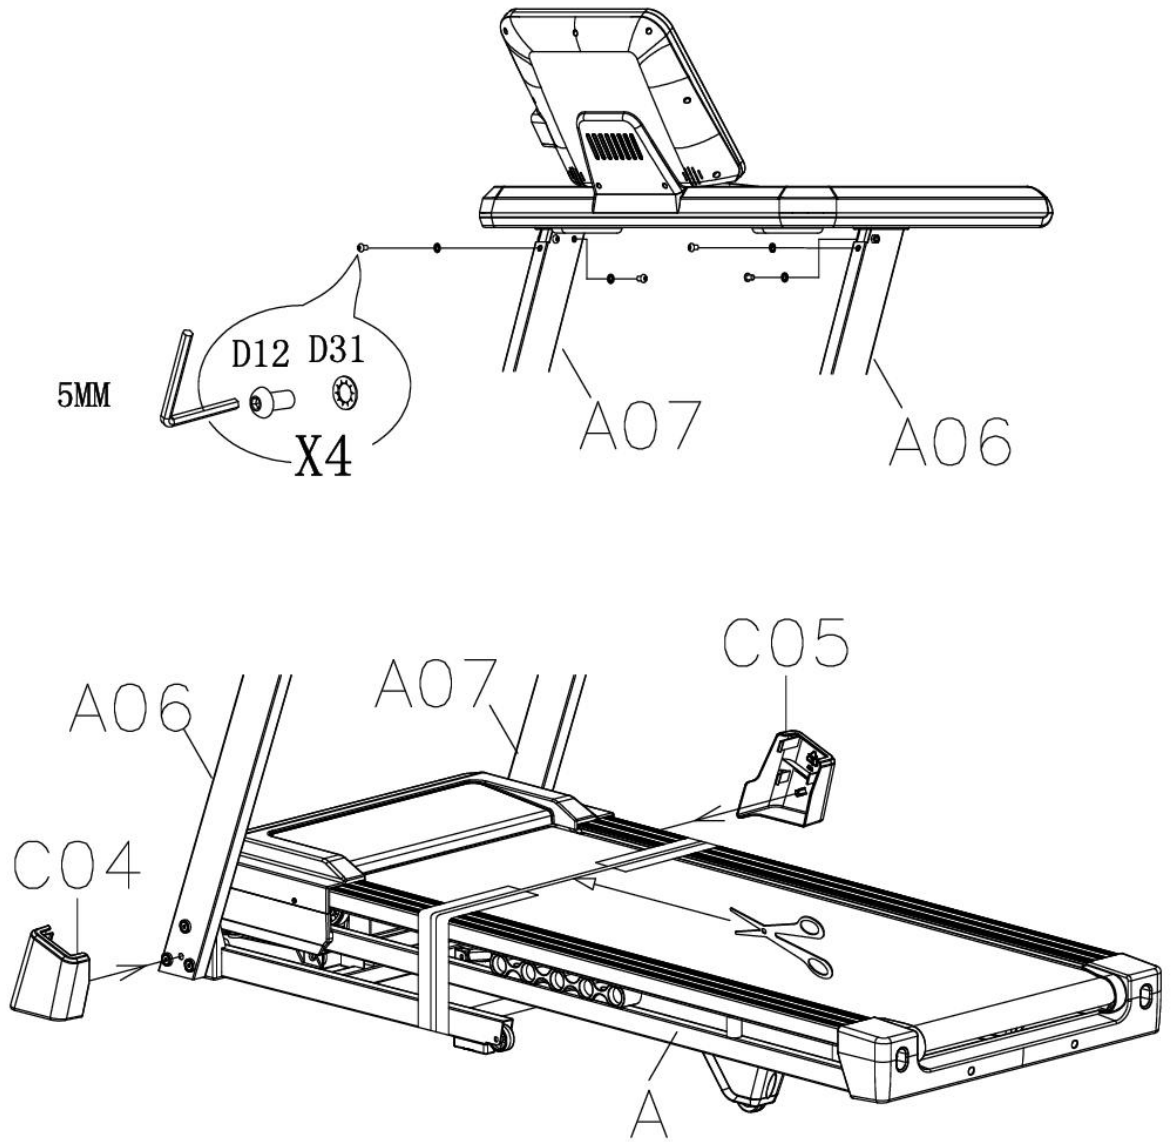


# STEP5

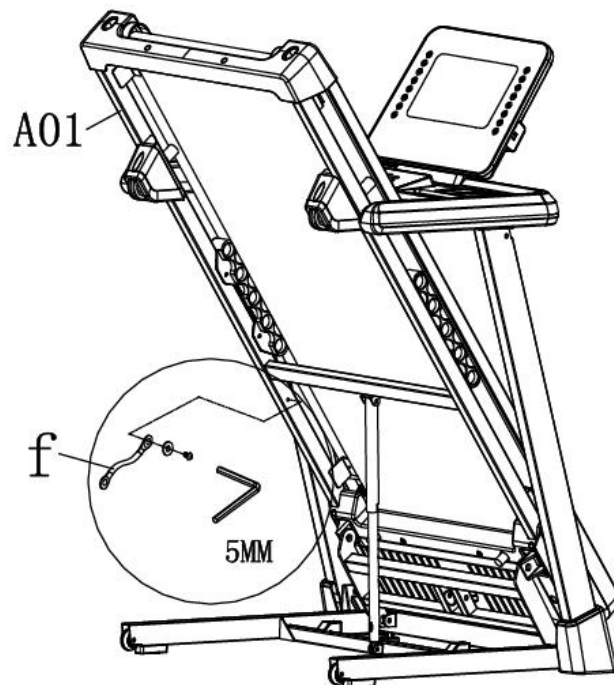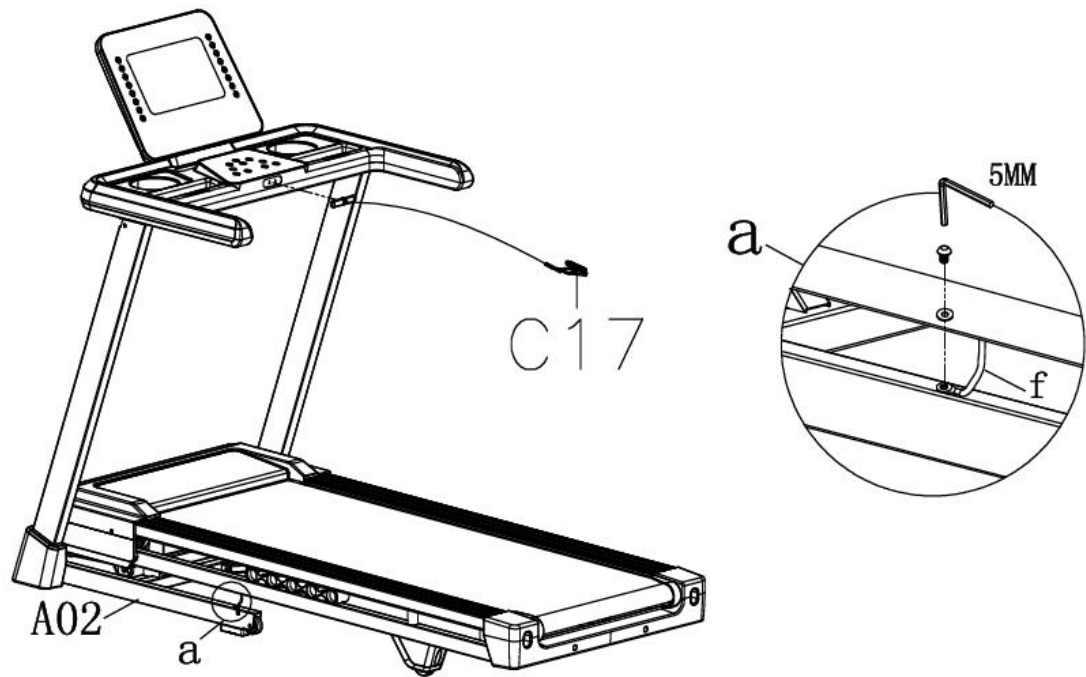


## How to Fold/Unfold the Machine



Fold

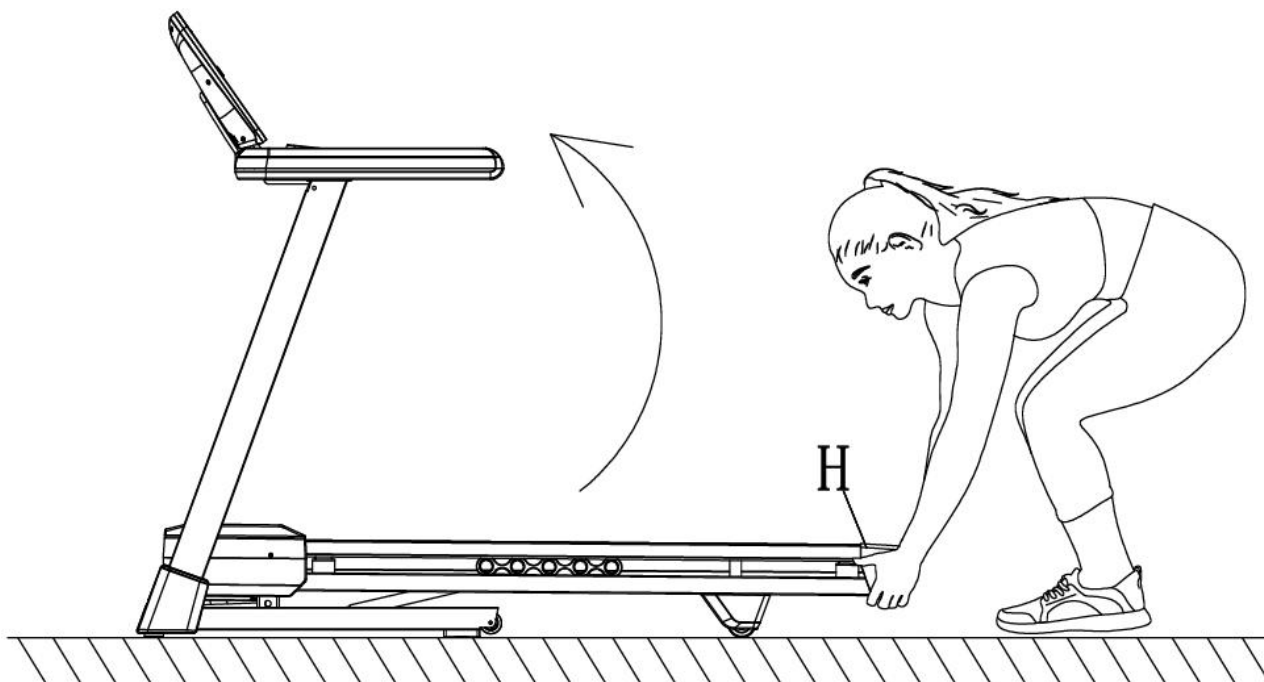


Unfold

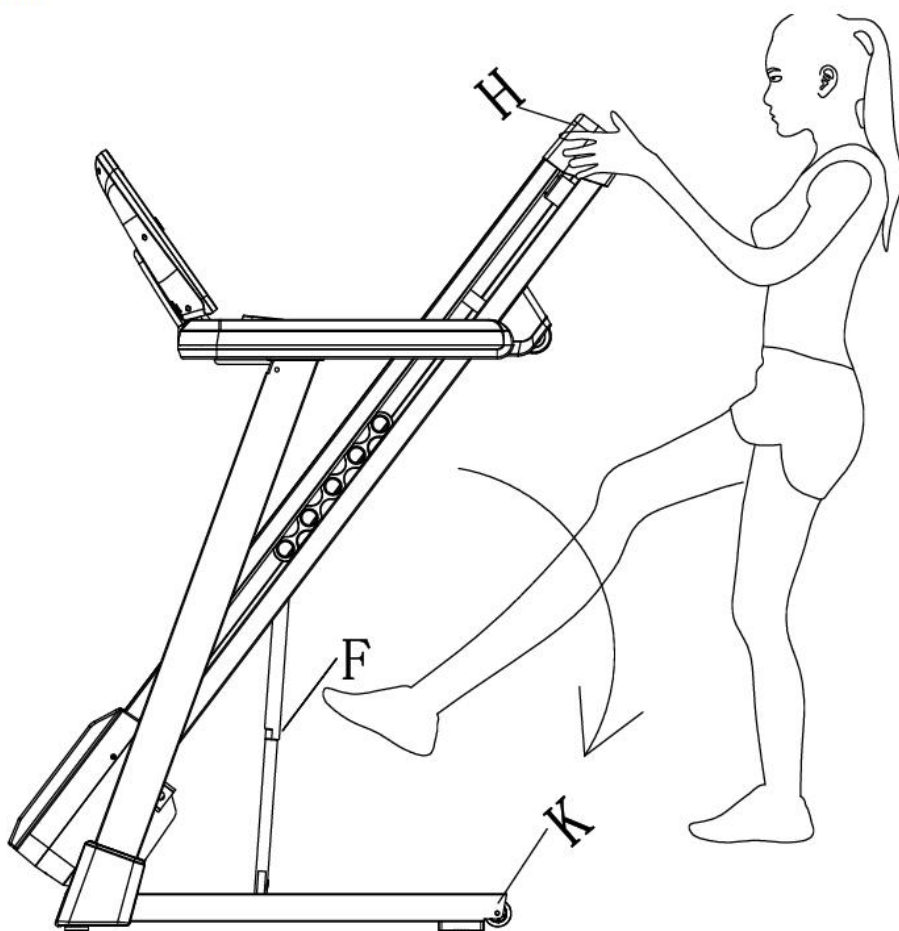

## How to Move the Machine

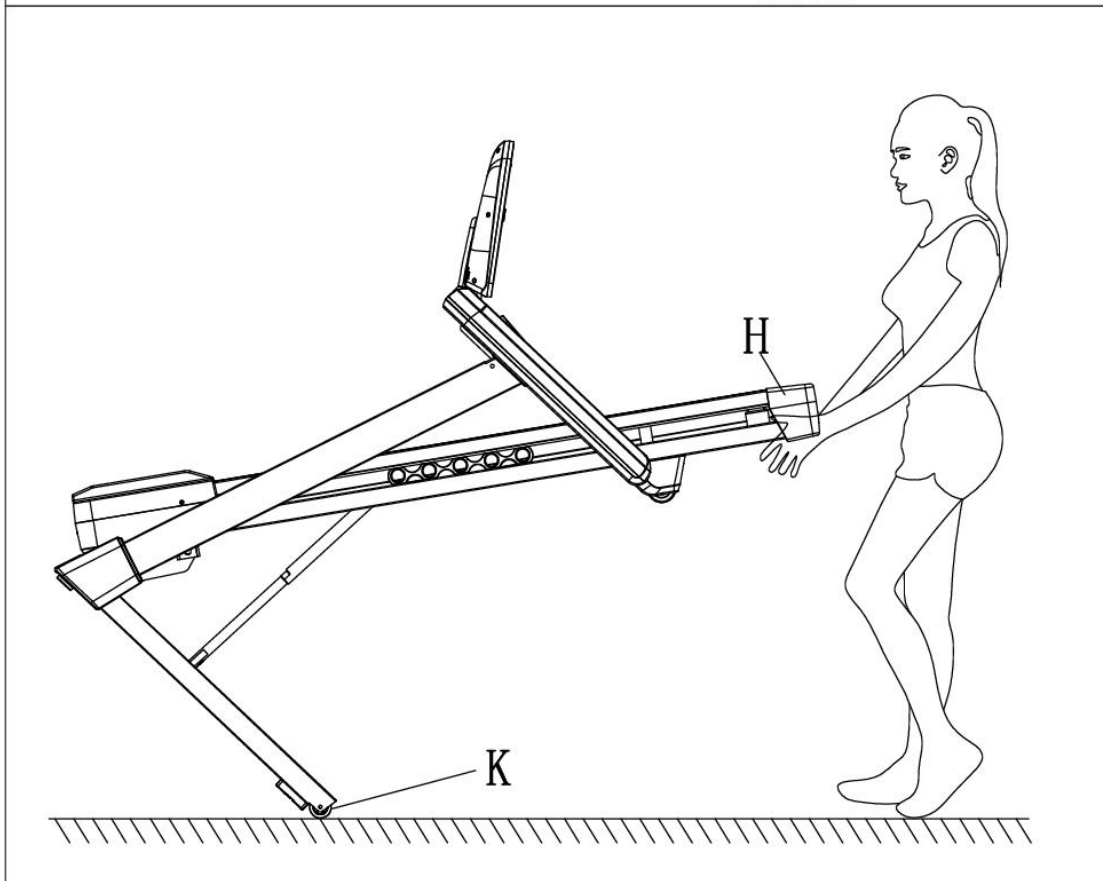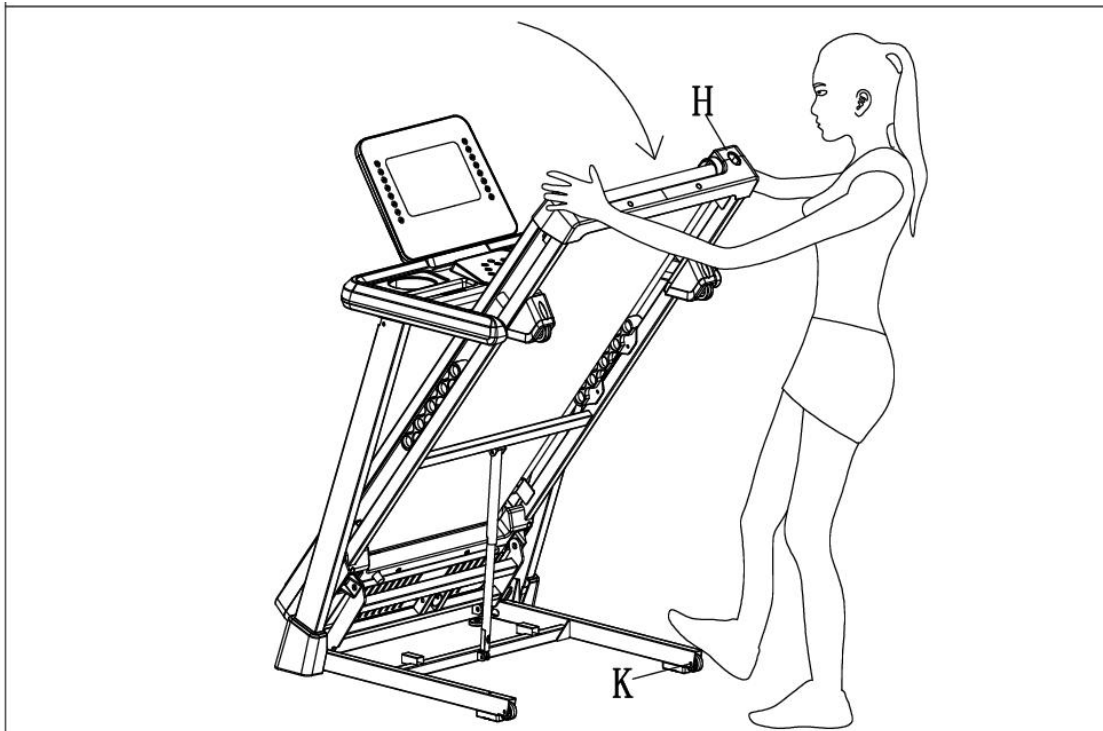

## How to Adjust the Balance

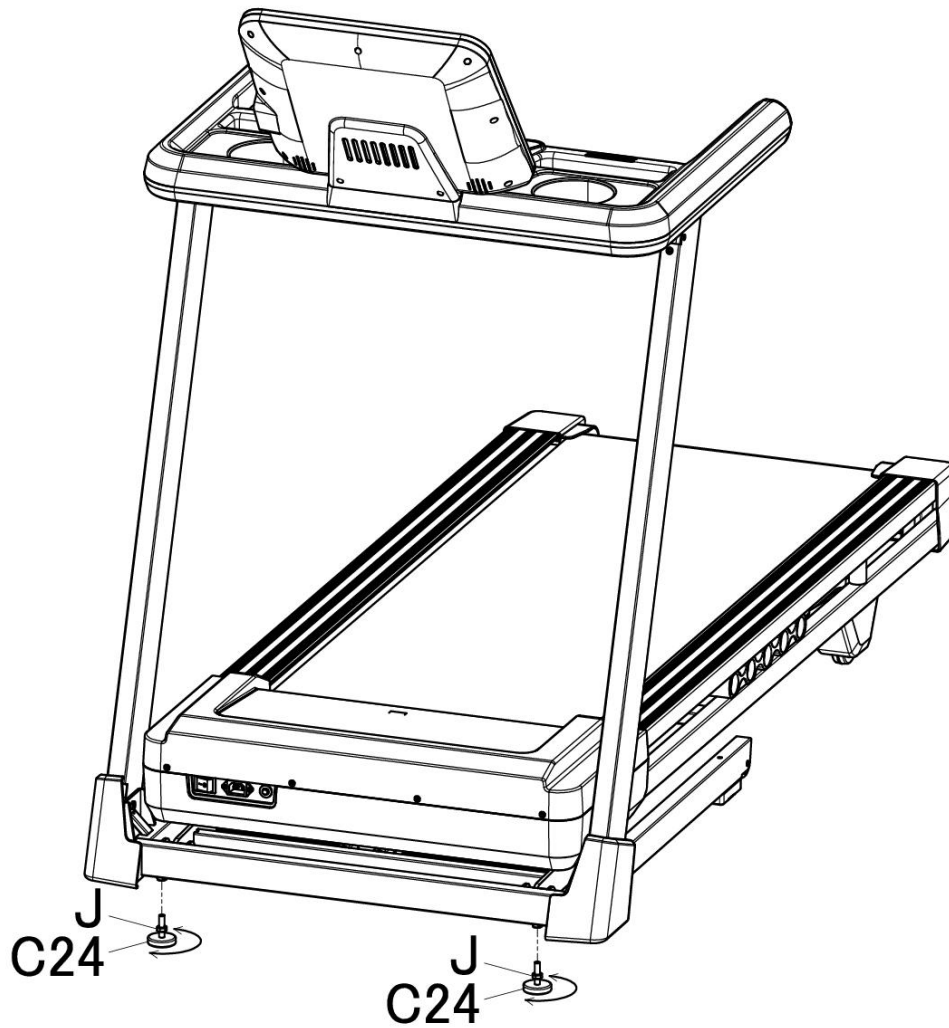

**Adjustment method:** Place the machine on the ground, rotate **Adjustable Foot Pad** to raise or lower the footpad until the machine is level.

# Lubricating the Treadmill

## **IMPORTANT NOTE:**

You will need to lubricate your treadmill before the first use.


## **RUNNING BELTS & TREADMILL LUBRICANT:**

Lubricating the **Running Board** and **Running Belt** is essential as the friction affects the life span and operations of the treadmill. Inspect the **Running Belt** and **Running Board** regularly. If you find any wear on the **Running Board**, please contact us at: [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com).

**WARNING:** Always unplug the treadmill from the electrical outlet before cleaning, lubricating, or repairing the unit.

## **HOW TO LUBRICATE:**

1. To apply lubricant, lift one side of the **Running Belt** and apply oil to the middle of the **Running Board**. Next, start the treadmill and place it at the lowest speed setting and allow the oil to spread over the **Running Board**. Repeat this process for the other side.
2. The moving parts should turn freely and quietly. Abnormal moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.
3. To better maintain the treadmill and prolong its lifespan, it is suggested that maintenance be done on a regular basis.
4. **DO NOT LOOSEN OR MAKE ANY ADJUSTMENTS TO THE RUNNING BELT WHILE APPLYING LUBRICANT.** A loose **Running Belt** will result in the runner sliding off during use, while too tight of a **Running Belt** will negatively affect the motor's performance and create more friction between the roller and **Running Belt**. The most suitable tightness for the **Running Belt** is when it is pulled out **50-75mm** from the **Running Board**.

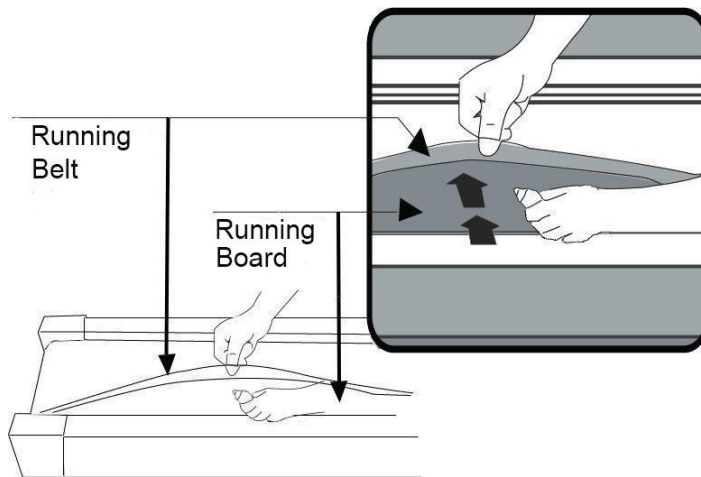

### **The following timetable is recommended:**

Light user (less than 3 hours/ week)	<i>every six months</i>
Medium user (3-5 hours/ week)	<i>every three months</i>
Heavy user (more than 5 hours/ week)	<i>every two months</i>

## **Maintenance & Care**


General cleaning will help prolong the life and performance of your treadmill. Keep the unit clean and maintained by dusting the components on a regular basis. Clean both sides of the **Running Belt** to prevent dust from accumulating underneath. Keep your running shoes clean so that dirt from your shoes does not wear the **Running Board** and **Running Belt**. Clean the surface of the **Running Belt** with a clean, damp cloth. Keep liquids away from electrical parts and **Running Belt**.

To better maintain the treadmill and prolong its life, it is suggested that the treadmill be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.


### **CENTERING THE RUNNING BELT:**

Place the treadmill on level ground and set it at 6-8KM/H(3-5MPH) to check if the **Running Belt** drifts from the center.


If the **Running Belt** moves to the right, turn the right adjusting bolt  $\frac{1}{4}$  turn *clockwise*, then turn the left adjusting bolt  $\frac{1}{4}$  turn *counter-clockwise*. If the **Running Belt** does not move, repeat this step until it centers. Refer to Figure A.

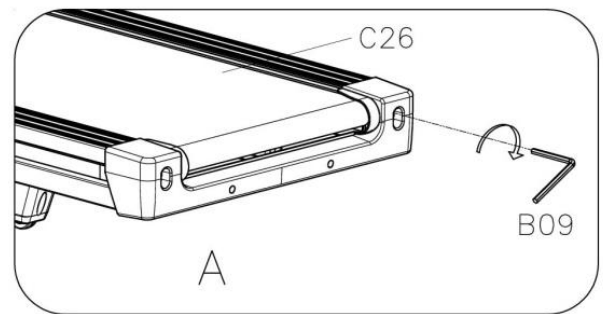

If the **Running Belt** moves to the left, turn the left adjusting bolt  $\frac{1}{4}$  turn *clockwise*, then turn the right adjusting bolt  $\frac{1}{4}$  turn *counter-clockwise*. If the **Running Belt** does not move, repeat this step until it centers. Refer to Figure B.

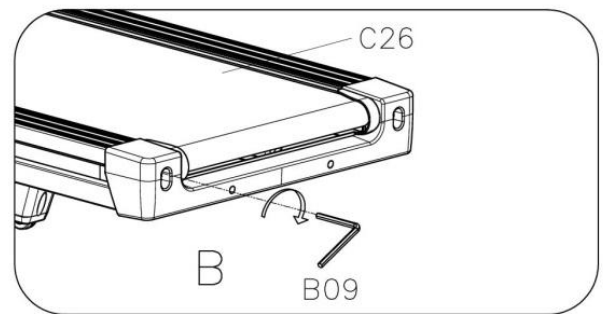

Over time, the **Running Belt** will loosen. To tighten the **Running Belt**, turn the left & right adjusting bolts one full turn *clockwise*, check the tension of the **Running Belt**. Continue this process until **Running Belt** is at the correct tension. Make sure to adjust both sides equally to ensure correct belt alignment. Refer to Figure C.

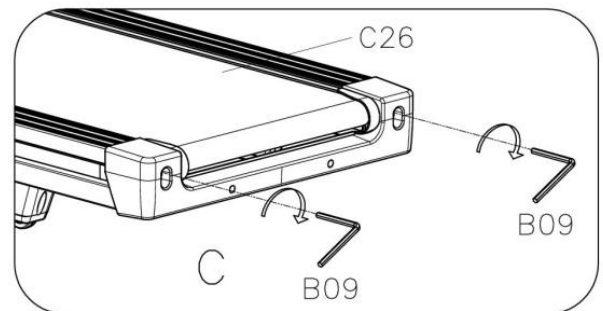

## Important Electrical Information

**WARNING:** This treadmill requires a power source of **(12 amps (100-120V))** in order to properly operate. For your safety, as well as the safety of others, please verify that the power source is correct before plugging in the equipment. Any power source above or below this level could cause significant damage to the equipment and/or user.

### **GROUNDING METHODS:**

This product must be grounded. Grounding provides a path of the least resistance for electrical current to reduce the risk of electric shock. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Ensure that the product is connected to an outlet which contains the same configuration as the plug. Do not use an adapter for this product.

This product is for use on a nominal 120V circuit and has a grounding plug that looks like the plug illustrated in sketch A.


### **DANGER:**

Improper connection of the equipment can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are unsure whether the product has been properly grounded. Do not modify the plug provided with this product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.


### **WARNING!**

1. **NEVER** use a ground fault circuit interrupt (GFCI) wall outlet with this treadmill. Route the power cord away from all moving parts of the treadmill, including the elevation mechanism and transportation wheels.
2. **NEVER** operate the treadmill using a generator or UPS power supply.
3. **NEVER** remove any cover on the treadmill without first disconnecting power cord.
4. **NEVER** expose the treadmill to rain or moisture. This treadmill is not designed for outdoor use or use in any high humidity environment.

### **GROUNDING METHOD**

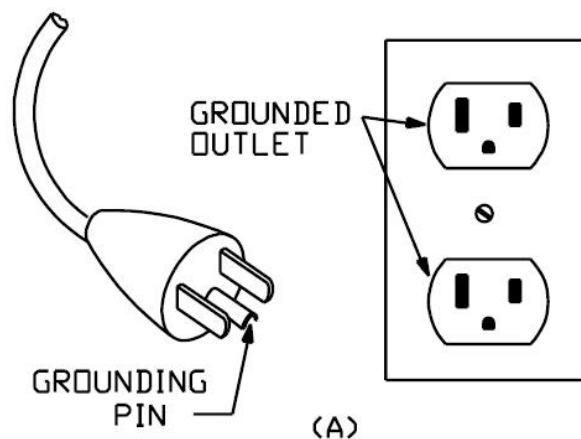

# The Display Console


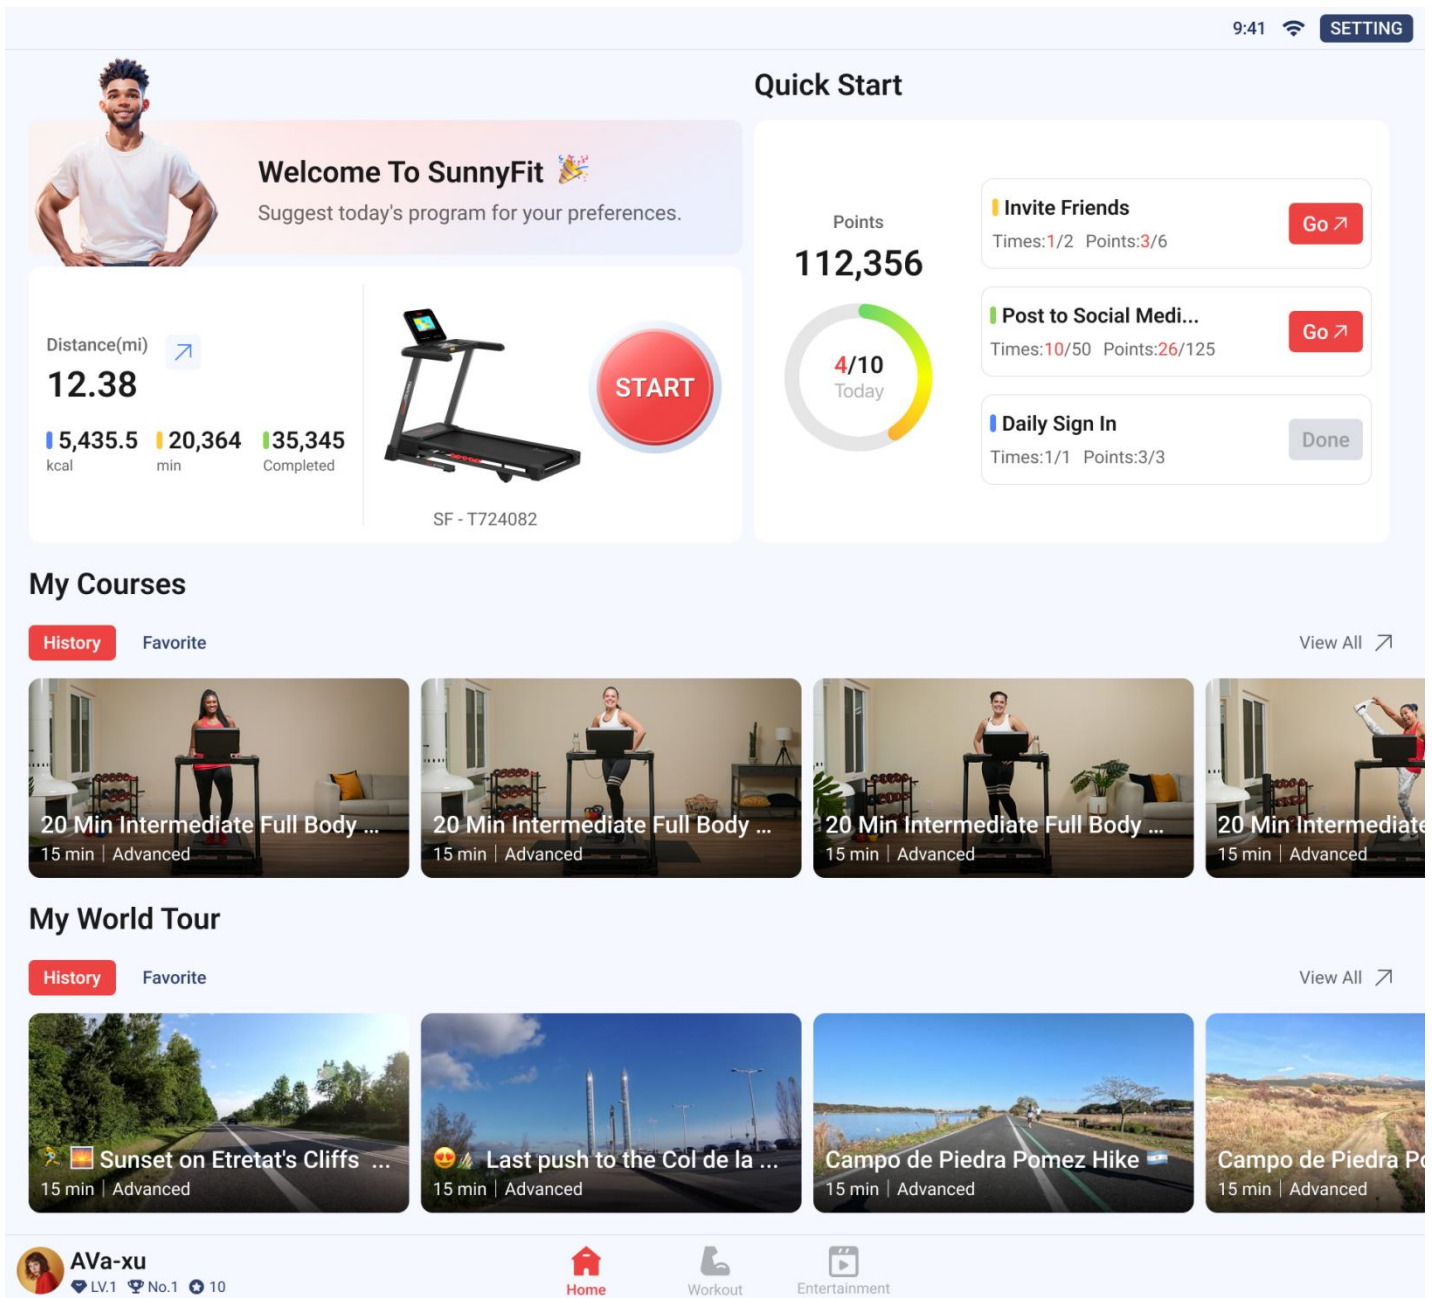


## Quick Start:

1. Insert the pin end of the **Safety Key** into the holes on the **Console Top Cover**.
2. Press the **START** button and the system will automatically display a 3-second countdown. Once the countdown reaches zero, the **Running Belt** will start at the initial **default speed of 1.0KM/H or 0.6MPH**.
3. To adjust the speed, you can use the **SPEED +/-** buttons on the **Console Top Cover** or the **QUICK SPEED** buttons 3, 4, 5, 6, 7, 8, 9 **KM/H or MPH** on **Panel Top Cover**.
4. To adjust the incline, you can use the **INCLINE ^/∨** buttons on the **Console Top Cover** or the **QUICK INCLINE** buttons 0, 2, 4, 6, 8,10, 12 on **Panel Top Cover**.

**\*NOTE: The maximum speed on this treadmill is 19.2KM/H(12.0MPH).**

# Window Display:

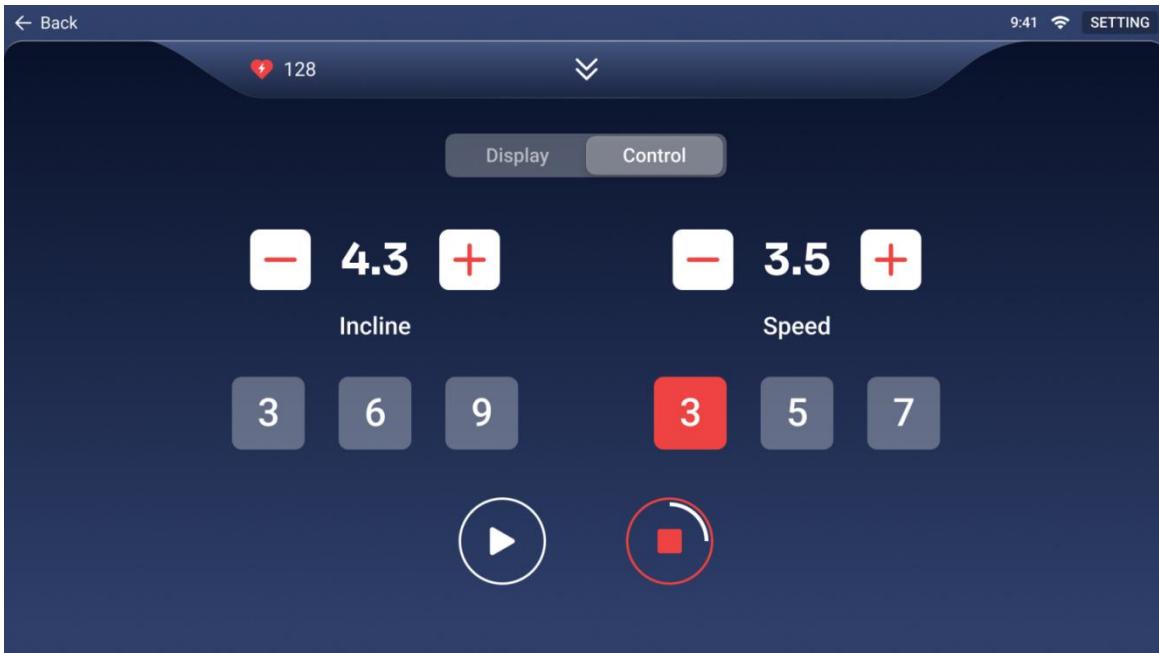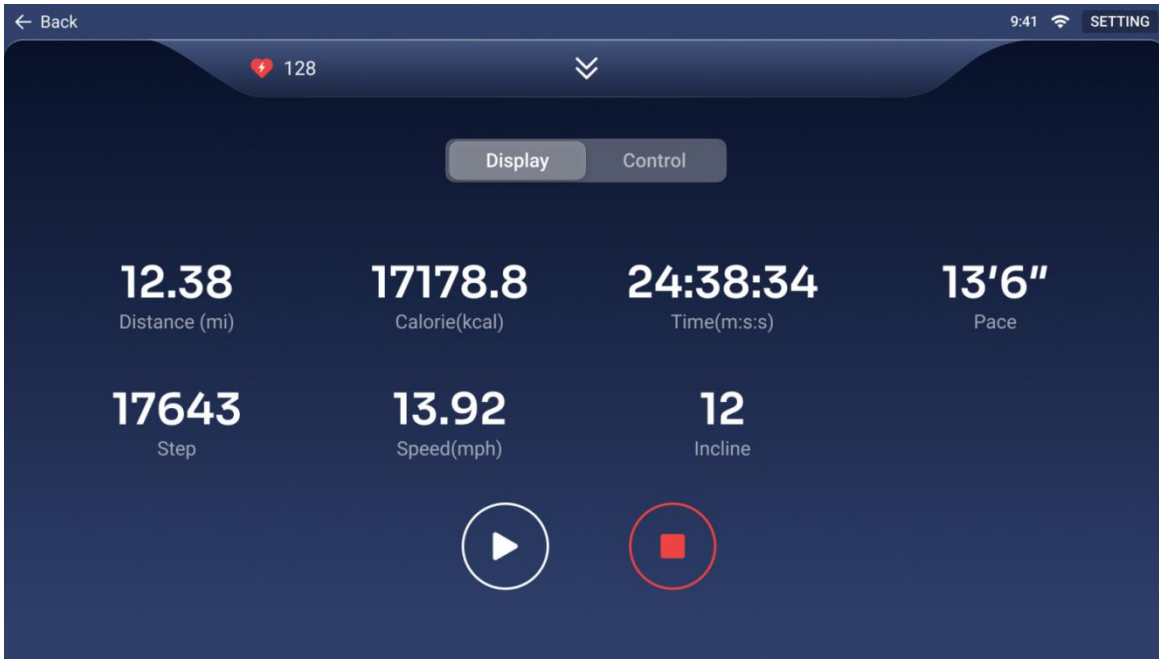

**DISTANCE:** Displays the distance.

**TIME:** Displays the time.

**CALORIES:** Displays the calories.

**INCLINE:** Displays the incline from 0 to 15 level.

**SPEED:** The speed range is **1.0-19.2KM/H(0.6-12MPH)**. 1.0KM/H(0.6MPH) is the default running speed.

**PULSE:** When the runner holds both hands on the pulse sensors (located on the handles) or connect a wireless heart rate monitor, the system will calculate the runner's heart rate and display it in this window. The pulse range is 50-200 beats/min.

**STEP:** Displays the step.


**PACE:** Displays the real-time pace per KM/MILE.

**NOTE:**

- 1. This data is for reference only and should not be used for medical purposes.**
- 2. Distance and calories and steps will not count when no one is running on the treadmill.**

**HOW TO CHANGE BETWEEN METRIC AND IMPERIAL SYSTEM:**

Click on your avatar (on the bottom left corner), go to Settings => Unit Settings and select Metric or Imperial system.

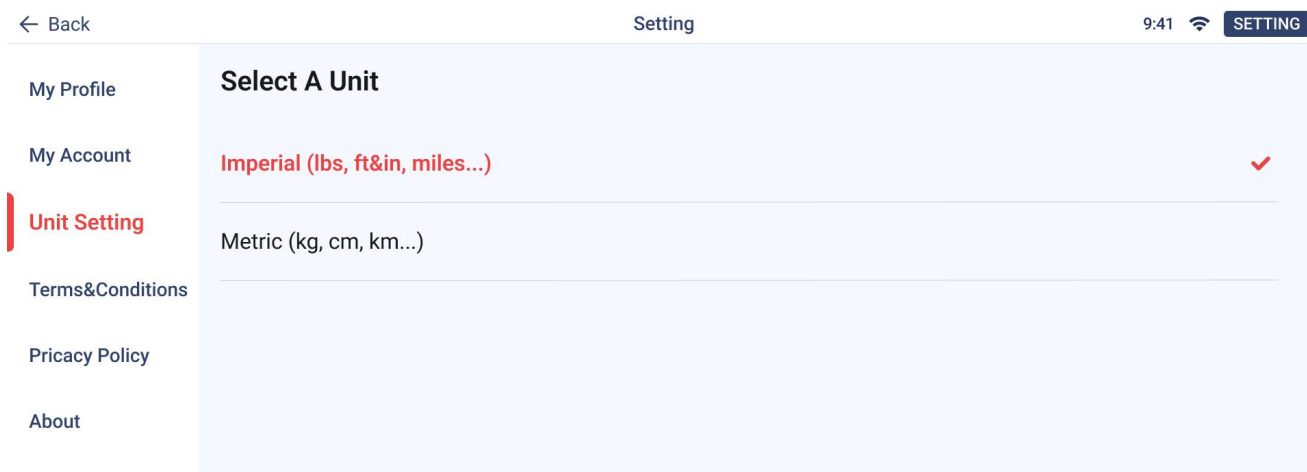

**Console Function Keys:**

**START:** To start the treadmill, insert the pin end of the **Safety Key** into the holes on the **Console Top Cover** and then press the START button. This treadmill requires the **Safety Key** to be inserted to start. 1.0KM/0.6 MPH is the default start speed.

**STOP/PAUSE:** This button has functions to PAUSE and STOP. When in use, press this button once to PAUSE your workout and the current workout data will still be shown. Press this button again to STOP your workout session and all data will be reset to the initial setting.

**SPEED +/-:** Press the +/- buttons to increase or decrease the speed in increments of 0.1 KM/H or MPH. Pressing and holding either of these buttons for a duration of over ½ a second will increase or decrease the speed continuously.

**3, 4, 5, 6, 7, 8, 9 (QUICK SPEED):** These buttons are preset to 3, 4, 5, 6, 7, 8, 9 KM/H or MPH speeds for convenience.

**INCLINE  $\wedge/\vee$ :** Press these buttons to adjust incline level. When the treadmill is running, press the  $\wedge/\vee$  buttons to increase or decrease the incline level. Pressing and holding either of these buttons for duration of over ½ a second will increase or decrease the incline level continuously. The incline levels range from -6-15.

**0, 2, 4, 6, 8, 10, 12 (QUICK INCLINE):** These buttons are preset to 0, 2, 4, 6, 8, 10, 12 incline level for convenience.

### **Lubrication Reminder:**

Your treadmill needs lubrication maintenance every 300km (188 Miles). Please read the LUBRICATING THE TREADMILL instructions on *Page 16* to learn the proper steps to lubricate your treadmill. Apply the lubricant to the middle of the **Running Board** on both sides.

### **Treadmill Functions**

#### **Safety Lock Function:**

Removing the **Safety Key** from the **Console** while the treadmill is running will cause it to stop immediately. Once the treadmill reaches a full stop, the window of the console will be display “The safety key of this device has been removed” and the speaker will beep 3 times. To start the treadmill again, insert the pin end of the **Safety Key** into the **Console** and press the START button.

#### **Power Save Function:**

When the treadmill has been inactive for 10 minutes, it will enter Power Saving Mode. While the treadmill is in this mode, the window display of the **Console** will be turned off. To turn it back on, press any button.



#### **POWER ON:**

Flick the power switch to this symbol to turn on the treadmill.



#### **POWER OFF:**

Flick the power switch to this symbol to turn the treadmill off at any time. This includes during exercise.

#### **SAFETY NOTE:**

We recommend that you maintain a slow speed at the beginning of a session and hold the **Left & Right Handlebar Foam** handrails until you have become familiar with the treadmill.

Insert the pin end of the **Safety Key** into the **Console** and attach the opposite end (containing the safety clip on it) to your clothing before starting your workout. To end your workout, press the STOP button or remove the **Safety Key** and the treadmill will stop immediately.

## **Exercise Instructions**

### **Getting Started:**

Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly.

Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising immediately if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea.

Get to know your treadmill. Before attempting to use the treadmill take some time to stand alongside and familiarize yourself with the controls.

1. Once you get on, you can stand with your feet on the **Side Rails** and stabilize yourself by holding onto the handrails.
2. Next, attach the clip end of the **Safety Key** to your clothes and insert the pin end of the key into the holes on the **Console Top Cover**.
3. Press the START button to start the treadmill.
4. The treadmill will start at the system default setting speed of **1KM/H(0.6MPH)**. When you feel comfortable, you may slowly increase this speed.
5. When you are finished with your exercise, press the STOP button to stop the treadmill or you can remove the pin end of the to stop the treadmill.

### **APP CONNECTION:**

#### **Connect Smart Equipment to SunnyFit App:**

1. Scan to download SunnyFit from the app store:



2. Ensure that the Bluetooth function is turned on from your mobile device.
3. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
4. Begin any workout activity that matches your smart equipment, then follow the onscreen prompts to search for and connect to your smart equipment.
5. When connected, your stats and records will be displayed at the end of your course/session and recorded in your account profile!

#### **App Troubleshooting:**

- If you are having trouble connecting your smart equipment, visit [www.sunnyfit.com/guide](http://www.sunnyfit.com/guide) or scan the QR code below:




- If you require additional support, please contact [support@sunnyfit.com](mailto:support@sunnyfit.com).

## **Troubleshooting**

<b>PROBLEM</b>	<b>ERROR DESCRIPTION</b>	<b>SUGGESTED ACTION</b>
E01	Communication error	1.Ensure the signal wires are connected well 2.Replace the signal wires 3.Replace the controller 4.Replace the driver
E02	Stall protection	1.Ensure the motor wires are connected well 2.Replace the motor 3.Replace the driver
E03	No speed sensor signal	1.Ensure the speed wires are connected well 2.Replace the speed wire 3.Replace the driver
E04	Incline self-check fail	1.Ensure the incline wires are connected well 2.Replace the incline motor 3.Replace the driver
E05	Overcurrent protection	1.Lighten the load 2.Check transmission parts, add lubricating oil 3.Replace the motor 4.Replace the driver
E06	Motor break	1.Ensure the motor wires are connected well 2.Replace the motor
E08	Storage fault	1.Check storage chip 2.Replace the driver
E09	Location fault	1.Put the treadmill horizontally 2.Replace the driver
E10	Movement overcurrent	1.Replace the motor 2.Check transmission parts, add lubricating oil
E11	Overvoltage	1.Stop use, check external wire
E14	Undervoltage	1.Stop use, check external wire

# Exploded Diagram 1

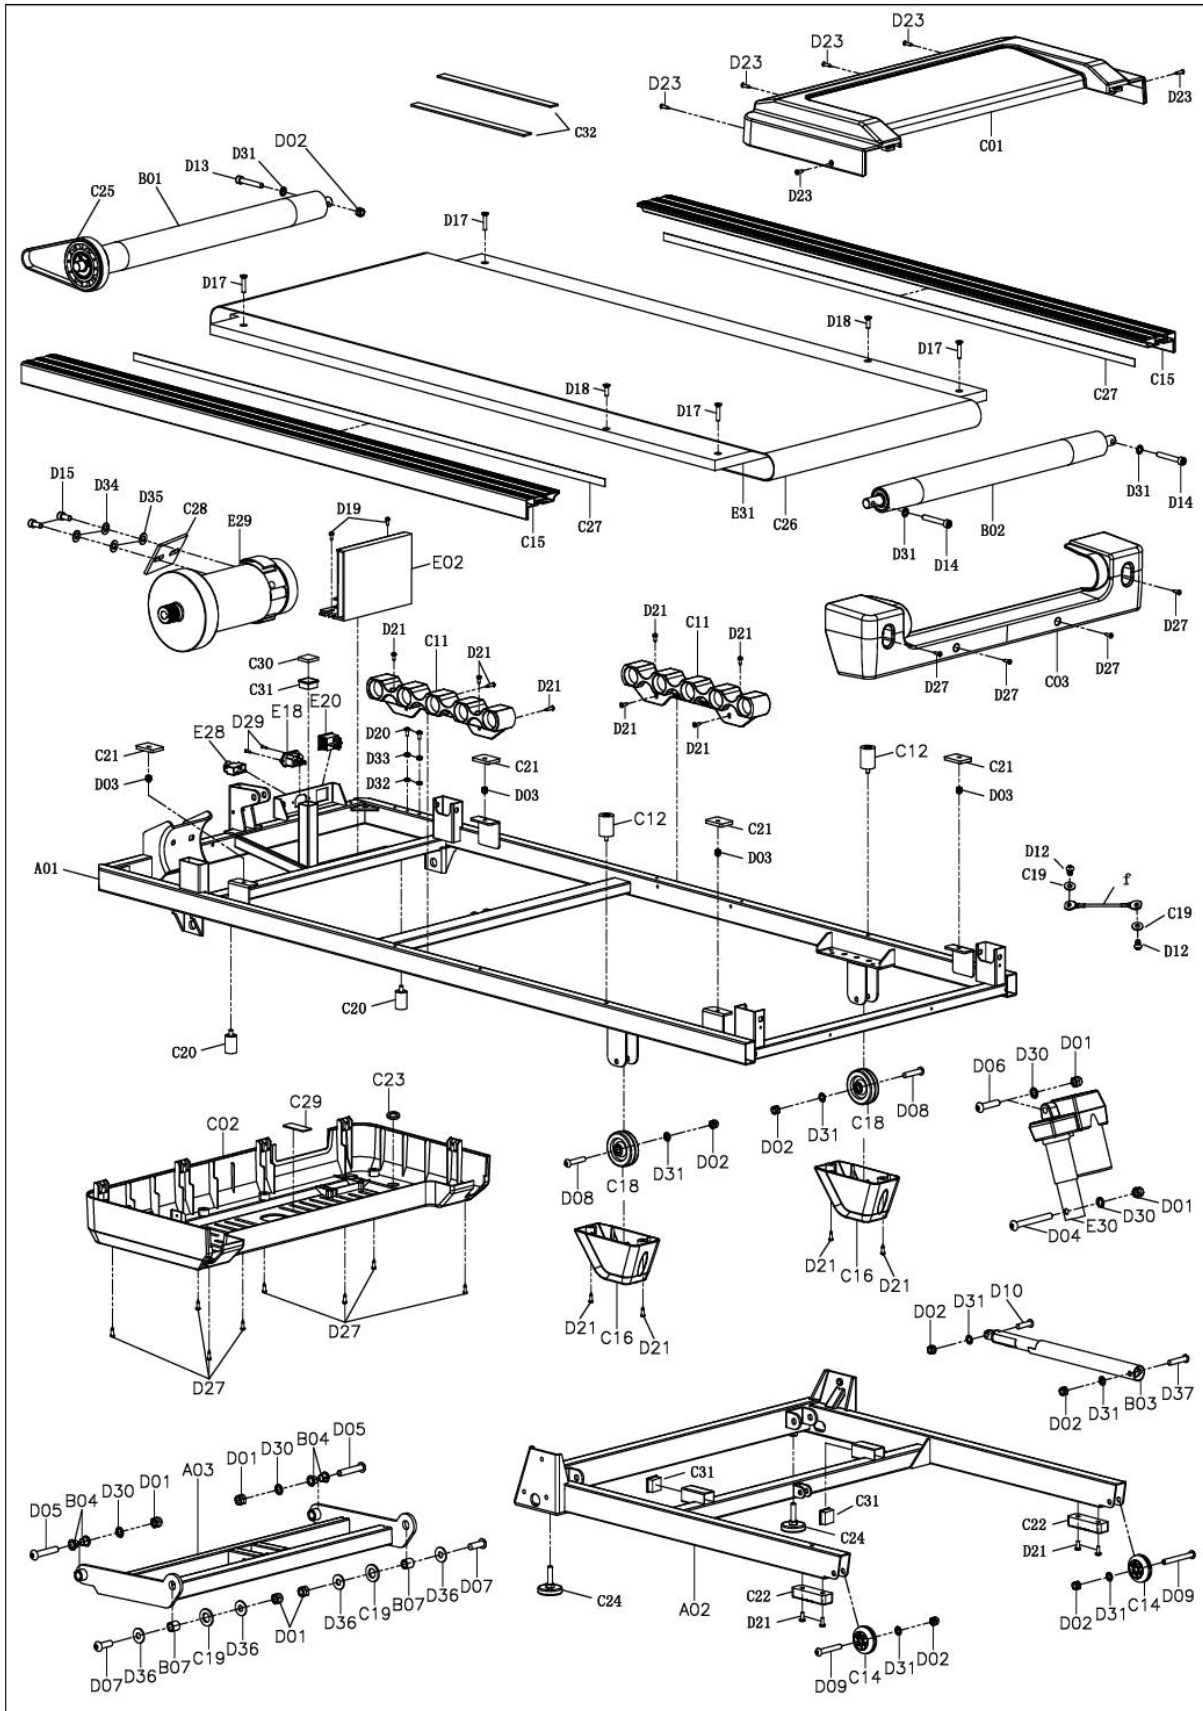



# Parts List

No.	Description	Specification	Qty.
A01	Main Frame		1
A02	Base Assembly		1
A03	Incline Assembly		1
A04	Console Base Bracket		1
A05	Panel Fixed Bracket		1
A06	Left Upright Tube		1
A07	Right Upright Tube		1
B01	Front Roller		1
B02	Rear Roller		1
B03	Air Cylinder		1
B04	Incline Assembly Bushing		4
B05	Safety Block		2
B06	Hand Pulse Sheet		4
B07	Sleeving		2
B08	Allen Wrench	5mm	1
B09	Allen Wrench	6mm	1
B10	Cross Wrench	S=13	1
C01	Motor Top Cover		1
C02	Motor Bottom Cover		1
C03	Rear Cover		1
C04	Left Upright Tube Cover		1
C05	Right Upright Tube Cover		1
C06	Console Top Cover		1
C07	Console Bottom Cover		1
C08	Console Small Cover		1
C09	Panel Top Cover		1
C10	Panel Bottom Cover		1
C11	Cushion		2
C12	Black Cushion		2
C13	Silicone Pad		1
C14	Transportation Wheel		2
C15	Side Rail		2
C16	Square Plus		2
C17	Safety Key		1
C18	Roller		2
C19	Plastic Gasket	Φ30*3	6
C20	Cylindrical Cushion		4
C21	Rubber Cushion		4
C22	Foot Pad		2
C23	Ring Protective Plug		1

No.	Description	Specification	Qty.
C24	Adjustable Foot Pad		2
C25	Motor Belt		1
C26	Running Belt		1
C27	EVA Pad	10*1.0*1100	2
C28	EVA Pad	90*90*5.0	1
C29	EVA Pad	50*20*2.0	1
C30	EVA Pad	25*25*5.0	1
C31	Square Plug		3
C32	EVA Pad	10*1.0*1100	2
D01	Nut	M10	6
D02	Nut	M8	9
D03	Nut	M6	4
D04	Bolt	M10*90	1
D05	Bolt	M10*55	2
D06	Bolt	M10*40	1
D07	Bolt	M10*30	2
D08	Bolt	M8*40	8
D09	Bolt	M8*35	2
D10	Bolt	M8*30	1
D11	Screw	ST4.2*40	2
D12	Flat Round Head Bolt	M8*15	6
D13	Bolt	M8*60	1
D14	Bolt	M8*55	2
D15	Cylindrical Head Bolt	M8*12	2
D16	Bolt	M8*45	6
D17	Bolt	M6*32	4
D18	Bolt	M6*25	2
D19	Bolt	M5*15	2
D20	Bolt	M5*12	2
D21	Head with Pad Bolt	M5*12	16
D22	Screw	ST4.2*20	5
D23	Screw	ST4.2*12	48
D24	Screw	ST2.9*8	7
D25	Screw	ST2.9*6	20
D26	Head with Pad Screw	ST2.5*6	4
D27	Pan Head with Pad Tapping Screw	ST4.2*12	12
D28	Screw	ST4.2*12	2
D29	Countersunk Head Screw	ST2.9*8	2
D30	Locking Washer	Φ10	4
D31	Locking Washer	Φ8	21

# Parts List

No.	Description	Specification	Qty.
D32	Locking Washer	Φ5	2
D33	Spring Washer	Φ5	2
D34	Spring Washer	Φ8	2
D35	Flat Washer	Φ8	2
D36	Big Washer	Φ10	4
D37	Bolt	M8*45 L20	1
E01	Console		1
E02	Control Board		1
E03	Upper Signal Wire		1
E04	Bottom Signal Wire1		1
E05	Bottom Signal Wire2		1
E06	N/A		-
E07	Hand Pulse Top Signal Wire		1
E08	Hand Pulse Bottom Signal Wire		2
E09	Safety Key Top Connecting Wire		1
E10	Safety Key Bottom Connecting Wire		1
E11	Bottom Button Board		1
E12	Button Board Top Signal Wire		1
E13	Button Board Bottom Signal Wire		1
E14	Left Button Board		1
E15	Right Button Board		1
E16	Left Button Board Connecting Wire		1
E17	Right Button Board Connecting Wire		1
E18	Power Socket		1
E19	Power Wire	2050mm	1
E20	Square Switch		1

No.	Description	Specification	Qty.
E21	Magnetic Ring		1
E22	Magnetic Ring		1
E23	Grounding Wire		1
E24	AC Single Line	Brown 350	1
E25	AC Single Line	Blue 350	1
E26	AC Single Line	Brown 200	2
E27	AC Single Line	Blue 200	1
E28	Overload Protector		1
E29	Motor		1
E30	Incline Motor		1
E31	Running Board		1
E32	Magnetic Ring		1
E33	Adapter Board		1
E34	Board Wire		1
F01	Filter		1
F02	AC Single Line	Brown	1
F03	AC Single Line	Blue	1
F04	Grounding Wire		1
F05	Pan Head Tapping Screw	ST4.2*12	2
H01	USB Module		1
H02	USB Connecting Wire		1
H03	Pan Head Tapping Screw	ST2.9*8	2
G01	Speaker		2
G02	Pan Head Tapping Screw	ST2.9*8	8
f	Safety Wirerope		1

# Register

Register your product and verify warranty terms:

[Sunnyhealthfitness.com/warranty](https://Sunnyhealthfitness.com/warranty)



# Download

Track your fitness progress & join **FREE** workout courses!

Download SunnyFit App today!



# Follow

Find us on social media



# Contact

Get in touch with us for any questions

 1-877-90SUNNY (877-907-8669)

 [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com)